

Quick Start





Setting up your tablet

1



2

After charging the battery, and while the battery image is displayed on the screen, press and hold the power button about 5 seconds until the HP logo is displayed.

IMPORTANT: If the battery image is not displayed on the screen, press the power button briefly to display the image, and then press and hold the power button until the HP logo is displayed.

3

Follow the on-screen instructions to select a language, a wireless network, and a Google™ account.

NOTE: If you do not have a Google account, you can create one now.

Lock and unlock

Lock—Press the power button.

Unlock—Press the power button to turn on the tablet, then place your finger on the lock icon  and slide your finger to the unlock position.

Turn off the tablet

Press and hold the power button, touch **Power off**, and then touch **OK**. If your tablet becomes unresponsive, press and hold the power button for several seconds to turn off the tablet.


Using the Home screen



- Search**—Type one or more keywords to search with Google.
- All apps**—Displays a list of all apps installed. To configure your preferences, touch  and then tap the **Settings** icon.
- Recent apps**—Opens a list of apps used recently.
- Home**—Opens the Home screen.
- Back**—Opens the previous screen.
- Voice search**—Speak one or more keywords to search with Google.

NOTE: The appearance of the Home screen may vary.

Use gestures

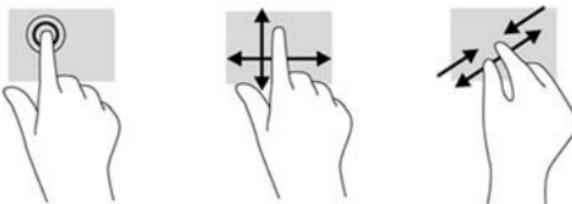

Return to the Home screen

To quickly return to the Home screen, touch .

Use the on-screen keyboard

Touch a text field to open the on-screen keyboard. Some apps may open the keyboard automatically.

Change your tablet's view

The Auto-rotate feature allows you to change your tablet's view. For landscape view, hold the tablet horizontally. For portrait view, hold the tablet vertically.

NOTE: Some apps do not rotate automatically.

To change the Auto-rotate setting, swipe down from the top of the screen to display notifications, and then touch the **Screen rotation** icon to lock  or unlock  the screen rotation.

Download apps from the Google Play™ Store

You must be connected to a wireless network and signed into Google account before you can access the Play Store to download apps.

1. On the Home screen, touch  and then touch the **Play Store** app.

2. To search for an app, touch the **Search** icon, and then type a keyword, or touch a category.
3. Scroll down to see the available apps, and then touch an app to select it.
4. Touch **Install**, and the app begins to download and install.

View photos

To view the photos in your Gallery, touch the **All apps** icon, and then touch the **Gallery** app.

Display apps, widgets, and notification

Apps—Touch , and then touch the **Apps** tab to see a list of all apps.

Widgets—Touch , and then touch the **Widgets** tab to see a list of all widgets.

Notification—Swipe down from the top of the screen to see your notifications.

Organize the Home screen

- To add an app or a widget to the Home screen, touch the **Apps** tab or the **Widgets** tab, and then tap and hold an app or widget until it is added to the Home screen.
- To remove an app or widget from the Home screen, drag it to the X at the top of the screen.

More HP resources

Resource	Contents
HP support: For U.S. support, go to http://www.hp.com/go/contactHP . For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html .	<ul style="list-style-type: none">• Online chat with an HP technician.• Email support.• Find telephone numbers.• Locate HP service center locations.• Access User Guide.
Serial number, product number, and model number	<ul style="list-style-type: none">• Back of tablet
Google For Google support, go to http://www.google.com/mobile/android .	<ul style="list-style-type: none">• Access Google online help and support.
Limited Warranty Depending on your tablet model, the warranty is located in the box or accessible from the HP doc app on the Home screen. You can also go to http://www.hp.com/go/orderdocuments .	<ul style="list-style-type: none">• Warranty information about this tablet.
Software terms By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a full refund subject to the refund policy of your seller. For any further information or to request a full refund of the purchase price of the tablet, please contact your seller.	
Specification The tablet operates on DC power, which can be supplied by an AC or a DC power source. The AC power source must be rated at 100—240 V, 50—60 Hz.	
NOTE: The tablet can operate on DC power using an industry-standard micro-A or micro-B USB cable. The HP 5V 2A adapter included with your tablet is recommended for charging the tablet.	
Temperature —Operating: Metric, 0°C to 40°C; U.S., 32°F to 104°F	
Relative humidity —(noncondensing) Operating: 10% to 90%	
Regulatory information Regulatory markings for your country or region may be located on the back of the tablet or may be displayed electronically. If the markings for your country are not on the back of the tablet, please check the electronic labeling. To display the regulatory e-labels:	
<ol style="list-style-type: none">1. Touch All apps, touch Settings, and then touch About tablet.2. Touch Regulatory Information, and then the label icons are displayed.	
Depending on your tablet model, the <i>Product Notices</i> document is located in the box or accessible from the HP doc app on the Home screen.	
For regulatory identification purposes, your product is assigned a Regulatory Model Identification Number. The Regulatory Model Identification Number for your product is HSTNH-K13C. This regulatory number should not be confused with the marketing name (if any, etc.) or product numbers (HP P/N, etc.).	

© Copyright 2013 Hewlett-Packard Development Company, L.P. Google, Android, and Google Play are trademarks of Google Inc. The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical and editorial errors or omissions contained herein.

First Edition: August 2013.

Replace this box with PI statement as per spec.
Replace this box with PI statement as per spec.
Replace this box with PI statement as per spec.
Replace this box with PI statement as per spec.
Replace this box with PI statement as per spec.
Replace this box with PI statement as per spec.



743473-001