

125.00 mm

Product Name : Bluetooth Speaker  
Model : BT820  
Manufacturer: Lenovo(Beijing) Limited  
Address: No. 6 Chuang Ye Road, Shangdi  
Information Industry Base,  
Haidian District, Beijing, China  
Zip Code: 100085  
Official website: www.lenovo.com  
Factory: Shenzhen Bei Tian Li Electronic Co.,Ltd.

**lenovo** 联想

**lenovo**  
www.lenovo.com



Lenovo (Beijing) Limited

BT820

List and Technical Specifications

Bt820\_User\_Manual

## List

Bluetooth Speaker	1
User Manual	1
Φ 3.5mm Audio Line	1
5V---1.5A Power Adaptor	1
Warranty Card	1
Safety Information	1

## Technical Specifications

Output Power : 3W+3W ( RMS )  
Speaker Unit : 2.5 " 4Ω5W  
RF Frequency : 2.4G Digital Transmission  
Wireless Connection Range(Without Shelter) : 10m  
Speaker Size : W199×H182.2×D107mm  
Power : DC5V---1.5A  
Or four alkaline batteries(AA)


CMIIT ID:2011DP2441

BT820

Appearance

Bt820\_User\_Manual

## Appearance

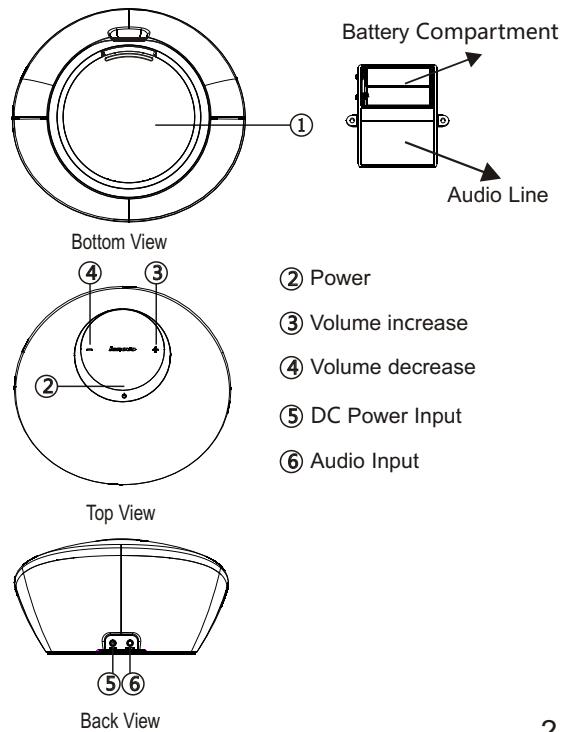

### Bluetooth pairing and connection

#### 1. Connection Bluetooth device :

- (1). Turn on the Speaker, then the power light is twinkling blue, the speaker is in searching mode;
- (2). Open the application of Bluetooth in the PC, Mobile phone or any other electric equipments, then make them in searching mode;
- (3). If PC, Mobile phone or any other electric equipments find "Lenovo BT820", it shows that the Bluetooth system is in pairing mode. Please follow the system's instruction, until you finish it. (If the system need to enter the password, please enter "0000");
- (4). If the system connect successfully, then it will point out "connection completed"; then you can enjoy your music by Bluetooth technology.

#### 2. Remove Bluetooth device :

- (1). Choose disconnect in the Bluetooth equipment manager, then the PC, Mobile phone or any other electric equipments will be disconnected with speaker;
- (2). Choose "Delete Lenovo BT820" in Bluetooth equipment manager, then the Bluetooth speaker is removed.

## FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE 2: The manufacturer is not responsible for any changes or modifications not expressly approved by the manufacturer for compliance, such modifications could void the user's authority to operate the equipment.

NOTE 3: This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device must be installed to provide a separation distance of at least 20 cm from all persons and must not be collocated or operating in conjunction with any other antenna or transmitter.