



FMM230

Waterproof GPRS/GNSS tracker with
flexible inputs configuration


Quick Manual v1.8

CONTENT


Know your device.....	3
Pinout	4
Wiring scheme.....	5
Set up your device	6
PC Connection (Windows).....	7
How to install USB drivers (Windows).....	7
Configuration.....	8
Quick SMS configuration.....	10
Mounting recommendations with a standard cable	12
Mounting recommendations with U-type cable	13
LED indications.....	14
Basic characteristics	14
Electrical characteristics.....	17
Safety information	20
Certification and Approvals	21
Warranty	23
Warranty disclaimer	23

KNOW YOUR DEVICE


TOP VIEW

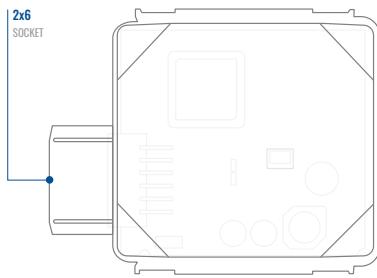

BOTTOM VIEW (WITHOUT COVER)

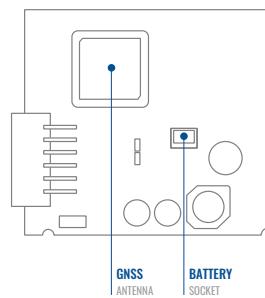

TOP VIEW (WITHOUT COVER)

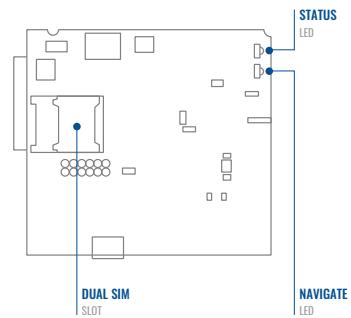


PINOUT

PIN NUMBER	PIN NAME	DESCRIPTION
1	VCC (10-30) V DC (+)	Power supply (+10-30 V DC).
2	DOUT 3	Digital output, channel 3. Open collector output. Max. 0,5 A DC.
3	DIN 3 / AIN 2	Analog input, channel 2. Input range: 0-30 V DC / Digital input, channel 3.
4	DIN 2-N / AIN 1	Digital input, channel 2, Negative input (ground sense), Analog input, channel 1, Input range: 0-30 VDC.
5	DIN 1	Digital input, channel 1.
6	INPUT 6	TX EXT (LVCAN – TX).
7	GND (-)	Ground pin. (10-30) V DC (—)
8	DOUT 1	Digital output, channel 1. Open collector output. Max. 0,5 A DC.
9	DOUT 2	Digital output, channel 2. Open collector output. Max. 0,5 A DC.
10	1WIRE POWER	+3,8 V output for 1-Wire devices.
11	1WIRE DATA	Data for 1-Wire devices.
12	INPUT 5	RX EXT (LVCAN - RX).




FMM230 2x6 socket pinout

WIRING SCHEME

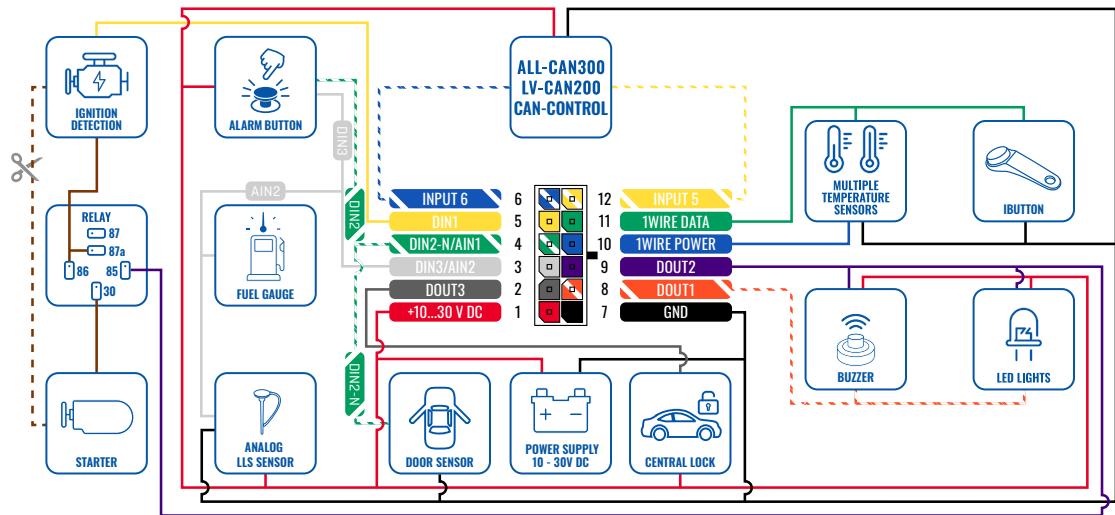


SET UP YOUR DEVICE

HOW TO INSERT MICRO-SIM CARD AND CONNECT THE BATTERY

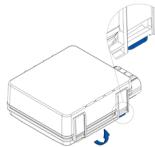

1 PARTLY CLOSED DEVICE

You will receive your device partly closed.




2 COVER REMOVAL

Gently remove **top** and **bottom** covers.




3 SIM CARD INSERT

Insert SIM card as shown with **PIN request disabled** or read our [Wiki¹](#) how to enter it later in [Teltonika Configurator²](#). Make sure that Micro-SIM card **cut-off corner** is pointing outward from slot. **SIM slot 1** is closer to PCB, **SIM slot 2** is the top one.




4 BATTERY CONNECTION

Connect **battery** as shown to device. Position the battery in place where it does not obstruct other components.

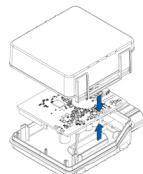

5 ATTACHING COVER BACK

After **configuration**, see "[PC Connection \(Windows\)](#)", attach device **top** and **bottom** **cover back** and press them twice to the full closure.

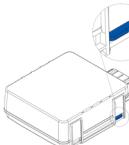

6 COMPLETELY CLOSED DEVICE

Make sure that product casing is closed correctly.

IMPORTANT!

This device has an IP67 casing with a two-phase closing, that ensures reliable protection and ease of use. Please make sure that product casing corner clips are fixed tightly and cable is connected to the device in order to maintain the degree of IP67 protection.

¹ Page 7, "[PC Connection \(Windows\)](#)"

PC CONNECTION (WINDOWS)

1. Power-up FMM230 with DC voltage (10 – 30 V) power supply using **supplied power cable**. LED's should start blinking, see "[LED indications](#)"¹.
2. Connect device to computer using **Micro-USB cable** or **Bluetooth® connection**:
 - Using Micro-USB cable
 - You will need to install USB drivers, see "[How to install USB drivers \(Windows\)](#)"²
 - Using **Bluetooth® wireless technology**
 - FMM230 **Bluetooth® technology** is enabled by default. Turn on **Bluetooth®** connection on your PC, then select **Add Bluetooth or other device > Bluetooth**. Choose your device named – "FMM230_last_7_imei_digits", without LE in the end. Enter default password **5555**, press **Connect** and then select **Done**.
3. You are now ready to use the device on your computer.

¹wiki.teltonika-gps.com/view/FMM230_LED_status

²Page 6, "How to install USB drivers"

HOW TO INSTALL USB DRIVERS (WINDOWS)

1. Please download COM port drivers from [here](#)¹.
2. Extract and run **TeltonikaCOMDriver.exe**.
3. Click **Next** in driver installation window.
4. In the following window click **Install** button.
5. Setup will continue installing the driver and eventually the confirmation window will appear. Click **Finish** to complete the setup.

¹ teltonika.lt/downloads/en/FMM230/TeltonikaCOMDriver.zip

CONFIGURATION

At first FMM230 device will have default factory settings set. These settings should be changed according to the users needs. Main configuration can be performed via [Teltonika Configurator](#)¹ software. Get the latest **Configurator** version from [here](#)². Configurator operates on **Microsoft Windows OS** and uses prerequisite **MS .NET Framework**. Make sure you have the correct version installed.


¹ wiki.teltonika-gps.com/view/Teltonika_Configurator

² wiki.teltonika-gps.com/view/Teltonika_Configurator_versions

MS .NET REQUIREMENTS

Operating system	MS .NET Framework version	Version	Links
Windows Vista			
Windows 7			
Windows 8.1	MS .NET Framework 4.6.2	32 and 64 bit	www.microsoft.com ¹
Windows 10			


¹ dotnet.microsoft.com/en-us/download/dotnet-framework/net462

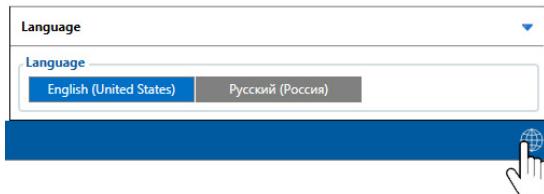

Downloaded Configurator will be in compressed archive. Extract it and launch Configurator.exe. After launch software language can be changed by clicking  in the right bottom corner.



Configuration process begins by pressing on connected device.

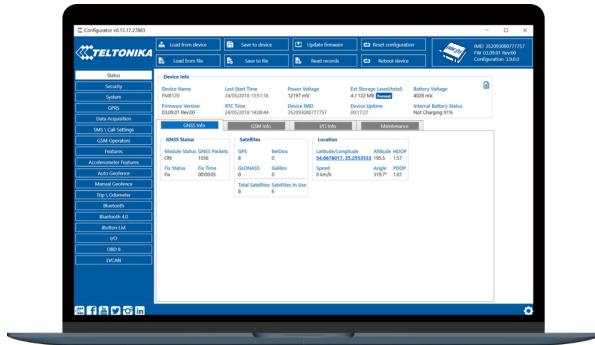

After connection to Configurator **Status window** will be displayed.

Various **Status window**¹ tabs display information about **GNSS**², **GSM**³, **I/O**⁴, **Maintenance**⁵ and etc. FMM230 has one user editable profile, which can be loaded and saved to the device. After any modification of configuration the changes need to be saved to device using **Save to device** button. Main buttons offer following functionality:

-  **Load from device** – loads configuration from device.
-  **Save to device** – saves configuration to device.
-  **Load from file** – loads configuration from file.
-  **Save to file** – saves configuration to file.
-  **Update firmware** – updates firmware on device.
-  **Read records** – reads records from the device.
-  **Reboot device** – restarts device.
-  **Reset configuration** – sets device configuration to default.

Most important configurator section is **GPRS** – where all your server and **GPRS settings**⁶ can be configured and **Data Acquisition**⁷ – where data acquiring parameters can be configured. More details about FMM230 configuration using Configurator can be found in our [Wiki](#).


- [1 wiki.teltonika-gps.com/view/FMM230_Status_Info](#)
- [2 wiki.teltonika-gps.com/view/FMM230_Status_Info#GNSS_Info](#)
- [3 wiki.teltonika-gps.com/view/FMM230_Status_Info#GSM_Info](#)
- [4 wiki.teltonika-gps.com/view/FMM230_Status_Info#1.2FO_Info](#)
- [5 wiki.teltonika-gps.com/view/FMM230_Status_Info#Maintenance](#)
- [6 wiki.teltonika-gps.com/index.php?title=FMM230_GPRS_settings](#)
- [7 wiki.teltonika-gps.com/index.php?title=FMM230_Data_acquisition_settings](#)
- [8 wiki.teltonika-gps.com/index.php?title=FMM230_Configuration](#)

QUICK SMS CONFIGURATION

Default configuration has optimal parameters present to ensure best performance of track quality and data usage.

Quickly set up your device by sending this SMS command to it:

```
« setparam 2001:APN;2002:APN_username;2003:APN_password;2004:Domain;2005:Port;2006:0»
```




Note: Before SMS text, two space symbols should be inserted.

GPRS SETTINGS:

- 1 2001 – APN
- 2 2002 – APN username (if there are no APN username, empty field should be left)
- 3 2003 – APN password (if there are no APN password, empty field should be left)

SERVER SETTINGS:

- 4 2004 – Domain
- 5 2005 – Port
- 6 2006 – Data sending protocol (0 – TCP, 1 – UDP)

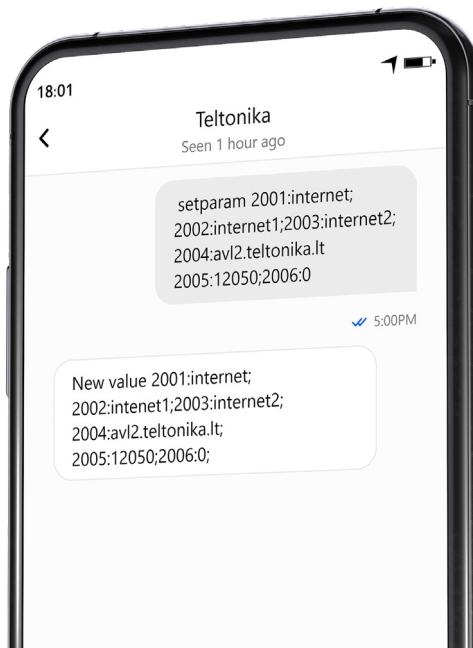

DEFAULT CONFIGURATION SETTINGS

MOVEMENT AND IGNITION DETECTION:



VEHICLE MOVEMENT
will be detected by
accelerometer



IGNITION
will be detected by
vehicle power voltage
between 13,2 – 30 V

DEVICE MAKES A RECORD ON MOVING IF ONE OF THESE EVENTS HAPPEN:



PASSES
300 seconds



VEHICLE DRIVES
100 meters



VEHICLE TURNS
10 degrees



SPEED DIFFERENCE
between last coordinate
and current position is
greater than 10 km/h

DEVICE MAKES A RECORD ON STOP IF:



1 HOUR PASSES
while vehicle is
stationary and
ignition is off

RECORDS SENDING TO SERVER:



EVERY 120 SECOND
it is sent to the server
If device has made a
record

After successful SMS configuration, FMM230 device will synchronize time and update records to configured server. Time intervals and default I/O elements can be changed by using [Teltonika Configurator](#)¹ or [SMS parameters](#)².

¹ wiki.teltonika-gps.com/view/Teltonika_Configurator

² wiki.teltonika-gps.com/view/Template:FMB_Device_Family_Parameter_list

MOUNTING RECOMMENDATIONS WITH A STANDARD CABLE

CONNECTING WIRES

- Wires should be fastened to the other wires or non-moving parts. Try to avoid heat emitting and moving objects near the wires.
- The connections should not be seen very clearly. If factory isolation was removed while connecting wires, it should be applied again.
- If the wires are placed in the exterior or in places where they can be damaged or exposed to heat, humidity, dirt, etc., additional isolation should be applied.
- Wires cannot be connected to the board computers or control units.

CONNECTING POWER SOURCE

- Be sure that after the car computer falls asleep, power is still available on chosen wire. Depending on car, this may happen in 5 to 30 minutes period.
- When module is connected, measure voltage again to make sure it did not decrease.
- It is recommended to connect to the main power cable in the fuse box.
- Use 3A, 125V external fuse.

CONNECTING IGNITION WIRE

- Be sure to check if it is a real ignition wire i. e. power does not disappear after starting the engine.
- Check if this is not an ACC wire (when key is in the first position, most of the vehicle electronics are available).
- Check if power is still available when you turn off any of vehicles devices.
- Ignition is connected to the ignition relay output. As alternative, any other relay, which has power output when ignition is on, may be chosen.

CONNECTING GROUND WIRE

- Ground wire is connected to the vehicle frame or metal parts that are fixed to the frame.
- If the wire is fixed with the bolt, the loop must be connected to the end of the wire.
- For better contact scrub paint from the spot where loop is going to be connected.

Mounting Recommendations with U-Type Cable

DEVICE FASTENING



- Locate the battery in your vehicle. If present remove the battery cover to access the battery.
- You can use a double-sided tape to attach the device on the battery as well as a fastening straps to mount it anywhere next to the battery. Please make sure, that the GNSS antenna and LEDs indicators are facing up Figure 13.

CONNECTING POWER WIRE

Device power wire is designed to be directly connected to the positive terminal fastener of the vehicle battery.

CONNECTING GROUND WIRE

Device ground wire is designed to be directly connected to the negative terminal fastener of the vehicle battery.

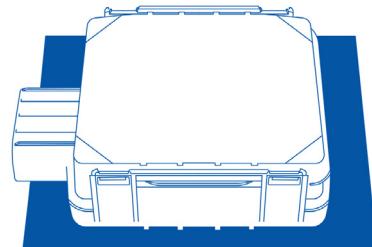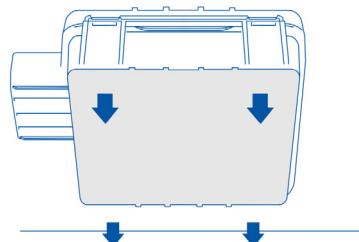

LED INDICATIONS

NAVIGATION LED INDICATIONS

BEHAVIOUR	MEANING
Permanently switched on	GNSS signal is not received
Blinking every second	Normal mode, GNSS is working
Off	GNSS is turned off because: Device is not working or Device is in sleep mode
Blinking fast constantly	Device firmware is being flashed

STATUS LED INDICATIONS

BEHAVIOUR	MEANING
Blinking every second	Normal mode
Blinking every two seconds	Sleep mode
Blinking fast for a short time	Modem activity
Off	Device is not working or Device is in boot mode

BASIC CHARACTERISTICS

MODULE

Name	FMM230-Q3IB0: Quectel BG95-M3 with Teltonika TM2500
Technology	LTE(CaT1)/2G(GSM/GPRS)/GNSS/BLUETOOTH® LE

GNSS

GNSS	GPS, GLONASS, GALILEO, BEIDOU, QZSS, AGPS
Receiver	Tracking: 33
Tracking sensitivity	-165 dBm
Position Accuracy	< 2.5 CEP
Velocity Accuracy	< 0.1 m/s (within +/- 15% error)
Hot start	< 1 s
Warm start	< 25 s
Cold start	< 35 s

CELLULAR

Technology	LTE CAT M1/NB-IoT/GSM
2G bands	BG95-M3: B2/B3/B5/B8

4G bands	BG95: LTE-FDD (CAT M1): B1/B2/B3/ B4/B5/B8/B12/B13/B18/B19/B20/ B25/B26/B27/B28/B66/B85	Power consumption	At 12V < 3 mA (Ultra Deep Sleep¹) At 12V < 5 mA (Deep Sleep¹) At 12V < 11 mA (Online Deep Sleep¹) At 12V < 18 mA (GPS Sleep¹) At 12V < 33 mA (nominal with no load) At 12V < 2A Max. (with full Load / Peak)
	LTE-FDD (CAT NB2): B1/B2/B3/B4/B5/ B8/B12/B13/B18/B19/B20/B25/B28/ B66/B71/B85		
Data transfer	BG95: LTE: Max. 588Kbps (DL)/ Max.1119Kbps (UL) GPRS: Max. 107Kbps (DL)/Max. 85.6Kbps (UL)		
Transmit power	Class 4 for GSM850/900: 23±2dBm Class 1 for GSM1800/1900: 20±2dBm Class 3 for LTE-TDD: 23±2.7dBm Class 3 for LTE-FDD: 23±2.7dBm		Temperature and Humidity sensor, Headset² , OBDII dongle³ , Inateck Barcode Scanner, Universal Bluetooth® LE sensors support
Data support	SMS (text/data)		

POWER

BLUETOOTH® TECHNOLOGY

INTERFACE

¹wiki.teltonika-gps.com/view/FMM230_Sleep_modes

²wiki.teltonika-gps.com/view/How_to_connect_Bluetooth_Hands_Free_adapter_to_FMB_device

³wiki.teltonika-gps.com/view/How_to_connect_OBD_II_Bluetooth_Dongle_to_FMB_device

GNSS antenna	Internal High Gain
Cellular antenna	Internal LTE High Gain
USB	2.0 Micro-USB
LED indication	2 status LED lights
SIM	Micro-SIM or eSIM
Memory	128MB internal flash memory

PHYSICAL SPECIFICATION

Dimensions	70,5 x 67,0 x 25,6 mm (L x W x H) 85,0 x 67,0 x 25,6 mm (L x W x H) (length with connector socket)
------------	--

OPERATING ENVIRONMENT

Operating temperature (without battery)	-20 °C to +85°C
Storage temperature (without battery)	-20 °C to +85°C
Operating temperature (with battery)	-20 °C to +40 °C
Storage temperature (with battery)	-20 °C to +45 °C
Operating humidity	5% to 95% non-condensing

Ingress Protection Rating	IP67
---------------------------	------

Battery charge temperature	0 °C to +45 °C
Battery discharge temperature	-20 °C to +60 °C
Battery storage temperature	-20 °C to +45 °C for 1 month -20 °C to +35 °C for 6 months

FEATURES

Sensors	Accelerometer
Scenarios	Green Driving, Over Speeding detection, Jamming detection, GNSS Fuel Counter, DOUT Control Via Call, Excessive Idling detection, Immobilizer, iButton Read Notification, Unplug detection, Towing detection, Crash detection, Auto Geofence, Manual Geofence, Trip⁴
Sleep modes	GPS Sleep⁵, Online Deep Sleep⁸, Deep Sleep⁸, Ultra Deep Sleep⁸
Configuration and firmware update	FOTA Web⁶, FOTA, Teltonika Configurator⁷ (USB, Bluetooth® wireless technology), FMBT mobile application (Configuration)
SMS	Configuration, Events, DOUT control, Debug
GPRS commands	Configuration, DOUT control, Debug

⁴wiki.teltonika-gps.com/view/FMM230_Features_settings

⁵wiki.teltonika-gps.com/view/FMM230_Sleep_modes

⁶wiki.teltonika-gps.com/view/FOTA_WEB

⁷wiki.teltonika-gps.com/view/Teltonika_Configurator

Time Synchronization	GPS, NITZ, NTP
Fuel monitoring	LLS (Analog), LV-CAN200⁸ , ALL-CAN300⁹ , OBDII dongle¹⁰ , CAN-CONTROL¹¹
Ignition detection	Digital Input 1, Accelerometer, External Power Voltage, Engine RPM (CAN Adapters, OBDII dongle)

ELECTRICAL CHARACTERISTICS

CHARACTERISTIC DESCRIPTION	VALUE		
	MIN.	TYP.	MAX.
SUPPLY VOLTAGE			
Supply Voltage (Recommended Operating Conditions)	+10	+30	V
DIGITAL OUTPUT (OPEN DRAIN GRADE)			
Drain current (Digital Output OFF)	120	120	µA
Drain current (Digital Output ON, Recommended Operating Conditions)	0.1	0.5	A
Static Drain-Source resistance (Digital Output ON)	400	600	mΩ
DIGITAL INPUT			
Input resistance (DIN1)	47		kΩ
Input resistance (DIN2)	38.45		kΩ
Input resistance (DIN3)	150		kΩ

⁸teltonika-gps.com/products/trackers/can-obd-data/lv-can200

⁹teltonika-gps.com/products/trackers/can-obd-data/all-can300

¹⁰wiki.teltonika-gps.com/view/How_to_connect_OBD_II_Bluetooth_Dongle_to_FMB_device

¹¹teltonika-gps.com/products/trackers/can-obd-data/can-control

Characteristic Description	Value				Characteristic Description	Value			
	Min.	Typ.	Max.	Unit		Min.	Typ.	Max.	Unit
Input voltage (Recommended Operating Conditions)	0		Supply voltage	V	Input Voltage (Recommended Operating Conditions), Range 2	0		+30	V
Input Voltage threshold (DIN1)		7.5		V	Input resistance, Range 2		150		kΩ
Input Voltage threshold (DIN2)		2.5		V	Measurement error on 12 V, Range 2	0.9			%
Input Voltage threshold (DIN3)		2.5		V	Additional error on 12 V, Range 2	108			mV
ANALOG INPUT									
Input voltage (Recommended Operating Conditions), Range 1	0		+10	V	Measurement error on 30 V, Range 2	0.33			%
Input resistance, Range 1		38.45		kΩ	Additional error on 30 V, Range 2	88			mV
Measurement error on 12V, Range 1	0.9			%	OUTPUT SUPPLY VOLTAGE 1-WIRE				
Additional error on 12 V, Range 1	108			mV	Supply voltage	+4.5		+4.7	V
Measurement error on 30 V, Range 1	0.33			%	Output inner resistance	7			Ω
Additional error on 30 V, Range 1	88			mV	Output current (Uout > 3.0 V)	30			mA

CHARACTERISTIC DESCRIPTION	VALUE		
	MIN.	TYP.	MAX.
NEGATIVE INPUT			
Input resistance	38.45		kΩ
Input voltage (Recommended Operating Conditions)	0	Supply voltage	V
Input voltage threshold	0.5		V
Sink current	180		nA

SAFETY INFORMATION

This message contains information on how to operate FMM230 safely. By following these requirements and recommendations, you will avoid dangerous situations. You must read these instructions carefully and follow them strictly before operating the device!

- The device uses SELV limited power source. The nominal voltage is +12 V DC. The allowed voltage range is +10...+30 V DC.
- To avoid mechanical damage, it is advised to transport the device in an impact-proof package. Before usage, the device should be placed so that its LED indicators are visible. They show the status of device operation.
- When connecting the 2x6 connector wires to the vehicle, the appropriate jumpers of the vehicle power supply should be disconnected.
- Before unmounting the device from the vehicle, the 2x6 connector must be disconnected. The device is designed to be mounted in a zone of limited access, which is inaccessible to the operator. All related devices must meet the requirements of EN 62368-1 standard.
- The device FMM230 is not designed as a navigational device for boats.



Do not disassemble the device. If the device is damaged, the power supply cables are not isolated or the isolation is damaged, DO NOT touch the device before unplugging the power supply.



All wireless data transferring devices produce interference that may affect other devices which are placed nearby.



The device must be connected only by qualified personnel.



The device must be firmly fastened in a predefined location.



The programming must be performed using a PC with autonomic power supply.



Installation and/or handling during a lightning storm is prohibited.



The device is susceptible to water and humidity.



Risk of explosion if battery is replaced by an incorrect type. Dispose of used batteries according to the instructions.



Battery should not be disposed of with general household waste. Bring damaged or worn-out batteries to your local recycling center or dispose them to battery recycle bin found in stores.

CERTIFICATION AND APPROVALS



This sign on the package means that it is necessary to read the User's Manual before your start using the device. Full User's Manual version can be found in our [Wiki](#)¹.

[1 wiki.teltonika-gps.com/index.php?title=FMM230](https://wiki.teltonika-gps.com/index.php?title=FMM230)



Hereby, Teltonika declare under our sole responsibility that the above described product is in conformity with the relevant Community harmonization: European Directive 2014/53/EU (RED).



E-Mark and e-Mark are the European conformity marks issued by the transport sector, indicating that the products comply with relevant laws and regulations or directives. Vehicles and related products need to go through the E-Mark certification process to be legally sold in Europe.



UK Conformity Assessed (UKCA) marking is a conformity mark that indicates conformity with the applicable requirements for above described products sold within Great Britain.



The standard aims to provide users more detailed information than vague marketing terms such as waterproof.



This sign on the package means that all used electronic and electric equipment should not be mixed with general household waste.



Para maiores informações, consulte o site da ANATEL www.anatel.gov.br

Este equipamento não tem direito à proteção contra interferência prejudicial e não pode causar interferência em sistemas devidamente autorizados.

For more information, see the ANATEL website www.anatel.gov.br

This equipment is not entitled to protection against harmful interference and must not cause interference in duly authorized systems.



The RoHS1 is a directive regulating the manufacture, import and distribution of Electronics and Electrical Equipment (EEE) within the EU, which bans from use 10 different hazardous materials (to date).



The Australian Standard AS/NZS 4417.1 and AS/NZS 4417.2 Marking of electrical products to indicate compliance with regulations – General rules for use of the mark provides general requirements for the use of the RCM including location of the marking on the equipment and its dimensional requirements.



FCC ID: 2A3HUFMM230

- This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/ TV technician for help.
- Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.
- This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. To comply with FCC RF Exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for the transmitter must be installed to provide a separation distance of at least 20cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.



REACH addresses the production and use of chemical substances, and their potential impacts on both human health and the environment. Its 849 pages took seven years to pass, and it has been described as the most complex legislation in the Union's history and the most important in 20 years. It is the strictest law to date regulating chemical substances and will affect industries throughout the world.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by UAB Teltonika Telematics is under license. Other trademarks and trade names are those of their respective owners.

DECLARATION OF IMEI ASSIGNMENT

The IMEI number is used by a GSM network to identify valid devices and therefore can be used for stopping a stolen phone from accessing that network. For example, if a mobile phone is stolen, the owner can call their network provider and instruct them to blacklist the phone using its IMEI number. This renders the phone useless on that network and sometimes other networks too, whether or not the phone's subscriber identity module (SIM) is changed.

CHECK ALL CERTIFICATES

All newest certificates may be found in our [Wiki](#)².

²wiki.teltonika-gps.com/view/FMM230_Certification_%26_Approvals

WARRANTY

We guarantee our products 24-month warranty¹ period.

All batteries carry a 6-month warranty period.

Post-warranty repair service for products is not provided.

If a product stops operating within this specific warranty time, the product can be:

- Repaired
- Replaced with a new product
- Replaced with an equivalent repaired product fulfilling the same functionality
- Replaced with a different product fulfilling the same functionality in case of EOL for the original product

¹ Additional agreement for an extended warranty period can be agreed upon separately.

WARRANTY DISCLAIMER

- Customers are only allowed to return products as a result of the product being defective, due to order assembly or manufacturing fault.
- Products are intended to be used by personnel with training and experience.
- Warranty does not cover defects or malfunctions caused by accidents, misuse, abuse, catastrophes, improper maintenance or inadequate installation – not following operating instructions (including failure to heed warnings) or use with equipment with which it is not intended to be used.
- Warranty does not apply to any consequential damages.
- Warranty is not applicable for supplementary product equipment (i. e. PSU, power cables, antennas) unless the accessory is defective on arrival.
- **More information on what is RMA¹**

¹ wiki.teltonika-gps.com/view/RMA_guidelines