




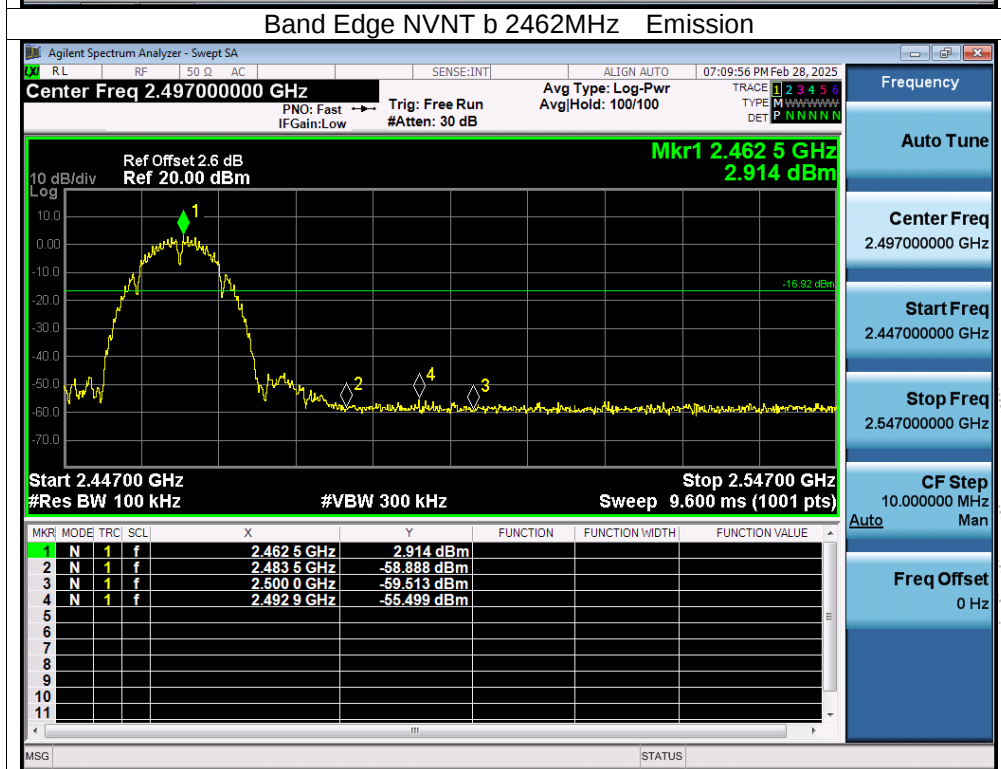
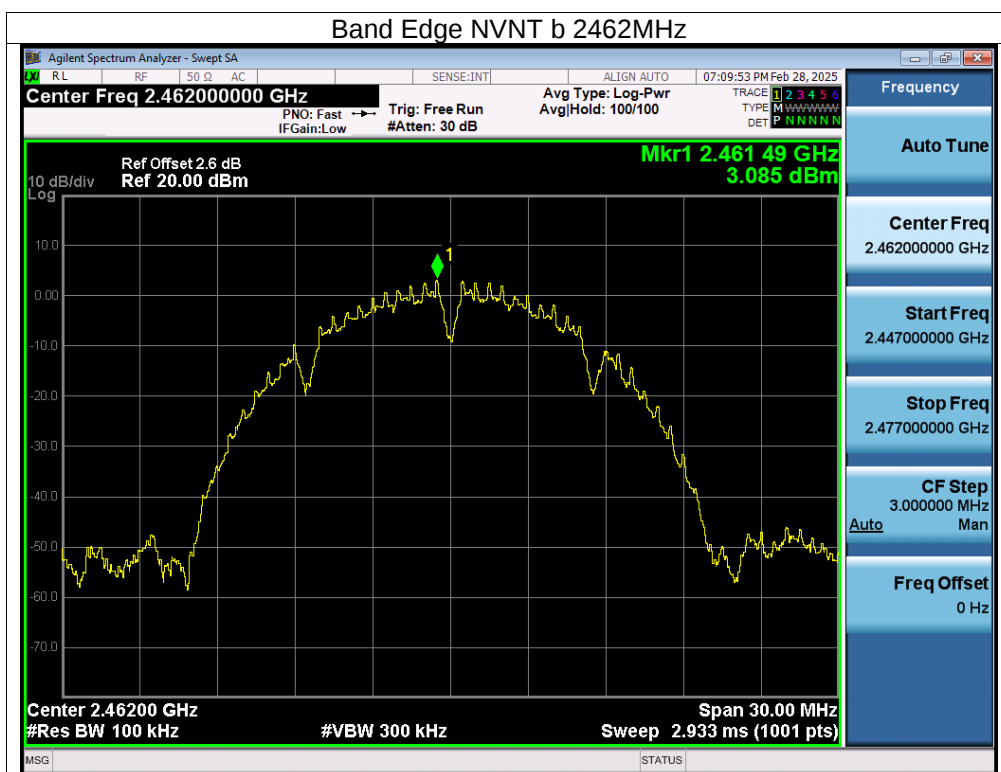
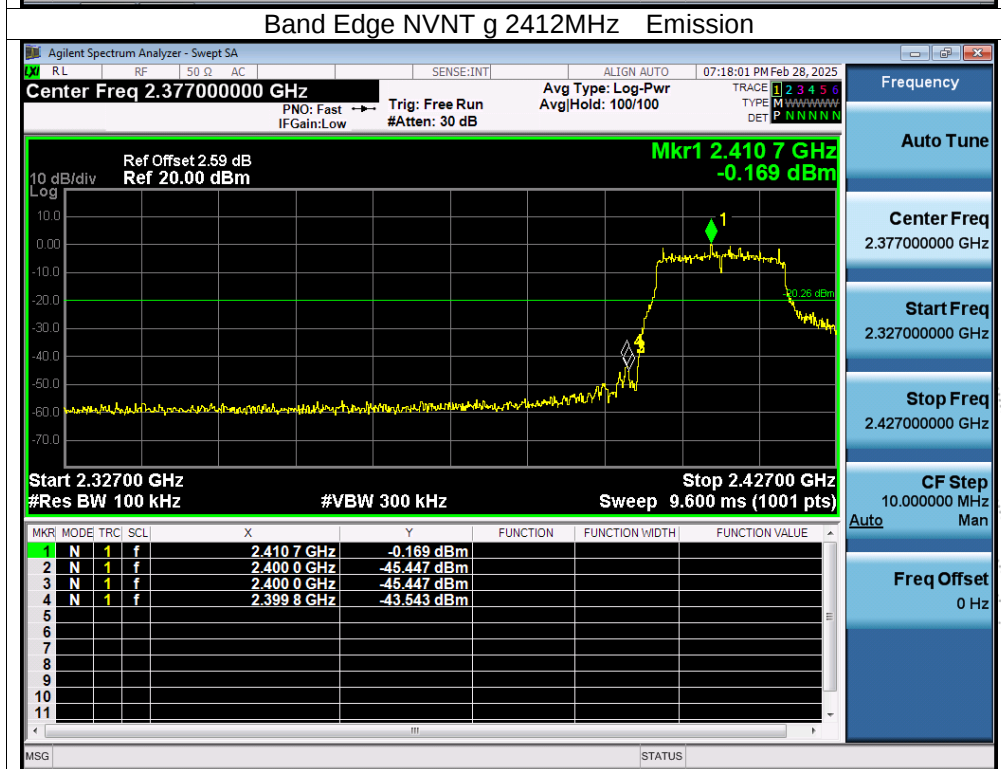
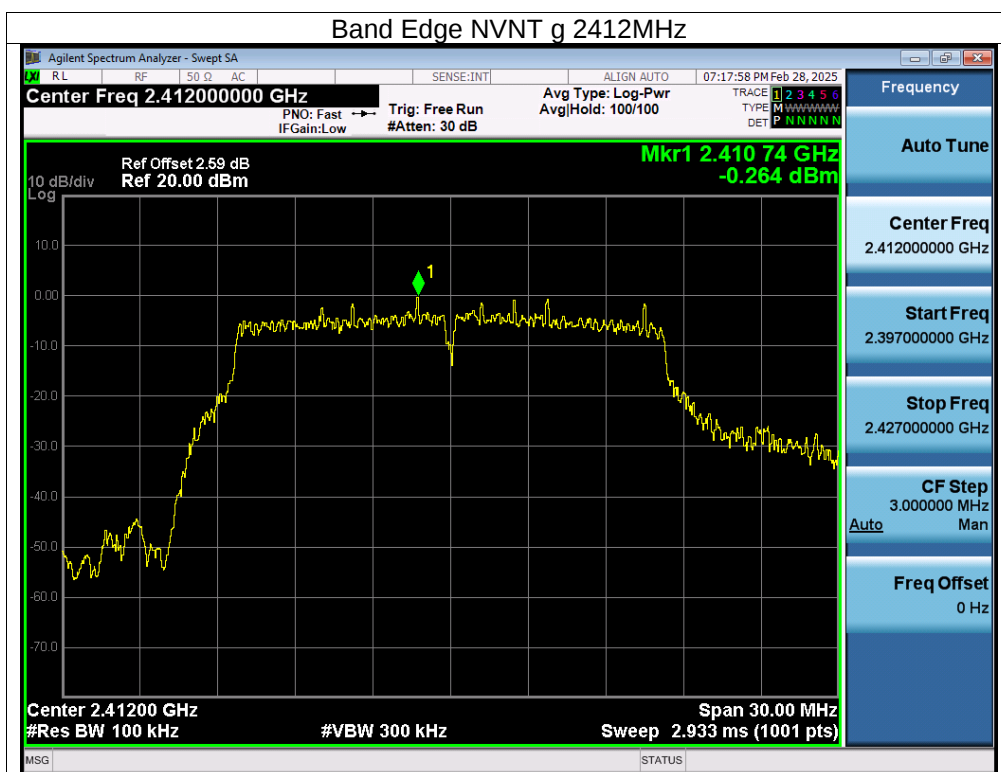
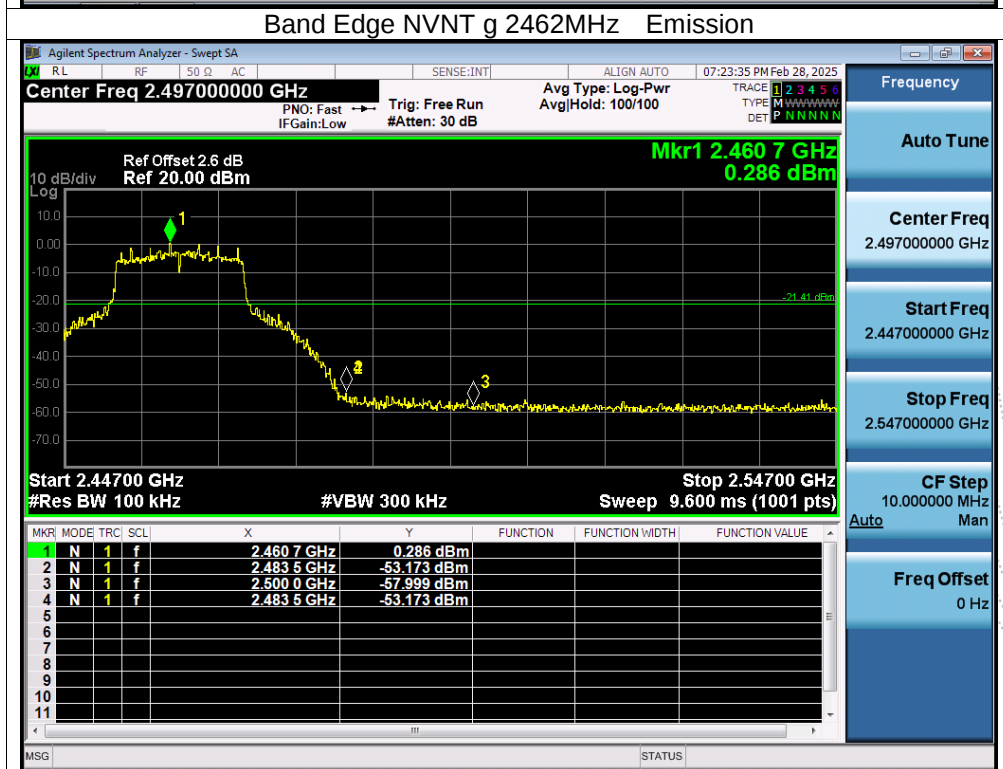



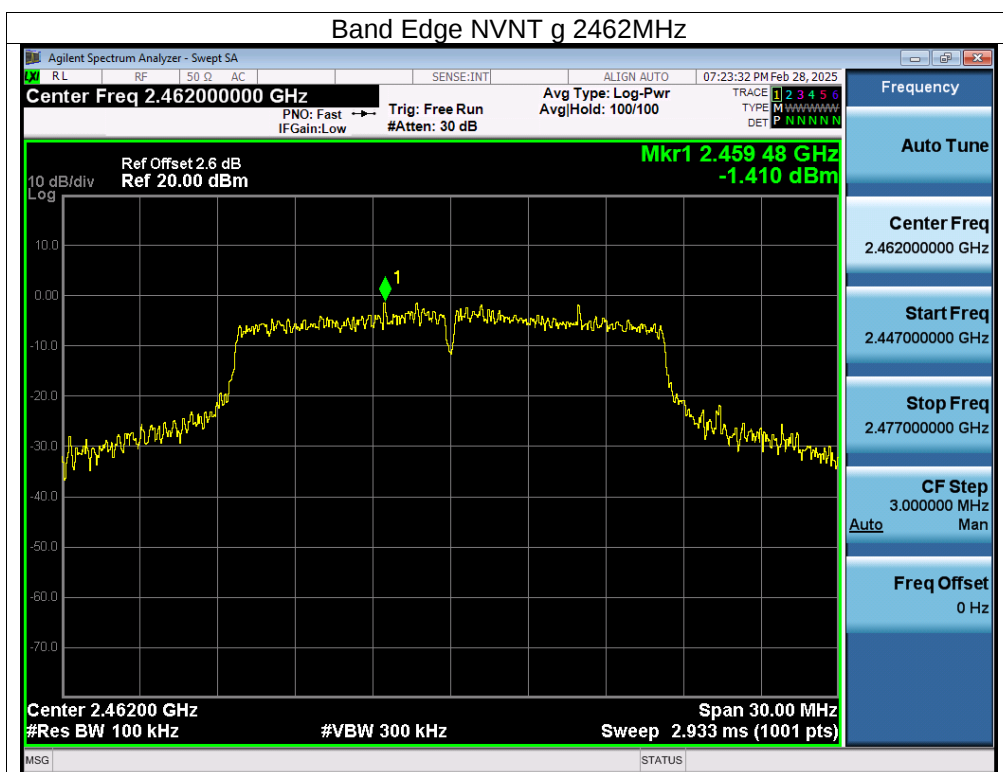



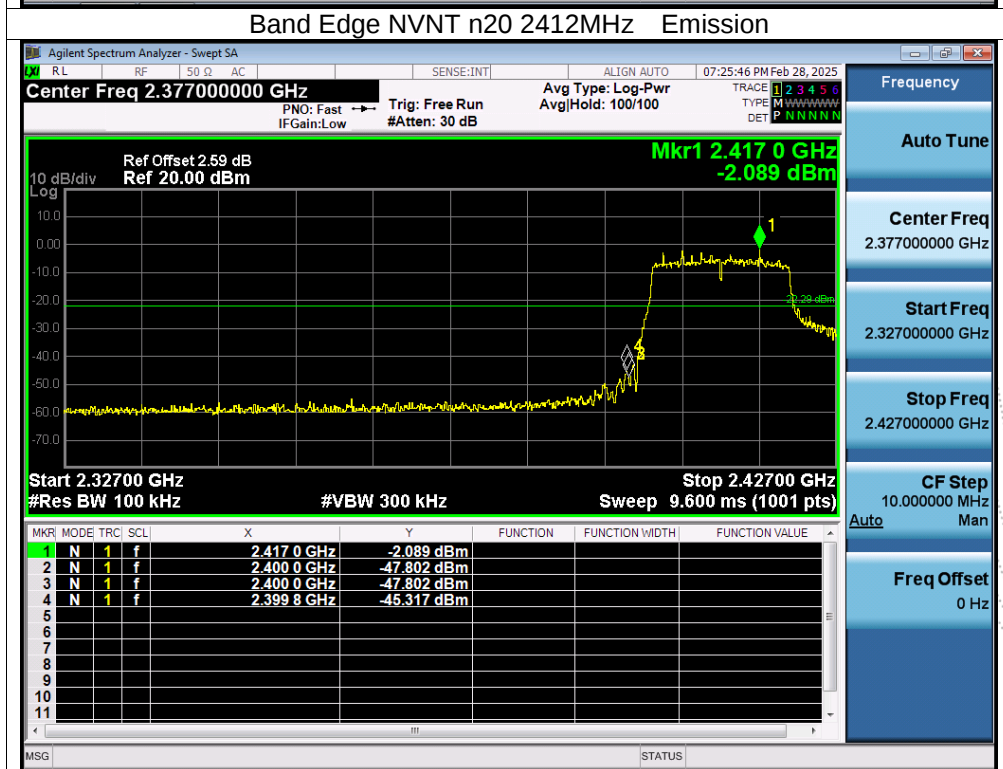



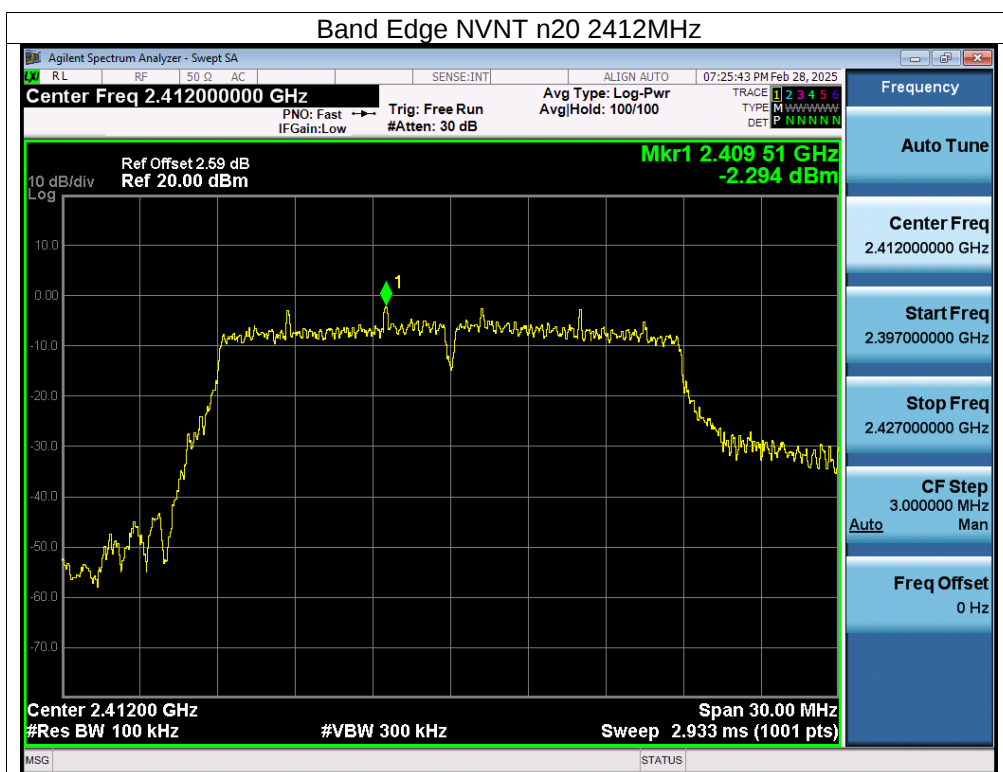



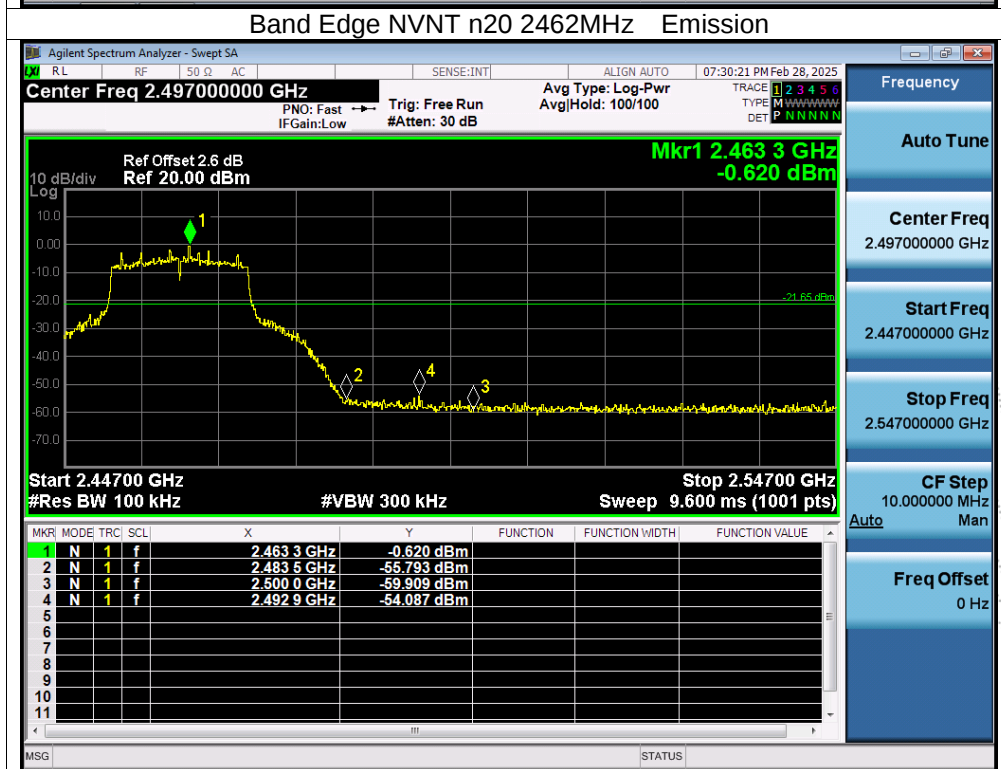



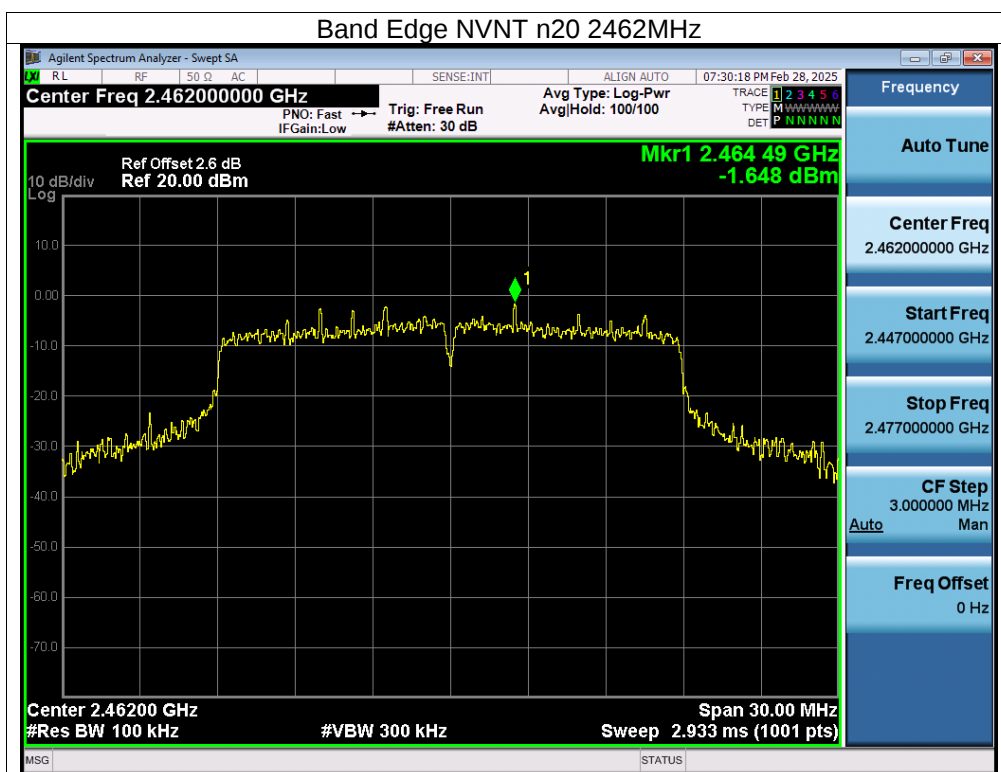


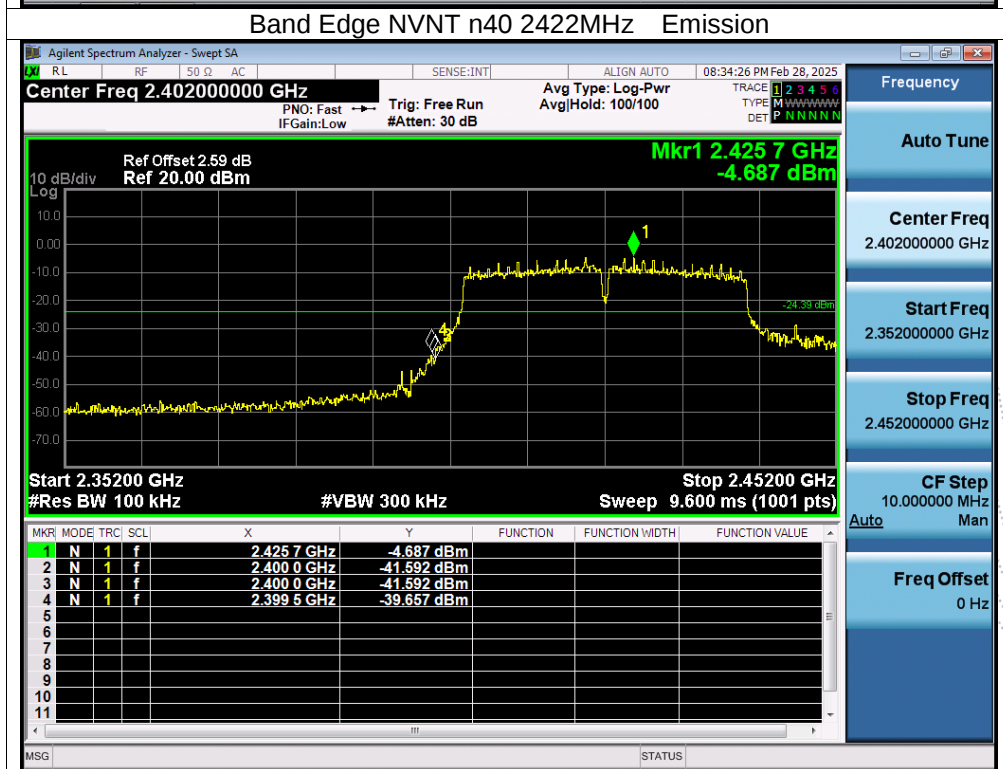
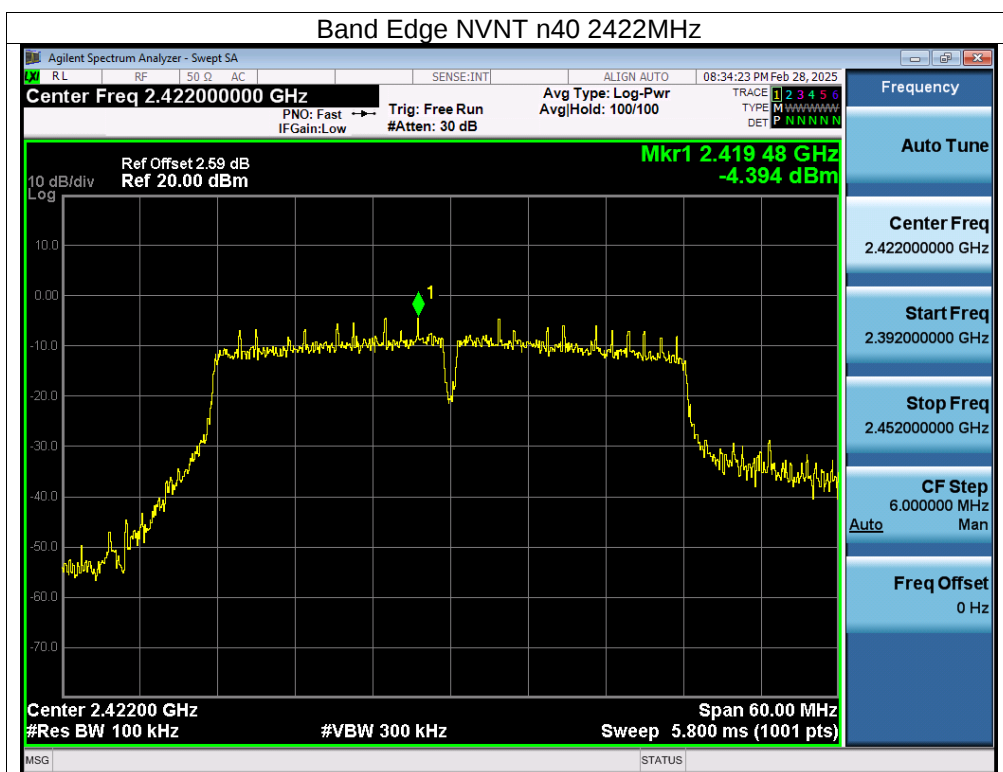


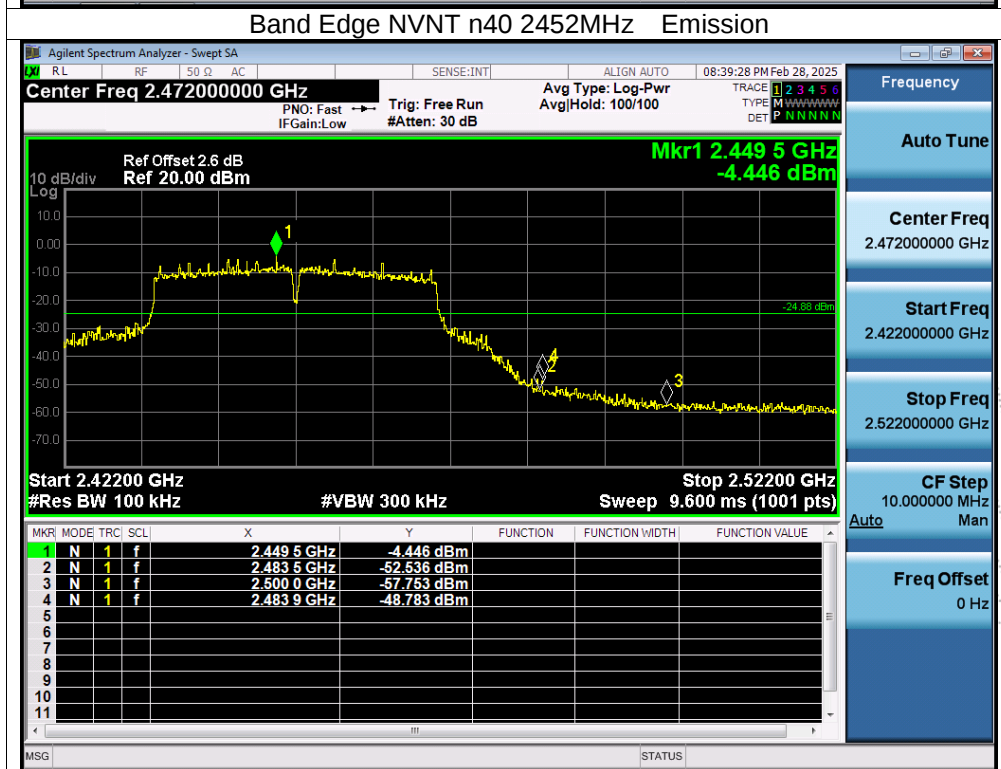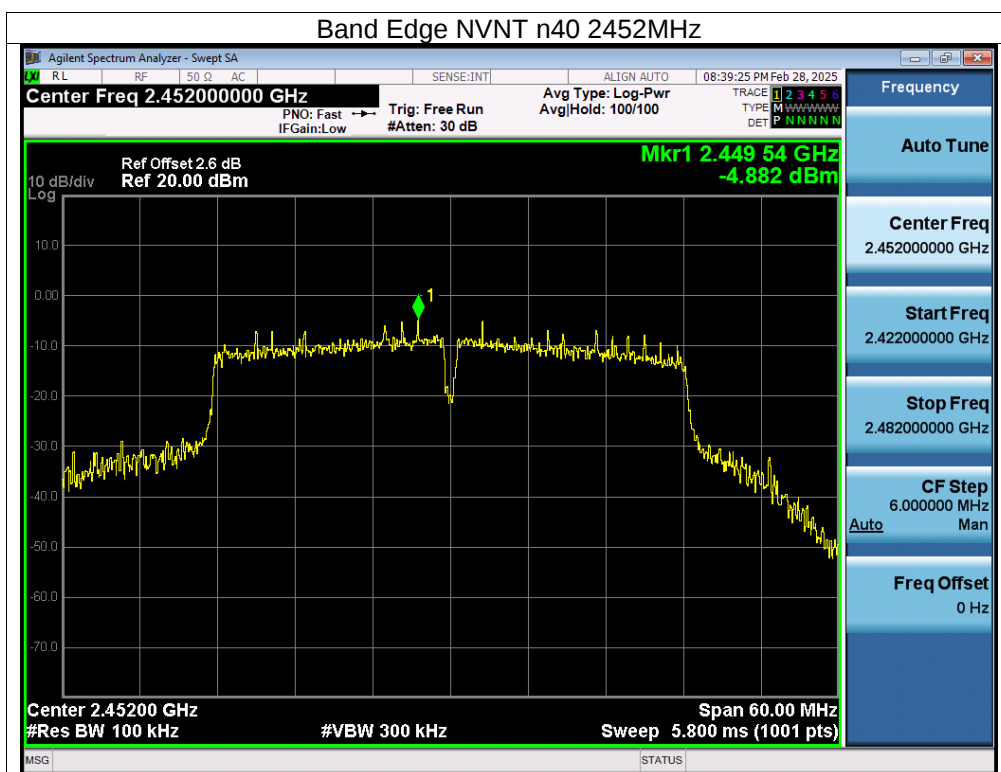

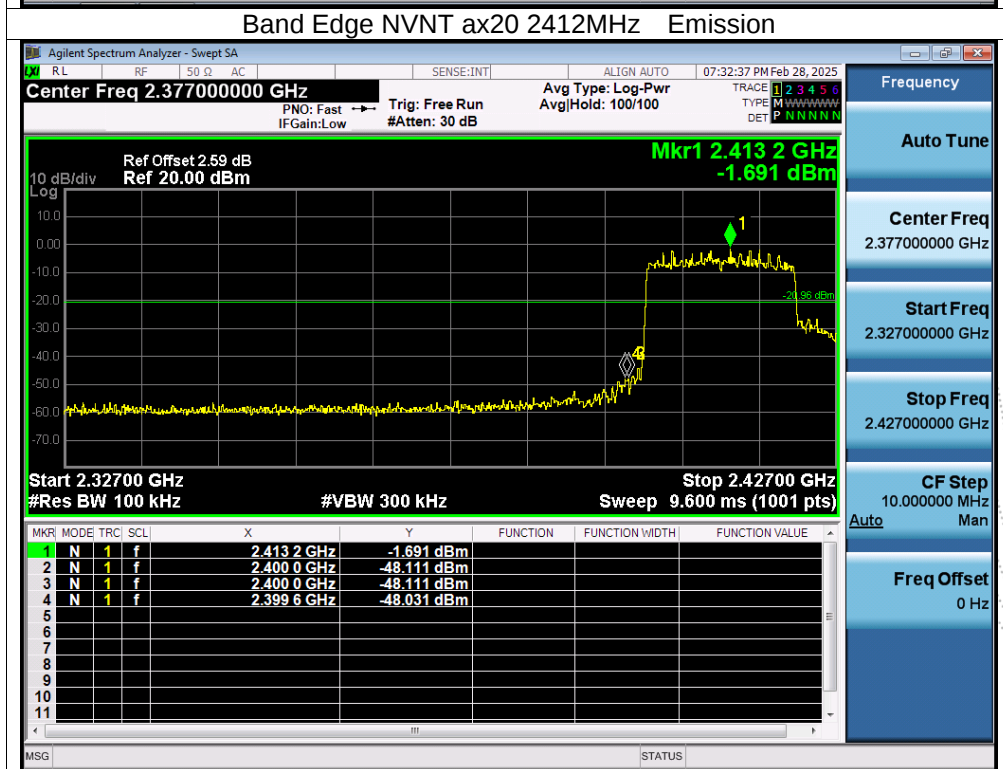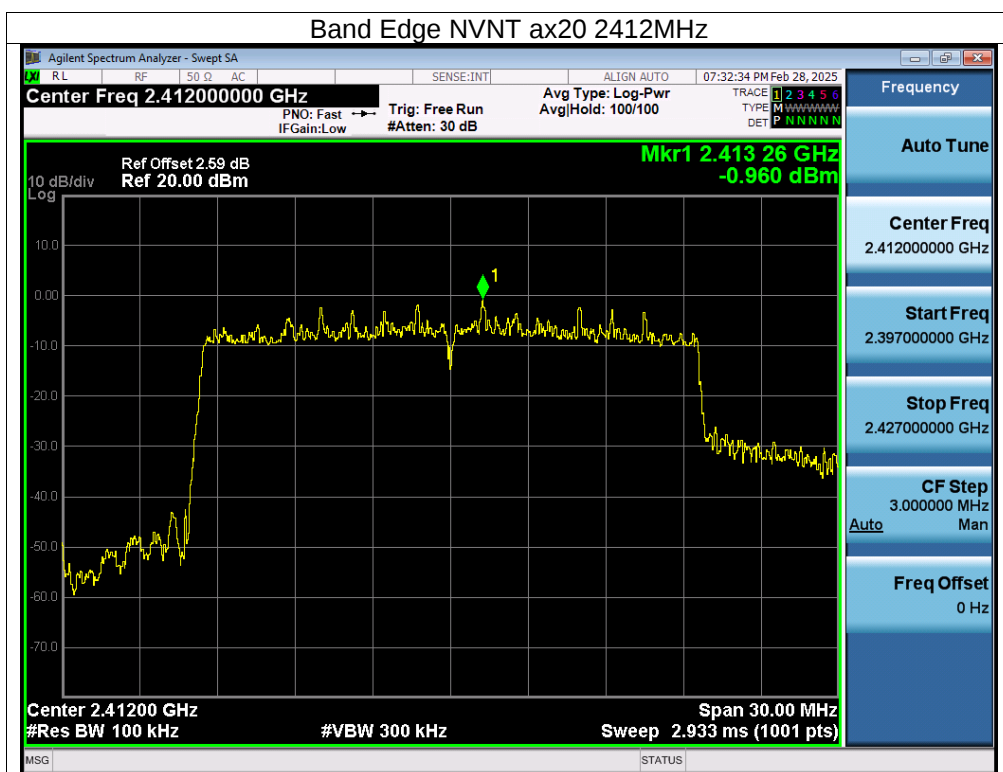


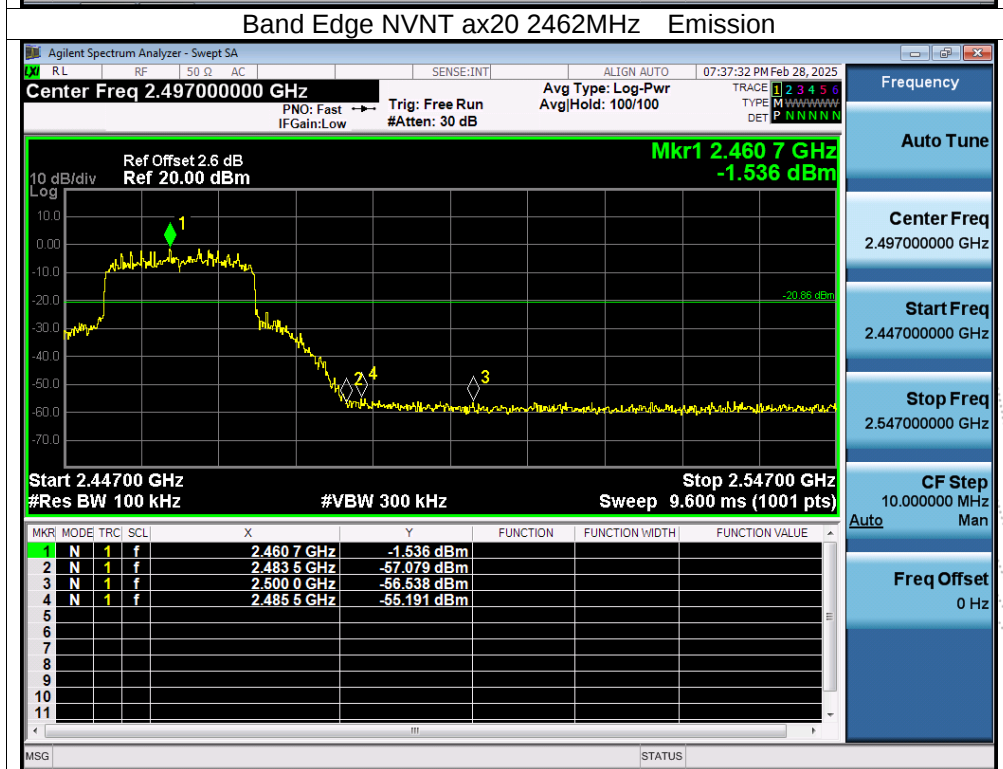
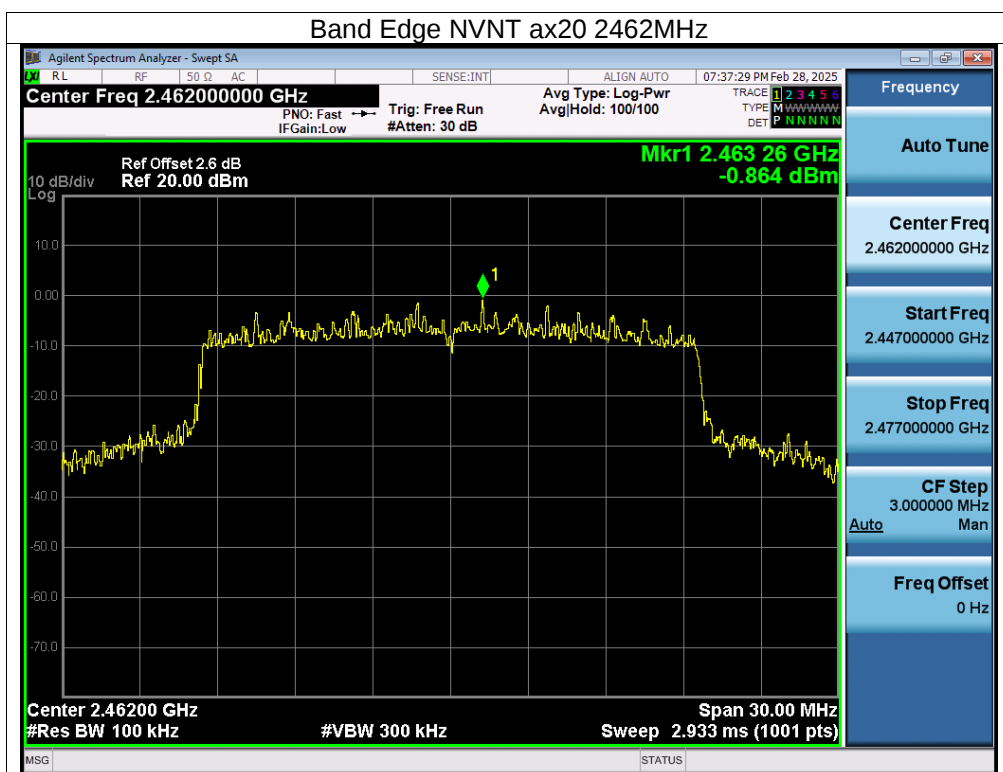


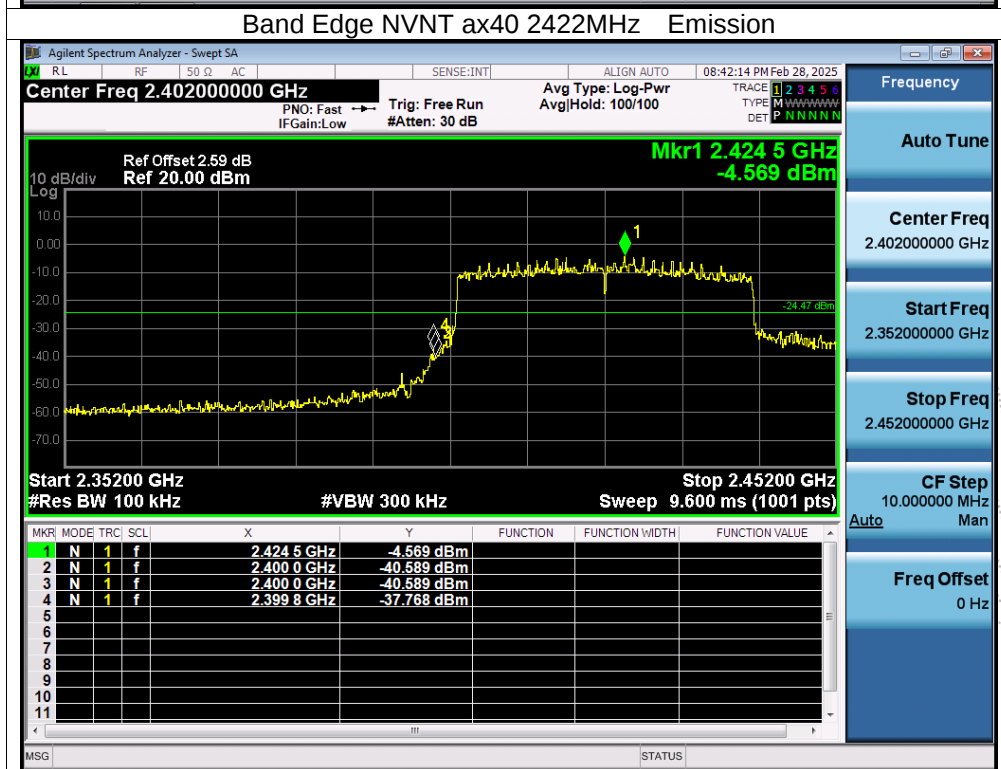
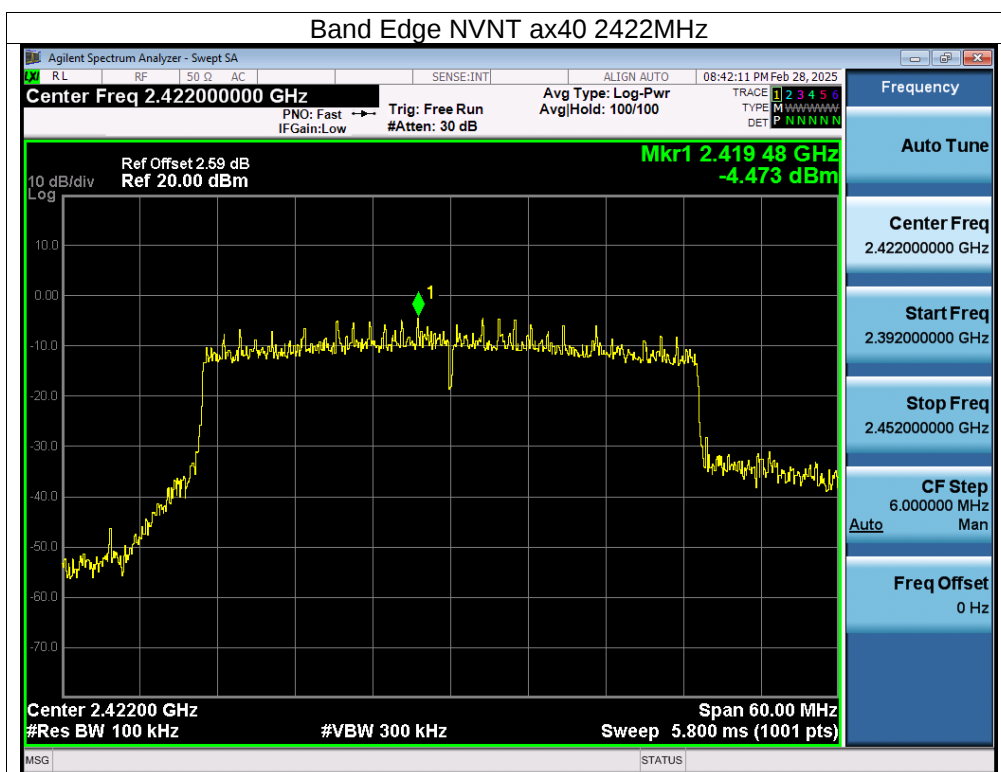


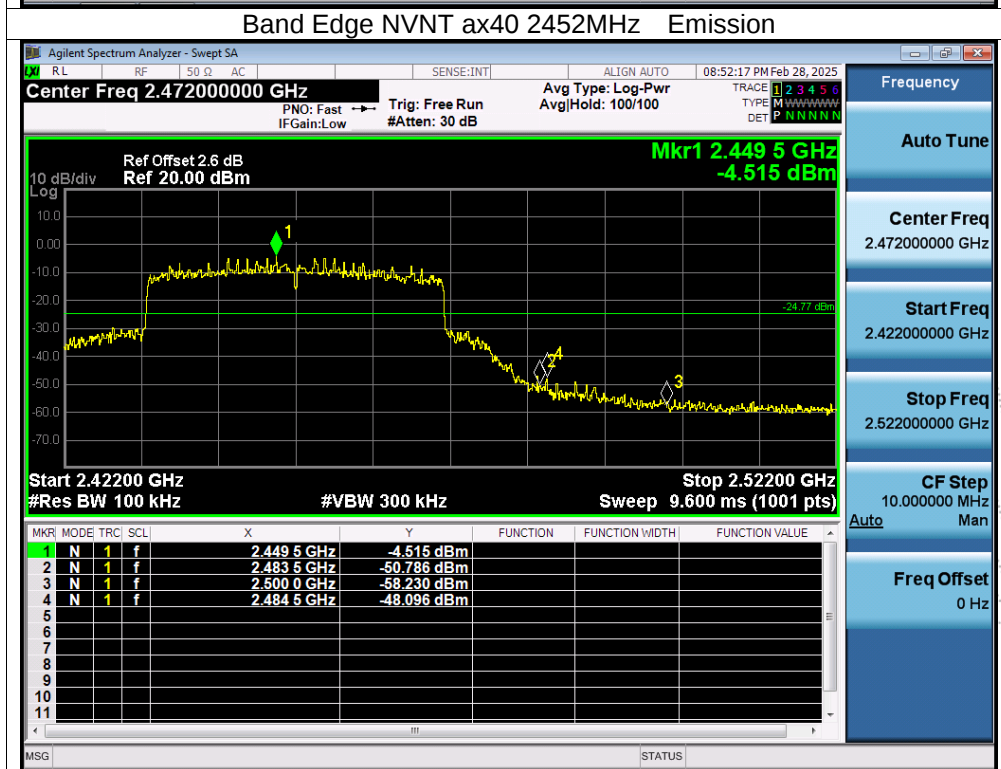
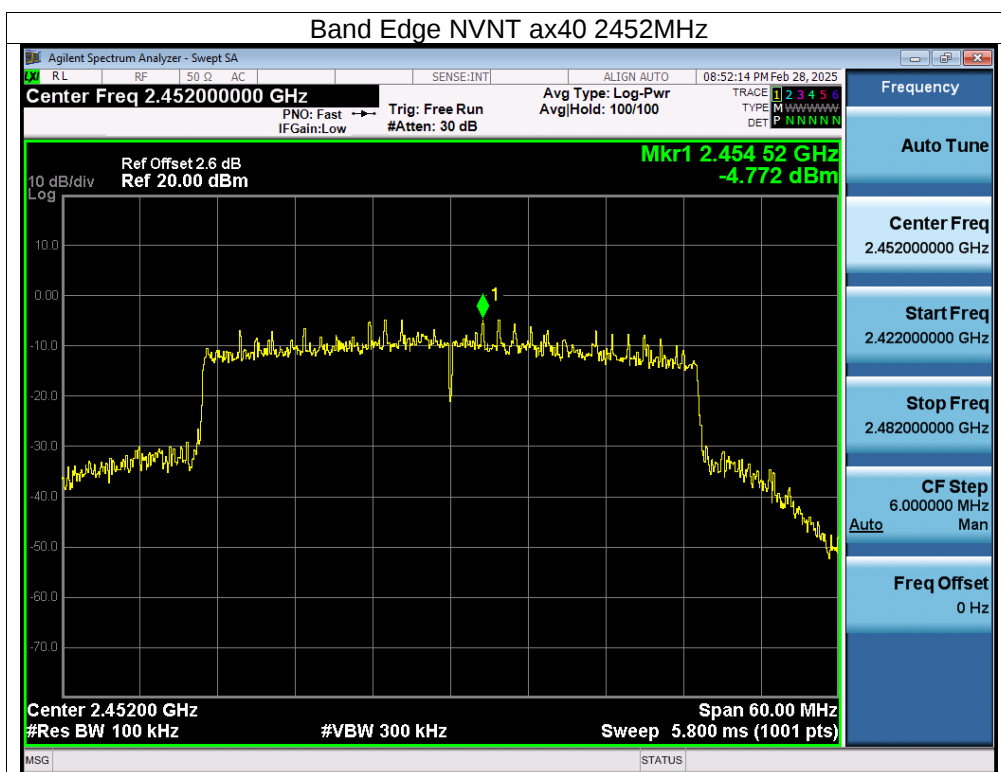




Note: A(B) Represent the value of antenna A and B, The worst data is Antenna A, only shown Antenna A Plot.


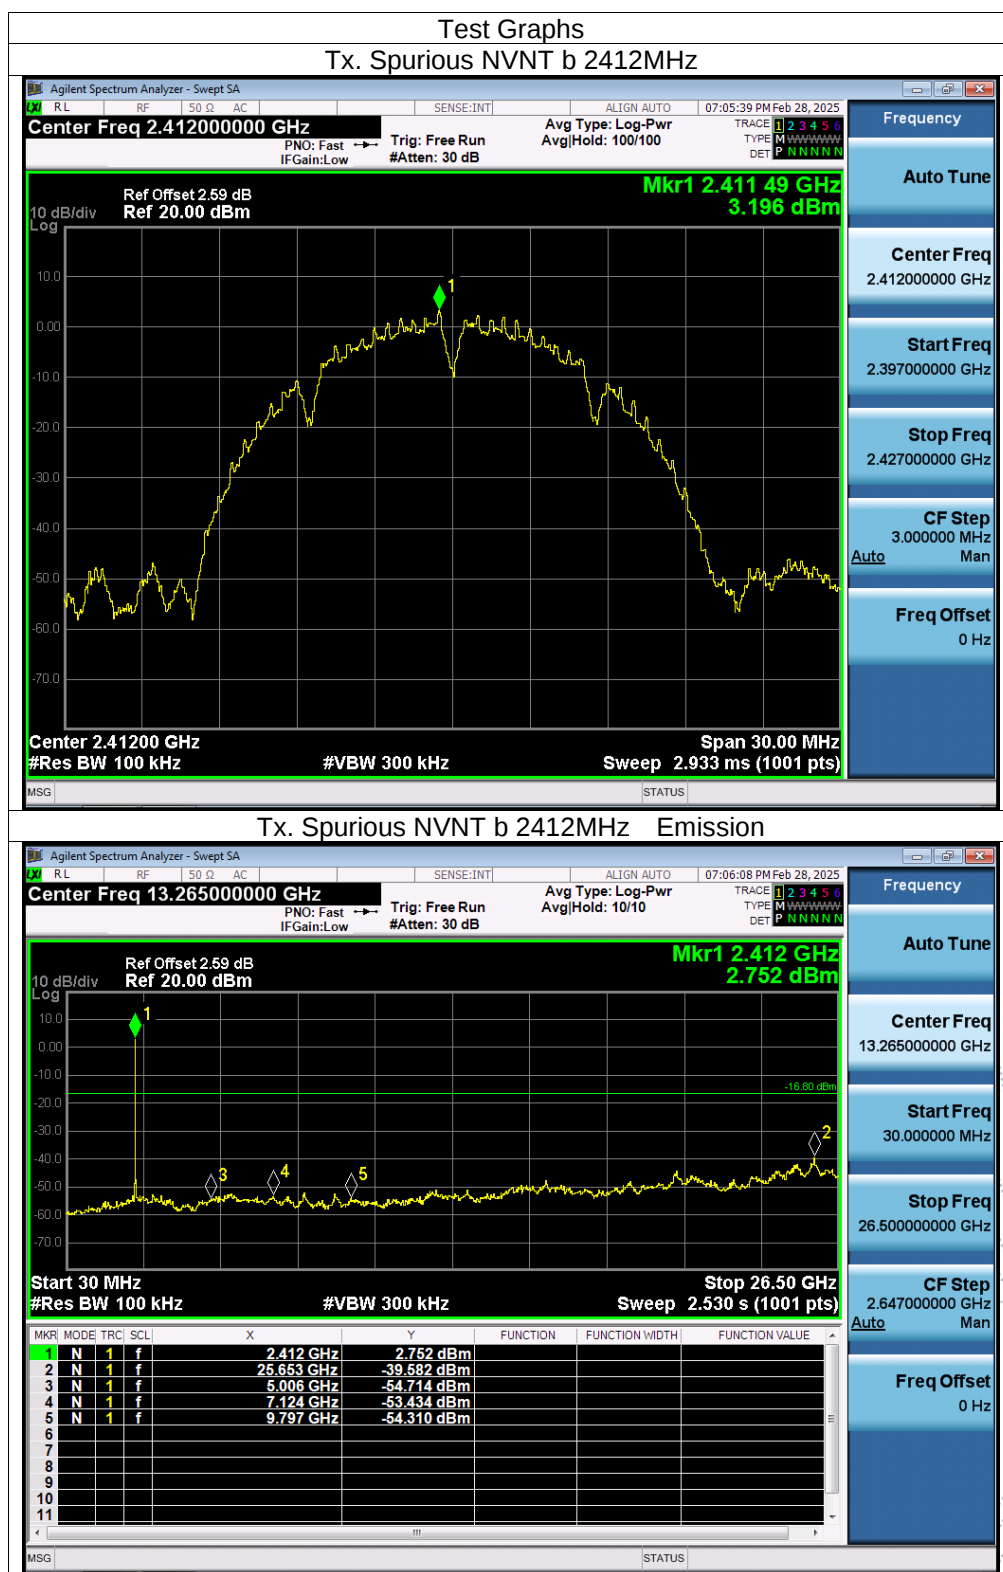


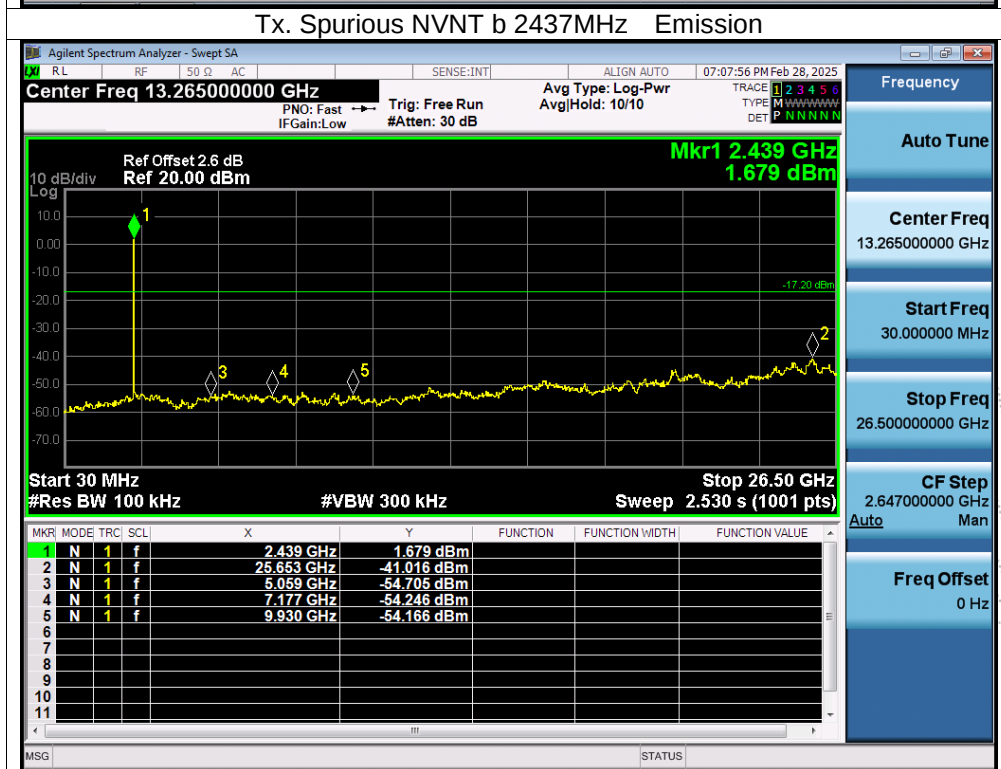
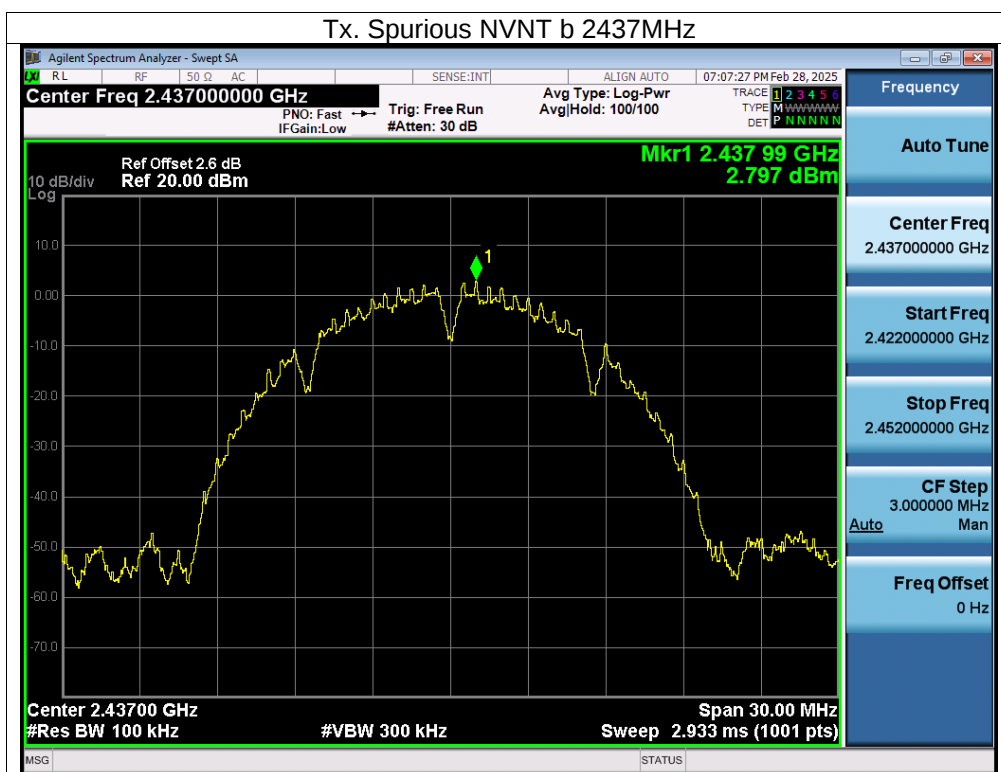


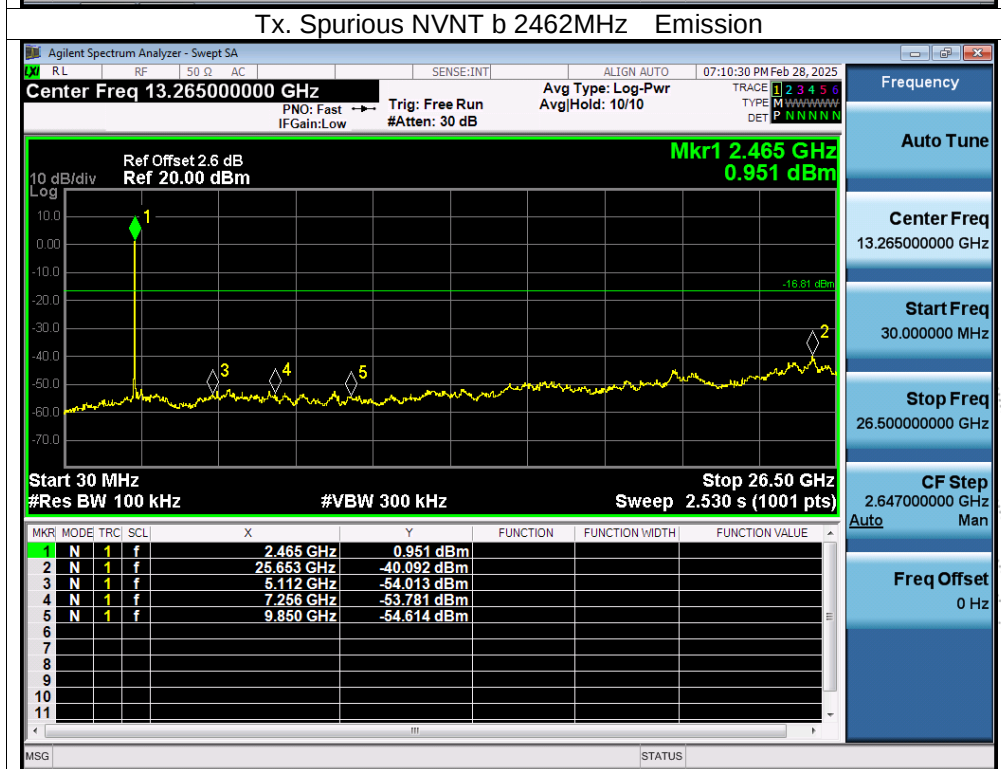
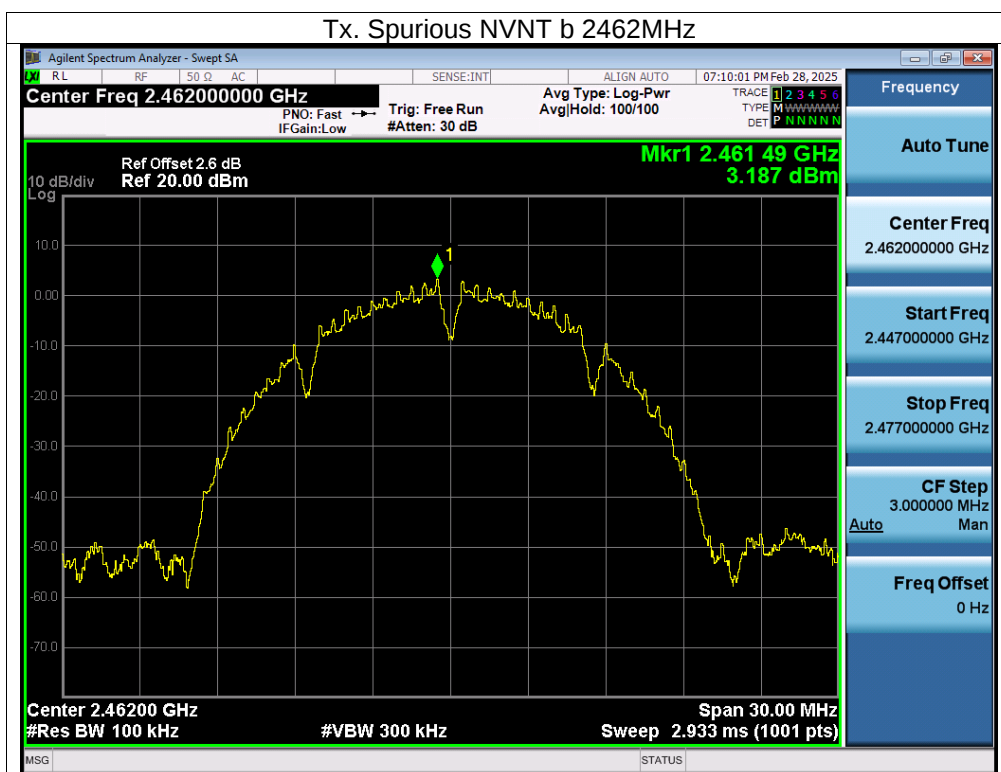


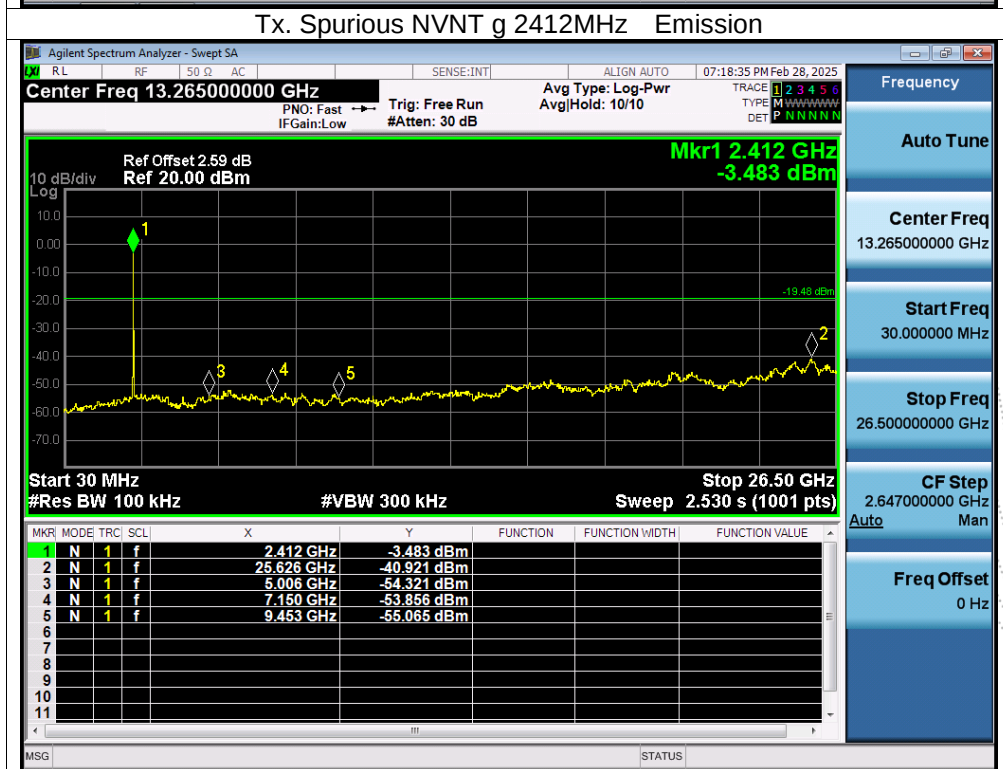
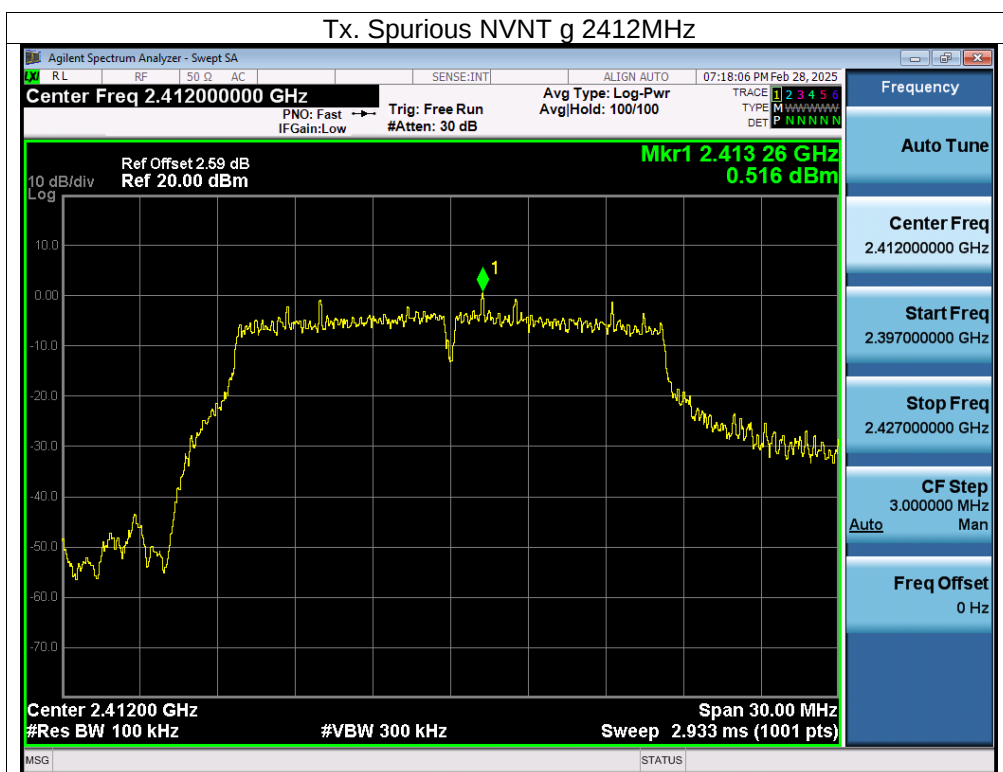


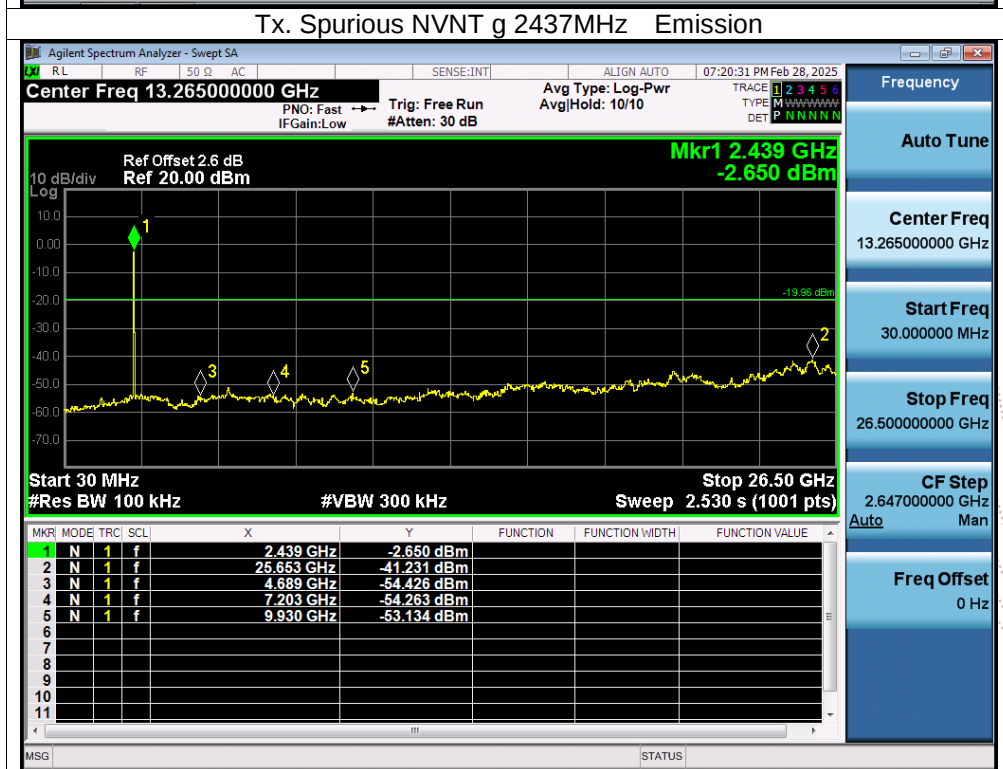
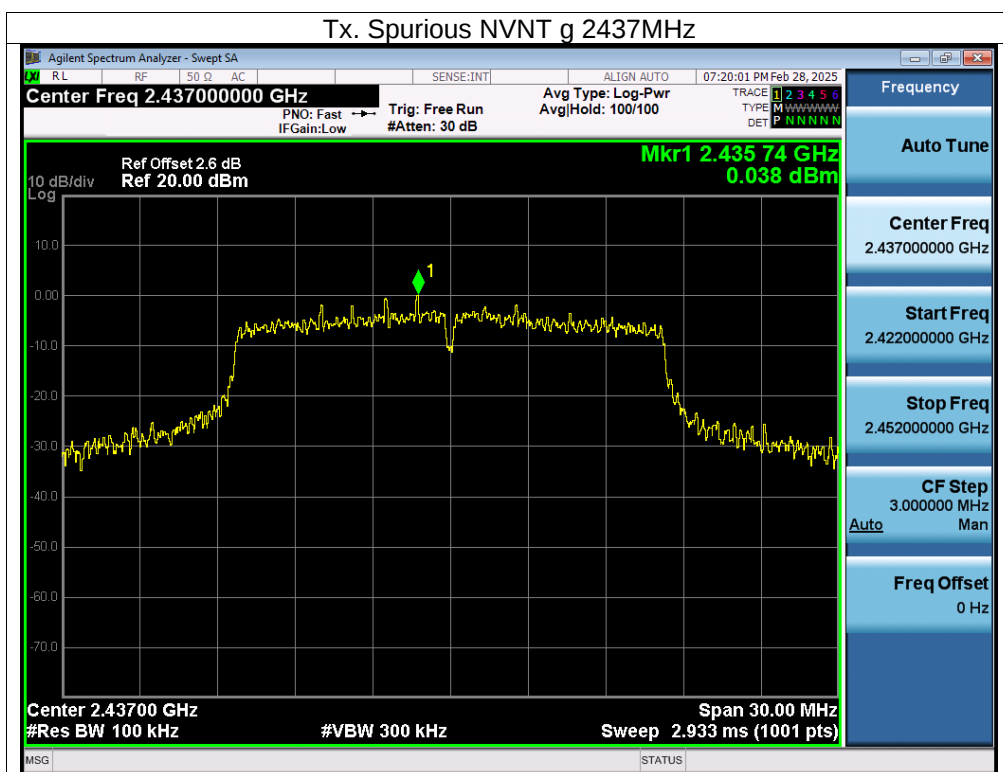


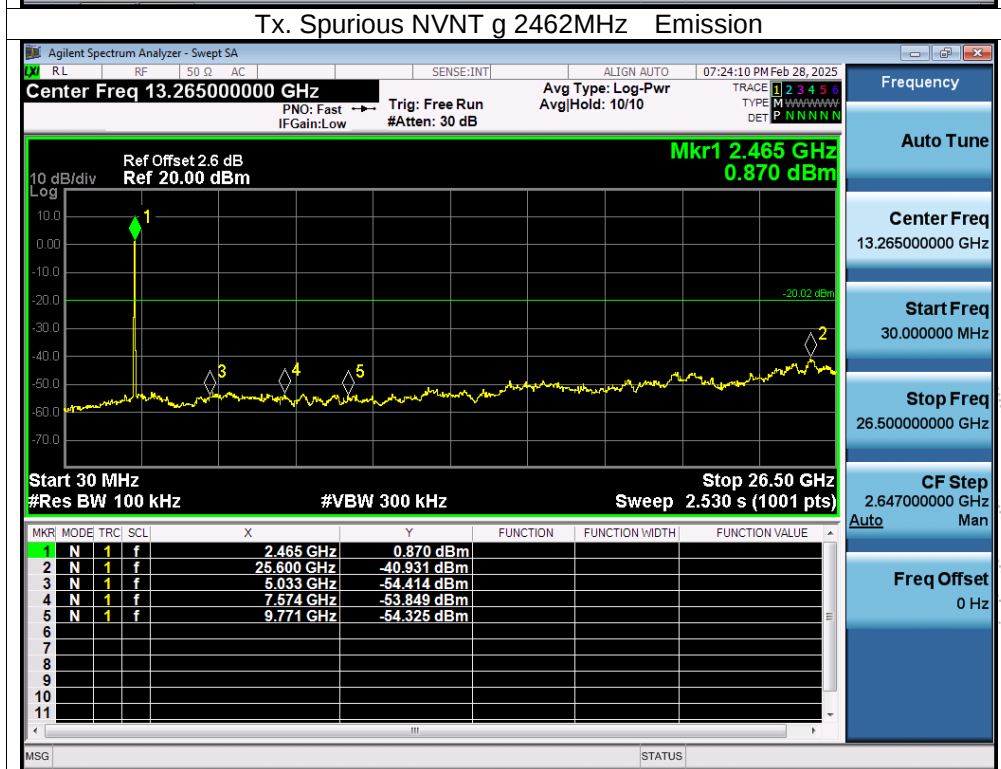
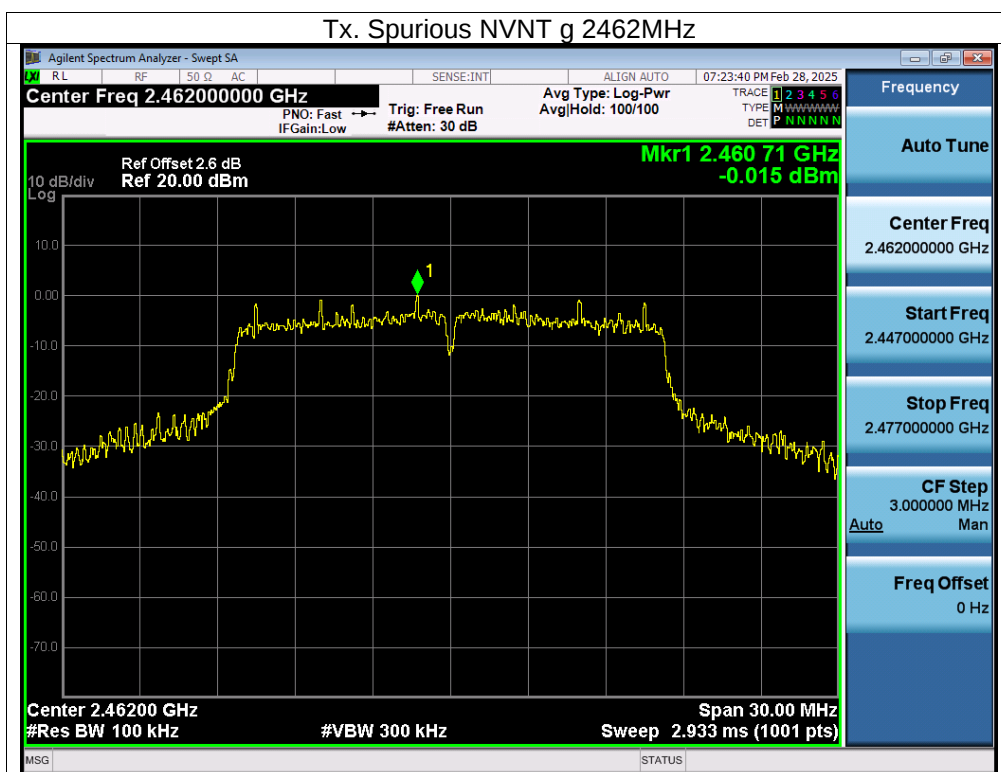


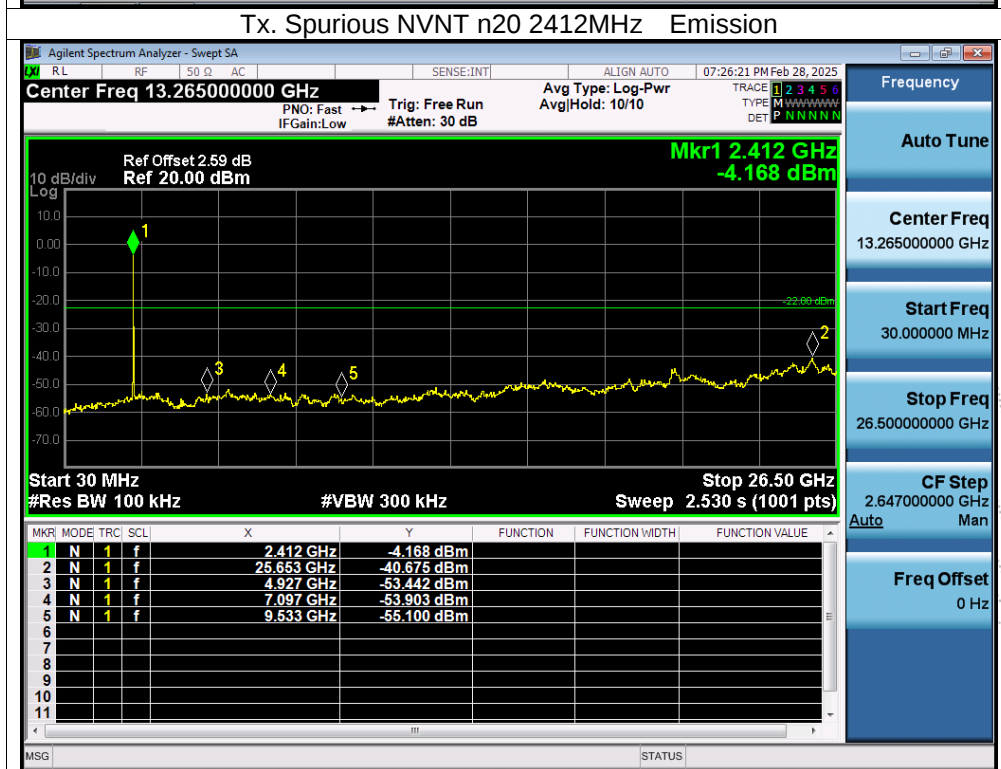
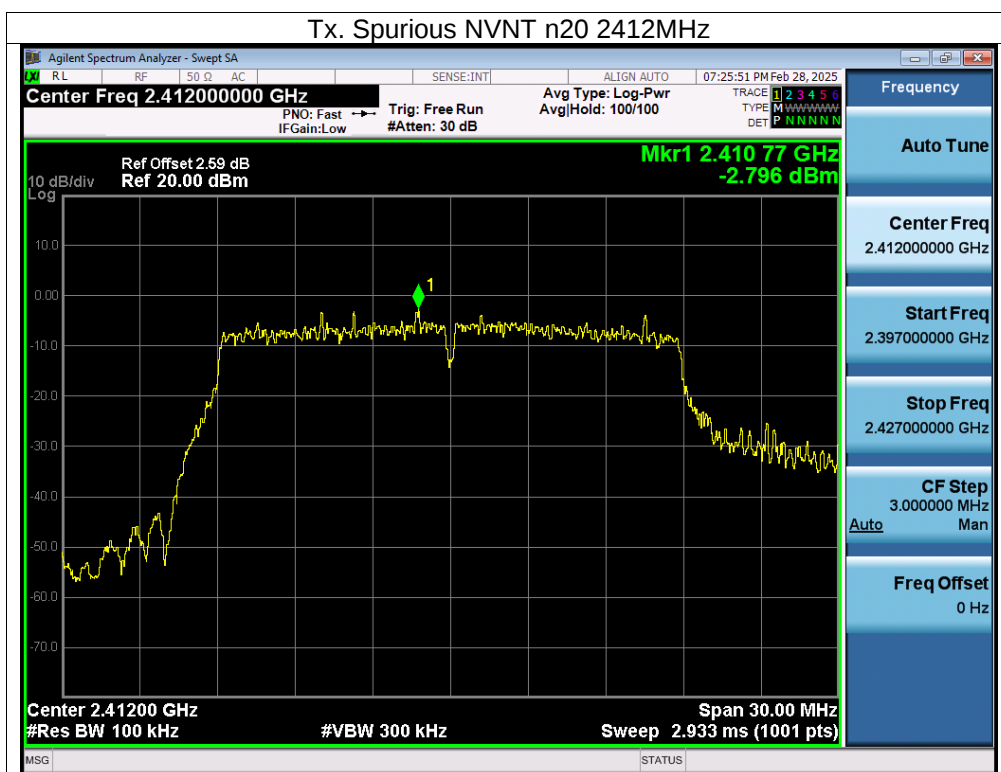


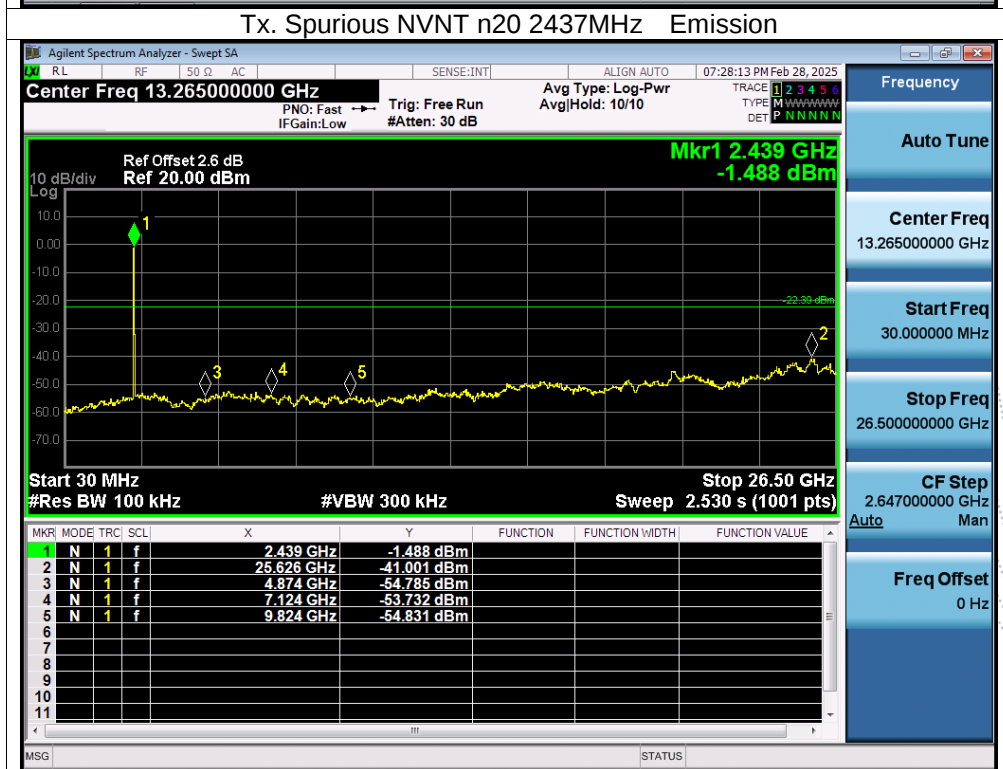
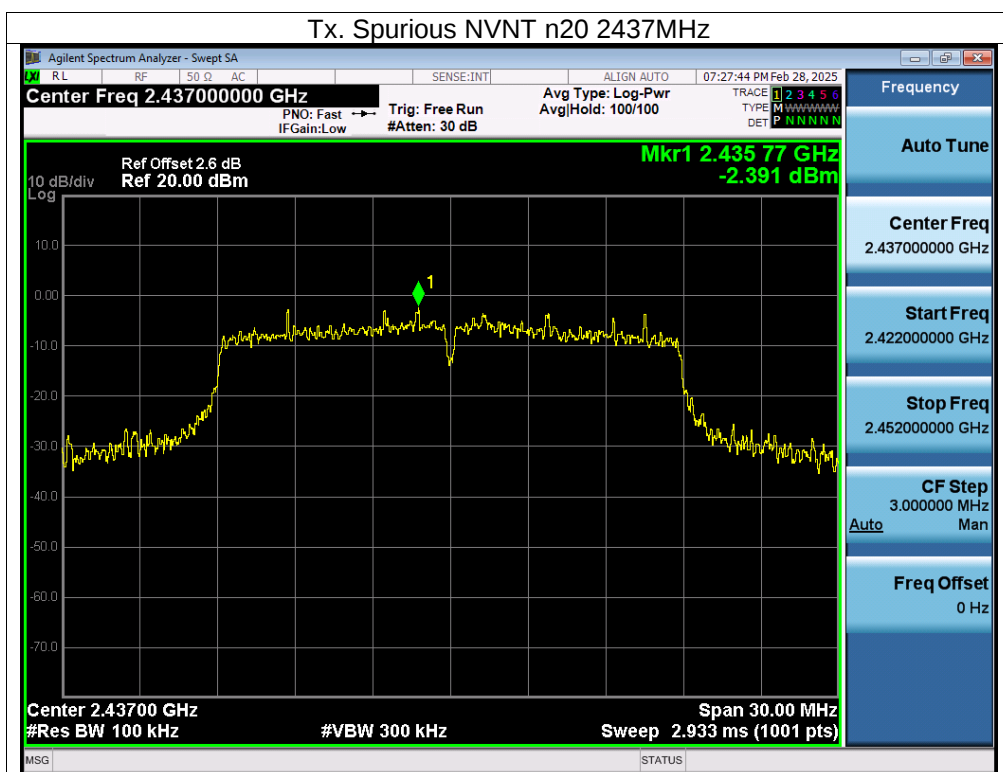


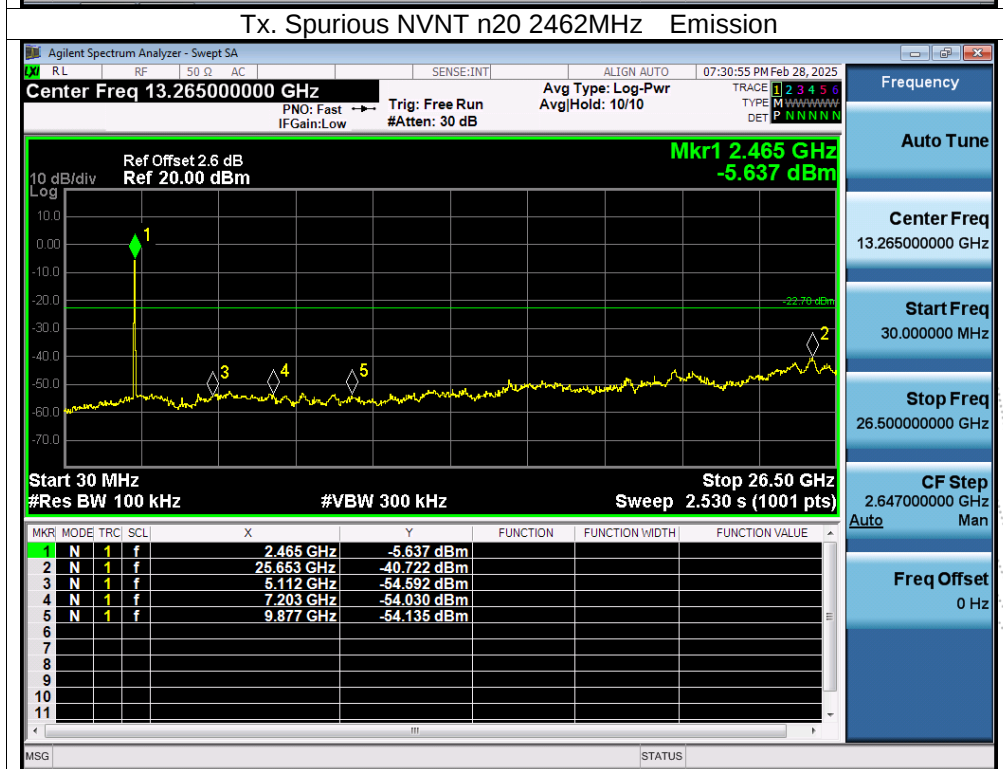
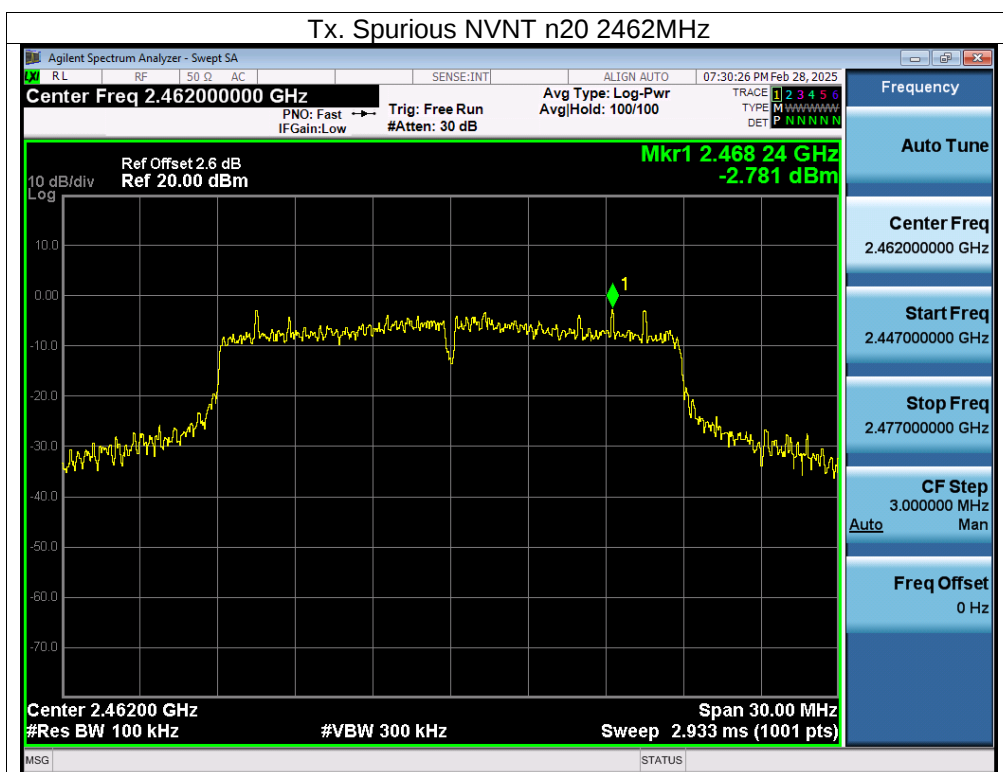


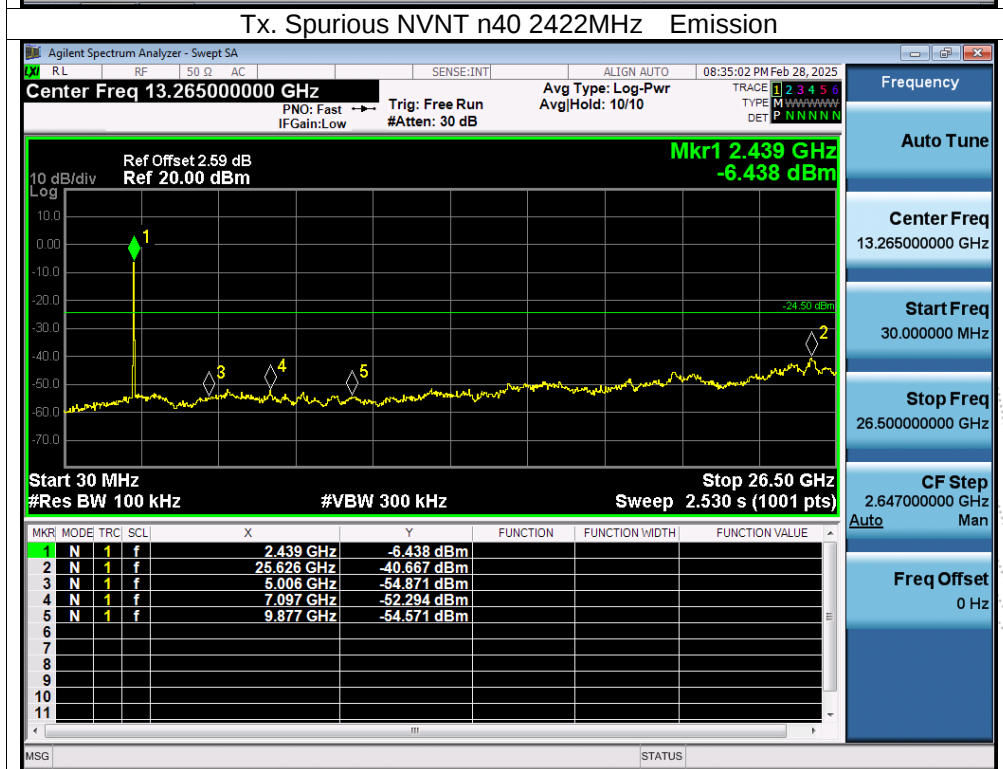
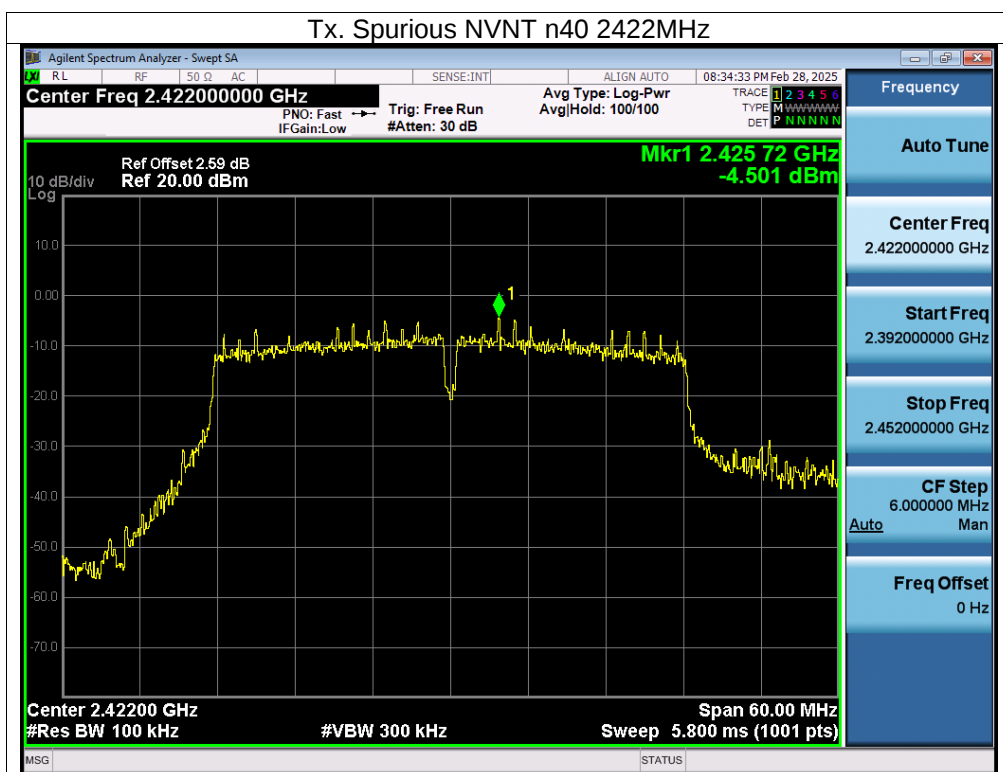


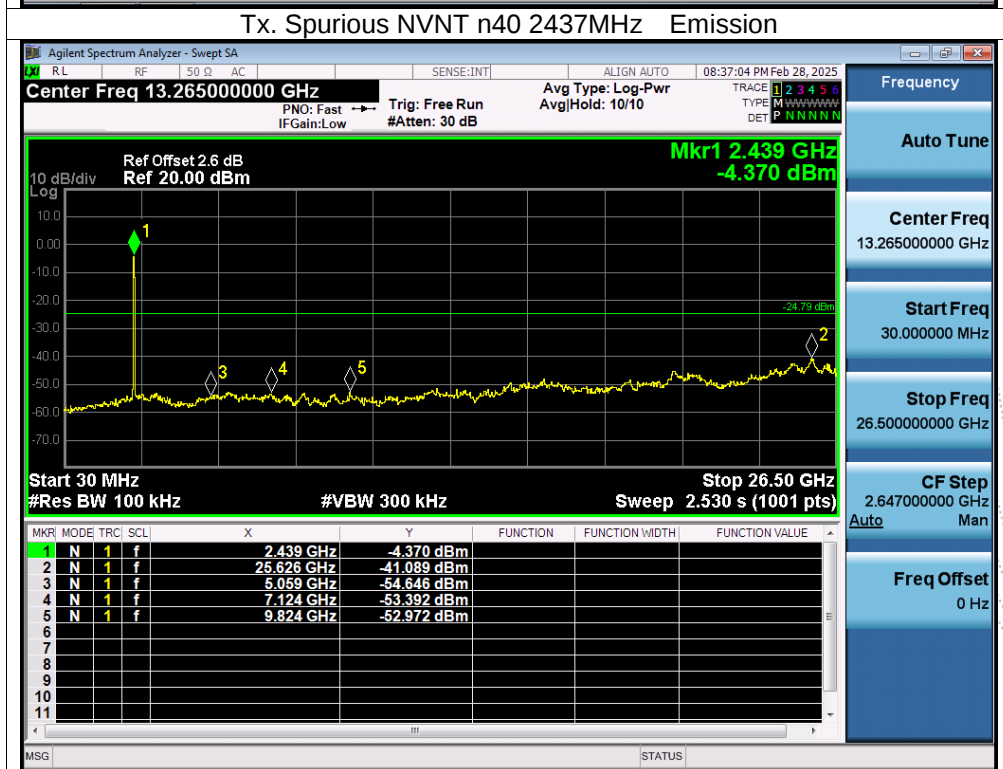
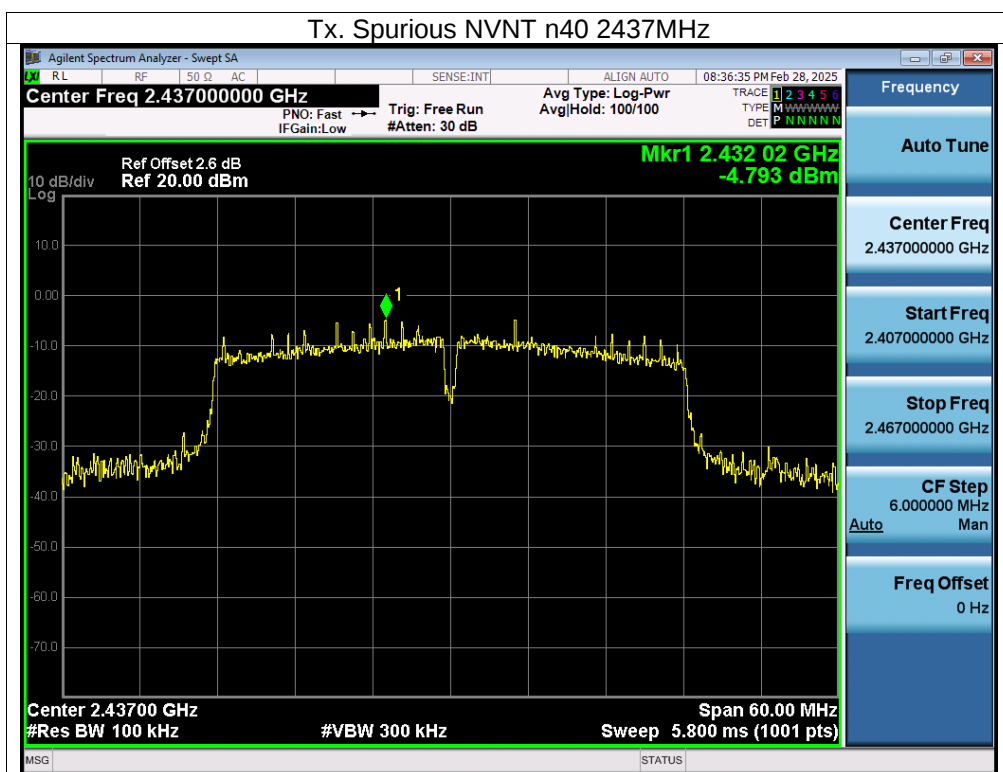


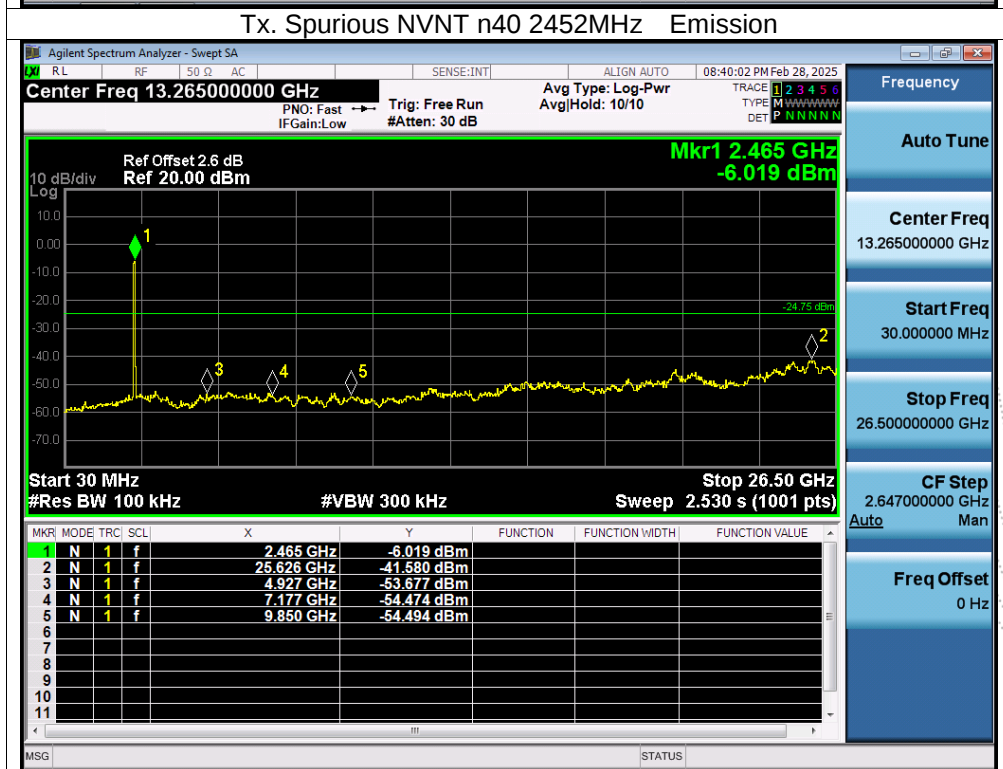
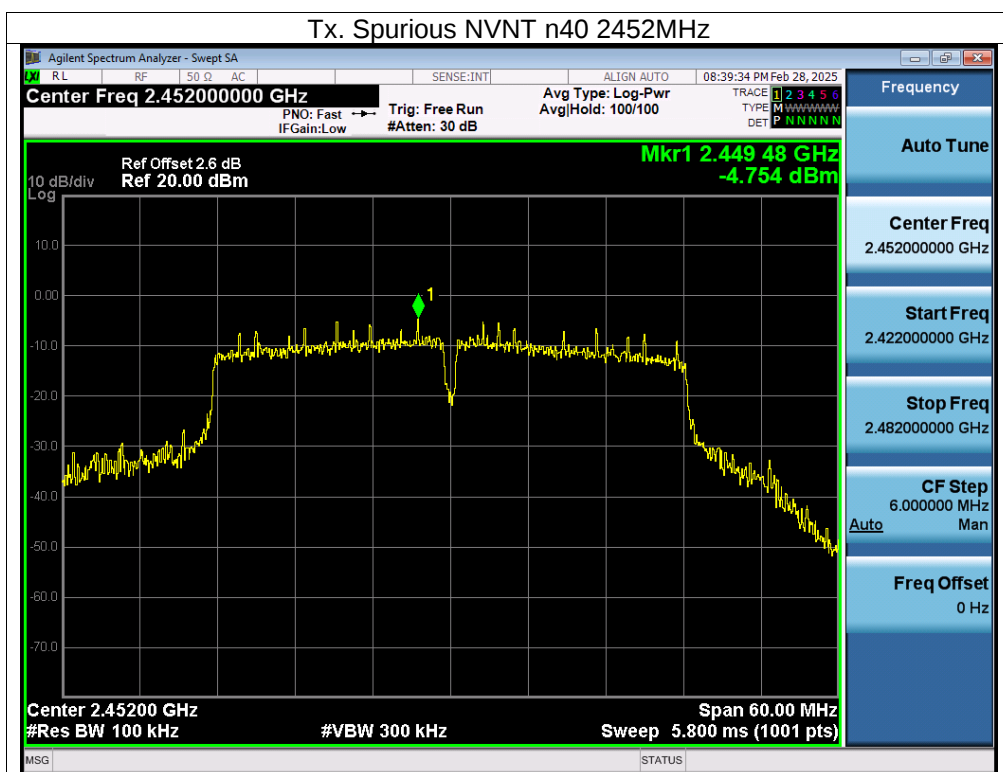


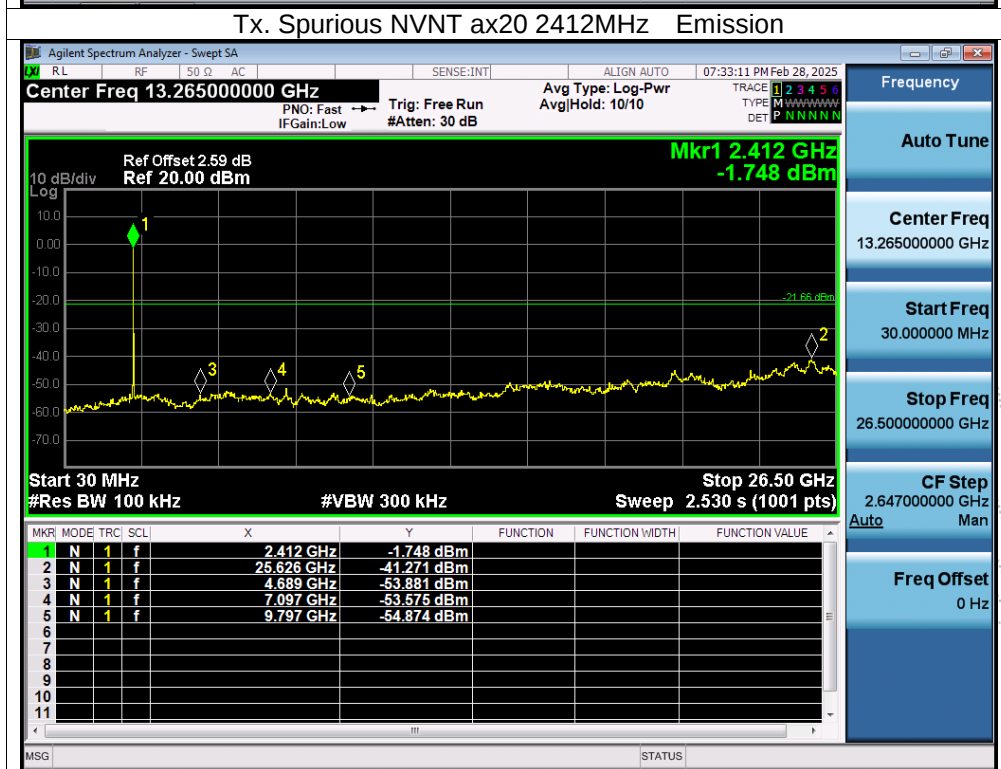
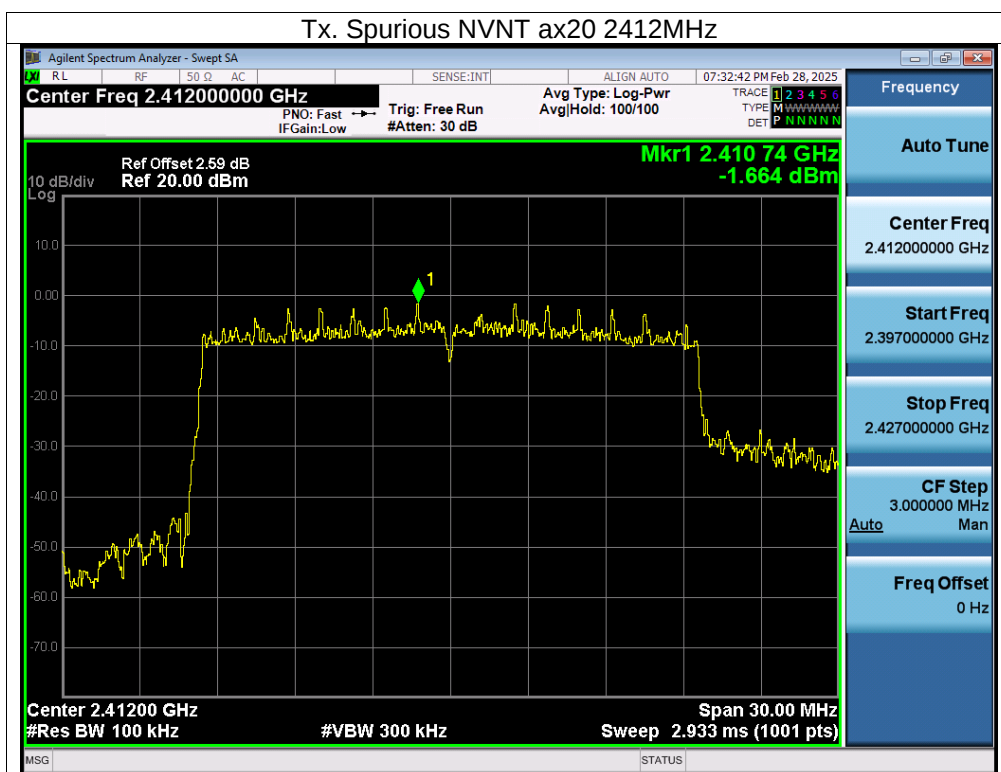


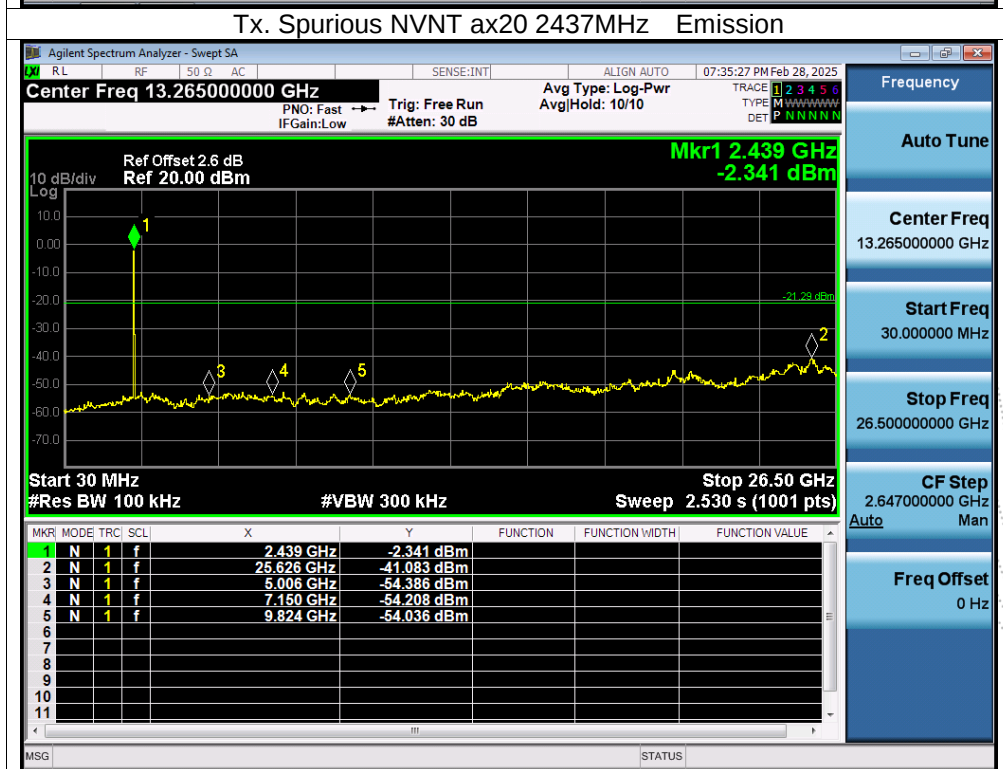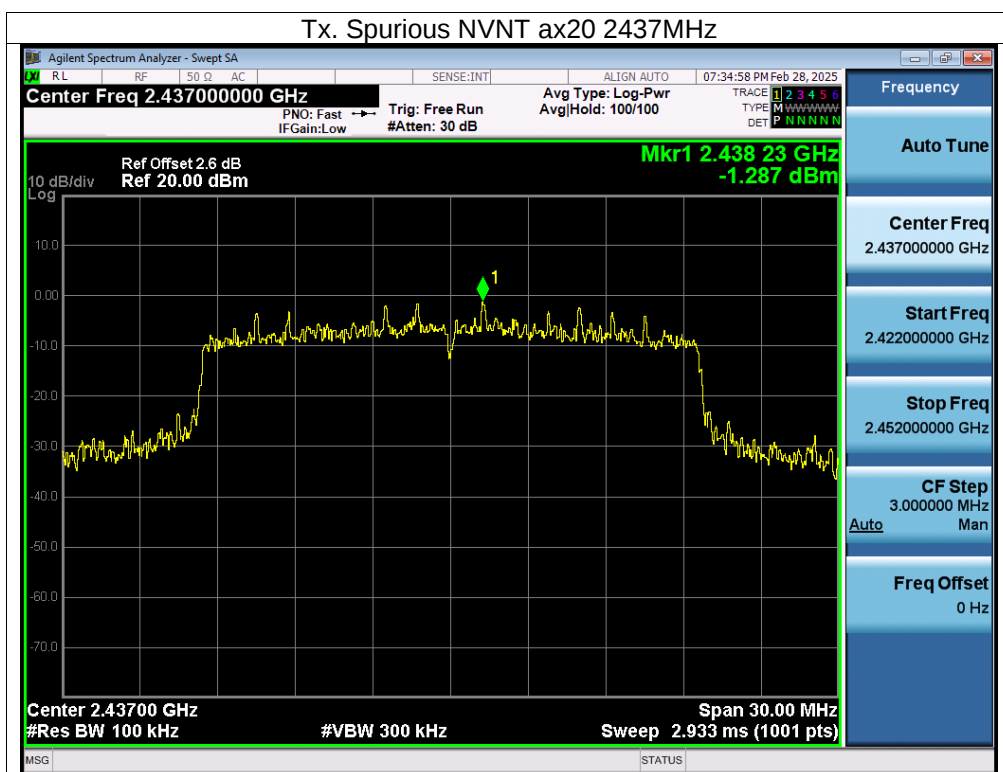

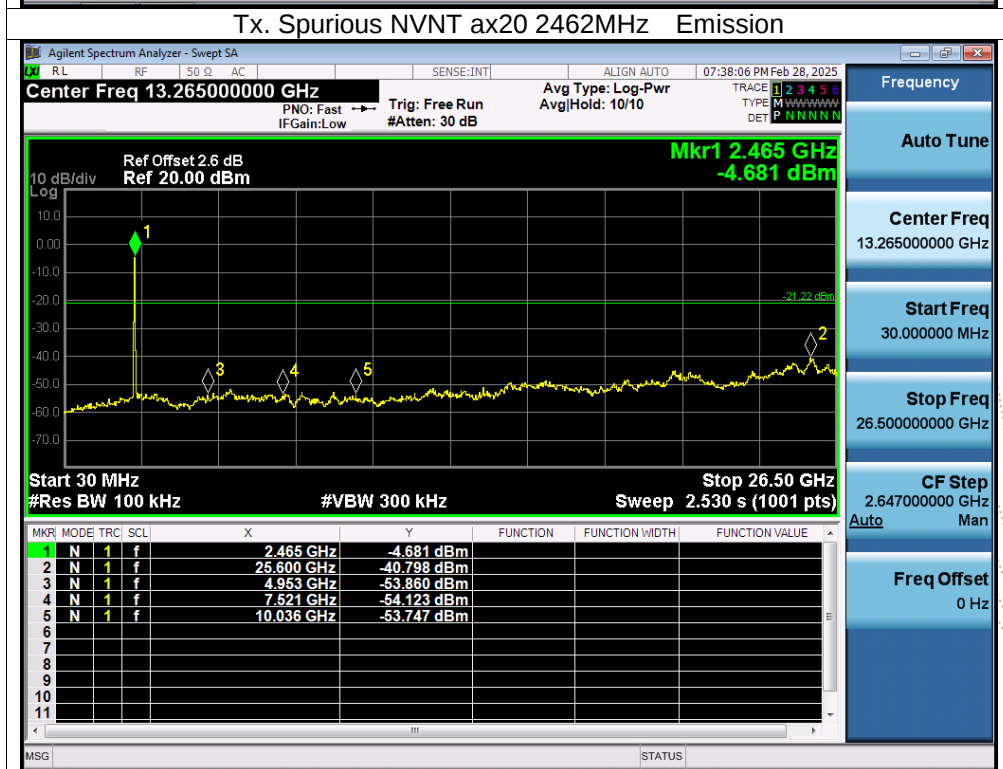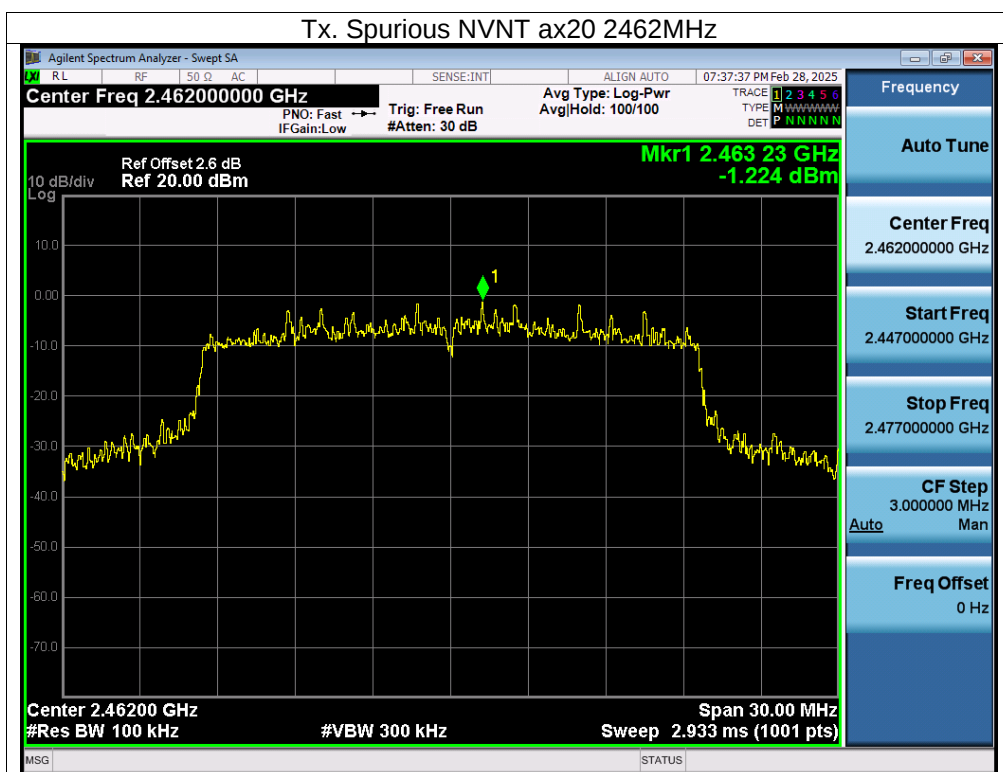

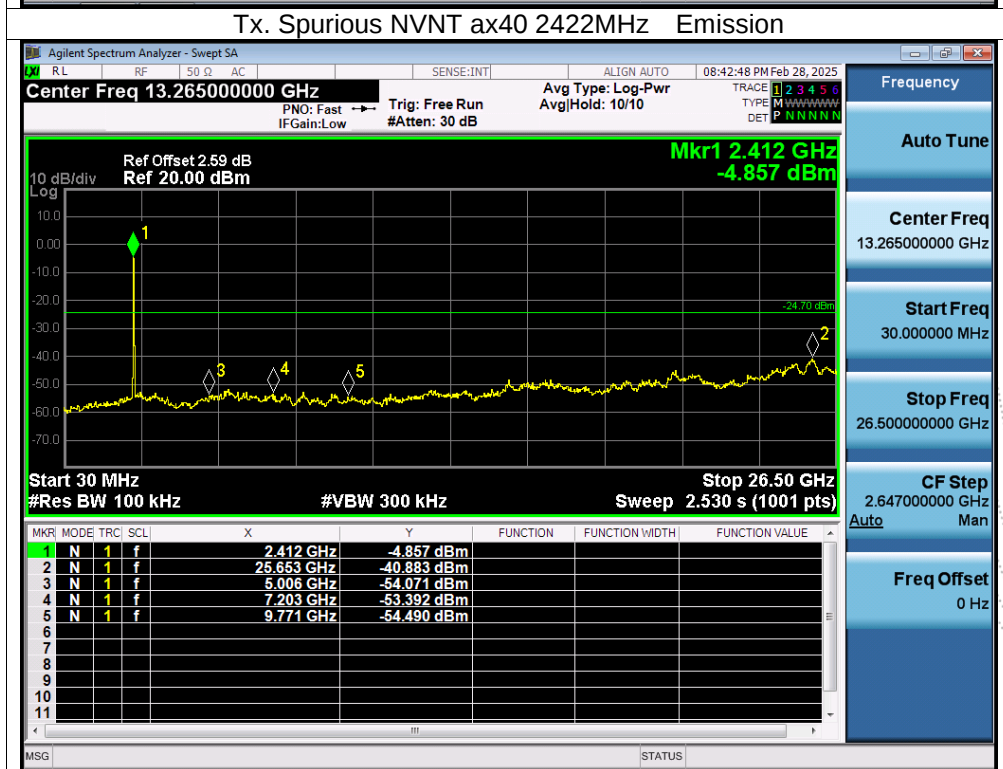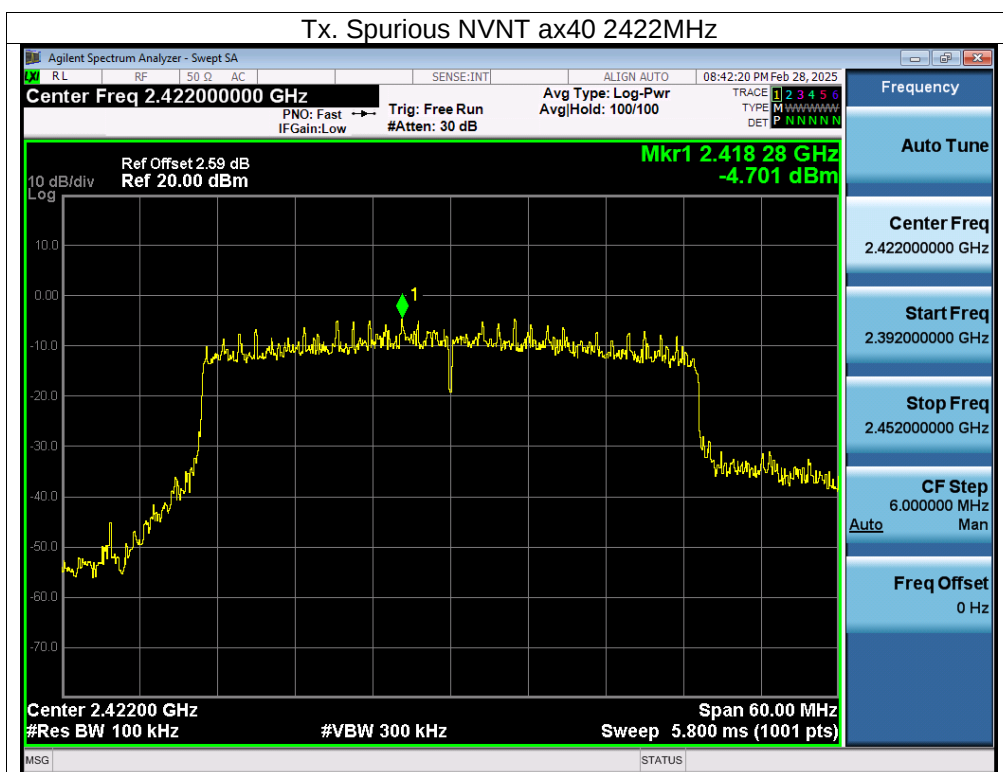

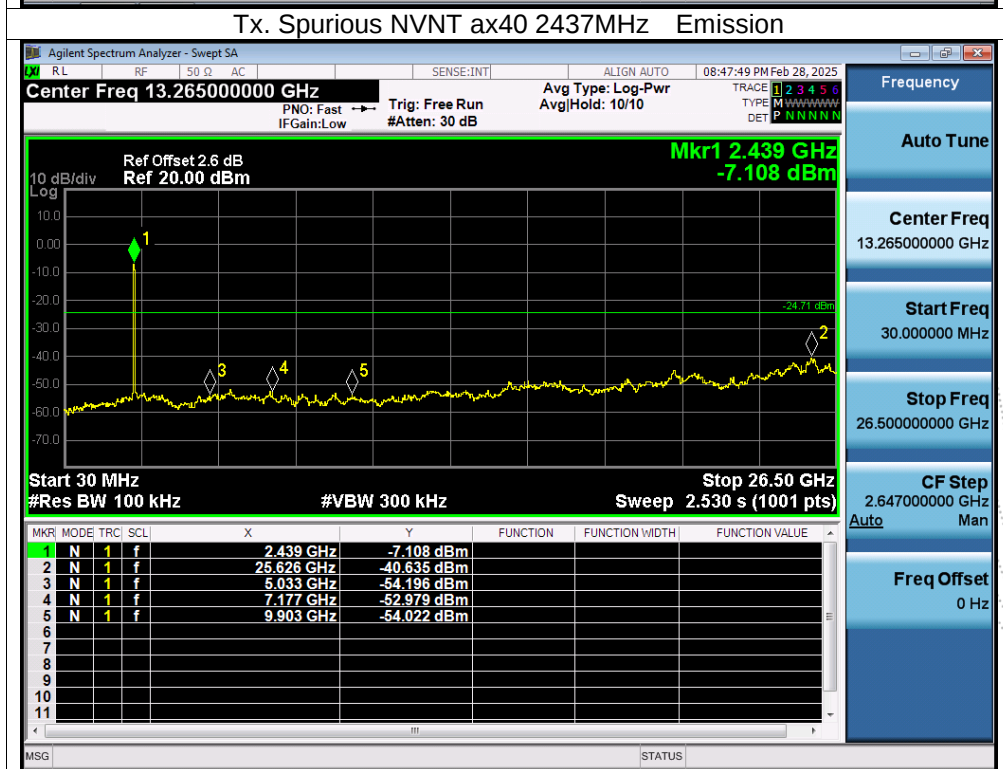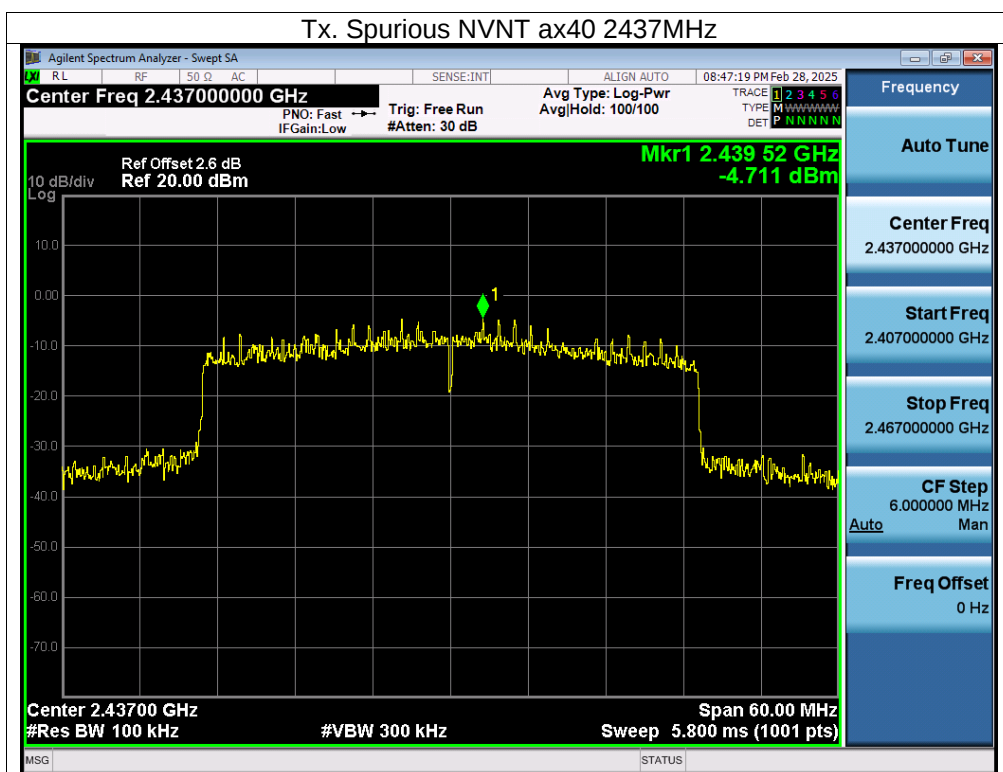

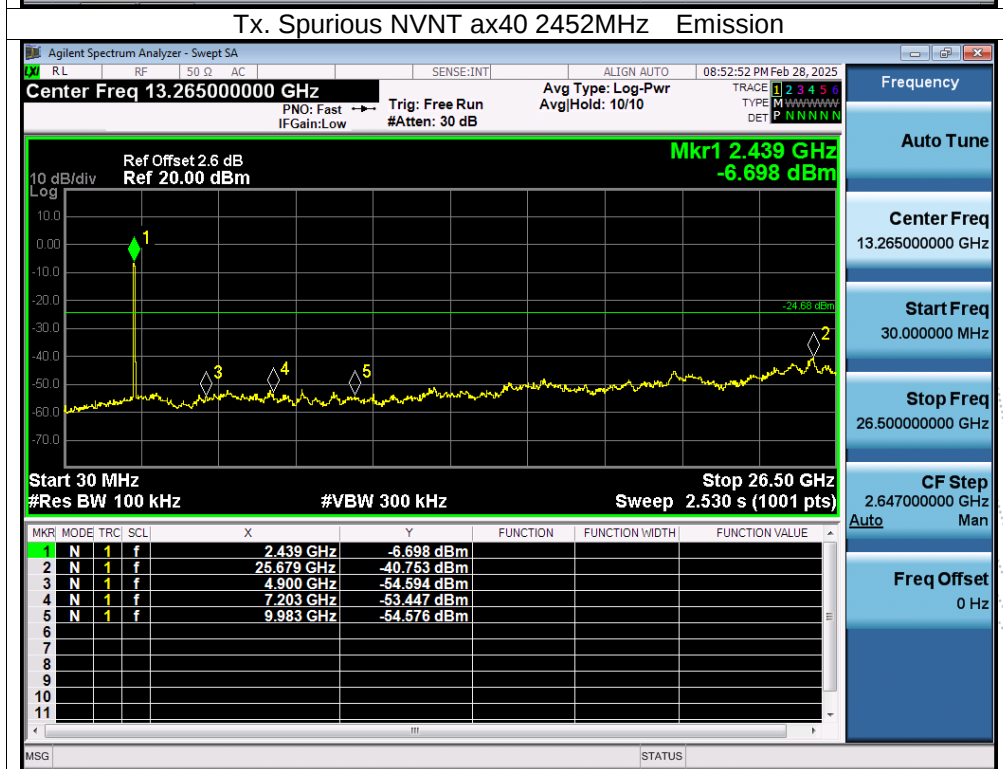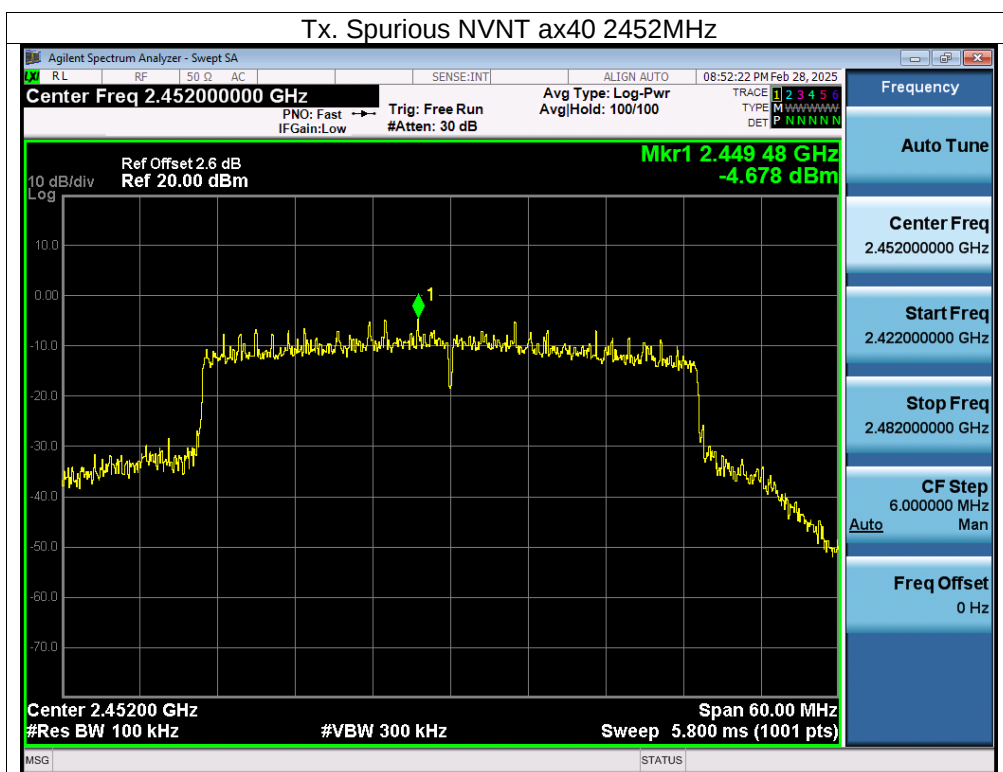

13. Duty Cycle Of Test Signal

13.1 Standard Requirement

Pre-analysis Check: While conducting average power measurement, duty cycle of each mode shall be checked to ensure its duty cycle in order to compensate for the loss due to insufficient ratio of duty cycle. All duty cycle is pre-scanned, and result as obtained below shows only the most representative ones where duty cycle is conducted as the given transmission with given virtual operation that expresses the percentage.

13.2 Formula

Duty Cycle = $T_{on} / (T_{on} + T_{off})$


13.3 Test Procedure



1. Set span = Zero
2. RBW = 8MHz
3. VBW = 8MHz,
4. Detector = Peak



13.4 Test Result

ANT A

Condition	Mode	Frequency (MHz)	Duty Cycle (%)	Correction Factor (dB)
NVNT	b	2412	100	0
NVNT	g	2412	100	0
NVNT	n20	2412	100	0
NVNT	n40	2422	100	0
NVNT	ax20	2412	100	0
NVNT	ax40	2422	100	0

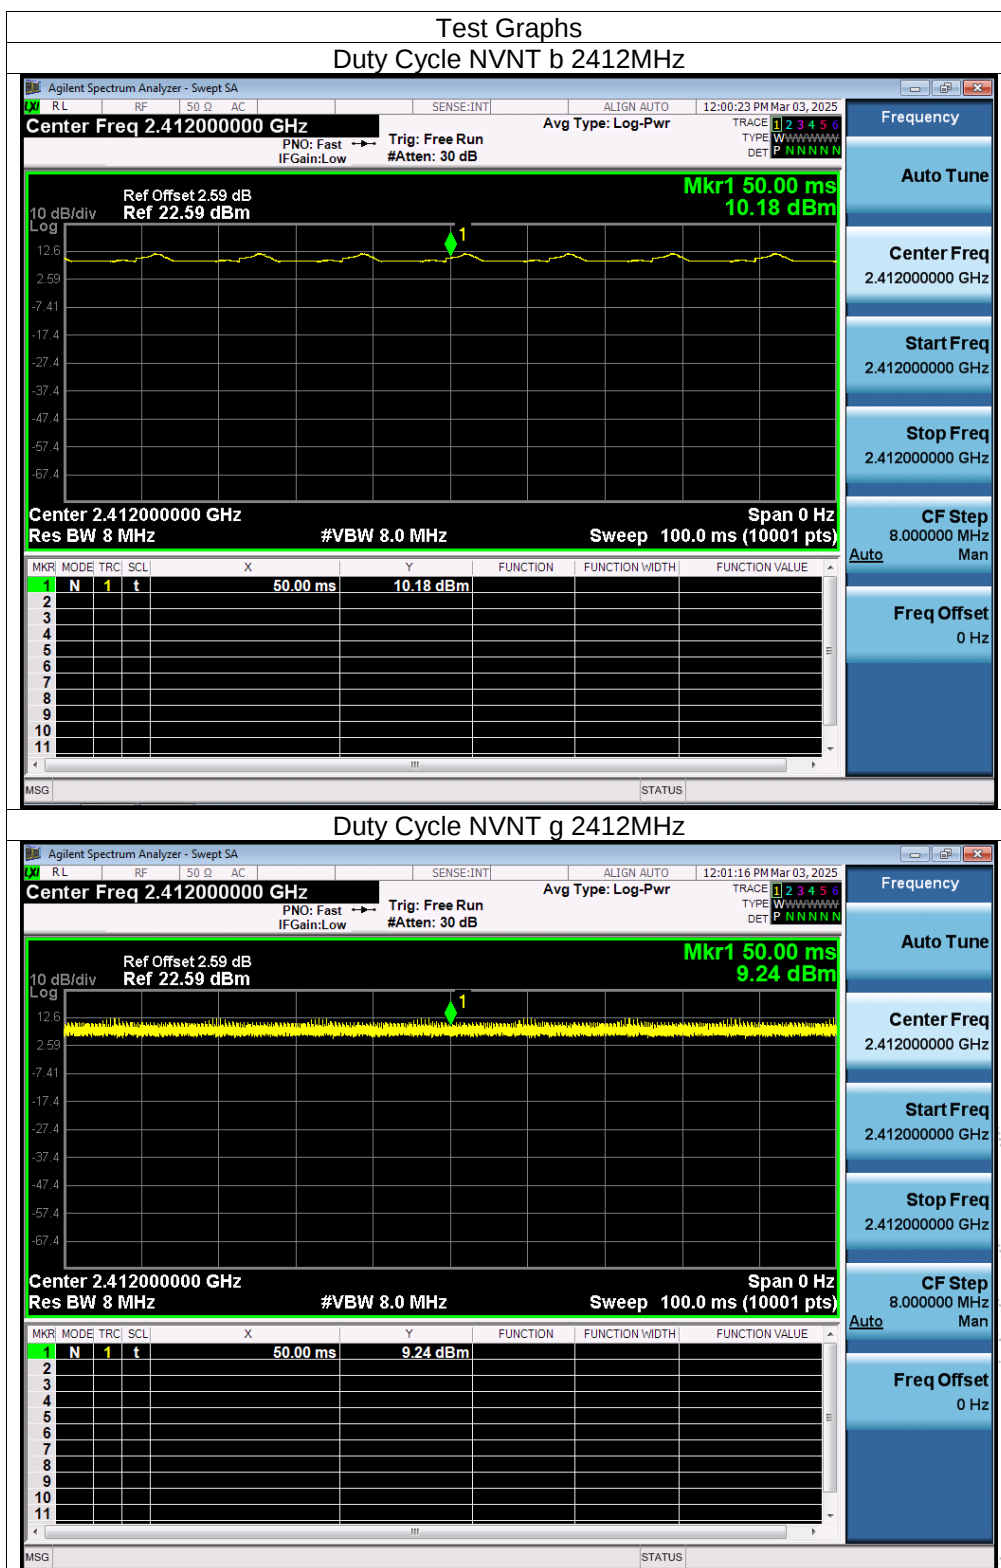


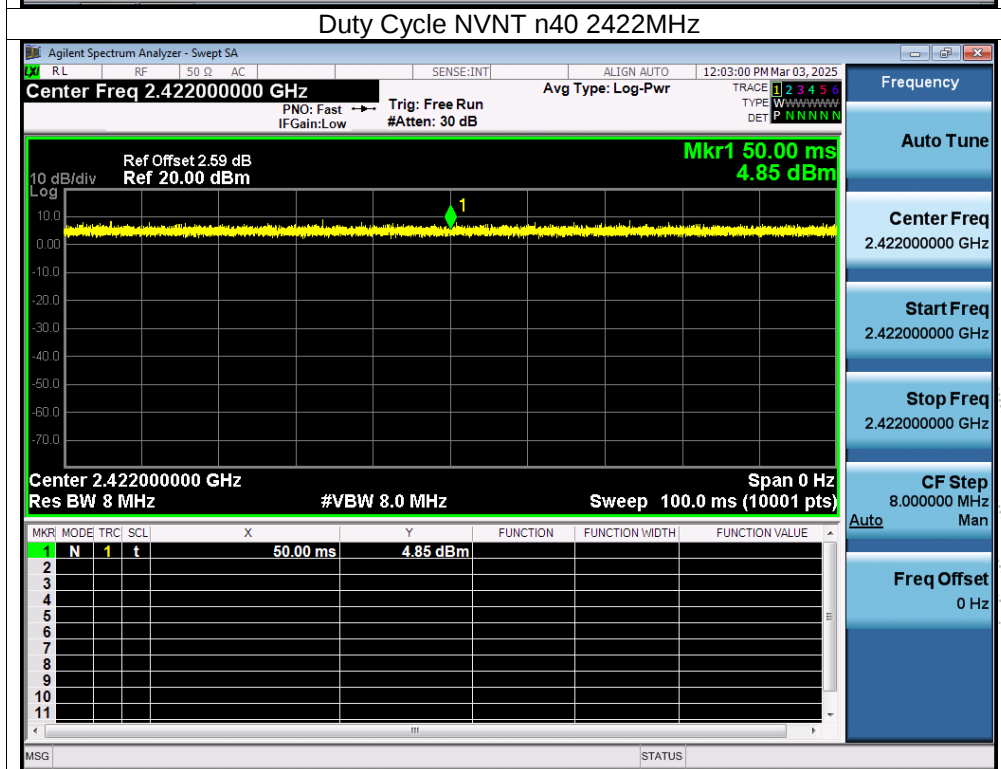
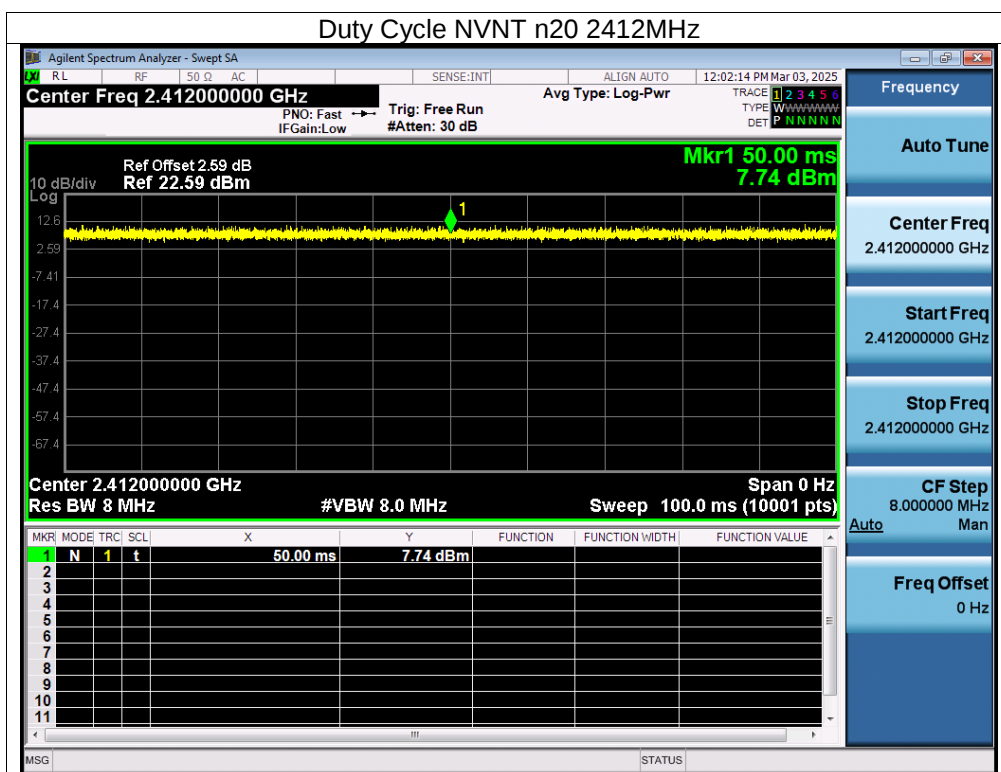


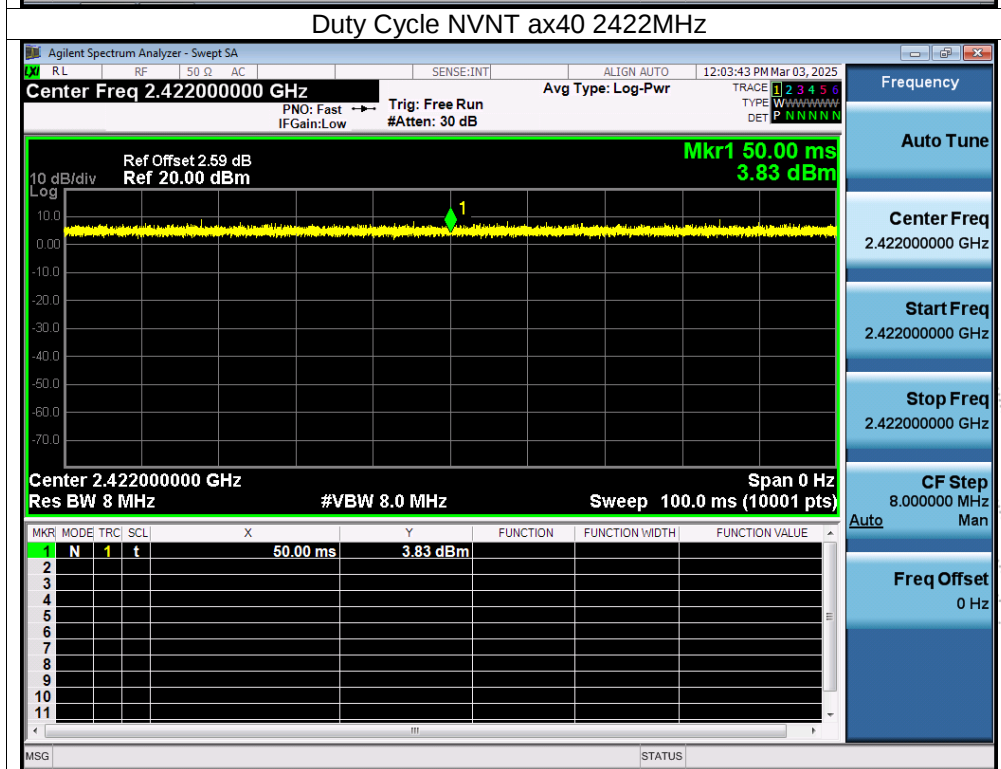
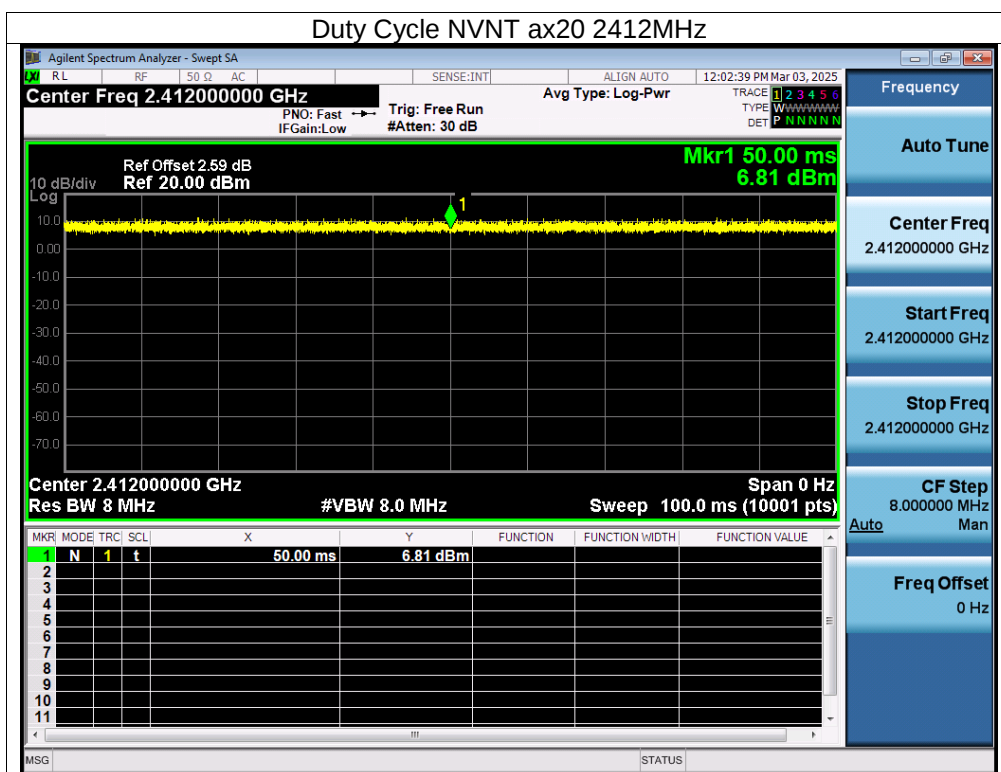




ANT B

Condition	Mode	Frequency (MHz)	Duty Cycle (%)	Correction Factor (dB)
NVNT	b	2412	100	0
NVNT	g	2412	100	0
NVNT	n20	2412	100	0
NVNT	n40	2422	100	0
NVNT	ax20	2412	100	0
NVNT	ax40	2422	100	0

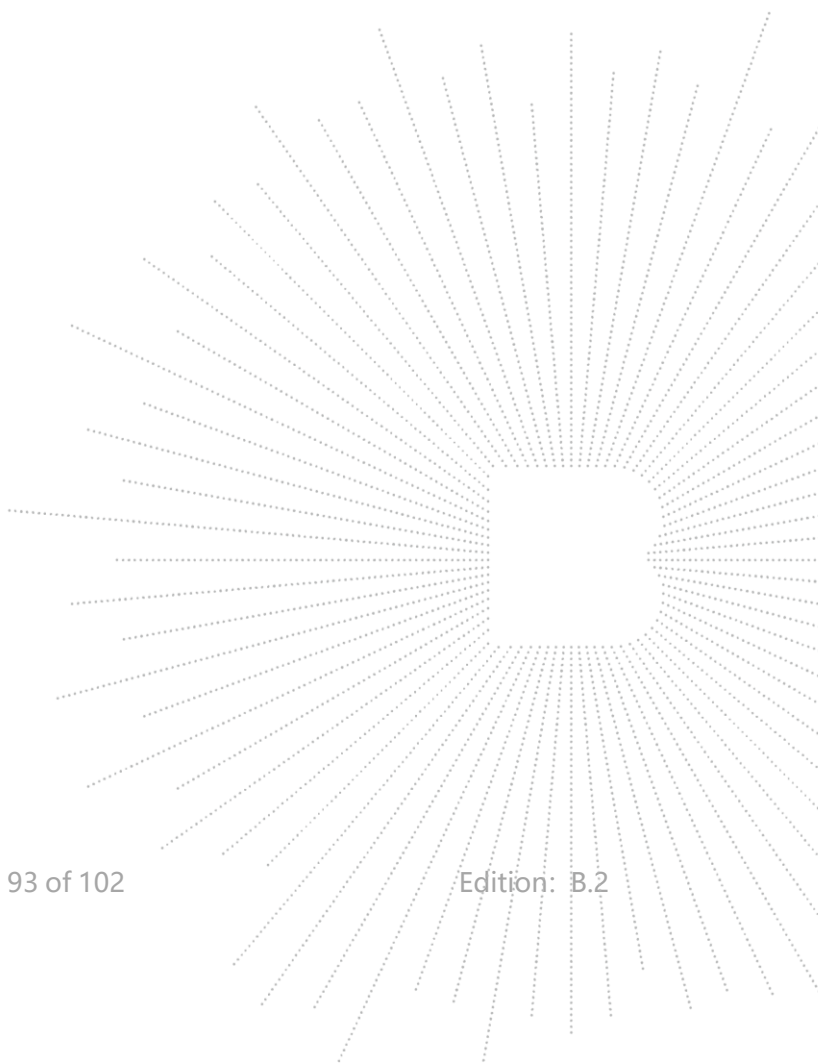

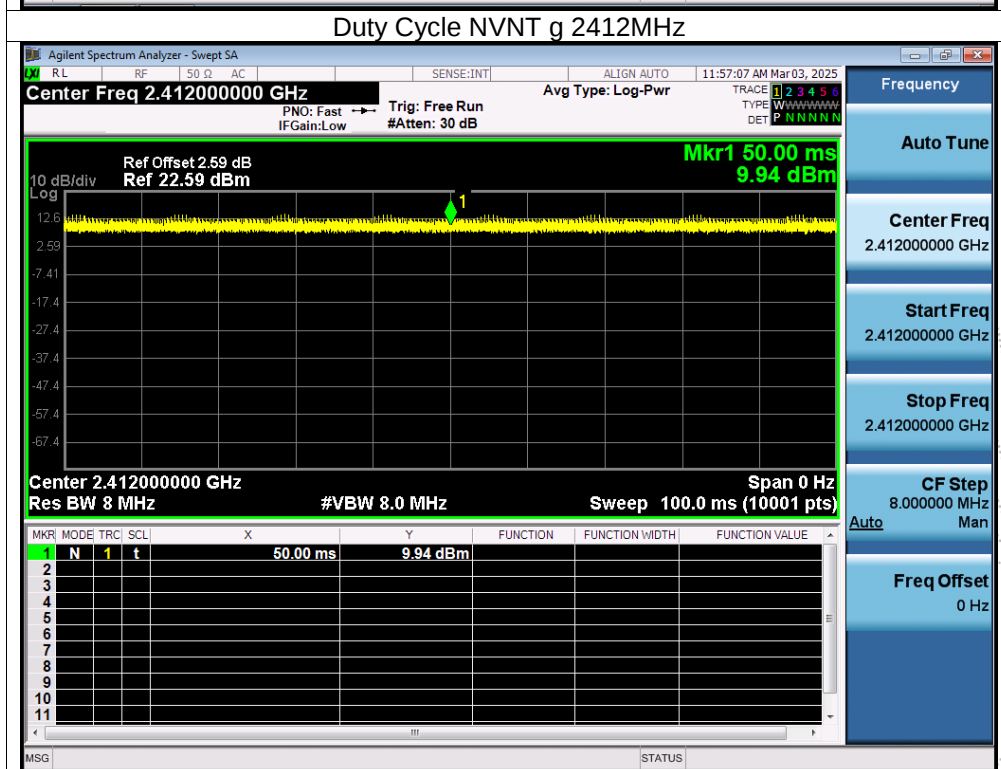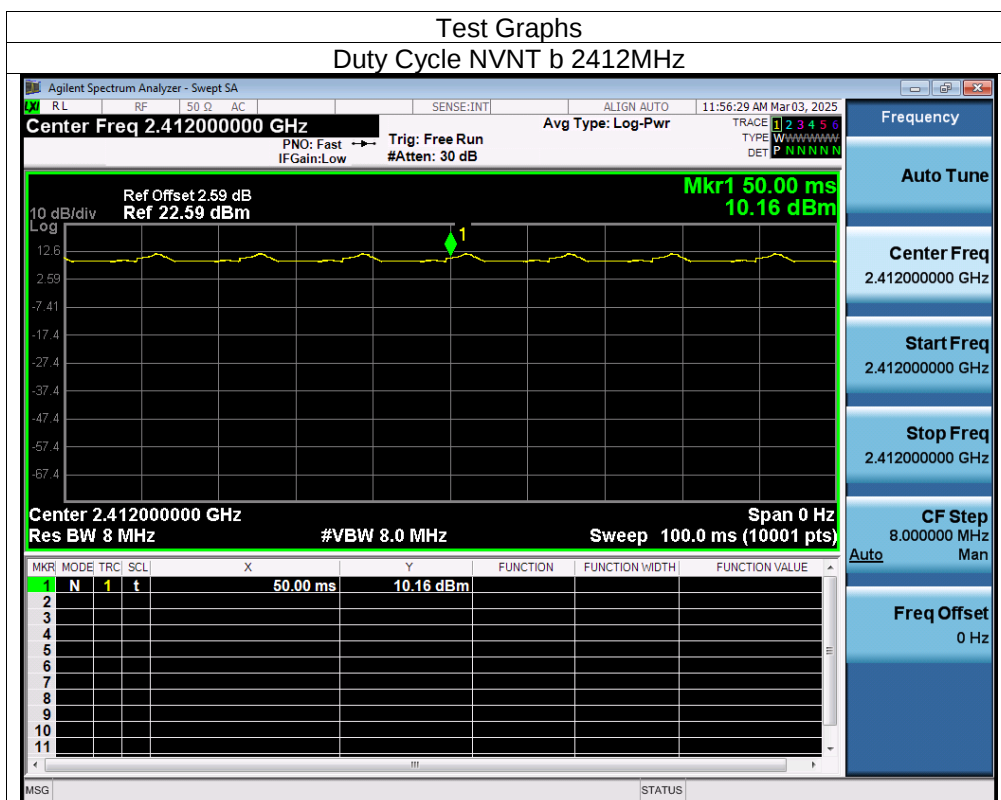

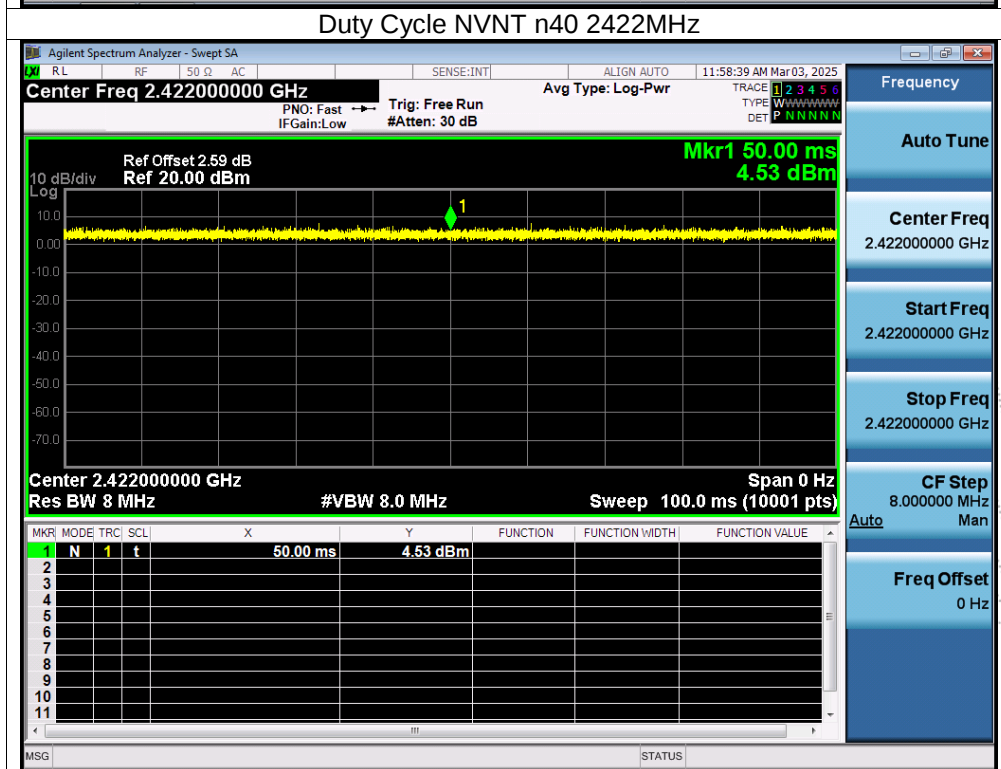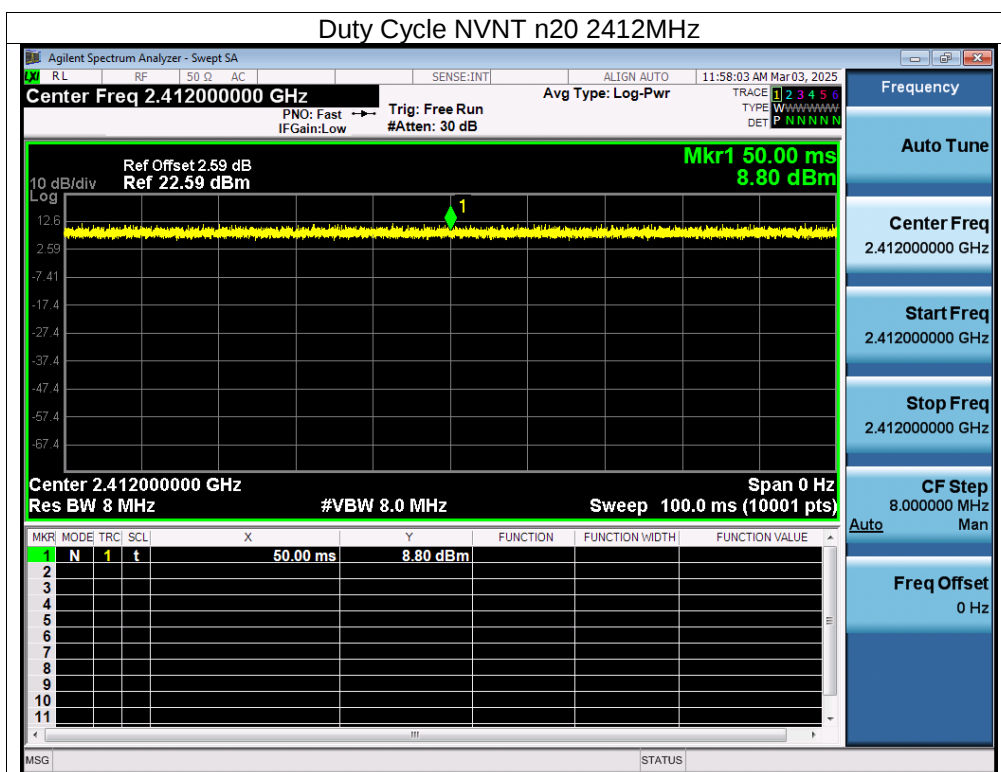

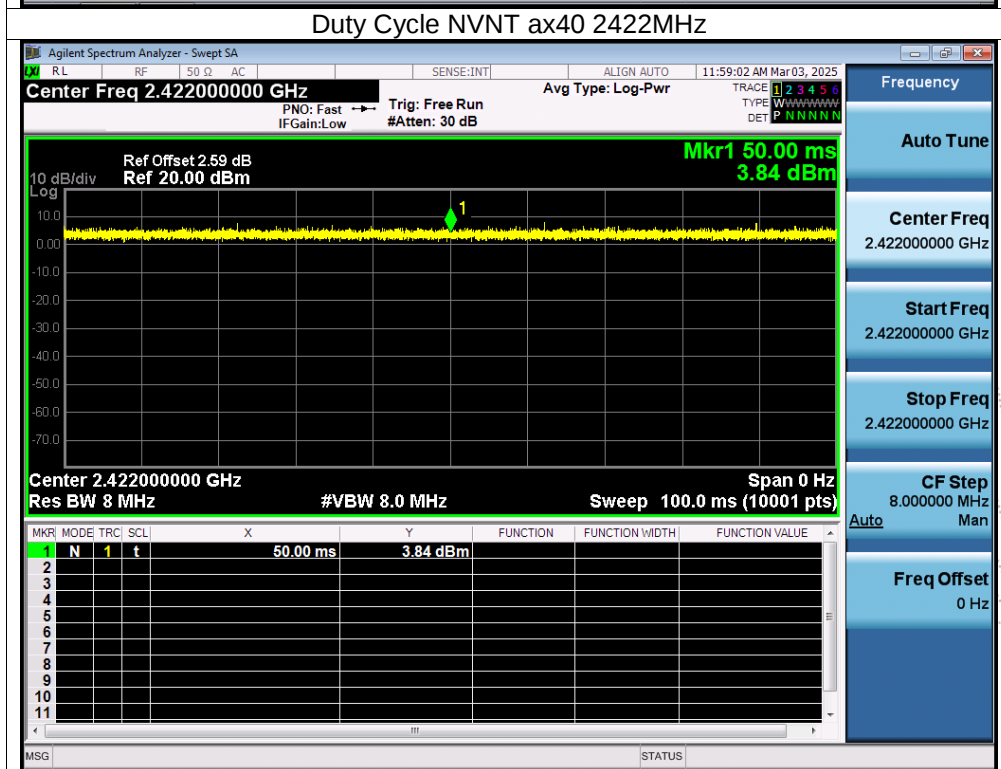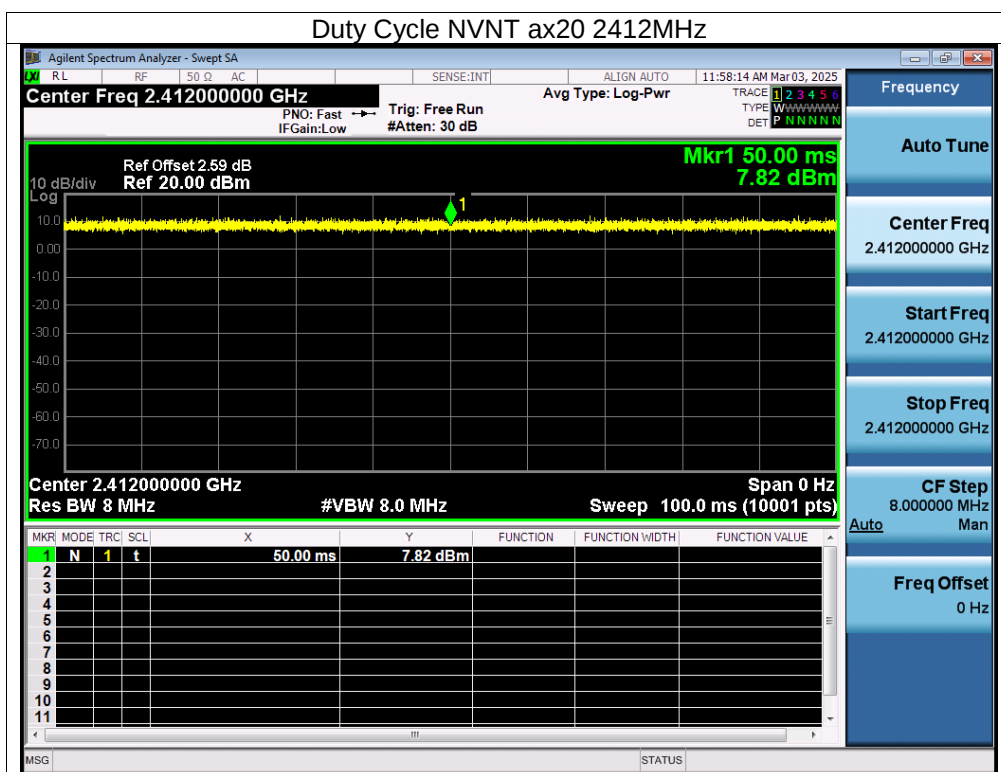

14. Antenna Requirement

14.1 Limit

15.203 requirement: For intentional device, according to 15.203: an intentional radiator shall be designed to ensure that no antenna other than that furnished by the responsible party shall be used with the device.

14.2 Test Result

The EUT antenna is Internal antenna, fulfill the requirement of this section.

