


## i33 True Wireless Stereo Earphones User manual


Imported Wireless 5.3 chips

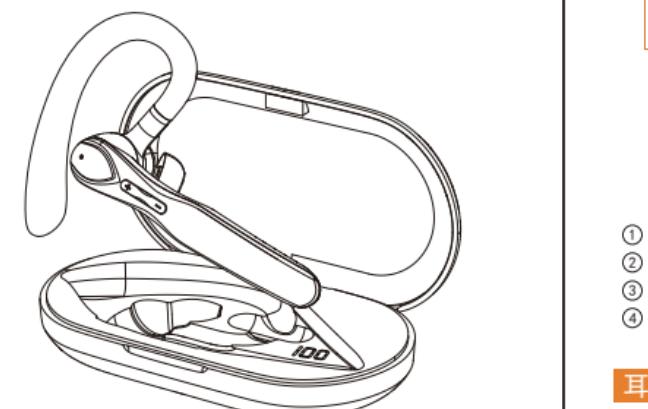

### Compatibility:


This product is compatible with all Bluetooth-enabled mobile phones (iOS/Android/Windows Phone), tablet PCs, smart watches, notebooks and desktop computers.

### 产品图示：

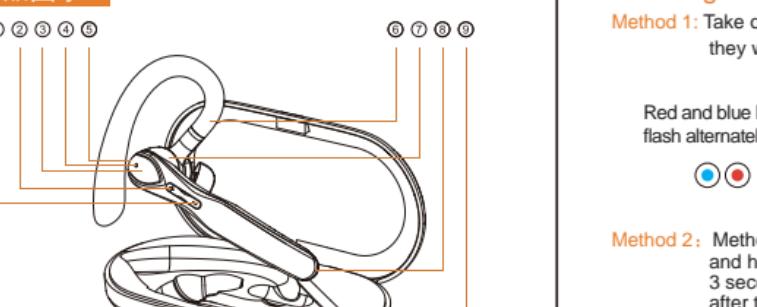

① Volume down/last song  
② Volume up/next song  
③ Mul-function touch control key  
④ Earphone Indicator/Call Microphone  
⑤ TYPE-C charging port  
⑥ 360°rotating ear-hook  
⑦ 270°rotating microphone pole  
⑧ Microphone for cell phone  
⑨ Charging case intelligent display


### 耳机使用：

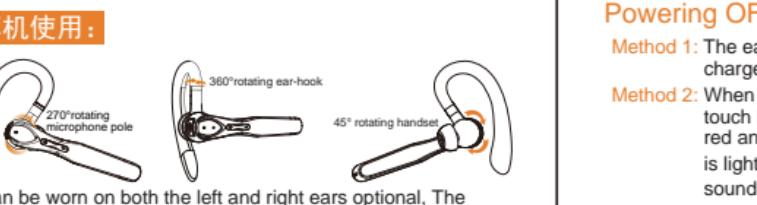


It can be worn on both the left and right ears optional. The microphone rod is rotated and the ear hook is rotated 180° to adjust left and right wear style.

### Powering ON:

**Method 1:** Take out the earphones from the charging case, and they will "power on". Red and blue lights flash alternately.

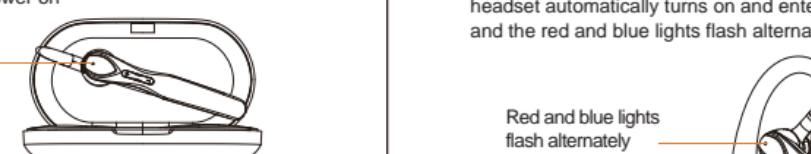

**Method 2:** Method 2: When the headset is turned off, touch and hold the touch Location of the headset for about 3 seconds, the red and blue lights flash alternately after the blue light is lighting for 1S, and with the power on prompt sound "power on".

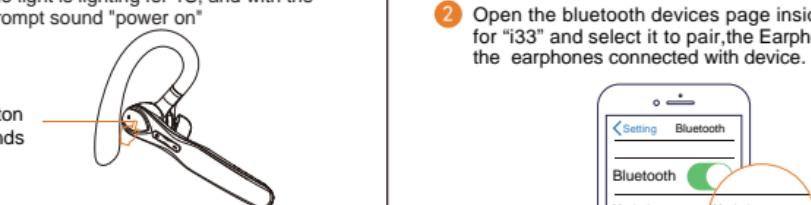

### Powering OFF:


**Method 1:** The earphones will switch off when put into the charger case.

**Method 2:** When the headset is turned off, touch and hold the touch Location of the headset for about 3 seconds, the red and blue lights flash alternately after the blue light is lighting for 1S, and with the power on prompt sound "power on".

**Note:** If the earphones were disconnect with the device, the earphones will be power off automatically after 5mins.

### Headset pairing:

**1** When the headset was taken out of the charging case, the headset automatically turns on and enters the pairing state, and the red and blue lights flash alternately.

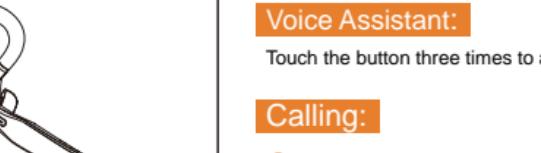


**2** Long press the "+" button for the next song, long press the "-" button for the last song

**3** Click the "+" button for volume up, click the "-"button for volume down

### Voice Assistant:


Touch the button three times to activate the Siri voice assistant.

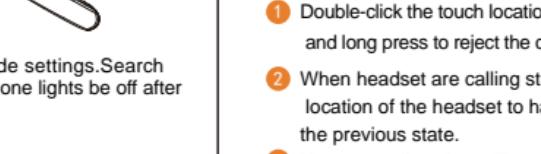

### Calling:

**1** Double-click the touch location of the headset to answer the call, and long press to reject the call.

**2** Open the bluetooth devices page inside settings. Search for "i33" and select it to pair, the Earphone lights be off after the earphones connected with device.

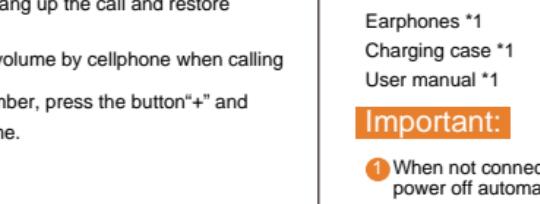

### Headset charging:

When the power of the headset is low, the headset red light will flashes, and the headset will have "Please charge"sound, please charge the headset. The headset have a TYPE-C charging port, you can charging the headset with the data cable directly, or put it into charging case for a charging. The red light will always lighting when charging. And the blue light will always on when fully charged.

**1** Double click the touch location to play/pause .

### Specifications:

- Bluetooth version: V5.3
- Voltage rating and energy capacity: 3.7V/400mAh
- Battery capacity: 1\*3.7V/95mAh
- Earphone Charge time: 2hour
- Music playing time: About 5h\*3Times
- Bluetooth profiles supported: HFP/A2DP/AVRCP
- Operating frequency: 2.40GHz-2.48GHz
- RF Sensitivity: -92dBm
- Working temperature range: -10+50°C
- Maximum transmission range: ≤15M

### Fault:

| Fault                   | Cause  | Solutions  |
|-------------------------|--|--|
| Can't power on          | Earbuds are low battery/ Crash   | Charge the Earbuds/Keep the earbuds touch button pressed for 8 seconds |
| No charging indication  | The Earbuds are not well plied into the charging port/There are foreign objects in the spring needle and copper column | Adjust Earbuds position/ Clean the spring needle and copper column     |
| Automatically shut down | Earbuds are low battery  | Charge the Earbuds   |
| The Earbuds have echo   | The volume is too high or the environment is too noisy   | Adjust the volume or change position                                   |
| The Earbuds are noisy   | Outside environment interference or too far away from mobile phone   | Change position, move closer to the mobile phone                       |
| Signal loss             | wearing Earbuds incorrectly or the volume is too low   | Adjust the Earbuds position or the mobile phone volume                 |
| Signal interference     | Outside environment interference or too far away from mobile phone   | Change to better environment or move closer to the mobile phone        |

### FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

**NOTE:**  
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:  
-- Reorient or relocate the receiving antenna.  
-- Increase the separation between the equipment and receiver.  
-- Connect the equipment into a outlet on a circuit different from that to which the receiver is connected.  
-- Consult the dealer or an experienced radio/TV technician for help.


The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID: 2ABTA-I3

Because the headset is small, the FCC ID number can only be printed on the charging box.

# i33无线蓝牙耳机 使用指南

进口蓝牙5.3芯片

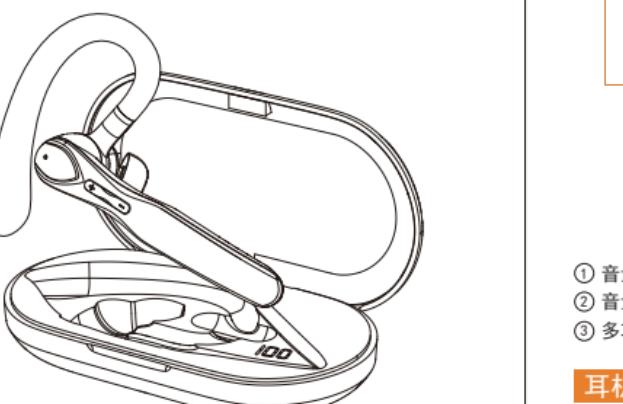

## 兼容性：

兼容市面上所有带有蓝牙的手机(iOS/安卓/WindowsPhone),  
平板电脑, 笔记本等。

## 产品图示：

① ② ③ ④ ⑤



## 耳机使用：



## 开机：

方法1：

把耳机从充电仓取出即可开机, 开机提示音“power on”


红蓝灯交替闪



方法2：

耳机在关闭状态下, 长按耳机的触摸键约3秒, 蓝灯亮1S后红蓝灯交替闪, 并伴有开机提示音“power on”

长按耳机触摸键3秒

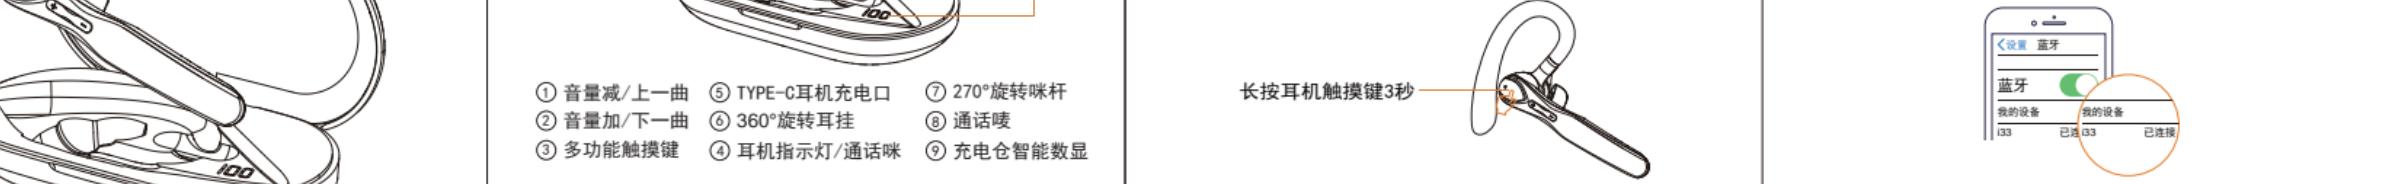

## 关机：

方法1：

耳机放回充电仓内充电, 耳机会自动充电关机。

方法2：

长按耳机的触摸键大约3秒, 红灯亮1秒后熄灭, 并

伴有关机提示音“power off”

注：

开机后耳机未连接设备, 或者耳机与设备断开连接后,

如无任何操作, 约5分钟后将自动关机。

如无任何操作, 约5分钟后将自动关机。

红蓝灯交替闪



红蓝灯交替闪



红蓝灯交替闪



红蓝灯交替闪



红蓝灯交替闪




## 耳机配对：

①

耳机从充电仓取出, 耳机自动开机即进入配对状态,

红蓝灯交替闪烁。


红蓝灯交替闪

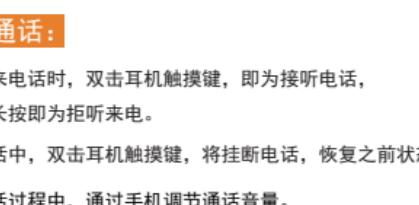

②

打开手机蓝牙界面, 搜索“i33”选择配对, 耳机连手机蓝牙


以后LED灯灭。

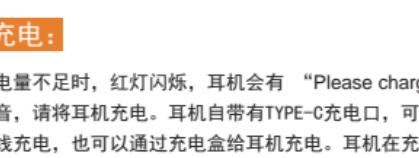

## 语音助手：

单击触摸键三次唤醒Siri语音指令。

红蓝灯交替闪

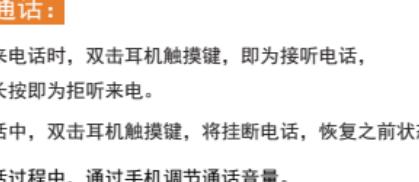

## 耳机通话：

①

当来电话时, 双击耳机触摸键, 即为接听电话,

若长按即为拒听来电。

②

电话中, 双击耳机触摸键, 将挂断电话, 恢复之前状态。

③


电话过程中, 通过手机调节通话音量。

④

末号重拨, 同时按音量加+音量减-。

如无任何操作, 约5分钟后将自动关机。

红蓝灯交替闪

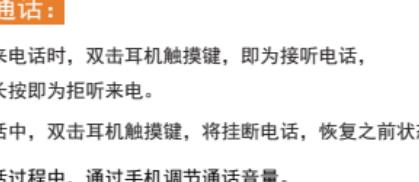

⑤

恢复出厂设置: 快速5次触控键, 可以清除手机和耳机之

间的配对记录, 清除配对记录后关机。

## 配件明细：

耳机 \*1

充电座 \*1

数据线 \*1

耳帽 \*2(大/小)

使用说明书 \*1

## 耳机充电：

当耳机电量不足时, 红灯闪烁, 耳机会有“Please charge”

的提示音, 请将耳机充电。耳机自带TYPE-C充电口, 可以

用数据线充电, 也可以通过充电盒给耳机充电。耳机在充

电时红灯长亮, 充饱后蓝灯长亮。

## 注意：

①

耳机5分钟内未与任何设备连接, 会自动进入关机状态。

②

苹果手机实时显示电压较低的耳机的电池电量。

③

建议在耳机长时间不使用情况下, 请将其放在干燥通风处


并每隔两月充电一次。

④

建议定期用棉签轻轻擦拭弹片和铜柱, 达到清洁的效果。

切勿使用液体清洁耳机。

红蓝灯交替闪

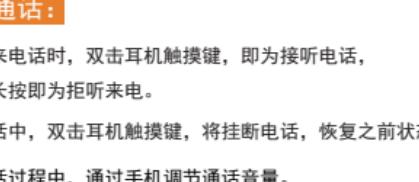

⑤

恢复出厂设置: 快速5次触控键, 可以清除手机和耳机之

间的配对记录, 清除配对记录后关机。

## 故障：

故障

原因分析

解决方法

不开机

耳机电量不足

对耳机进行充电

充电无表示

耳机未正确放置/

弹片和铜柱有异物

调整耳机放置位置/

清洁弹片和铜柱

自动关机

耳机电量不足

对耳机进行充电

耳机有噪音

音量过大或者环境嘈杂

调节音量或更换环境

耳机有噪音

外界干扰严重或距离耳机过近

更换地点或靠近耳机

对方声音小

耳机佩戴不正确或音量太小

调节耳机佩戴或音量大小

信号断续

外界干扰严重或电量低

选择无干扰环境或给耳机充电

播放歌曲时间: 15小时\*3次

支持协议: HFP/AIDP/AVRC

频率: 2.40 GHZ-2.48 GHZ

接收灵敏度: -92dBm

工作温度: -10+50°C

距离: ≤15M

注意: 当耳机不充电时, 可以用棉签轻轻擦拭弹片和铜柱。

⑤

恢复出厂设置: 快速5次触控键, 可以清除手机和耳机之

间的配对记录, 清除配对记录后关机。

## 耳机：

耳机 \*1

充电座 \*1

数据线 \*1

耳帽 \*2(大/小)

使用说明书 \*1

## 耳机充电：

当耳机电量不足时, 红灯闪烁, 耳机会有“Please charge”

的提示音, 请将耳机充电。耳机自带TYPE-C充电口, 可以

用数据线充电, 也可以通过充电盒给耳机充电。耳机在充

电时红灯长亮, 充饱后蓝灯长亮。

## 注意：

①

耳机5分钟内未与任何设备连接, 会自动进入关机状态。

②

苹果手机实时显示电压较低的耳机的电池电量。

③

建议在耳机长时间不使用情况下, 请将其放在干燥通风处

并每隔两月充电一次。

④

建议定期用棉签轻轻擦拭弹片和铜柱, 达到清洁的效果。

切勿使用液体清洁耳机。

⑤

恢复出厂设置: 快速5次触控键, 可以清除手机和耳机之

间的配对记录, 清除配对记录后关机。

## 基本参数：

蓝牙版本: V5.3

充电舱电池电压/容量: 3.7V/400mAh

耳机电池容量: 1\*3.7V/95mAh

耳机充电时间: 约2小时

切勿使用液体清洁耳机。

⑤

恢复出厂设置: 快速5次触控键, 可以清除手机和耳机之

间的配对记录, 清除配对记录后关机。

## 故障：

故障

原因分析

解决方法

不开机

耳机电量不足

对耳机进行充电

充电无表示

耳机未正确放置/

弹片和铜柱有异物

调整耳机放置位置/

清洁弹片和铜柱

自动关机

耳机电量不足

对耳机进行充电

耳机有噪音

音量过大或者环境嘈杂

调节音量或更换环境

耳机有噪音

外界干扰严重或距离耳机过近

更换地点或靠近耳机

对方声音小

耳机佩戴不正确或音量太小

调节耳机佩戴或音量大小

信号断续

外界干扰严重或电量低

选择无干扰环境或给耳机充电