


CyberMega

Auto Incline Folding Smart Treadmill User Guide

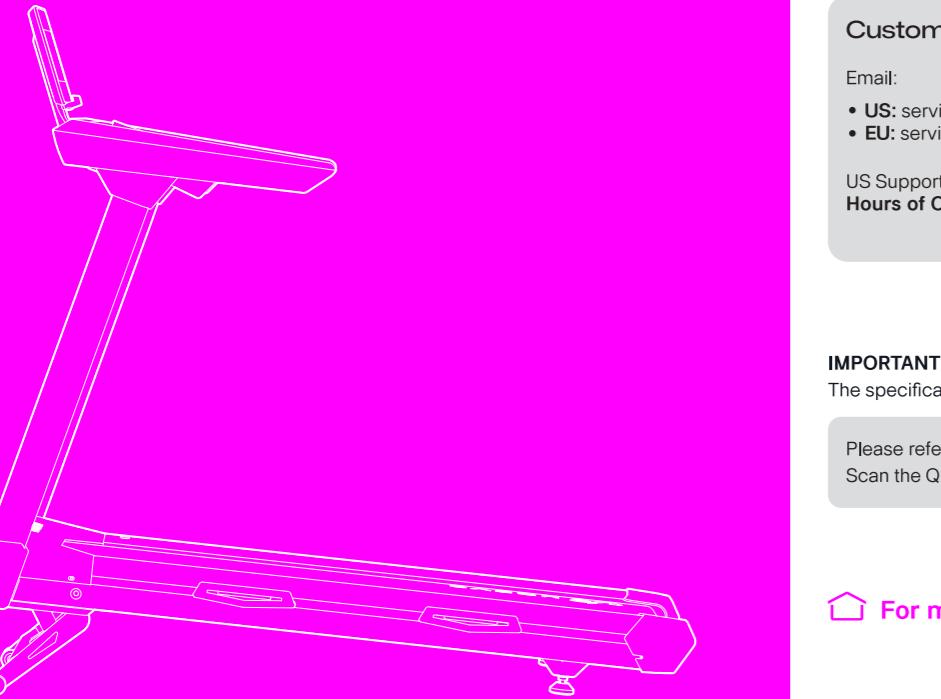

Activate UREVO App Now
For Longer Warranty &
Smart Features Access

US
Model. URTM044

UREVO

24-MONTH WARRANTY!

You'll receive a 24-month warranty and lifetime customer service after activation. This warranty applies only to eligible purchases from UREVO authorized distributors. For more details, visit urevo.com/warranty.

Customer Service

Email:

- US: services@urevo.com
- EU: service_eu@urevo.com (Response within 24 hours)

US Support Hotline: (1)844-988-2473

Hours of Operation: Mon-Fri, 7 AM - 6 PM PST
Sat-Sun, 7 AM - 11 AM, 12 AM - 4 PM PST

IMPORTANT: Read all instructions carefully before using this product.

The specifications of this product may vary from this photo, subject to change without notice.

Please refer to the detailed manual on the UREVO app.

Scan the QR code on the device to view the detailed manual.

For more content, please visit : urevo.com

Manufacturer: Shenzhen Yile Dynamic Technology Co., LTD.
Address: 1205-1206, Tianliao Building, Tangchang Road, Tanglang Community, Taoyuan Street, Nanshan District, Shenzhen, China
Version:1.0 FCC ID: 2A8UT-URTM044

recycling symbol FCC CE
MADE IN P.R.C


UREVO APP

Scan Now For The Urevo App
Unlock More Exciting New Features And Fitness Modes!

App Connection Steps:


Turn on Bluetooth (Phone/Tablet).
Open the UREVO App and follow the on-screen instructions to add your device.
Bluetooth connectivity walking treadmill to your device:

- Connected: solid light
- Searching or failed connection: flashing
- Updating: quick flashing

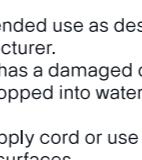

Activate UREVO App Now
For Longer Warranty &
Smart Features Access

The UREVO App provides the following services:

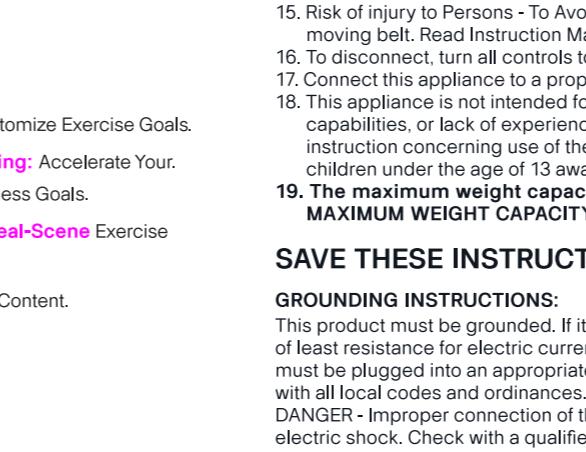

- **Smart Control:** Customize Exercise Goals.
- **Precise Data Tracking:** Accelerate Your Progress Toward Fitness Goals.
- Enjoy **Immersive, Real-Scene** Exercise Experiences.
- **Abundant** Exercise Content.

SAFETY INSTRUCTION

DANGER - To reduce the risk of electric shock:

Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.

2. Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.

3. Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons.

4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to a service center for examination and repair.

6. Do not carry this appliance by supply cord or use cord as a handle.

7. Keep the cord away from heated surfaces.

8. Never operate the appliance with the air openings blocked. Keep the air opening free of lint, hair, and the like.

9. Never drop or insert any object into any opening.

10. Do not use outdoors.

11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

12. Caution - To reduce the risk of injury from moving parts - Unplug before servicing.

13. Warning - To reduce the risk of electric shock - Unplug before cleaning or servicing.

14. Warning - Risk of personal injury - Keep children under the age of 13 away from this walking treadmill.

15. Risk of injury to Persons - To Avoid injury, use extreme caution when stepping onto or off of a moving belt. Read Instruction Manual Before Using.

16. To disconnect, turn all controls to the off position, then remove plug from outlet.

17. Connect this appliance to a properly outlet only. See grounding instructions.

18. This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Keep children under the age of 13 away from this walking treadmill.

19. **The maximum weight capacity for this product is 300lbs/136kg. DO NOT EXCEED MAXIMUM WEIGHT CAPACITY.**

SAVE THESE INSTRUCTIONS

GROUNDING INSTRUCTIONS:

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

FCC STATEMENT:

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

(3) Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with RSS-210 of Industry Canada. Ce appareil est conforme à RSS-210 de l'Industrie Canada. This device complies with Industry Canada license-exempt RSS standards.

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference received, including interference that may cause undesired operation of the device. appareil radio豁免的 licence. Son fonctionnement est sujet aux deux conditions suivantes: (1) le dispositif ne doit pas produire de brouillage perceptible; (2) ce dispositif doit accepter tout brouillage, y compris le brouillage susceptible de provoquer un fonctionnement désirable.

Radio Exposure Statement: The product comply with the handheld RF exposure limit set forth for an uncontrolled environment and is safe for intended operation as described in the manual.

The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

Déclaration d'exposition aux radiations: Le produit conforme aux limites d'exposition pour les appareils portables RF pour les Etats-Unis et le Canada pour un environnement non contrôlé.

Le produit est utilisé pour un fonctionnement tel que décrit dans le manuel. La réduction au maximum de l'exposition peut être réalisée si l'appareil peut être utilisé à distance du corps de l'utilisateur lorsque dispositif est réglé sur la puissance de sortie la plus faible si elle est disponible.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme ICES-003 du Canada.

01

02

03


04

HOW TO USE

Warning!


- Assess your health before use; exercise correctly. Stop if unwell and consult a doctor.
- MUST use power cord with comes of package.
- Please keep 1.2m side-to-side and 2m front-to-back.
- Folding operation requires unplugging the power cord first.
- If any emergency occurs, treadmill stops automatically and show "E10" when the safety key is pulled out from the console.

NOTE: Find the clip (A) onto the waistband of your clothes, another key (B) magnetic attracted under console.

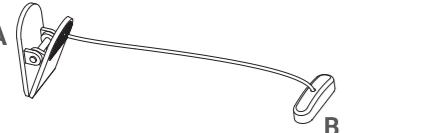


Unfolded To Run (Speed range : 0.6 - 12.5 mph)

1. Lift up handrail until end position.

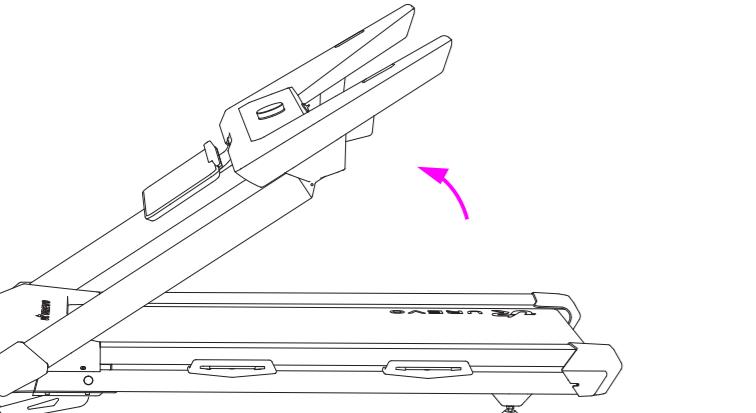

05


3. Fold the display screen into position, and **make sure the safety key is installed**.

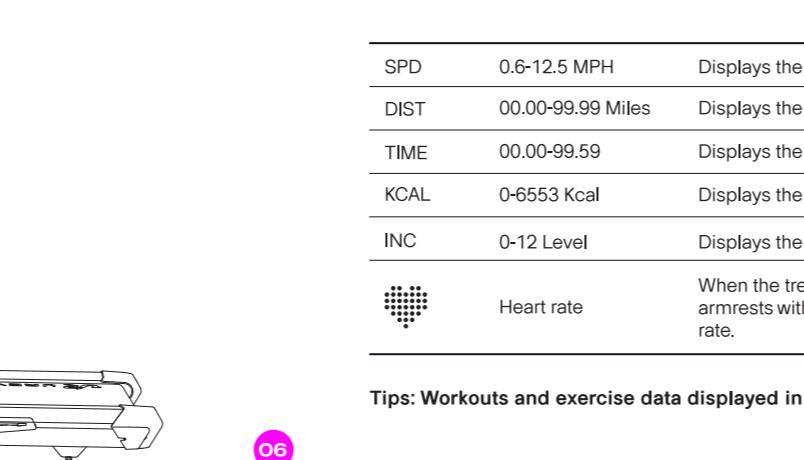

06

2. Hold your foot against the upright for stability, then flatten the console until it reaches its end position.

NOTE: If the upright moves backward, push it forward until it reaches its end position.

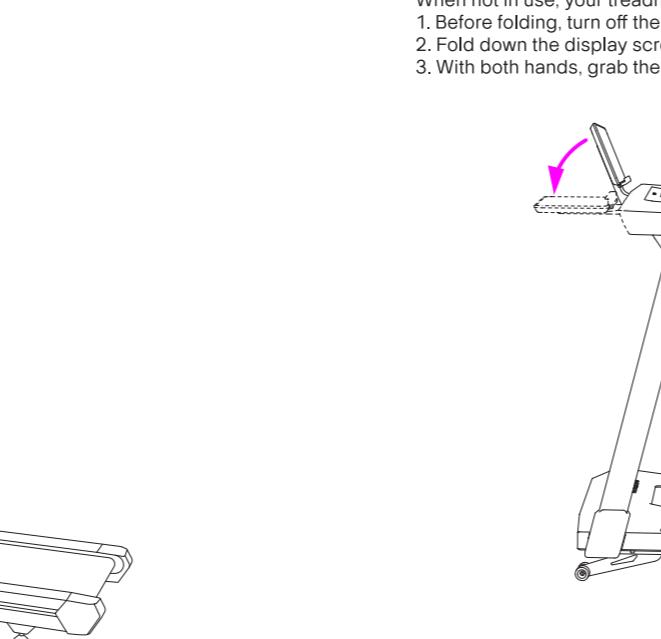


07

Folding for Storage

When not in use, your treadmill can be folded to save space.

1. Before folding, turn off the power switch and unplug the power cord.
2. Fold down the display screen.
3. With both hands, grab the folding button and fold down the console and handrail.

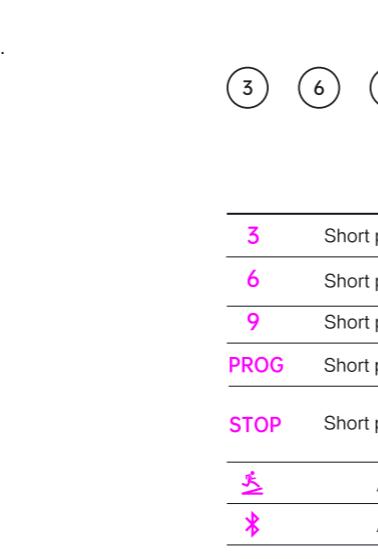

When not in use, your treadmill can be folded to save space.

1. Before folding, turn off the power switch and unplug the power cord.

2. Fold down the display screen.

3. With both hands, grab the folding button and fold down the console and handrail.



3 Short press One-click to reach 3 incline level

6 Short press One-click to reach 6 incline level

9 Short press One-click to reach 9 incline level

PROG Short press Select workout program: P1-P6 programs

STOP Short press Stopping the treadmill: The display will show "End" and the walking belt will slow to a complete stop. The display turns off after 10 minutes in the "End" state.

/ Incline

/ Bluetooth

Short press Start: Short press to begin from stop or pause. Speed/Incline: While running, Speed is default (🏃 light). Short press to switch to Incline (🏃 lights).

Knob Long press While running, long press to stop the treadmill.

Rotate When 🏃 light: rotate right, accelerate speed; rotate left, decelerate speed. When 🏃 light: rotate right, accelerate incline level; rotate left, decelerate incline level.

🏃 / Speed

START PAUSE Short press Start the walking treadmill / Pause the walking treadmill.

MODE Short press Customize countdown workout programs (like as: Time; Distance; Calories)

6 Short press One-click to reach 6 mph

8 Short press One-click to reach 8 mph

10 Short press One-click to reach 10 mph

Heart rate When the treadmill is running, hold the metal sensors on the armrests with both hands for 5 seconds to display your heart rate.

UREVO

08

Console

When not in use, your treadmill can be folded to save space.


1. Before folding, turn off the power switch and unplug the power cord.

2. Fold down the display screen.

3. With both hands, grab the folding button and fold down the console and handrail.

Bottle Cage (Bottle not included)

Tighten the screw C LOCKS.

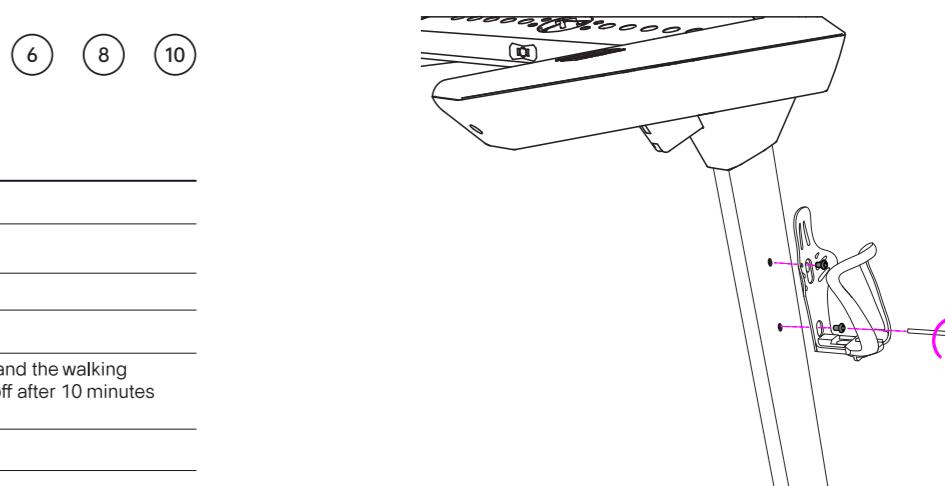


09

Bel Lubrication

Bel Lubrication process, follow instruction below to lubricate belt.

1. Power off the treadmill and unplug power cord.
2. Open the oil injection hole cover on the right of rail, spray lubrication oil inside, then close the cover. Not necessary to apply spray lubrication oil on the walk platform.
3. Lubrication oil volume per time of maintenance: 5-10mL. Attention: it would cause of belt slip if spray too much.
4. Power on the treadmill and workout for few minutes, in order to spread lubrication oil to whole belt surface evenly. Lubrication frequency: high recommend 15 miles per time.

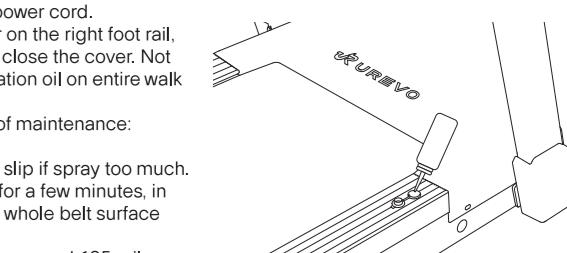

10