



User Manual
TravelLite TL15-43M

About this Concise User Guide

Read the user's manual carefully before using the device for the first time.

Please note that we shall not be liable in cases of improper use:

- Do not modify the device without our consent and do not use any auxiliary equipment which we have not approved or supplied.
- Use only spare parts and accessories which we have supplied or approved.
- Follow all instructions in this manual, especially the safety information, Any other use is deemed improper and can cause personal injury or damage to the product.
- Do not use the device in areas where there is a risk of explosion such as tank farms, fuel storage depots or areas in which solvents are processed. It is also not permitted to use this device in those areas where the air is polluted with fine particles (e.g. flour dust or sawdust).
- Do not use the device in extreme environmental conditions.

Trademarks

Intel is a trademark/registered trademark of Intel Corporation.

Windows is a registered trademark of Microsoft Corporation.



FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.

Instructions for Care and Operation

The computer is quite rugged, but it can be damaged. To prevent this, follow these suggestions:

- **Don't drop it, or expose it to shock.** If the computer falls, the case and the components could be damaged.
- **Keep it dry, and don't overheat it.** Keep the computer and power supply away from any kind of heating element. This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
- **Avoid interference.** Keep the computer away from high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage your data.
- **Follow the proper working procedures for the computer.** Shut the computer down properly and don't forget to save your work. Remember to periodically save your data as data may be lost.

Servicing

Do not attempt to service the computer yourself. Doing so may violate your warranty and expose you and the computer to electric shock. Refer all servicing to authorized service personnel. Unplug the computer from the power supply. Then refer servicing to qualified service personnel under any of the following conditions:

- When the power cord or Type-C adapter is damaged or frayed.
- If the computer has been exposed to any liquids.
- If the computer does not work normally when you follow the operating instructions.
- If the computer has been dropped or damaged (do not touch the poisonous liquid if the panel breaks).
- If there is an unusual odor, heat or smoke coming from your computer.

Safety Information

- Only use an Type-C adapter approved for use with this computer.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.
- Do not continue to use a battery that has been dropped, or that appears damaged (e.g. bent or twisted) in any way. Even if the computer continues to work with a damaged battery in place, it may cause circuit damage, which may possibly result in fire.
- Make sure that your computer is completely powered off before putting it into a travel bag (or any such container).
- Before cleaning the computer, make sure it is disconnected from any external power supplies, peripherals and cables.
- Use a soft clean cloth to clean the computer, but do not apply cleaner directly to the computer. Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.
- Do not try to repair a battery pack. Refer any battery pack repair or replacement to your service representative or qualified service personnel.
- Avoid placing any other items in the carrying bag which may rub against the top of the computer during transport. If any such wear and tear develops contact your service center.

Polymer/Lithium-Ion Battery Precautions

Note the following information which is specific to Polymer/Lithium-Ion batteries only, and where applicable, this overrides the general battery precaution information.

- Polymer/Lithium-Ion batteries may experience a slight expansion or swelling, however this is part of the battery's safety mechanism and is not a cause for concern.
- Use proper handling procedures when using Polymer/Lithium-Ion batteries. Do not use Polymer/Lithium-Ion batteries in high ambient temperature environments, and do not store unused batteries for extended periods.
- If you are working in areas of low temperature use the adapter to power the computer.



Battery Disposal & Caution

The product that you have purchased contains a rechargeable battery. The battery is recyclable. At the end of its useful life, under various state and local laws, it may be illegal to dispose of this battery into the municipal waste stream. Check with your local solid waste officials for details in your area for recycling options or proper disposal.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Discard used battery according to the manufacturer's instructions.

RTC battery

Warning: "Do not ingest battery, Chemical Burn Hazard"

Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

Model Differences

This notebook series includes different models that vary slightly in design style, color and general appearance. Note that though your computer may look slightly different from that pictured throughout this documentation, all ports, jacks, indicators, specifications and general functions are the same for all the design styles.

System Startup

1. Remove all packing materials.
2. Place the computer on a stable surface.
3. Securely attach any peripherals you want to use with the computer (e.g. keyboard and mouse) to their ports.
4. **When first setting up the computer use the following procedure** (as to safeguard the computer during shipping, the battery will be locked to not power the system until first connected to the adapter and initially set up as below):

Ç Attach the adapter cord to the charging jack on the left of the computer, then plug the AC power cord into an outlet, and connect the AC power cord to the adapter. The battery will now be unlocked.
5. Use one hand to raise the lid to a comfortable viewing angle ; use the other hand (as illustrated in **Figure 1**) to support the base of the computer (**Note: Never** lift the computer by the lid).
6. Press the power button to turn the computer on

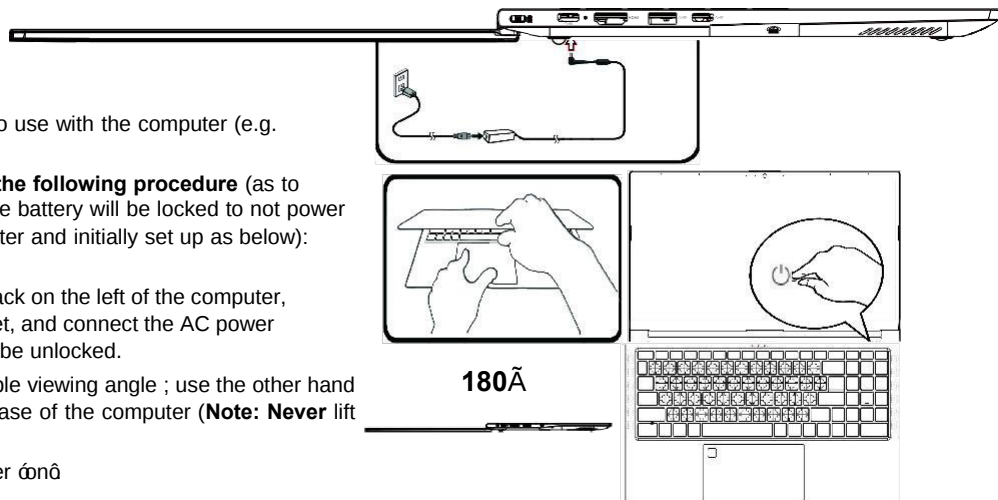



Figure 1 - Opening the Notebook with the Adapter Plugged-In

System Software

Your computer may already come with system software pre-installed. Where this is not the case, or where you are re-configuring your computer for a different system, you will find this manual refers to **Microsoft Windows 11**.

Shut Down

Note that you should always shut your computer down by choosing the **Shut down** command in **Windows** (see below). This will help prevent hard disk or system problems.



1. Click the Start Menu icon .
2. Click the **Power** item .
3. Choose **Shut down** from the menu.

System Map: Front View with Display Open (Backlit Version)

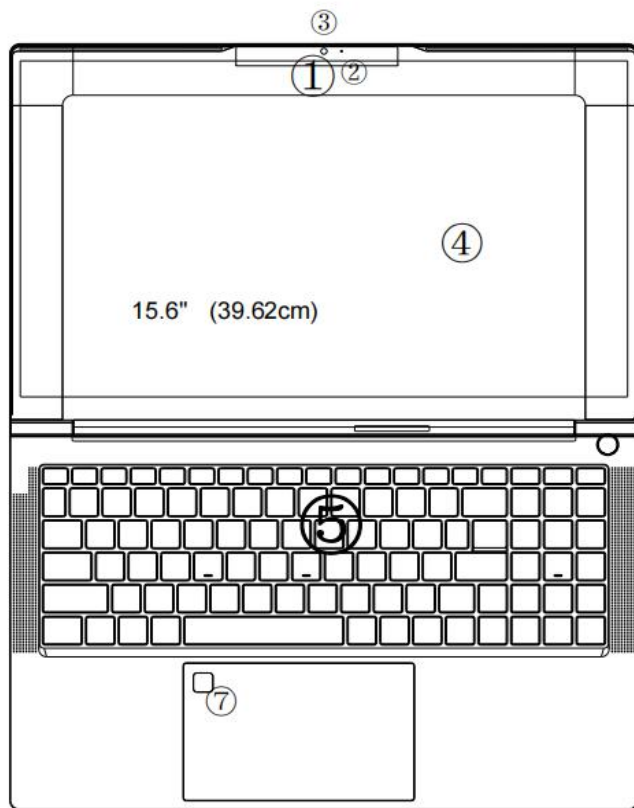


Figure 2 - Front View with Display Open

1. Webcam
2. Built-In Microphone
3. Camera switch
4. Display
5. Keyboard
6. Touchpad & Buttons
7. Fingerprint Recognition Sensor



Note that the Touchpad and Buttons valid operational area is that indicated within the dotted lines above.

System Map: Front View with Display Open (without Backlit)

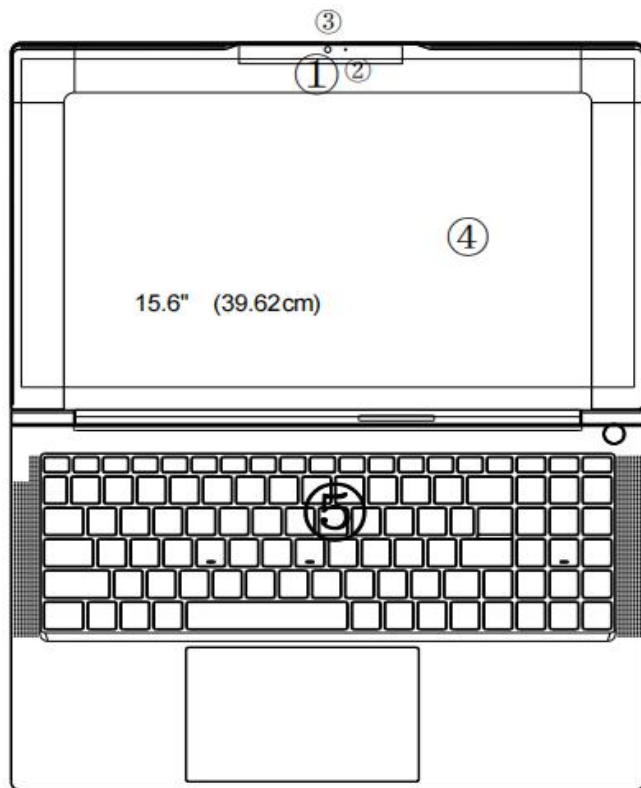


Figure 3 - Front View with Display Open

1. Webcam
2. Built-In Microphone
3. Camera switch
4. Display
5. Keyboard
6. Touchpad & Buttons



Note that the Touchpad and Buttons valid operational area is that indicated within the dotted lines above.

Fingerprint Recognition Startup (Optional)

Your computer may already come with Fingerprint Recognition sensor. The Fingerprint Recognition can be configured from *Windows* by using the **Accounts** or **System** (in **Settings**) control panel or the **Password** menu.

Step 1: Click the **Windows icon** and select **Settings**. Go to **Accounts**, click on **Password**, and choose **Add** to set up the password.





Step 2: In **Accounts**, select **PIN (Windows Hello)** and choose **Add**. Set the password and click OK (must include numbers and letters).

Step 3: Return to **Accounts**, click on **Fingerprint recognition**, and click **Set up**, then **Get started**.

Step 4: Follow the instructions displayed. Press your finger onto the fingerprint sensor and hold it, then lift it off. Repeat this process until the fingerprint setup is finalized.

Step 5: Now you can log in with your fingerprint. You can choose **Add another** to include an additional fingerprint for unlocking the computer.

Figure 4 - Fingerprint Recognition Startup

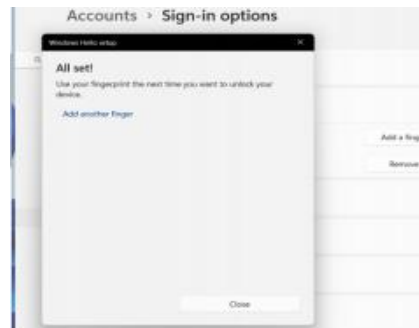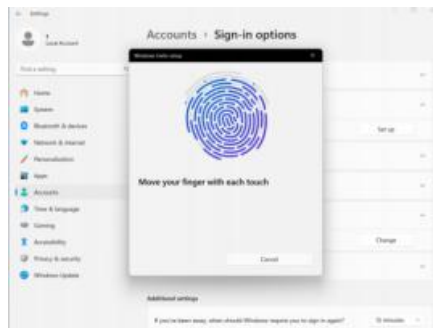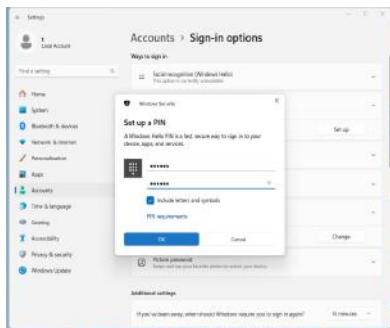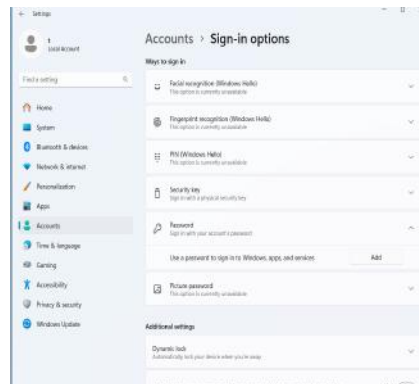

Keyboard

Your notebook comes with a keyboard. The keyboard has a numeric keypad for easy numeric data input.

Function Keys



Numeric Keypad


Fn Windows
Key Logo Key

Menu/
Application Key

Figure 5 - Keyboard with Backlit

Function Keys & Visual Indicators


The function keys (F1 - F12 etc.) will act as hot keys when pressed while the **Fn** key is held down.

Keys	Function/Visual Indicators	Keys	Function/Visual Indicators
Fn + 	Sleep Toggle	Fn +  	Volume Decrease/ Increase 
Fn + 	Airplane Toggle	Fn + 	Keyboard backlit Toggle (Valid Only for Backlit Version)
Fn +  	Display Brightness Decrease/Increase 	Fn + 	Pause Application
Fn + 	Change Screen mode		Insert Toggle
Fn + 	Touchpad Toggle		Fn Lock Toggle
Fn + 	Mute Toggle 		Prt Scr Toggle
Table 2 - Function Keys & Visual Indicators			

Keyboard

Your notebook comes with a keyboard. The keyboard has a numeric keypad for easy numeric data input.

Function Keys

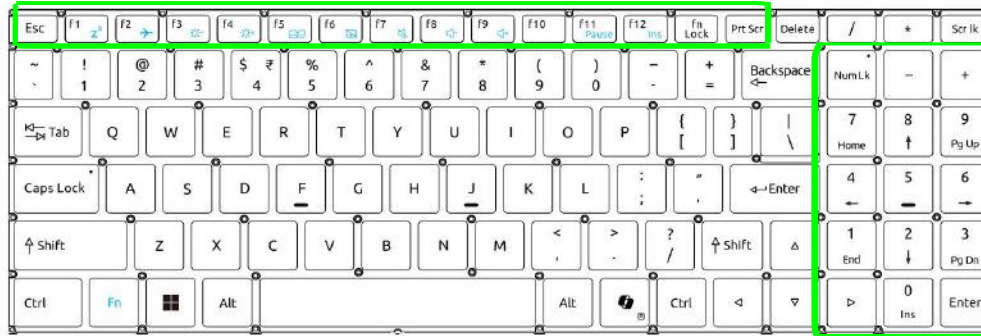

Numeric Keypad


Fn Windows
Key Logo Key

Menu/
Application Key

Figure 6 - Keyboard without Backlit

Function Keys & Visual Indicators

The function keys (F1 - F12 etc.) will act as hot keys when pressed while the **Fn** key is held down.


Keys	Function/Visual Indicators	Keys	Function/Visual Indicators
Fn + 	Sleep Toggle	Fn +  	Volume Decrease/Increase 
Fn + 	Airplane Toggle	Fn + 	Pause Application
Fn +  	Display Brightness Decrease/Increase 		Insert Toggle
Fn + 	Change Screen mode		Fn Lock Toggle
Fn + 	Touchpad Toggle		Prt Scr Toggle
Fn + 	Mute Toggle 		
<i>Table 2 - Function Keys & Visual Indicators</i>			

System Map: Left & Right Views

Figure 7

Left & Right Views

1. TYPE-C jack
2. USB 3.0 Port
3. HDMI Port
4. TYPE-C jack
5. Kensington Lock Slot
6. RJ-45 LAN jack
7. USB 3.0 Port
8. USB 3.0 Port
9. 2-In-1 Audio Jack (Headphone/Microphone)
10. MicroSD Card Reader

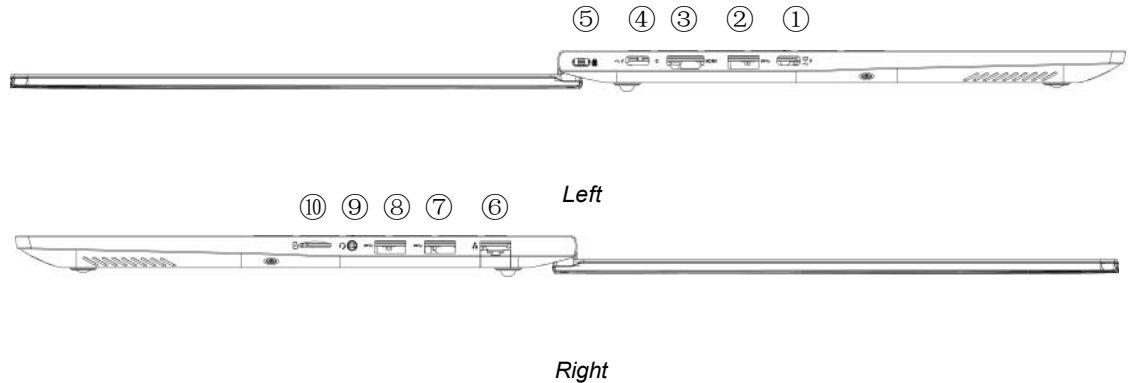



Overheating

To prevent your computer from overheating make sure nothing blocks any vent while the computer is in use.

Combination Audio Jacks (2-In-1 Audio Jacks)

Note that the combination audio jacks can support headphones or headsets (i.e. a combination microphone/headphone).


1. When a device is plugged in to the combination audio jack a dialog ("Which device did you plug in?") box will pop-up.
2. Make sure you select the correct device from the drop-down menu corresponding to the device plugged-in (e.g. choose "Headset" if you have plugged-in a headset and do not choose "Headphone" in this case), and then click **OK** to save the setting.

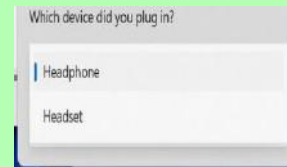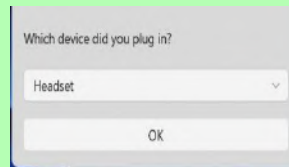

System Map: Bottom Views

Figure 8
Bottom Views

1. Vent
2. Speakers

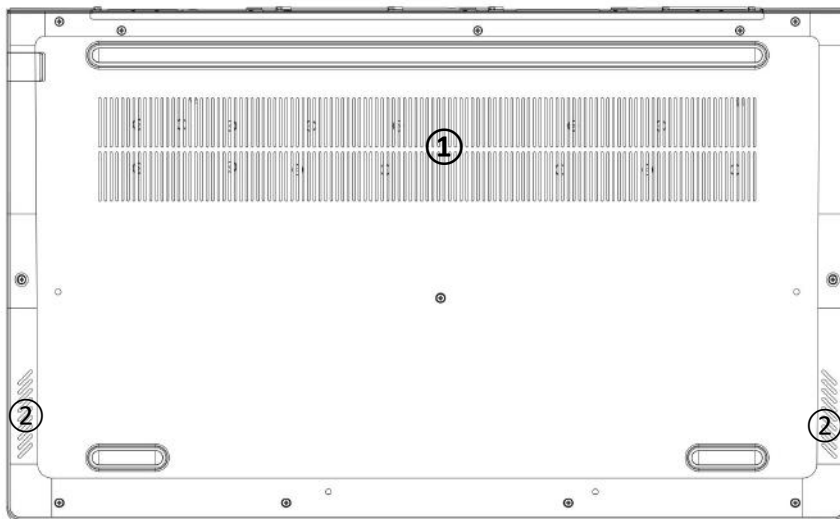

Bottom Cover Removal Warning

Do not remove any cover(s) and/or screw(s) for the purposes of device upgrade as this may violate the terms of your warranty.

If you need to replace/remove the SSD/RAM etc., for any reason, please contact your distributor/supplier for further information.

Windows 11 Start Menu, Context Menu, Taskbar, Control Panel and Settings

Most of the apps, control panels, utilities and programs within *Windows 11* can be accessed from the Start Menu by clicking the icon  in the taskbar in the lower left corner of the screen (or by pressing the **Windows Logo Key**  on the keyboard).

Right-click the Start Menu icon  (or use the **Windows Logo Key**  + X key combination) to bring up an advanced Context Menu of useful features such as Apps and Features, Power Options, Task Manager, Search, File Explorer, Device Manager, Computer Management and Network Connections etc.

The notification area of the taskbar is in the bottom right of the screen. Some of the control panels and applications referred to throughout the course of this manual can be accessed from here.

Throughout this manual you will see an instruction to open the Control Panel. To access the Control Panel, use the **Windows Logo Key**  + **R** key combination and type “**Control Panel**”. You can pin the **Control Panel** tile to **Start** or **taskbar**.

The **Settings** item in the Start Menu (and also as an App) gives you quick access to a number of system settings control panels allowing you to adjust settings for System, Bluetooth & devices, Network & internet, Personalization, Apps, Accounts, Time & language, Gaming, Accessibility, Privacy & security and Windows Update.


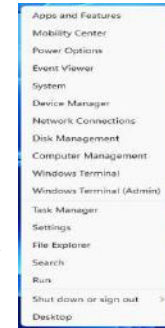


Figure 9
Start Menu,
Context Menu,
Taskbar, Control
Panel and
Settings

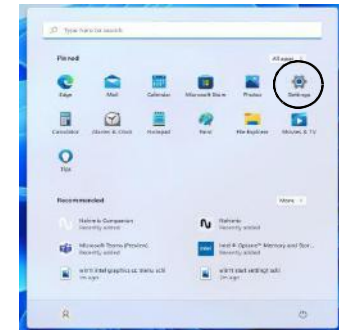

Video Features

The system features an **Intel's Integrated GPU** (for power-saving) . You can switch display devices, and configure display options as long as the video drivers are installed.

Microsoft Hybrid Graphics

Microsoft Hybrid Graphics is a seamless technology designed to get best performance from the graphics system while allowing longer battery life, without having to manually change settings. The computer's operating system (and some applications) will **automatically switch** between the integrated GPU and the discrete GPU when required by the applications in use.

To access the Display control panel in Windows:

1. Right-click the desktop and select **Display settings** from the menu.
2. Choose the required display settings from the menus.

To access the Intel® Graphics Command Center:

1. Access the **Intel® Graphics Command Center** from the Start menu in *Windows*  Intel® Graphics Command Center .

Display Devices

Note that you can use external displays connected to the HDMI-Out port. See your display device manual to see which formats are supported.

Configuring the Displays in Windows

All external and internal displays (up to 3 active displays) can be configured from *Windows* by using the **Display** or **System** (in **Settings**) control panel or the **Project** menu.

To configure the displays using the Project menu:

1. Attach your external display(s) to the appropriate port, and turn it(them) on.
2. Press the  + **P** key combination.
3. Click on any one of the options from the menu to select **PC screen only**, **Duplicate**, **Extend** or **Second screen only**.
4. You can also click **Connect to a wireless display** at the bottom of the **Project** screen and follow the steps to connect to any wireless enabled display.

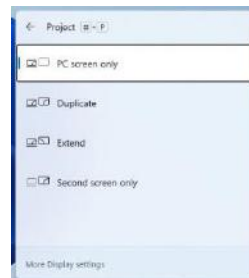


Figure 10
Project

To configure the displays using the Display control panel:

1. Attach your external display(s) to the appropriate port, and turn it(them) on.
2. Right-click the desktop and select **Display settings** from the menu.
3. Click the **Detect** button.
4. The computer will then detect any attached displays.
5. You can configure up to 3 displays from the **Multiple displays** menu.

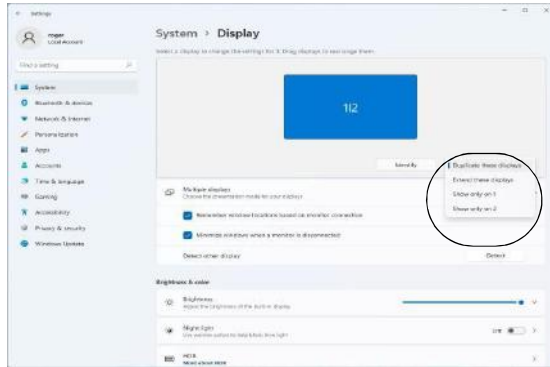


Figure 11- Display (Multiple displays)

Audio Features

You can configure the audio options on your computer from the **Sound** control panel in *Windows*. Access the **Sound** control panel via the **Settings (System > Sound)** item in the Start menu.

The volume may be adjusted by means of the **Fn + F8/F9** key combination. The sound volume level can also be set using the volume control within *Windows*. Click the icon  in the taskbar to check the setting.

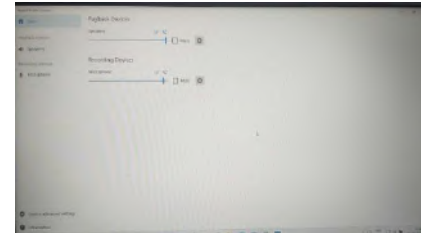


Figure 12 - Realtek Audio Console

3 Connected Displays

Note that when 3 displays are connected, only 2 displays may be configured in **Duplicate** mode.

Power & battery

The **Power & battery** control panel allows you to quickly adjust power options for **Screen and sleep**, **Power mode**, **Battery saver** and **Battery usage** etc. Access the **Power & battery** control panel via the **Settings (System > Power & battery)** item in the Start menu.

The **Power mode** can be set to **Balanced** (default) which balances performance and battery life, **Best power efficiency** for better battery life with reduced performance, and **Best Performance** for improved performance but with greater battery consumption. You can also customize the settings for how long your computer will remain inactive before it turns off the screen or goes to sleep. Expand the “**Screen and sleep**” option, and select your preferred durations from each drop-down menu.

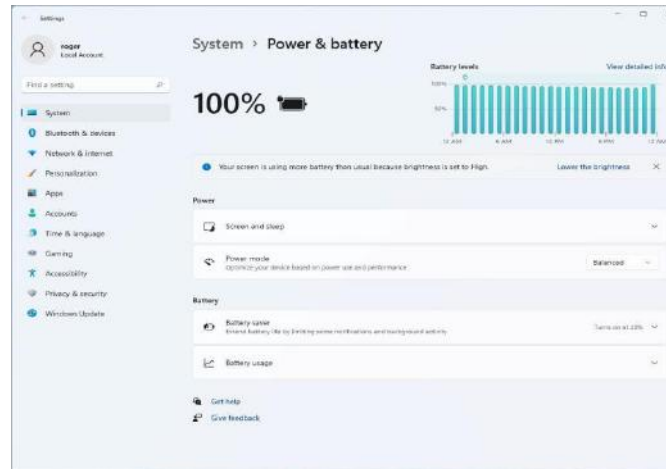


Figure 13- Power & battery

Wireless LAN Module

Make sure the Wireless LAN module is turned on (and not in **Airplane Mode**) before configuration begins.

WLAN Configuration in Windows

1. Click the icon  in the notification area of the taskbar.
2. Click the icon .
3. A list of available access points will appear.
4. Double-click an access point to connect to it (or click it and click **Connect**).
5. Enter a network security key (password) if required, and click **Next**.
6. You can choose to find other devices or not.
7. When you are connected to the network access point it will display **Connected**.
8. Select any connected network and click **Disconnect** to disconnect from a connected access point.
9. You can click the **Airplane Mode** button to turn the mode On or Off.
10. Alternatively you can click the **Wi-Fi** button to turn just the Wi-Fi On or Off.



Connect Automatically

It is recommended that you check the box to Connect automatically. This will cause the system to check for the access point upon startup, and resuming from a power-saving state, and will remove any necessity to keep connecting manually.

Bluetooth Module

Make sure the Bluetooth module is turned on (and not in **Airplane Mode**) before configuration begins.

Bluetooth Configuration in Windows

1. Click the **Settings** item in the Start Menu.
2. Click **Bluetooth & devices**.
3. Click **Add device > Bluetooth** and a list of discovered devices will appear.
4. Double-click the device you want to pair with the computer and click **Connect**.
5. Select a device and click **Remove Device > Yes** to disconnect from any device.

Energy star®

This product qualifies for Energy Star® on the "Factory Default" setting and this is the setting where energy savings will be achieved. Changing the "factory Default" setting or enabling other features will increase power consumption that may exceed the limits required for the Energy Star® rating.

FCC Warning Statement Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.