


FanttikRide

K9 / K9 Pro / K9 Apex ELECTRIC SCOOTER

OWNER'S MANUAL

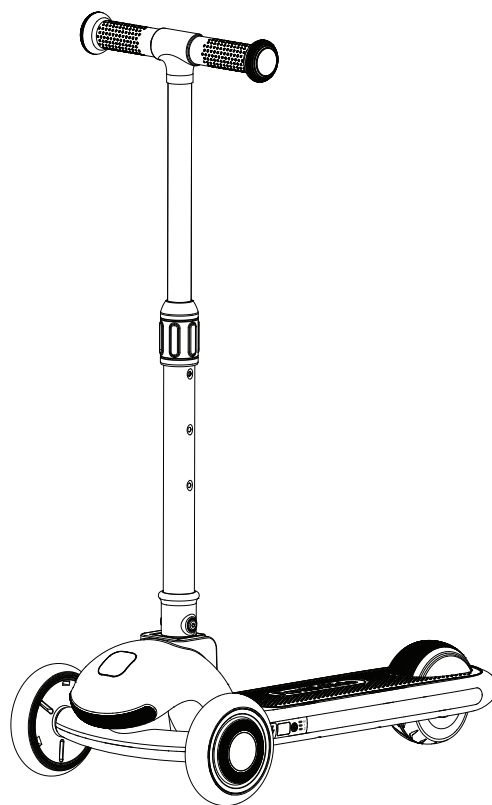

Read this manual carefully before use and keep it for future reference.

CONTENTS

EN

1. Safety Warnings ----- 02-03

2. Package Contents ----- 04

3. Product Overview ----- 05-06

4. Set-Up ----- 07

5. Charge Your Scooter ----- 08

6. Pairing your Bluetooth Device ----- 09

7. How To Ride and Stop ----- 10-11

8. Safety Instructions ----- 12-16

9. Folding and Carrying ----- 17

10. Daily Care and Maintenance----- 18

11. Specifications ----- 19

12. Troubleshooting Guide ----- 20

13. Warranty ----- 21

1. SAFETY WARNINGS

EN

WARNINGS:

- Do not attempt to do stunts or tricks. The product is not made to withstand abuse from misuse, such as jumping, curb grinding or any other type of stunts. Racing, stunt riding, or other maneuvers also enhance risk of loss of control, or may cause uncontrolled rider actions or reactions.
- Always wear proper protective equipment, such as an approved safety helmet (with chin strap securely buckled), elbow pads, and knee pads. A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, and long pants are recommended. Always wear shoes and keep shoelaces tied and out of the way of the wheels and motor. Never ride barefooted or in sandals.
- Never allow more than one person at a time to ride the product.
- Do not ride at night or when visibility is limited.
- Never use near steps or swimming pools.
- Do not allow hands, feet, hair, body parts, clothing, or similar articles to come in contact with moving parts or wheels while the motor is engaged.
- Do not touch electric motor when in use or immediately after riding.
- Never use headphones or a cell phone to talk or text when riding.
- Never hitch a ride with a vehicle.
- Using only the manufacturer's authorized replacement parts, and should not be modified from the manufacturer's original design and configuration.
- Owners shall be encouraged to highlight (for conspicuity) using lighting, reflectors, and for low-riding units, signal flags on flexible poles.
- Not for riders under age 3 or heavier than 88 lb (40 kg).


1. SAFETY WARNINGS

EN


- Persons with the following conditions shall be cautioned not to operate:
 - Those with heart conditions;
 - Pregnant women;
 - Persons with head, back, or neck ailments, or prior surgeries to those areas of the body;
 - Persons with any mental or physical conditions that may make them susceptible to injury or impair their physical dexterity or mental capabilities to recognize, understand, and perform all of the safety instructions and to be able to assume the hazards inherent in unit use.
- Check the brake for proper function, make necessary adjustment if needed. No lubricants need to be regularly replaced.
- Check for cracks or broken connections. Although broken frames are rare, it is possible for an aggressive rider to run into a curb or object and wreck, bend or break a frame. Get in the habit of inspecting your scooter on a regular basis.

2. PACKAGE CONTENTS

EN

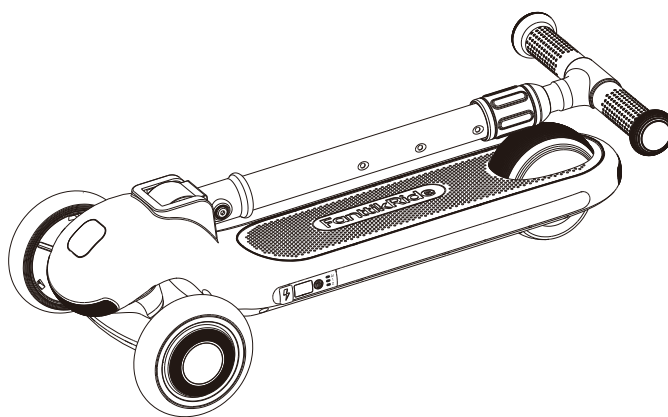


Assembled Electric Scooter x1

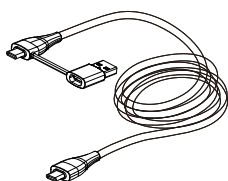

USB Cable x1

Input: Type A + Type C


Output: Type C

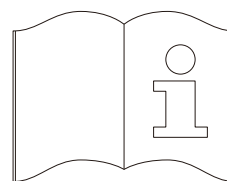

Owner's Manual x1

3. PRODUCT OVERVIEW


EN

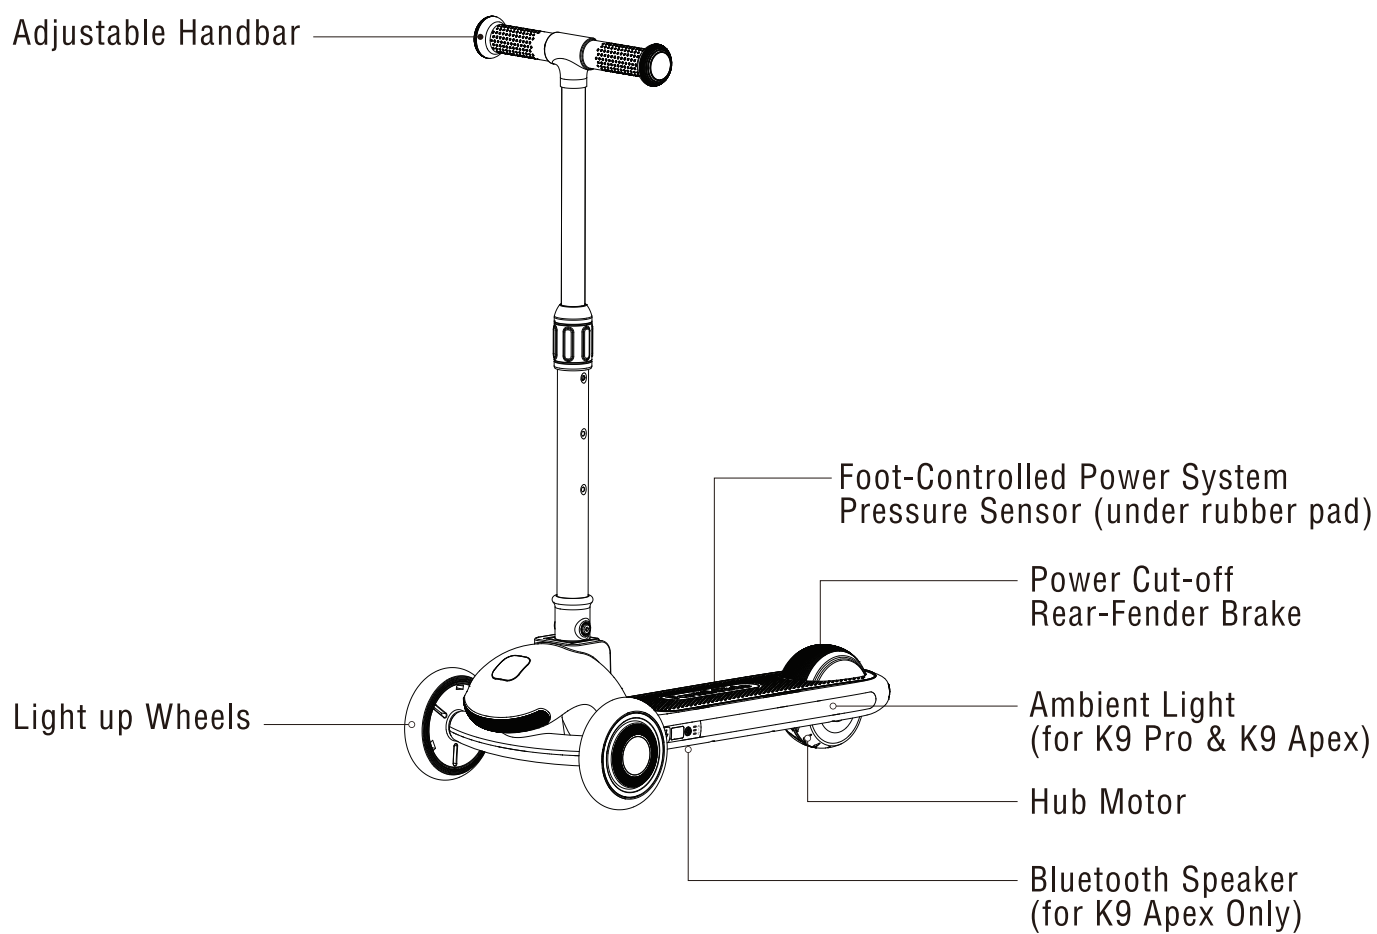

3. PRODUCT OVERVIEW


EN

Control Panel Instruction

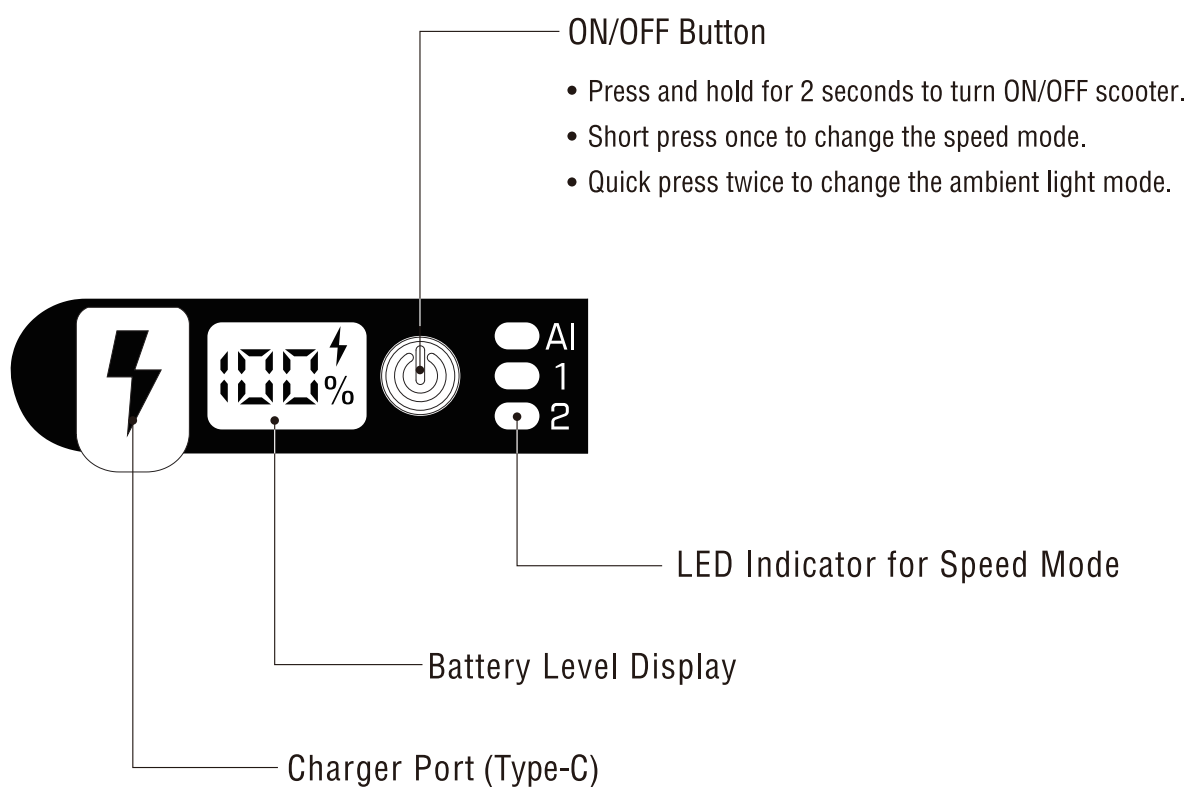


4. SET-UP

EN

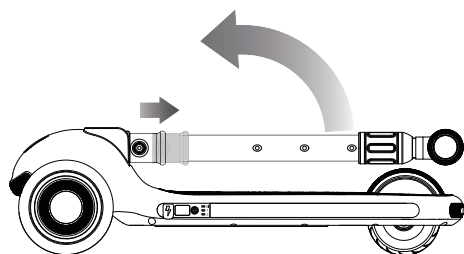


1. To release the folding mechanism, place the scooter on the ground, pull the release sleeve up to unfold the scooter.

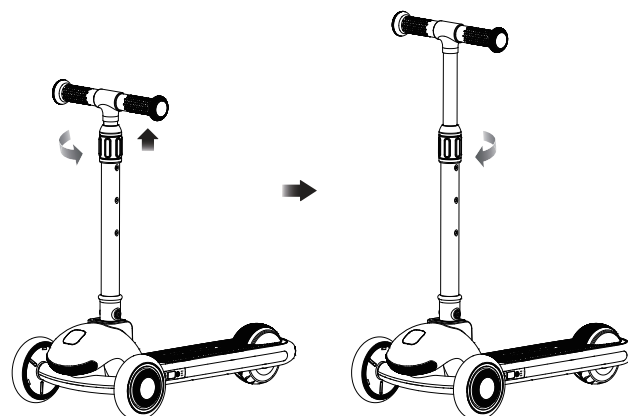

2. To adjust the height of the handlebar, loosen the quick-release sleeve and slide the T-bar to the desired position and resecure the quick-release sleeve to lock into place.

5. CHARGE YOUR SCOOTER

EN

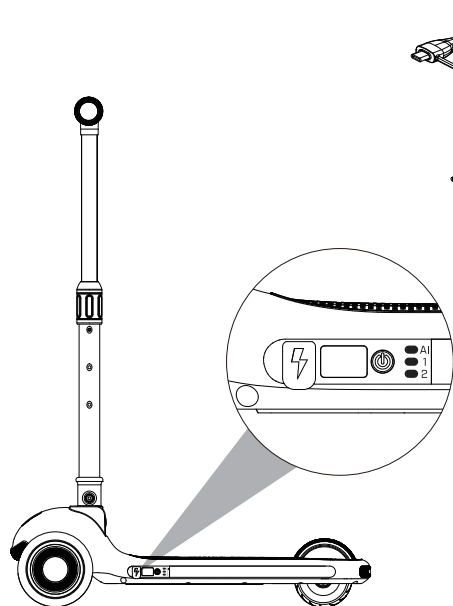

NOTE:


Plug charger cable into your mobile charger, then plug into wall outlet.

The green energy icon on the battery level screen shall be flash during charging.


When the charging is completed the energy icon will be solid ON.

The time of fully charged will be depended on your mobile charger.


Output(5V, 2A) - will take 3 hours.
Output (5V, 1A) - will take 6 hours.

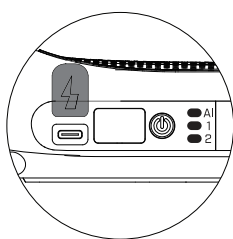

1. Lift the rubber plug.

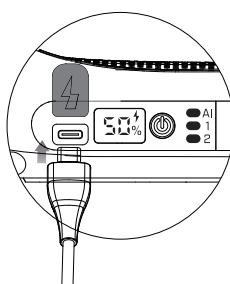

2. Plug the charger into the charging port.

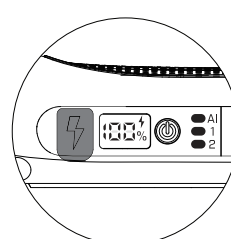

3. When charging is completed, put back the rubber plug.


6. PAIRING YOUR BLUETOOTH® DEVICE

EN




To pair with a Bluetooth® device (**K9 Apex Only**)
Follow these steps:

1. Make sure both the Bluetooth® function in your device and the scooter are turned on.
2. On your device, locate the Bluetooth® device list. Select “FanttikRide K9 Apex” from the list .

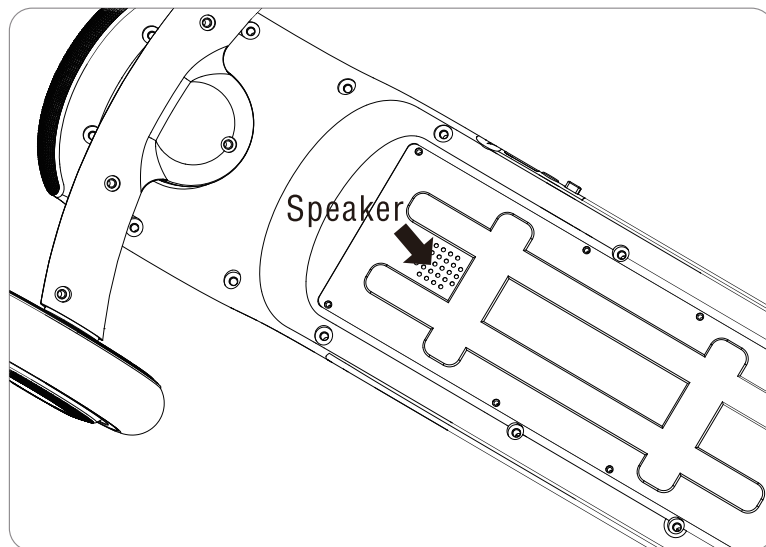


7. HOW TO RIDE AND STOP

EN

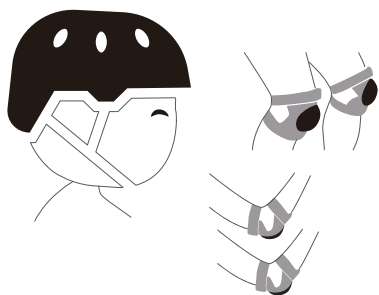

Always wear proper protective equipment, such as an approved safety helmet (with chin strap securely buckled), elbow pads, and kneepads. A helmet may be legally required by local law or regulation in your area. A long-sleeved shirt, and long pants are recommended. Always wear shoes and keep shoelaces tied and out of the way of the wheels and motor. Never ride barefooted or in sandals.

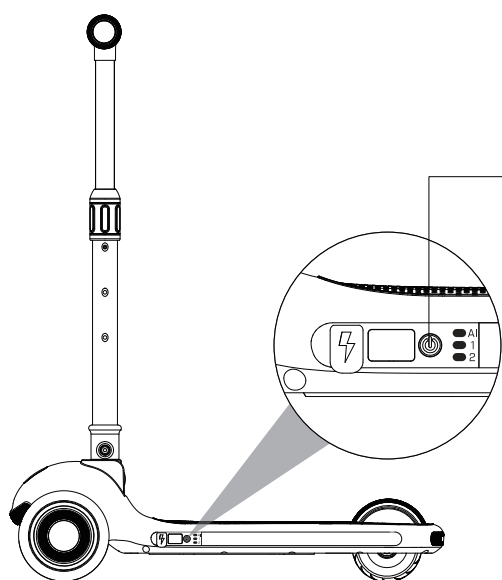

1. Press the ON/OFF button and hold for 2 seconds to turn on the scooter. Check the power indicator.

Short press the ON/OFF Button Once to Change the Speed Mode:

Mode AI - Speed from 1.9 mph (3 km/h) to 6.3 mph (10 km/h), the scooter will detect the rider's current speed and keep this speed cruise.

Mode 1 - Max speed is 3.8 mph (6 km/h).

Mode 2 - Max speed is 6.3 mph (10 km/h).

NOTE: for all above modes, the scooter must be traveling at least 1.9 mph (3 km/h) before motor will engage.