Tablet PC



User Manual

Content

Conte	ent	1
1 Intro	oduction	4
	1.1Acknowledgement	4
	1.2Announcements	4
	1.3SafetyInstruction	5
	1.4Abbreviation/Terminology	7
2 TAE	BLET PC Introduction	8
	2.1TABLETPCAccessoriesIntroduction	8
	2.2TABLETPCOperationandPreparation	8
	2.3TABLETPCStatusandReminder	8
3 Q	uick Start Guide	10
	3.1 Keys Function	10
	3.2 Startup and Shutdown	10
	3.3 Open and Close of the Screen	11
	3.4 Usage of Touch Screen	12
	3.5 Main Interface	13
	3.6 Visit Application Procedures	17
	3.7 USB Connection	18
	3.8 Words Input	19
	3.9 Application Technique	21

4	Basic Setting	.21
	4.1 Wireless and Internet	.21
	4.2 Display	.22
	4.3 Management of Application Procedure	.24
	4.4 SD Card and TABLET PC Storage	.25
	4.5 Date and Time	.26
	4.6 Language Setting	.28
	4.7 About Tablet	28
	4.8 Fixed-time Startup and Shutdown	.28
	4.9 Security Setting2	9
5	Multi-Media	.31
	5.1 Music	.31
	5.2 Video	.32
	5.3 Photo Gallery	.33
	5.4 Camera	35
	5.5 Connection of HDMI	.36
	5.6 FM Radio	.37
6	Communication Function	.38
	6.1 Phone	.38
	6.2 Text Message	.39
	6.3 Contact List	40
7	Internet	.41

	7.1 Browser	41
	7.2 Email	42
	7.3 3G Internet	44
8	GPS Function	45
9	Other Application Procedures	45
	9.1 Clock	45
	9.2 Calculator	46
	9.3 File Manager	46
	9.4 Recorder	48
10	Installation of Procedures	49
	10.1 Installation	49
	10.2 Uninstall	50
11	Troubles Shooting	50
Ар	pendix 1	52

1 Introduction

1.1 Acknowledgement

Thanks for your purchase of our product. It is a high definition tablet PC. Its CPU is MT8377, which apply the Cortex-A9, dominant frequency is 1GHz, it is based on Android 4.1 operation system, and easy to expand the third application procedure.

The product is designed with various functions, including 2 G, 3G, WIFI, BT, GPS, voice calling and so on. It is easy to achieve wireless communication and internet, you have access to surf the internet anytime and anywhere; it is also built with high accuracy GPS module, so that it can be used for navigating through installing map software. There are many sensors which offer you brand-new operation and entertainment; besides, it has mobile analog TV, camera shooting, which leads electronic consumption to enter into a fresh palm internet entertainment time.

The manual systemically introduces the functions, use techniques and announcements, please read this manual carefully before your operation.

1.2 Announcements

Preventive maintainance

- Please always keep the TABLET PC dry. To avoid the device short trouble, corrosion fault and electric short, please prevent the device, battery and charger from water and moisture, and don't operate the device or charger by wet hand.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger from violent shock or shake.
- To avoid failure of device, battery and charger, please prevent the device, battery, charger of all over heating or too cold circumstance
- Never shock, throw, prod the TABLET PC, or drop, extrude, bend the TABLET PC.
- Never disassemble the device and accessories arbitrarily, otherwise the device and accessories are not in our company warranty scope.

1.3 Safety Instruction

Before the operation of the TABLET PC, please read this chapter and teach your kids about these information. For further details, please refer to the safety instructions and announcement.

- Never use the TABLET PC when driving car, in order to ensure safe driving.
- In the medical area, please abide by related rules and

- regulations. Please shut down the TABLET PC when it is near to the medical area.
- To avoid the wireless signal to interrupt the plane- controlled signal, please shut down the TABLET PC or using airplane mode when you are boarding a flight.
- To avoid electronic equipment failure, please shut down the TABLET PC in the vicinage of high-accuracy electronic equipments.
- Please don't disassemble the TABLET PC and accessories. Only authorized agent has access to service the TABLET PC.
- Please keep the TABLET PC far away from magnetic equipments, the radiation of TABLET PC may erase the data stored in the magnetic equipments.
- Never use the TABLET PC in the vicinage of high temperature, inflammable gas (gas station).
- Protect the TABLET PC and accessories from kids reach scope, and avoid the kids to use the TABLET PC without parents' supervision.
- Please comply with related rules and regulations, and respect others' privacy and legal rights while using the TABLET PC.
- Never use the TABLET PC in bathroom or other humid environment, and please protect the TABLET PC from liquid

wash or wet.

 Please strictly adhere to related instructions in the manual when using USB cable to ensure the safety of the TABLET PC or PC.

1.4 Abbreviation/Terminology

Abbreviation/Ter minology	Full Name	Description
TABLET PC	Mobile Internet Device	Mobile Internet Terminal
WIFI	Wireless Fidelity	Base on IEEE 802.11b
TF	TransFlash	Alternative name Micro SD, super miniature memory card
НОМІ	High Definition Multimedia Interface	High Definition Multimedia Interface

2 TABLET PC Introduction

2 1TABLETPCAccessoriesIntroduction

Package:

Below items are included in your TABLET PC package, please confirm:

- TABLET PC.
- AC Adaptor
- USB cable
- Cradle & Holder
- Earphone
- User's manual

2.2 TABLET PC Operation and Preparation

Battery Charging

If this navigator is first used, please use AV adaptor to fully charge it.

- 1. Apply the power adaptor to charge for TABLET PC.
- Red LED indicates it's being charged. Please wait until it is fully charged and don't pull out the adaptor while charging. When it is fully-charged, the LED will turn to Green.

2.3TABLET PC Status and Reminder

Reminder icons

When some remind message appears in your reminder window,

please click column and slip the screen to open the reminder list.

Choose the menu you need, and confirm the information. Then you can close the reminder window through clicking the column to slide up.

Please refer to below status icons:

Y	new email	×	Airplane Mode on
*	USB connected		USB adjustment connected
\bigcup	Return button	<u>+</u>	downloading
	display recently-used application		Home button
	Current power volume.		WIFI connected, internet is available

Reminder board

Reminder icons will work while receiving emails, WIFI is open, you can open the reminder board to view the detailed information.

Open the reminder board

When the reminder column shows new reminder icon, please hold

the column and slip down your finger, then the reminder board is opened.

3 Quick Start Guide

3.1 Keys Function

Keys Function Description:

Power button	Short press to sleep/wake up, long		
	press to startup and shutdown.		
Volume + (up)	increase the volume		
Volume - (down)	decrease the volume		
HOME button (home)	Click it in any interface will return to		
	main interface.		
\leftarrow	click it in any interface will return to		
Back button (back)	previous menu		
	This button will display in menu		
Menu button	interface.		
display recently-used	diaples, recently brouged history		
application	display recently browsed history		

3.2 Startup and Shutdown

Startup

Long press POWER key for three seconds, you can enter into

startup picture. The system enters into screen lock status, please unlock it.

Shutdown

- 1. Long press POWER, it will popup shutdown window.
- 2. Shutdown window contains mute mode, airplane mode and shutdown three options/
 - 3 . Click Shutdown is the last step.

3.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

- Screen will be closed on its own if no operation happens for some time to save battery power
- When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.



Picture 3.1

3.4 Usage of Touch Screen

TABLET PC operating methods

There are below methods to view the main screen, menu and application procedure in your TABLET PC.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some items(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal

movement by finger.

Before you pull, you need to hold it with strength until you pull it into the position you want.

Rotate

For most pictures, you only need to rotate the TABLET PC sidewise to change the screen direction from horizontal to vertical. For instance, when you are typing words, and watching movies.

3.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.



Picture 3.2

1	Search	2	Voice search

3	Return	4	Home
(5)	View recently-used	6	Notice column
	application		Notice column
7	Remind Message	8	Time
9	Battery volume		

The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 3-2.1.



The shortcut icons management in desktop application.

The system below Android 4.1 have the function of creating folder in desktop, then put the icons into the folders. Android 4.1 system makes the function of creating new folder become much easier. Operations are as below:

- 1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture 3-2.2.
- 2. Then click the overlaid icons, the applications can be folded, as Picture 3-2.3.

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similar with Apple IOS system), the icons position can be changed through long press.



Picture 3-2.2



Picture 3-2.3

Remove the icons in desktop

- 1. Long press the icons need to be removing, then on the right above of the screen, it will appear Remove icons.
- 2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

- In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
 - 2. Click the gallery or wallpaper gallery to select the wallpaper.

Voice search

- 1. Touch microphone icon <a>L
- 2. Choose in the Google selection according to your own need.
- 3. Set the language you need in voice search window, and click confirm
- Speak to the micro you need to search, the browser will open the search result list.

Note: before voice searching, please make sure your internet is well connected

3.6 Visit Application Procedures

Click in Picture 3.2, enter into main interface as Picture 3.3, choose the application procedure you want to visit.



1

① Return to home page

3.7 USB Connection

TABLET PC storage configuration

Before transmitting documents, you have to conduct storage configuration for your TABLET PC:

- Connect the TABLET PC and computer by USB cable, the reminder column will show the remind information.
- Open the reminder board; please view the TABLET PC status and reminder to learn how to open the board.
- In the reminder board, click the "USB Connected", it will as below Picture 3.4, then click "open USB storage configuration".
 - 4. Now the USB is connected successfully.



Picture 3.4

Copy the document into memory card

- 1. Connect the TABLET PC to computer with USB cable.
- 2.As TABLET PC storage configuration, it is connected with computer successfully.
- 3. Open the "My computer" in your computer, check the items in "removable disc".
 - 4. Copy the documents you need into "removable disc".
- After copying finishes, click "shutdown the USB storage configuration" to uninstall.

Notice:

- 1. When the TABLET PC is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the TABLET PC. Only after you detach the USB cable, you can view the memory card in the TABLET PC.
- Before copying, please confirm there is SD card in TABLET PC and it can be read.

3.8 Typing words

Use the screen keyboard

When you start the procedure or choose the words or numbers edition, it will show the screen keyboard. The keyboard contains below typing options:


- 1. Android keyboard
- 2. Google Pinyin

Choose the typing method you want

- 1. Click Setting procedure application.
- 2. Click Language and Keyboard.
- In the text setting area will reveal all the installed words-typing methods in your TABLET PC.
 - 4. Tick the typing method you want.

Use and switch of input method

All

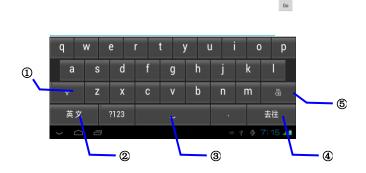

1	switch the capital and small letter
2	switch the mode of words input
3	click to insert the space
4	click input to execute
5	delete the character in the left of cursor, click and hold to

delete all the characters in the left og the cursor.
--

3.9 Operation Technique

Enter widgets interface

In the application interface, click widgets on the above of screen, or slide the screen, it will switch into widgets interface. Long press any widget to create its shortcut, then you can enter into the application through the shortcut icon.

Create application shortcut icons in the desktop

In the application interface or widgets interface, long press any icon to switch into desktop automatically, drag and hold the icon, you can move to any position in the desktop.

Remind: System will require you to make more choice and then you can active this widget. If the target position has no space, the widget won't be add in the main screen.

4 Basic Setting

4.1 Wireless and Internet

Connect Wi-Fi

- 1. In the main menu or interface, choose setting application procedure.
- Click WLAN, open wifi, TABLET PC will automatically search the available Wifi wireless internet. As Picture 4.1

Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.



Picture 4.1

4.2 Display

Adjust the brightness of screen

- 1. Click Setting application procedure.
- 2. Click display, choose brightness.
- 3. When the brightness setting board popup, drag the portlito to adjust the brightness volume.
 - 4. Click OK.



Picture 4.2

Adjust the screen standby time

- 1. Click Setting application procedure.
- 2. Click Display.
- 3. Click Sleep.
- Screen standby time setting popup, choose the time you want to set.



Picture 4.3

4.3 Management of Application Procedure

- 1. Choose Setting procedure in the application procedure list.
- 2. Choose application, after entering, you can manage and delete installed applications.



Picture 4.5

4.4 SD Card and TABLET PC Storage

Check the SD card and TABLET PC available space

- 1. Click Setting application procedure.
- Click Storage.
- 3. Check the available space of SD card.
- 4. Check the TABLET PC internal storage space.

Safely remove SD card

Safely remove SD card can protect SD card and extend working life of

SD card.

- 1. Click Setting application procedure.
- 2. Click Storage.
- Click Remove SD card.
- 4. Now it is safe to remove SD card.



Picture 4.6

Remark: Removing SD card safely can protect SD efficiently and extend SD card lifetime.

4.5 Date and Time

According to the preset, system will voluntarily apply the date, zone, and time provided by internet.

Manual set date, time and zone

- 1. Click Setting application procedure.
- 2. Slide down the screen, then click date and time.

- 3. Turn off "auto setting of date and time".
- 4. Turn off "auto setting zone".
- Click Zone Selecting, then choose the zone lists. Slide down the list to view more zones.
- Click Date setting, then click upper or down button to adjust date, month, and year, click setting when you finish selection.
- Click Time setting, then click upper or down button to adjust hour and minute, click AM or PM to change morning or afternoon (there is no such selection when you see 24-hour format). Click Setting to finish.
- Click 24-hour format, switch between 12-hour or 24-hour format, the time format you choose will be used on the alarm clock.
- Click date format setting, then choose the time format you want to show on TABLET PC.



Picture 4.7

Note: If you use the time internet provided, you will not able to set the date, time and time zone.

4.6 Language Setting

- 1. Click Setting application procedure.
- 2. Click Language and keyboard.
- Click Language Selection, then choose the language you want, slide down to view more languages.

4.7 About Tablet

View the TABLET PC Status

- 1. Click Setting application procedure.
- Click About Tablet, you can view the power status, version No. and so on.

System update

- 1. Click Setting application procedure.
- Click About tablet.
- Click System update, update as steps. (Please make sure there is new version TF card in device before installation)

View system version

- 1. Click Setting application procedure.
- 2. Click About Tablet.
- 3. You can view model NO., power volume and internal version.

4.8 Fixed-time Startup and Shutdown

- 1. Click Setting application procedure
- 2. Click fixed-tine startup and shutdown.
- 3. Operate as below Picture 4.9



Picture 4.9

1	Click to enter into fixed-time startup setting
2	Click to enter into fixed-time shutdown setting
3	Open/Close fixed-time shutdown

4.9 Safety Setting


Set locked screen

Lock the touch screen by unlock icon or password to protect your TABLET PC.

Note: You should enter the password after setting screen locked.

Set unlocked picture

- 1. Click setting application in main interface.
- Click safe.
- Click locked the screen.
- 4. Choose picture in text setting area.
- 5. Click next following the remind message.
- The unlocked pattern board pop up, there are nine touch spots, connect 4 points from vertical, horizontal or diagonal direction. As Picture 4.10, move your finger from the screen when finish. The system will record your new unlock pattern.
- 7. Click continue.
- When you see the reminder, enter the unlock pattern, then click confirm.

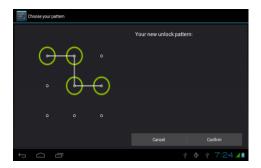

Picture 4.10

Set unlock PIN code

- 1. Click setting application in main interface.
- 2. Click safe.
- 3. Click screen locked.
- 4. Choose PIN in text setting area.
- 5. Enter new PIN code(numbers) and click continue.
- 6. Enter new PIN code again and click confirm.

Set unlock password

- 1. Click setting application in main interface.
- Click safe.
- Click screen locked.
- 4. Set password in text setting area.
- 5. Set new password(letters and numbers) and then click continue.
- 6. Enter the password again and the click confirm.

5 Multi-Media

5.1 Music

Enter into music player: in menu or desktop click music icon to enter into music player, click the music you want to play, as Picture 5.1:



Picture 5.1



1	Album	2	Song name	3	Artist
4	Album	(5)	Previous song	6	Pause/play
7	Next song	8	Random play	9	Loop play

- Drag the progress bar to adjust play progress.
- Operation of music player button as Picture 5.2

5.2 Video

- Enter video player: choose application in main menu, choose the video you want to play, as Picture 5.3
- Operation of video player button as Picture 5.4



Picture 5.3



Picture 5.4

5.3 Photo Gallery

Photo gallery application can auto search photos and video files in SD card, and photo gallery will classify these photos and videos in folder. You can apply photo gallery to view and edit photos, set the photos as wallpaper and watch the video.

View pictures

- 1. Click gallery application in main interface.
- 2. Enter into gallery, click the folder you want to view.
- Click the picture you want to view, the system will play it in full screen mode automatically.
- 4. The pictures can be zoom in and zoom out, put two fingers on the screen, then separate the fingers(gather up the fingers, the picture will be zoom in) or double click the screen.

Note: when you browse the pictures, slide left or right to view more pictures.

Edit and set pictures

When check the pictures in full screen mode, click menu key to display menu selection, you can choose the selection you need to edit and setting pictures.

Slide Show

- Open a picture, use virtual key to click menu key, display menu selection.
- 2. Click slide show, it will auto loop play(or choose button in picture folder)

Crop

- 1. Click menu key to display menu selection.
- 2. Then click crop, click and drag related area to adjust the cropper.
- 3. Click cropper and drag it inside and outside to adjust the image.
- 4. After adjust the size you want, click crop.
- 5. If you wish to give up to crop, click cancel to return to picture browse.

Edit

- Click menu key, display the menu selection.
- 2. Click edit.
- 3. Adjust the brightness, style, color, antialias setting in selection.

- 4 Click save
- 5. If you want to give up edit, click return key, click not to return to picture browse.

5.4 Camera

In the main interface or desktop, click camera application procedure enter into camera



- Operation of camera button as Picture 5.5
- Switch camera: choose Menu key, click switch front/back camera,

as Picture 5.5



Picture 5.5

	View the		Switch		Click it to take
1	pictures and	2	front/back	3	Click it to take
	videos		camera		pictures

4	Sub menu	(5)	Camera mode	6	camera shooting mode
7	Full screen play mode.				

5.5 Connection of HDMI

Use HDMI connection, set HDMI output method; TABLET PC connection and high definition TV, play the video in full screen mode, the resolution can reach 1080P.

Remark: HDMI connection is required to a standard HDMI connection to connect. High definition TV should be adjusted as HDMI output.

5.6 FM Radio

Click in the main interface or desktop to enter into FM radio interface:

• Radio button operation instruction as Picture 5.6:



Picture 5.6

1)	Open	2	Enter into	3	Current
	speaker	(2)	channel list		frequency
4	Save button	(5)	Play/pause	6	Next channel
7	Previous				
	channel				

RDS setting: click Menu key in interface, click button, enter into RDS setting as Picture 5.7, and choose the selection you want to add




Picture 5.7

- Search channel: Click "Menu" in the main interface, click search button, it will start to auto search channels, the searched channels will be saved in the channels list
- Save channels: Click button in the main interface to save the channel, and the channel will be saved in channels list.

6 Communication Function

6.1 Phone

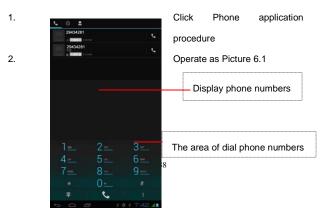



Picture 6.1


6.2 Text Message

1 . Enter into main menu, choose application procedure.





Picture 6.2

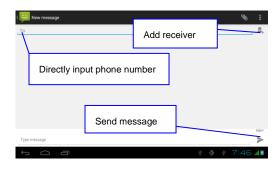

Picture 6.3

6.3 Contact List

Click Contact list in the main interface, enter into the contact list as Picture 6.4



Picture 6.4

- Search contact: click button, enter into search function
- Add contact: click button, enter into add contact interface.

7 Internet

7.1 Browser

In case of Wi-Fi or mobile internet is connected well (Please refer to Chapter 4.1 for wireless and internet setting), click IE browser in the main menu or desktop to enter the IE interface, as Picture 7.1



Picture 7.1

1	Save bookmark
2	Search
3	view bookmark and history
4	Address column

Click address bar to input the website, click start, enter into related

webpage, then you can browse the website information, as Picture 7.2



Picture 7.2

7.2 Email

Email application procedure contains email setting guide, you can add the external POP3 OR IMAP email account of normal web email service provider (For instance, Yahoo, Gmail, Hotmail and 163),as Picture 7.3



Picture 7.3

a. Email Setting

- 1. After you click the sending email icon , you can see the email setting guide, which can help you to set.
 - 2. Input your email address and password.
 - 3. Click "Next step" button, choose your email type is POP3 or IMAP.
 - Click "Next Step" button to check whether the email box servicer
 can receive or send emails
 - Input the email account and display the email subject, and click finish.
 - If the email box is available, you will enter into your mail box automatically.

b. Delete the email account

You can delete set POP3 or IMAP email account from your TABLET PC




- 1. Enter into your mail box.
- 2. Press Menu key.
- 3 Click Account
- 4. Press the account you want to delete.
- 5. Click confirm to remove.

c. Send E-mail

1. Click to display your mail box.

- Click the inbox, it will refresh the new emails automatically; click it to read new email.
 - 3. Press Menu key. Menus will popup.
 - 4. Click Edit to enter into new email editing interface.
 - 5. Input the receiver's email address.
 - 6. Input the subject and email content.
 - 7. If you want to add attachment, click menu key, the menu popup.
 - 8. Click "Add attachment" (pictures, video).
 - 9. Click "send" to send the email out.

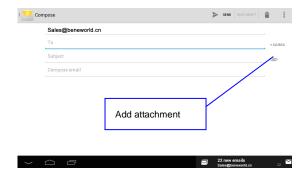

7.3 3G Internet

- 1. Turn off the device and plug in 3G card.
- 2. Turn on the device.
- Unlock to enter into system, make sure the TABLET PC can search signal.

(Note: 3G internet can't be used with wifi internet at the same time, the system is defaulted to use Wifi internet. If you wish to use 3G internet, please turn off wifi internet.)

8 GPS Function

8.1 GPS Navigation

Map of the third parties is required for TABLET PC internal GPS satellite signal receiver positioning, after installation the device can accurately implement traffic real-time navigation, meet the needs of outdoor navigation.

9 Other Application Procedures

9.1 Clock

Click Clock procedure, enter into below interface as Picture 9.1.

There are clock, picture, music and homepage buttons.



Picture 9.1

9.2 Calculator

- 1. Click
- 2. Enter into the basic board of calculator.
- 3. Soft touch the numbers or operator in calculator to calculate.




Picture 9.2

9.3 File Manager

File manager will copy, cut, delete, rename the documents or the folder in the TF card, it also will share the files, install apk etc.

In the main menu or desktop, click the document manager icon et to enter into documents manager.



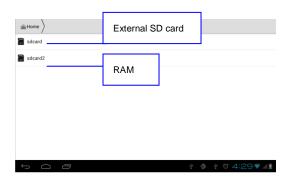

Picture 9.3

a. Copy, cut, delete, rename the files and folder: choose the file or folder, long press the file or folder to enter into the interface as Picture 8.4, you can operate the file or folder.



Picture 9.4

b. Choose any file, long press it, it will popup "share", choose the share way you want in the list



Picture 9.5

- c, Install apk file :Choose the file suffixed .apk in the file manager, you can install the third part software as reminder.
- d. Build new folder: Choose the menu you want to build the file, click Menu key, choose new folder, you can build new folder as reminder.

9.4 Recorder

In the main interface or desktop, click recorder icon to enter into record interface, click record key to start record. Click Stop key to stop recording. Click Play key to play the recorded sound. The system will auto remind you to use or abandon this record, please

choose it manually.

Play the record: choose the video player to play the recorded sound, choose the recorded sound in the source manager, and click it to play.



Picture 9.6

10 Installation of Procedures

10.1 Installation

Install the third party application procedure

You can gain the third party application procedure which match the Android system from internet, and install it by yourself in TABLET PC. Copy the application procedure into SD card, and insert in the TABLET PC.

 Click "file manager" application procedure; choose the application procedure you need to install.

- Hold the application procedure you need to install.
- 3. It popup install, click install apk.
- 4. Finish the installation as guide, it will operate.

Note: The third party procedure searched from internet to use on the system are all suffixed with .apk.FDS

10.2 Uninstall

Uninstall application procedure

- 1. Click setting icon in main interface.
- Click manage application procedure, list all the application procedures installed in the system.
 - 3. Click the APK you want to uninstall, click uninstall.
 - 4. Click confirm to finish un-installation.

Skill: The procedure manager installed by system has many convenient methods to uninstall, after opening procedure manager, click uninstall, it will list all the application procedures installed by system.

11 Troubles Shooting

1. The first startup of TABLET PC is slow

After the TABLET PC system upgraded, the first startup need to install the pre-installed application softwares, the lead time is around 2-3 minutes, the startup afterwards will be much quicker.

2. TABLET PC can't connect Wi-Fi

• Make sure the wireless router of internet service can work in

normal

- Ensure the TABLET PC and wireless router in certain distance,
 and no wall or other barrier between them
 - Ensure the user name and password both correct.

3. TABLET PC feels hot

When many application procedures are used in meanwhile, or the brightness of screen open to the lightest or under charging, TABLET PC may feel fever. It is normal.

- 4. Email can't be set or Registration of application procedure.
 - Ensure your internet is well connected.
 - Make sure your email setting way is correct.
 - Keep your system time and local time consistent.
- 5. The system is abnormal and can't work.

When you install some third party application procedure, it may cause abnormal work, you can press Reset key(next to power port) to reset the system.

- 6. The webpage can't be opened
- Please keep the distance between from route to TABLET PC in effective range.
 - Please restart WIFI and try again.
- 7. TABLET PC works terribly slow sometimes

It is normal phenomenon. Please turn off some application you don't

need in advanced task management, or uninstall some third party application to release more system resources.

Appendix 1

Product Parameters:

Items	Details	Description		
	Item	Tablet PC		
	CPU	MTK8377		
	CPU Frequency	1GHz		
	DDR3 RAM	512MB DDR3		
	NAND FLASH	4GB		
	Operation System	Android4.1		
Basic	Internet Mode	GSM		
Parameters	Internet	WIFI/2G/3G		
	Camera	Front 0.3MP, Rear 2.0MP		
	USB port	MINI		
	battery	3100mAh		
	AC adaptor	Input voltage DC 5V,current 2A		
	Memory card	Micro SD card, Maximum storage		
	Welliory card	32G		
Basic	GPS Navigation	Built-in GPS satellite signal		
Functions	O. O Havigation	receiver can search the fixed		

		position accurately		
	GSM/3G communication	Built-in GSM/3G modules, you can achieve wireless communication function through SIM card		
	Bluetooth	Built-in Bluetooth module Support FTP file delivery, you can share various fascinating documents in vicinity.		
	G-sensor	Switch from crosswise and erect screen freely and support all kinds of gravity-reacted games, which can experience real game enjoyments.		
	FM Radio	FM can bring many channels for your option.		
	Video play	Support 3GP、MP4 format, with maximum resolution of 720*576		
Application procedure	Music play	built-in music player, support MP3/AAC/AMR/WAV format		
procedure	Games	support installation of Android third party games		

	land to sate and	Android keyboard, Google Pinyin		
	Input method	input method		
	Picture view	Support JPG、BMP、PNG、GIF		
		format pictures view		
		Support office (word, excel read		
	OFFICE software	and edit),support PDF viewer		

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the

limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC RF Exposure Information and Statement

The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: BW0767 (FCC ID: 2AANCBW) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use atproperly worn on the body is 0.936W/kg. This device was tested for typical body-worn operations with the back of the handset kept 0 cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 0 cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly.

The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided