



Turning The ADJUST Dial

When the ADJUST dial is turned clockwise HIGH will flash and 100% will be displayed.

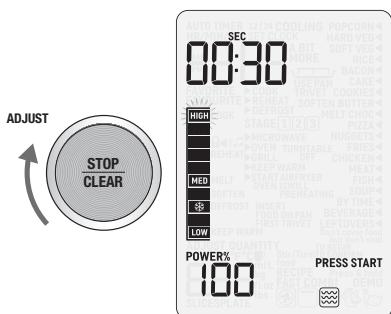

When the ADJUST dial is turned counterclockwise the POWER LEVEL % will start to decrease from 100% to 10%, in 10% increments.

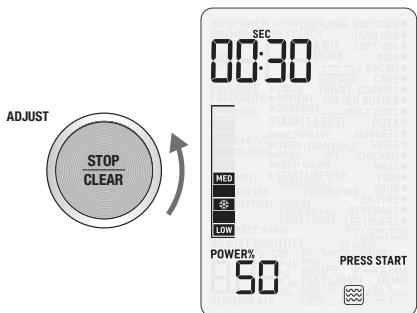


DYNAMIC POWER ADJUSTMENT

To suit your personal preference, adjustment of both time and power is available when using the microwave in manual setting.

Dynamic power adjustment cannot be used on all SMART COOK settings or on SMART DEFROST setting (except when using DEFROST BY TIME).


An example of dynamic power adjustment can be seen below while using a SMART COOK function. Press FOOD MENU button and select COOK on the menu. The microwave will beep once.

Turn TIME>Select dial to select food type.

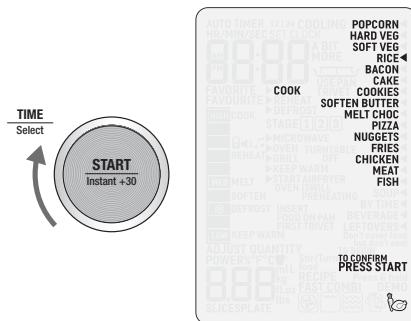


As the TIME>Select dial is turned the arrow shifts and points to what food type is selected. In this case RICE is selected.

Once you have chosen FOOD TYPE, turn the ADJUST dial to adjust quantity or weight.

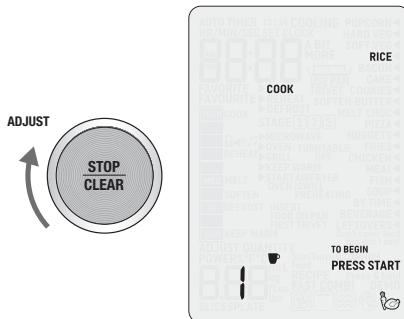

Press START to begin cooking.

Using the ADJUST dial the power level can be increased or decreased at any time during the cooking program.

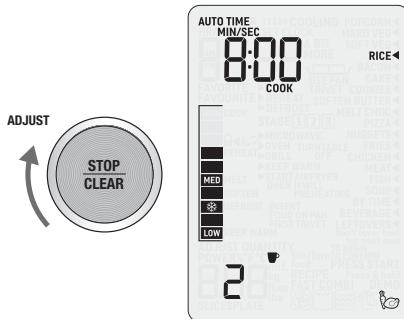



NOTE

Adjusting the power level while heating does not affect the time.

+30 SEC INSTANT START

Press START/Instant +30 button to begin cooking instantly for 30 seconds with 100% microwave power. Each additional press will increase the cooking time by 30 seconds.

WHEN COOKING IS FINISHED

At the end of any cooking cycle, the microwave will play the designed cycle finish tone, and the word End will flash on the screen.

The word End will stay flashing on the screen for 5 minutes or until the door is opened.



STOP/CLEAR

Press STOP/CLEAR once to pause the current function.

Press twice to clear and return to default screen.

When in the default screen, press STOP/CLEAR to show the clock.

To return to the default screen press any button, turn any dial or open the door.


A BIT MORE™ BUTTON

Use A BIT MORE™ when cooking is finished and your food is not quite cooked or hot enough.




For example:

Press the FOOD MENU button.

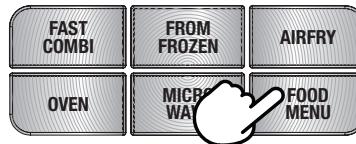

Turn the TIME>Select dial to select SOFT VEG.

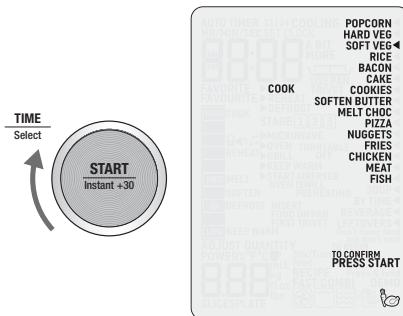


Press START to begin cooking.



Cooking process ends



At the end of the cooking process, if you think the food requires additional cooking time, you can select the 'A BIT MORE™' setting. Close the microwave door and press the A BIT MORE™ button to add A BIT MORE™ cooking time. The timer will start to count down.

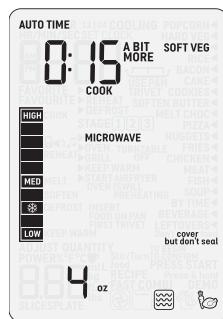

NOTE

The microwave will save this setting for future use. Pressing FAVORITE button next time will display your saved FAVORITE setting on the shortcuts panel. To change your FAVORITE setting at any time, repeat steps 1 and 2 above.



NOTE

As soon as A BIT MORE™ button is pressed the microwave will start cooking.

If A BIT MORE™ is pressed and there is no previous food menu or SHORTCUT setting selected, the microwave will default to the basic mode and add 20 seconds at 100% power.

KEEP WARM

Keep Warm allows you to stop food going cold while completing other tasks. This program operates the oven at 160°F/70°C, from 5 minutes to 2 hours. The default time is 10 minutes.

To use the Keep Warm setting, open the door and the press KEEP WARM button

FAVORITE

The FAVORITE setting will save your most used and favorite cook, reheat or defrost setting.

At the press of a button, your favorite program can be duplicated time after time.

To set the microwave to your favorite setting, open the door and press and hold FAVORITE button

Press START to begin your favorite setting.



Cooking Functions

Depending on the FUNCTION and the FOOD TYPES selected, the MICROWAVE, OVEN, GRILL, AIRFRY or FAST COMBI icons will be displayed on the LCD SCREEN.



Oven



Grill



Microwave



Airfry



FAST COMBI




Fast Combi



NOTE

Go to our website breville.com to discover many recipes created for the Combi Wave™ 3-in-1 Microwave oven.

FAST COMBI

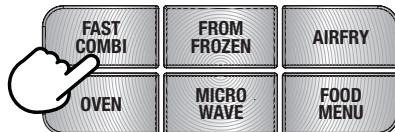

The FAST COMBI function is designed to cook your favorite dishes faster than in a traditional oven. The FAST COMBI function will alternatively use the microwave, the convection oven and the grill in order to reach the selected cooking temperature. This combination of the three functions helps the microwave reach the cooking temperature more quickly than a traditional oven, and maintain the temperature inside the cavity, for an optimal food result.

The FAST COMBI setting is ideal for cooking gratins, bake dishes, roast vegetables or different types of meat. Refer to the 'Instructions & Tips' sticker on the microwave.


For best results, it is recommended to use the provided Combi Crisp pan except when cooking foods that require a specific baking dish or pan. Place other dishes or pans on the provided trivet for best results. Depending on the amount of food being cooked, use the Combi Crisp Pan in low or high position.

Press 'FAST COMBI' button on the main interface to enter FAST COMBI function. Turn the START/TIME dial to select the cooking time, from 1 to 90 minutes. Then turn the ADJUST to select the cooking temperature, from 300°F to 450°F.



At the end of the cooking program, allow the food items to stand for 5 minutes before removing and serving.

FROM FROZEN

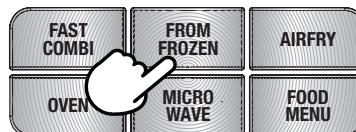

The FROM FROZEN function is designed to perfectly cook different types of meat, from frozen to a perfectly cooked result. The function is using the microwave, the convection and the grill alternately in two different cooking stages.



NOTE

To use this function, it is recommended to season and marinate the meat before freezing. Place the food item into the Combi Crisp pan, in the low position.


Press **FROM FROZEN** button on the main interface to enter **FROM FROZEN** function. Select the desired type of meat between chicken, meat and fish by turning the **START/ TIME** or the **ADJUST** dials. Press **Start** to select.

Turn the **ADJUST** dial to adjust quantity or weight. Minimum amount is 8oz (225g) and maximum amount is 2 lb. (900g). Press **START** to begin cooking.

Halfway through the cook program, the oven will beep and **STIR/TURN** will flash (except for the **FISH** setting). Open door or press **STOP/ CLEAR** button once to pause. Turn the food items **OVER** and press **START** to continue.

During **FROM FROZEN**, the different cooking stages will be displayed on the screen.

The first stage is designed to defrost the food, by using microwave only.

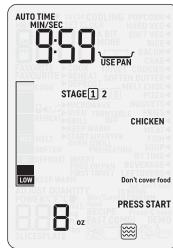


The second stage is designed to cook food using the suitable function for the food type.



Depending on the amount/weight selected, the final cooking time will vary from 16 to 60 minutes.

AIRFRY

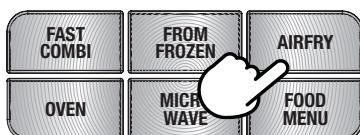

The **AIRFRY** function is designed to airfry food items and get crispy golden results in the microwave oven, thanks to the Element IQ® system. Refer to the 'Instructions & Tips' sticker on the microwave.

Press **AIRFRY** button on the main interface to enter the **AIRFRY** function. The LCD screen will show 'AIRFRYER WILL PREHEAT. INSERT PAN'. Place the Combi Crisp pan in high position inside the microwave for the preheating cycle.

Turn the **START/TIME** dial to select the cooking time, from 1 to 60 minutes. Then turn the **ADJUST** to select the cooking temperature, from 400°F to 450°F.



At the end of the 3-minute preheating cycle, an alert tone will sound and the screen will indicate 'INSERT FOOD ON PAN'. Open the door to place the food on pan, and press **START** to continue.

Lay the food items flat in a single layer.



Halfway through the cook program, the oven will beep and **STIR/TURN** will flash. Open door or press **STOP/CLEAR** button once to pause. Turn the food items and press **START** to continue.