The user instructions

TRX_A21_KIOTO

Matters needing attention

- This instruction manual to guide you the function of the use of mobile phones.
- The company follows the strategy of sustainable development, thus keeping the product function, interface and shape changes without informing the user rights
- Please follow the normal steps to shut down, boot mode or are charging, please don't take the battery discharge, to prevent data loss caused by poor results. Please install Micro SD card in the correct direction, to avoid damage to the card or mobile phone
- This product support the official system upgrade, if you brush or third-party Rom system adopts the cracking method to modify system files, may cause the product failure and damage or loss of data, a certain security risk. These actions in violation of the "sharp auspicious day three packs of service agreement", and will make your warranty.

Safe and effective use of guidelines

- In order to a safe and effective to use your mobile phone, please read carefully the following information before using a cell phone. The following Suggestions will help you to comply with the warranty terms and can greatly extend the life of the cell phone.
- To avoid damage hearing, before put ear phone, please reply or to reduce the volume. The use of mobile phones, chargers and other accessories
- Where there is sign hint turn off the phone or in the place where it is prohibited to use mobile phones (including airports, gas stations and hospitals, etc.), please turn off the phone.

Please set the cell phone and all related accessories, keep out of reach of children.

- , please do not keep the cell phone and its related parts in contact with the liquid or in damp environment.
- , please do not placed the phone in environment temperature is too high or too low.
- , please do not placed the phone in the flame, lit a cigar or cigarette.
- , please do not give phone color lacquer.

Bending, please do not drop, throw or mobile phone.

- , do not use mobile phone and computer disks, credit CARDS, travel card, or other metallic objects together, otherwise the information stored in the disk or a credit card may be affected by mobile phone.
- , please do not put mobile phone or battery in temperatures may exceed $60\,^{\circ}\text{C}$, such as after the glass window or direct sunlight.

Thunderstorm weather, do not use mobile phone, so as to avoid lightning or other damage.

Without authorization, please do not attempt to remove the phone, please do not repair mobile phone and accessories.

- , do not use any mobile phone battery, charger manufacturers, to avoid potential dangers.
- , please use the small wet or anti-static cloth wipe the phone. Do not use dry or with electrostatic cloth wipe the phone.
- , please do not use chemicals or compounds grind arenaceous cleaner, otherwise it

might damage the casing.

- , such as liquid crystal display parts belong to fragile easy cut parts, note, please do not let the phone hit or strong extrusion. Do not use mobile phones and sharp objects placed together, avoid scratch or mobile phone screen.
- , if the phone, batteries, chargers and other accessories not normal operation, please carry mobile phones and related accessories to the nearest authorized by the company's maintenance department, maintenance department staff will assist you, arrange maintenance for them if necessary.

Inflammable and explosive area

In inflammable and explosive area (such as gas stations) or its surrounding, please turn off the phone, and comply with all safety signs and instructions. The use of mobile phones in such places will produce slight spark or a radio, may cause fire or explosion.

airplane

Before the plane takes off, in order to prevent the interference plane communication system and also does not affect you to day experience the joy of the auspicious mobile phone, please use the flight mode, and please do not close the flight mode in flight. In the plane took off without the use of mobile phones should be in accordance with the safety rules ask for the license of the crew or you turn off the phone directly, and pay attention to whether or not you have set the timing boot, avoid to be disturbed during the flight of aircraft system the signal.

Hospital

Enter the hospital, please turn off the phone and comply with all safety signs and instructions. Waves emitted from mobile phones in such places will affect the normal work of the electronic medical equipment, and may affect the work of a pacemaker, endanger the patient's life.

Personal medical devices

• Mobile phone may affect the heart pacemaker, hearing AIDS and cochlear implanted or other implanted devices. Please avoid placing the phone on the breast pocket. When answering the phone, please put phone with pacemaker different sides of the ear. Always keep the minimum distance between mobile phone and pacemaker is 15 cm. If you suspect the interference, please immediately turn off the phone and move it to the remote location, and contact your heart specialist, for details. For hearing aid and other medical devices or implants, please consult the manufacturer details.

Driving in

• When driving should always be alert and in driving calls, please leave the driveway and parking. If driving terms specified in the device can use a hands-free calls, it is recommended that you use only applies to your phone "in-car hands-free devices.


Child safety instructions

• All mobile phones and related accessories, please keep out of reach of children. Please do not let the children to use mobile phones or the related accessories, children may cause damage in themselves or others, and could accidentally damage the mobile phone or related accessories. Mobile phone or its accessories in a few small parts could be removed, if be swallowing will be dangerous.

Waste batteries

- After the battery scrap, not as an ordinary city garbage disposal. The correct processing methods to consult the local regulations regarding the handling of waste electronic products
- The use of original accessories
- The charger: connect the ac charger and product logo in the same specified power supply. To ensure the wire position correctly, will not be damaged or pressure. To avoid the risk of electric shock, please before cleaning this device, unplug it from the power source. The charger is banned in outdoor or in damp environment use. Do not replace the charger wire and plug.
- Battery: charge can only be between 0 °C to + 45 °C temperature. Please pull out the charger after charging or charging cable. When the mobile phone when not in use for a long time, please take out the battery, and place the battery in insulation, dry and children can't touch. Only allowed to use the company's original charger to recharge the battery. Don't squeeze the battery, don't the battery short circuit. Don't put the battery into the fire, so as to avoid explosion
- Mobile phone in charge or for a long time will be hot in use process, which belongs to the normal phenomenon, will not affect the service life of the equipment or performance. If the phone is overheating, please stop the use of mobile phones for a period of time.

■ Your mobile phone

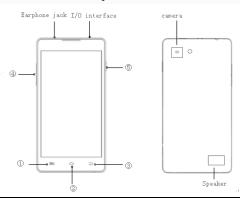

According to the key	Function
menu	Click the pop-up menu function interface.
Home button	Click on the return to the desktop application interface
Return key	To return to the interface of highest level
The volume button	Adjust volume, ring tones, music and video of the
	volume.
Power/lock screen	Under the conditions of normal use bright screen short press,
button screen	turn off the phone backlight; A dormant state under short
button	according to wake; Long press switch machine.

■ Rear cover and battery

Take down the back cover: one hand hold the fuselage side; The other hand in picking a cock the back cover

Take the battery:

Hand grip on the fuselage side; Another hand upward pull (or pull, there are only shake handshandle) battery

0

Note: replace or take down the battery must be shut down before!

Battery charging: insert the charging cable is corresponding to one end of the phone and mobile phone in the I/0 interface; The other end of the charging cable, connected to the travel charger, and insert the plug into the power socket, can give mobile phone battery. After charging, please remove the plug from the power outlet. If the battery is not in use for a long time, will gradually discharge, before use must recharge, can normal operation.

Note: the other end of the cable insert the USB port of electricity, also can charge, but the process is slow.

Note: the battery in the tray icon to view the power information. When the battery is insufficient, cell phone will automatically shut down, please recharge the battery. If a serious shortage of electricity charge, may not be immediately show charging status (need to wait for a while will display). In the process of charging the use of mobile phones to play games such as may lead to cell phone low battery shutdown.

mobile phone card and SD card: your mobile phone can be in the absence of phone card for certain operations, communicate only through a mobile phone card to complete. Without mobile phone card, if you position in the range of network coverage, this machine can choose to register for any network, in case of an emergency can call emergency telephone operator network support, the specific number please consult network operators to support.

Note: please pay attention to mobile phone card, do not bend or scratches, also do not contact with electrostatic or flooding, This phone is dual SIM gets stuck, card slot was 1 W 3 G network card (compatible with G CARDS), unicom 3 G card to insert W card slot, according to pan on the label can read the 3 G network, corresponding card slot 2 G network CARDS. Phones do not support hot plug, plug the phone card and the SD card before, please remove the cable and turn off your phone.

switch machine: the phone is in a state of shutdown, long press the power button boot; In mobile phone boot state, long press the power button will pop up in the options menu, select "shut down".

- Input method is introduced: this mobile phone provides you with handwritten input, English letters, words, such as a variety of input methods. Click on the "keyboard" logo in the function bar can switch input method. The cursor position, indicating the current input in input area.
- Address book: the address book has the function of managing contacts in you can store the name of the contact person, telephone number, E-mail address and other personal information. Information: you can send and receive short MMS.

dial: direct input in the dial number, choose the corresponding mode dial a—phone. When answering the telephone, call slip "answer" button to the right. Refuse to answer the phone: when sliding to the left "reject" button to hang up the phone.

Remind: insert two card, answer a phone can't satisfy the two CARDS at the same time, when a card is in the conversation, when somebody call another card, the other party can hear "you dial the user temporarily unable to connect" voice prompt, such as the case has nothing to do with operator network status. Single only because mobile phones for single chip design, can significantly improve standby time, reducing power consumption. You are advised to consult the local operators, opened "leak words remind", "to remind", "secretary service" business such as to avoid the above scenario dropped calls without a reminder.

Phone Settings: you can set the call transfer and call waiting, etc.

Note: the specific service consult your network operator.

call records: store your allocated and call records.—

speed dial: you can set the Numbers, click on the entry can be— set aside.

the Internet: can connect to the network, allowing you to enjoy— free anytime and anywhere, high speed, fast Internet experience.

Note: the use of network access function, please confirm the network service provider support and you have opened the business, details please consult the network service provider.

email: you can set the email address and email easily.—

to-do list: can quickly remember, and remember to group— management.

alarm clock time: can set the alarm clock to remind of time, — remind, repeat cycle, etc.

calendar: can build schedule, query the date, etc.—

video: can undertake management, browse and play video etc.—

music: can choose songs, playlists, album or artist to classify— view. In the process of play, can pause/play, up/down a, adjust volume, set the circulation pattern and so on.

gallery: can undertake management and operations such as browsing— images.

: camera can take photos and video. —

record: can record audio files, replay the recording files,— delete, and other related operations.

system update: by operators of Internet traffic data, such as— WLAN wireless network for system update.

Tip:

- 1, the system update process will consume a certain amount of traffic, consult your network operator specific flow rates.
- 2, system update over a period of time, in the process of updating, please don't power outages.
- 3, the system upgrade will not affect your data in a mobile phone.
- 4, system update will bring you a better experience, open system automatically upgrade!

Settings: the Settings, the scene mode, commonly used functions— such as input method can be set up.

WLAN: you can do this by using WLAN fast access to the Internet and download the related data. Open the WLAN and scan. If already open WLAN, need to manually scan for available WLAN network; Click on the list of a network to connect; If required, enter the network information such as password, then click on the links.

Tip: in order to save battery power, please shut off when not using WLAN wireless network; If you are in the wireless network signal coverage area, and on the function

of WLAN, mobile phone will be automatically connected to the WLAN network connection available before.

Bluetooth: this function is a close range wireless communication technology, information can be exchanged at close range, if the device between obstacles, effective distance may be shortened. Select the bluetooth, start the bluetooth wireless and scan. If bluetooth is open, need to manually scan for equipment; Click search to a device matching connection; If necessary, click the pair to establish a secure connection with the device.

Tip: you can set the device detects a gender, choose whether to let a nearby bluetooth devices can be detected.

More: in wireless and networks, you can to feature set network, access points and other options.

Scene mode: you can use according to the different environment set up corresponding contextual model, can also carries on the individuality Settings, and so on. Can also through the drop-down tray, click scene mode icon to quickly switch scene mode.

Voice: can be set and certain operations for prompt feedback.

Showed that the brightness of the phone can be, standby time, etc.

Storage: you can view the total capacity of storage devices and available space. Hint: you of the available storage space will be less than nominal capacity, this is because the operating system and application takes up part of the built-in mobile phone storage space.

Application: can be managed and delete application installation, check and control the currently running services operation.

Account: you can change the sync automatically set to synchronize account or management.

Card lock Settings: phone card PIN is when you buy mobile phone card provided by the network operator. After setting card lock, need to enter the correct PIN to register to the network.

Note: the PIN number three times input error, mobile phone card will be locked, enter the PUK code to unlock, please consult the network operator.

Can restore the factory Settings: according to the prompt the phone back to factory Settings.

file management: to manage, edit, and delete files and folders.—

backup and recovery: this mobile phone provides you with backup— data backup and application. Can backup contacts, information such as mobile phone data.

tools used: this cell phone support, belonging to the function— such as calculators.

• Cost prompt

Respect of sharp auspicious day users: 1, the mobile phones android system of wireless Internet, more like a computer, a lot of function will produce data traffic costs, such as the Internet, in order to make you more enjoyable experience this phone, you are advised to contact operators — traffic monthly plans.

2, in order to make it more convenient for you to use a mobile phone application, some applications in the first time to use when sending SMS a registration, this is because have to register before you can achieve its powerful function, only charge the cost of an ordinary SMS, and won't leak your personal information. SMS charges collected by the operator by specific texts for consult operators.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - -- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The highest reported SAR values for head and body are below:

Head: 0.297W/kg(1g); Body:0.631W/kg(1g) respectively.

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.