

US Print Guide | Bear - Glass Break Sensor

Glass Break Sensor for Ring Alarm

Quick Start Guide

In-app Setup



1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, open the menu. Tap **Set Up a Device**, then tap **Security**, tap **Sensor**, and find the **Glass Break Sensor**.
3. Follow the in-app instructions to complete setup.

Installation

We suggest mounting the Glass Break Sensor at least 7' (2m) off the ground, and close to your glass windows and doors.

- **Wall.** Use the included mounting tape, clean the area, then peel the backing and stick the Sensor. Press it to the wall and hold for 20 seconds to make sure the tape is securely attached.
- **Ceiling.** Use the included screws and anchors. First remove the back cover and set the Sensor aside. Screw the back cover to the ceiling. To mount the Sensor, twist it onto the back cover, and secure it in place.
 - 2 screws included: 3x21mm
 - 2 anchors included: 5x25mm
- **Shelf.** If mounting it on a shelf or piece of furniture, it does not need to be attached. Just place it out of reach where it won't be knocked over.

(Illustrations)

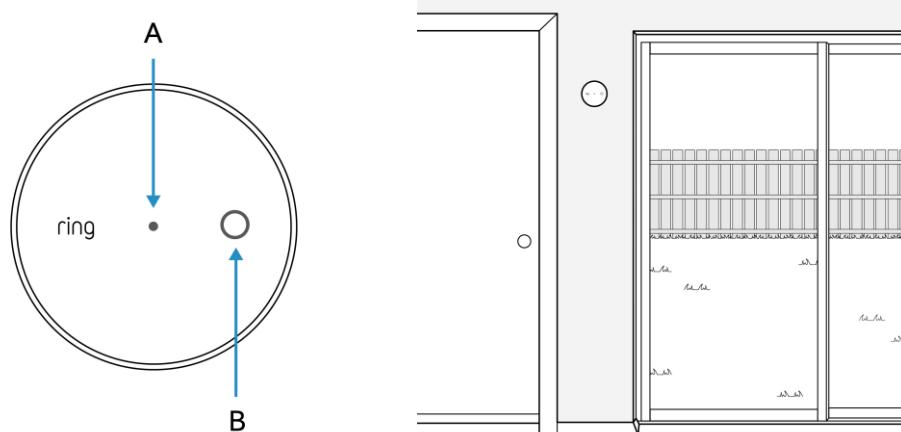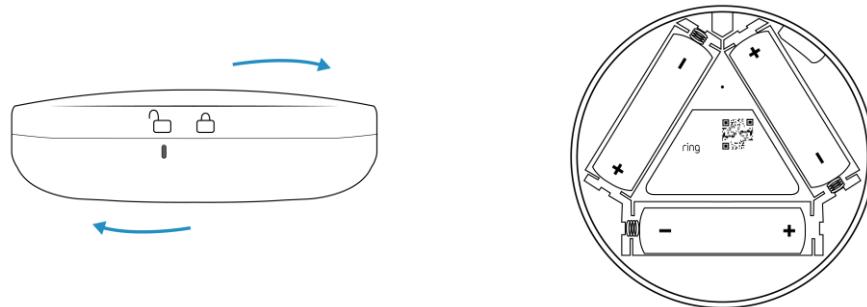

A: Microphone
B: Setup button

For additional help, visit: ring.com/help
Find online manuals at: ring.com/alarm-manual
For Z-Wave technical instructions, visit: ring.com/z-wave

@2021 Ring and all related logos are trademarks of Ring LLC or its affiliates.
Last updated: 04/13/2021.