
WigWag Filament Quick Start Guide



SETUP

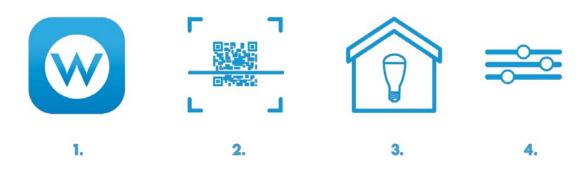

- 1. To get started, simply open the WigWag App on your mobile device
- 2. Scan the QR code found on the WigWag Filament bulb
- 3. Select a location for the Filament bulb. (e.g. bedroom, kitchen, etc)
- 4. Using your mobile application, control the brightness and color of the bulb
- 5. Mobile app will communicate with the bulb(s) through either a WigWag Relay or third-party device, like home router, with built-in Zigbee capacity interactively for precise control.

wigwag

WigWag Filament Quick Start Guide

Safety information

Caution: This device can get very hot with prolonged use. Like most light bulbs, do not touch until given a proper amount of time to cool off. Keep away from fire and liquids.

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

Copyright © 2014 WigWag Inc

All rights reserved.

WigWag assumes no responsibility for any errors which may appear in this manual. Furthermore, WigWag reserves the right to alter the hardware, software, and/or specifications detailed here at any time without notice and does not make any commitment to update the information contained here. WigWag products are not authorized for use as critical components in life support devices or systems.

No part of the contents of this manual may be transmitted or reproduced in any form or by any means without the written permission of WigWag, Inc.

