

PROSCAN

User Manual



PLT7100G (B)

Key points :

This manual includes security measures and correct operating methods. For personal safety, please make sure to read this manual before using. Thank you!

- ◆ The machine adopts capacitive touch screen, you can just touch it by finger or click with capacitive pen for operation. (Never use the sharp objects to click the screen, or the touch screen may be damaged).
- ◆ Do not put the device at any high temperature, high humidity or dusty place.
- ◆ Do not drop or crash the device to prevent the violent impacting between the display and the capacitive touch screen. Or the customers have to take the consequence by themselves.
- ◆ Please choose the suitable volume and never make the too loud volume .If you feel uncomfortable please turn down the volume or stop to use the device soon.
- ◆ Please charge if you meet those situations as below:
 - A. Low battery on the battery icon.
 - B. The system turns off automatically.
 - C. The keys do not work.

【Note】:Don't use the different type charger or it may make the device burned. We assume no liability for the damage.

Please contact with our agent if you need the original adaptor.

- ◆ “  ”Is battery charging. In the charging process, the device may be warning up a little (not too hot), this is normal, and it won't effect functions.
- ◆ Do not disconnect the device while formatting, downloading or uploading, or it may make the error.
Our company won't bear the duty for the loss of the memory erasing on account of the damage, repair or some other reason.
- ◆ Please operate the device according to the user manual rightly and backup the important data in time.
- ◆ Do not dismantle this device by yourself, and do not polish it with alcohol, dilution, or benzene.
- ◆ Do not use this device where electronics is forbidden, such as on the airplane.
- ◆ Do not use this device while walking and driving, avoiding traffic accident.
- ◆ USB is for transferring data but NOT for charging.
- ◆ Virus can damage this device. So please use proper computer antivirus and keep it updated.
For any support needed for this device please contact the company or the authorized distributor. Any unauthorized dismantling of the device will make the warranty null and void.

We reserve the right to keep the change of the products, the specification and design is subject to change without notice!

Packing List: :

Please check box for the following items

1. Device
2. User Manual
3. Product Warranty
4. Power Adaptor
5. USB Cable

Other accessories can be purchased at local retailers

The accessories may not be compatible with other devices


Power Adaptor Specification:

INPUT: AC 100-240V 50/60Hz 0.45A

OUTPUT: 5.0V---1.5A 

Device description

- ① ★ Camera: You can take photos and videos etc..
- ② Touch screen: You can click and drag in the touch screen.
- ③ ⏪ POWER:
Keep pressing button over 2 seconds for power on/ off, press button once to turn on screen from sleep mode .
- ④ ⋙ Earphone jack: 3.5mm standard earphone jack.
- ⑤ Micro USB: Micro-5pin connector
- ⑥ DC jack: Connect the power cable to charge to the device.
- ⑦ Volume : + Turn up the volume.
- Turn down the volume.
- ⑧  microSD card : microSD card slot.
- ⑨ RESET: Reset the device.

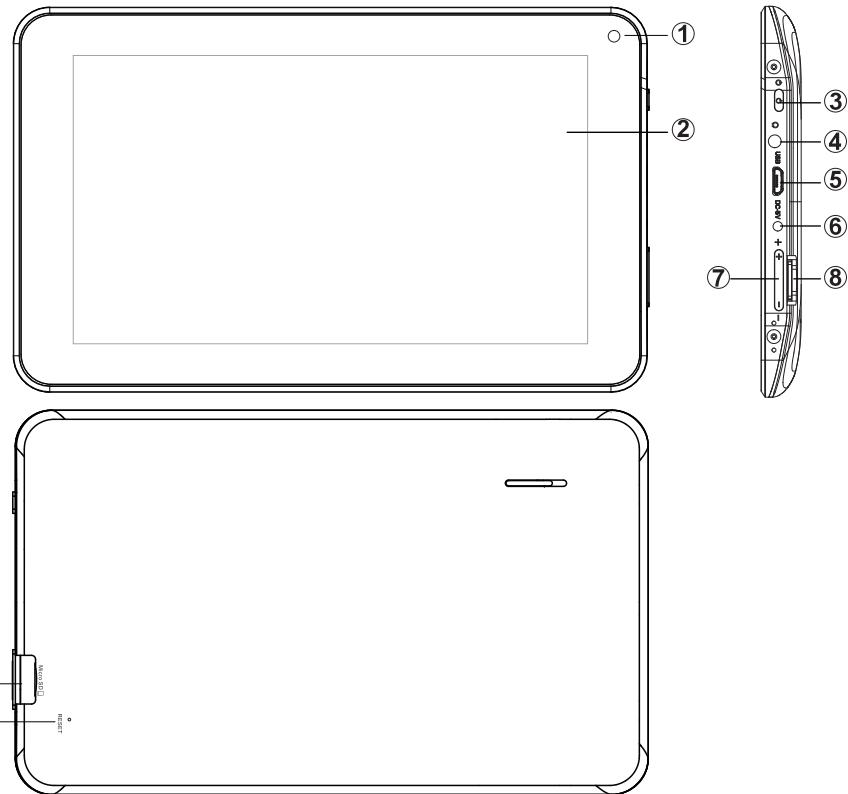

【TIPS】: 1. When the battery is low, it will power off automatically.
2. Shutdown illegally, when you restart, device would scan and repair the disk. The screen will stay at the progress bar for a long time .

【Note】: The pictures in the user manual are just for your reference, about the “★” item, please according to the real products.

Setting up for the first time

Charging your device:


For first-time use, you need to charge the device for ten hours.

After that you can recharge the device as needed.

Connect the DC-in jack to your device and plug the AC adapter into any AC outlet.

【TIPS】:

1. This device adopts built-in polymer battery. Only the specified charger should be used.
2. It is normal for the device's surface to become warm during charging or long periods of use. All devices are factory tested before release.
3. If you do not use this set for a long time, please charge/release it once one month to avoid deep discharge. The damage caused by battery over-consuming is not included in the warranty.

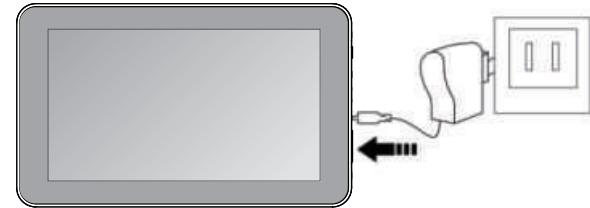

Battery Saving

To save battery running life, please see below key points. With below suggestions, battery can run longer time after fully charged each time.

1. When device is not in use, press power button once to go to sleep mode.
2. Shut down the applications when not in use.
3. Turn off WLAN when not in use
4. Shut off application sync selection
5. Set a shorter time for display backlight
6. Reduce brightness of display

Power On

Keep pressing power button over 2 seconds, device will start up opening screen, Android system is activating and enter the main screen.


Sleep Mode

After device is on, press power button once and it goes to sleep mode. The screen is now on standby and under low battery consumption. To wake up device, press one more time power button.

Power off and Forced Shut down

When you are not using the device, keep pressing power button over 2 seconds, the screen will display “power off”, select “ok” to power off unit completely.

If device is hanging, use a small pin to press Reset hole, it will forced shut down and the device will power on again. Or turn off the device. Press the power key, volume + and - keys at the same time about 6 seconds. Then press volume keys to select “wipe data/ factory reset”, and press power key to confirm your selection. Then press volume keys again to select “Yes--delete all user data”, and press power key to confirm your selection. At last the screen will show “reboot system now”, press power key to confirm. The device will reboot then and enter into home page.

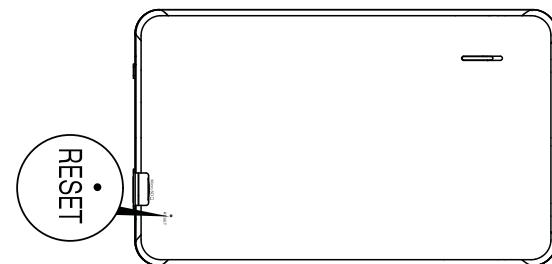

Operation of Touch Panel

Click -- Use finger or capacity panel pen to touch once, so as to select or activate function, or select menu or turn on applications.



Tap and hold -- Tap over 2 seconds, it will turn on option list



Slide -- Slide up, down, left or right for fast scrolling browsing page and display screen



Drag – drag an icon and relocate the position




Double Click – Double click to enlarge or shrink the display size of picture or under browsing webpage.



Shut --Use two fingers at same time on touch panel, to enlarge or to shrink the display scale.



Home Screen

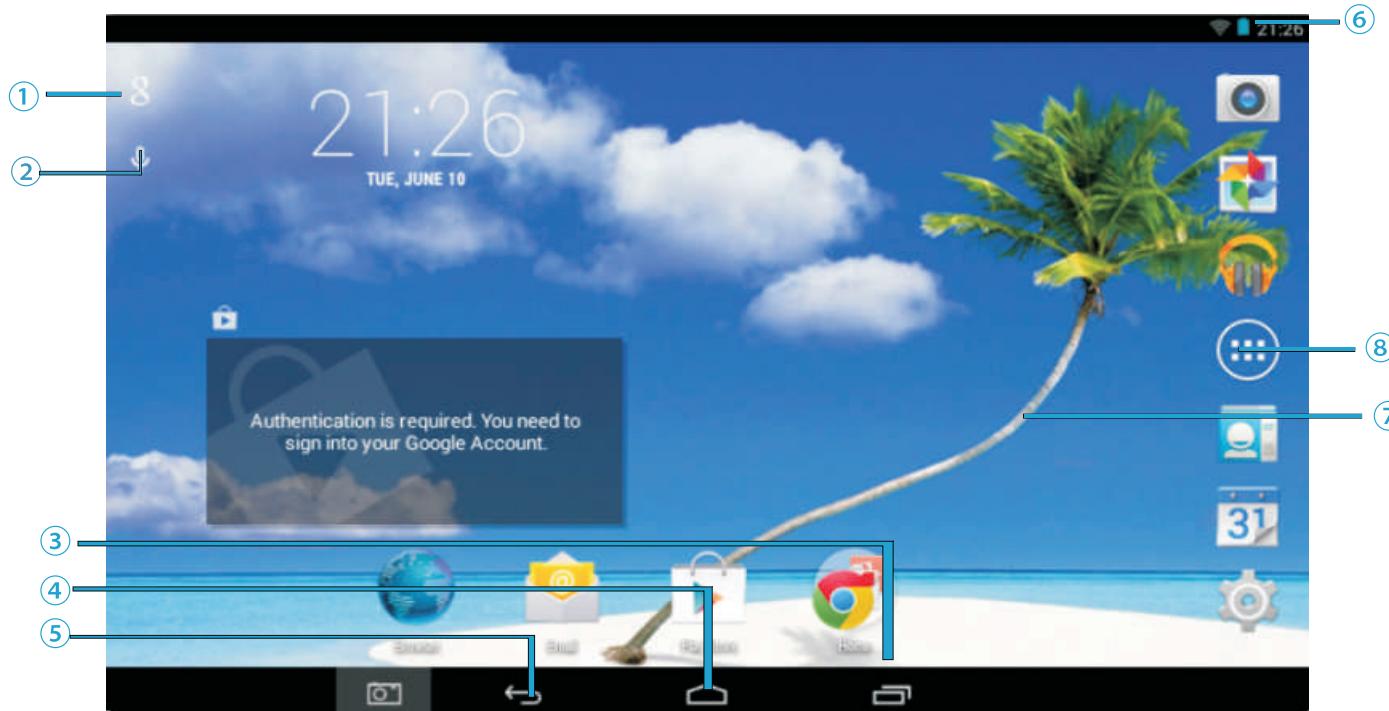

- ① Google Search
- ② Click to turn on voice search, it will search according to voice input (Make sure WIFI is on)
- ③ List of last running applications
- ④ Back to Home screen
- ⑤ Back to previous screen
- ⑥ Display of icons and device status, click to turn on notification screen
- ⑦ Shortcut to application
- ⑧ Enter applications page

Home screen with a set of 5 screens, slide left/ right to view individual screen**➤ Change of Wallpaper**

1. Press home screen about 2 seconds, it will pop-up wallpaper selection
2. Select preloaded wallpapers or picture as wallpaper
3. Click “set wallpaper” to confirm

➤ Add shortcut on Home screen

1. Enter in application page, tag the icon of application
2. Locate the icon to designated position or locate it in another screen

➤ Add Widget in Home Screen

1. Press home screen about 2seconds, and it will show Widget icon. Click it to enter to Widget page
2. Slide left / right to select widget
3. and designated widget and locate it in home screen

Remark :: Some widgets is linked to internet service, be careful it will occur data cost

Some widgets might only be used in certain countries or under assigned service providers

➤ Relocate the shortcut on Home screen

1. Tag the application icon and move
2. Move icon to the designated position

➤ Cancel shortcut on Home screen

1. Tag the application icon, **x** displays on screen
2. Drag icon to **x**
3. When icon changes to red, let go

➤ Rotate Screen setting

1. Slide downside at the upper right corner of the screen
2. click AUTO ROTATE icon to open/close autorotation function.

➤ **Notification screen**

In home screen or under running application, select right side notification screen, check device status and set up below options:

Icon	Icon	Description
	WiFi signal	Wifi connection, icon is full under strong signal
	Battery	Status of battery or if device is being charged
	USB Connection	To show if USB port is connected
	Screen shot	Press power button with volume down simultaneously to take screen shot

Applications

Internet Browsing

Browse internet and bookmark the website

Remark : Web browser and bookmark might be different in different countries or different service providers

➤ Browsing webpage

1. Enter application page, select "Browser" Icon
2. To brows certain webpage, select URL and input website address, and select "confirm"
3. See below browsing options:



- ① Open new window
- ② Shut down current webpage
- ③ Go to Next or Previous webpage
- ④ Accessing webpage, icon becomes "X" when webpage shows
- ⑤ Detail message of webpage
- ⑥ Enter webpage address or related words
- ⑦ Bookmark current page
- ⑧ Search message
- ⑨ Open bookmark and current visited webpage
- ⑩ Option list of browser

➤ Browser setting

When browsing webpage, click upper right corner “”, adjust setting in the option menu

➤ Current visited webpage

1. Enter application page, click "Browser"
2. Select bookmark  → current visited history
3. Select webpage

Email

Send and Receive email

➤ Setting of email account

1. Enter application page and click "Email"
2. Enter email address and password
3. Select next step (for personal email account) or manual setting (for commercial email account)
4. Follow and input the requested setting

➤ Sending outgoing message

1. Enter application page and select “Email” → 
2. Type in Recipients ; Manual input email address, use “ ;” or “ ,” to separate more than one recipients
3. Type in Subject
4. Type in message in content
5. Select  or attachments
6. Select  and send out message

Remark : If user is offline, message cannot be sent out

➤ Check email message

In email account, user can check downloaded message, go online to check new messages.


Sound Recorder

1 Click “ Sound Recorder” in application page

2 Click  to start recording

3 Click  to stop recording

4 Click  to play the recorder. And the recorder can be find in exploer.

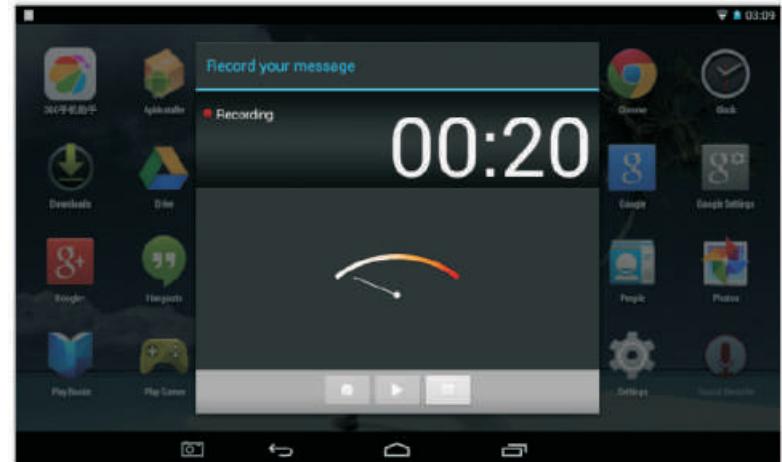

Audio player

Click “Play Music” in application page

Music will be categorized by listen now, My Library, and play list. It will display all music inside “Songs” . Click the song and it will play automatically.

