


# Clear and Simple **Quick Start Guide**

# Alcatel PIXI THEATRE™



# Getting to know your Alcatel PIXI THEATRE™

Proximity & light sensor

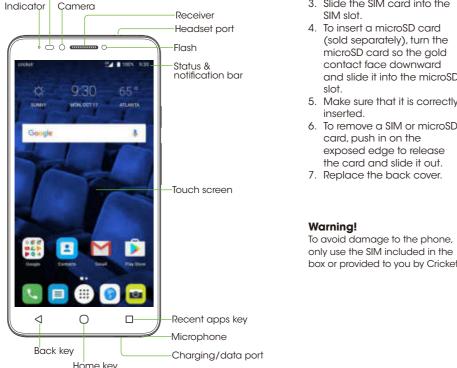

- 2. To insert the SIM, turn the SIM card so the gold contacts face downward.
- SIM slot.
- (sold separately), turn the microSD card so the gold contact face downward and slide it into the microSD
- 7. Replace the back cover



# Phone setup

- 1. Romove the back cover.
- 3. Slide the SIM card into the
- 4. To insert a microSD card
- 5. Make sure that it is correctly
- 6. To remove a SIM or microSD card, push in on the exposed edge to release the card and slide it out.

# Touch screen

# Navigating your phone

- Use your finger tip to lightly touch the screen.
- · Use quick flicks of your finger on the touch screen to swipe up, down, left, and right.
- · To return to the previous screen, tap the **Back key**  $\triangleleft$ . • Tap the **Home key** () at any
- time to return to the main home screen.

# E M D

Screenshot captured

1 to 🛊 😢

- Tap the Recent apps key ☐ to 🖫 🔳 🛞 🔞 🔤 access recently viewed apps
- Tap Apps (iii) to access applications on your phone.

## Notification panel

Access alerts, including new messages, emails, and software

- Tap the top of the home screen and drag your finger down to see the Notifications panel.
- Swipe right or left to clear individual notifications or tap to clear all.
- With the notification panel open, tap the top of screen again and drag down to expand the quick settings
- Tap to access the settings

# Personalize

# Set wallpaper

- To change your home or lock screen wallpaper, press and hold a blank part of the home screen and tap WALLPAPERS.
- Select a wallpaper and tap Set wallpaper to set it. You can also tap Pick image for additional options.

### Add to home screen

- To add app shortcuts, tap Apps ), press and hold the desired app, and drag it to the home
- To add widgets, press and hold a blank part of the screen and tap **WIDGETS**, press and hold the desired widget and drag it to the home screen.

### Organize home screens

- · To move widget or app shortcut, press and hold it and then drag it to a new location.
- To delete it, drag it to the X Remove and release it.

# E M D


- To organize app shortcuts in a folder, press and hold a shortcut and drag it so it is on top of another one and release it. This will create a Folder. Drag additional shortcuts to the folder to add them.
- · To rename a folder, tap the folder title and then type a new name.


# Calls and voicemail

#### Make a call

- 1. From the home screen, tap Call
- 2. Type a name or phone number. or select one of the following options:









Call from your contacts list.

### Note: Do not block the microphone when making or answering a call.

# Check voicemail

- 1. From the home screen, tap Call then tap (\*\*).
- 2. Press and hold key 1

### Use call waiting

Call waiting lets you answer a second call while you are on an existing call.

- 1. While on a call, you will hear a tone if another call comes in. Slide to the right to answer.
- 2. Tap (5 or On hold to switch between active calls.
- 3. Tap Jt to merge calls. 4. Tap a to end a conference call.

# Text and picture messaging

\*

150210

\* 0 #

0755-3331 3900 On hold

C HDE

### Send a text message 1. From the home screen, tap

- Messaging **[** 2. Tap **New message** • to start
- a new text message. 3. In the **To** field, enter a number or a contact name
- or tap Contacts + to access your contacts 4. Tap the **Send message** field


and enter your message.

5. Tap **Send** > to send the message.



- 2. Tap the **Paperclip**
- 3. Tap and select desired picture or tap o to take a picture to attach.

  4. Tap **Send** to send the
- message.





B Bendmessage >

O 2 4

### > Find on page 2. Enter the text or phrase vou want to find. Text that matches the inputs will be highlighted on the screen

**Browser** 

Go to a web page

On the Browser screen, tap the

address of the web page and

URL box at the top, enter the

Find text on a web page

1. On the Browser screen, tap:

- 3. Tap the Up or Down arrow to switch to the previous or next matching items.
- 4. Tap the **Back key** ✓ to close the search bar.

#### Open multiple windows

Multiple windows can be opened at the same time for your convenience.

- · Tap and then + to open a new window.
- Switch to a preferred window by tapina it.
- To close a window, touch X on the window you want to







# More information

### On the web

Detailed support information, including device specifications and troubleshooting, is available at www.cricketwireless.com/support/devices.

#### On the phone

- Call Customer Care at 1-855-246-2461 or
- Dial 611 from your cell phone.

#### Accessories

For more information concerning accessories, please visit vour local Cricket store location or go to www.cricketwireless.com/shop/accessories.



Note: Store and online inventories may vary

© 2016 Cricket Wireless LLC, All rights reserved, Cricket and the Cricket logo are registered trademarks under license to Cricket Wireless LLC. Other marks are the property of their respective owners. microSDHC logo is a trademark of SD-3C, LLC. You can also create your own custom beats with the ONETOUCH Mix app, which lets you mix both local and streaming tracks to save and share with your friends. ALCATEL is a trademark of Alcatel-Lucentand is used under license by TCL Communication Ltd. © Copyright 2016 TCL Communication Ltd All rights reserved TCL Communication Ltd. reserves the right to alter material or technical specification without prior notice. All "Signature" ringtones embedded in this phone have been composed, arranged and mixed by NUTROPIC (Amar Kabouche).

# CJB1FACALAAA

## Printed in China

# FCC Regulations

FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This mobile phone has been tested and found to

comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiated radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no augrantee that interference will not occur in a particular installation If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

Reorient or relocate the receiving antenna.

interference by one or more of the following measures:

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- · Consult the dealer or an experienced radio/TV technician for help.

### FCC Note:

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the eauipment.

Product meets FCC Radio Frequency Exposure Guidelines-FCC ID 2ACCJB061

# **RF Exposure Information** This mobile phone complies with part 15 of the

of 15 mm.

This phone is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the United States. During SAR testing, this device was set to transmit at its highest certified power level in all tested frequency bands, and placed in positions that simulate RF exposure in usage against the head with no separation, and near the body with the separation

To support body-worn operation, choose the belt clips or holsters, which do not contain metallic components, to maintain a separation of 15 mm between this device and your body.

# Hearing Aid Compatibility (HAC) regulations

Your mobile phone is rated: «For Hearing Aid», to assist

hearing device users in finding mobile phones that may be compatible with their hearing devices. This phone is HAC M4/T3 compatible. Reference ANSI C63.19-2011 For more information please visit our website http://www.alcatelonetouch.us/Hearina-Aid-Compatibility-with-Mobile-Phones-Accessibility-and-Compliance/b/10844773011.

# Email

### Email setup (Gmail™, Yahoo!®, etc.)

- 1. From the home screen, tap Apps (iii) > Email [2]
- 2. Select an account type. enter your email address and password, then tap **NEXT**.
- 3. Confirm email account settings and tap **NEXT**
- 4. Tap FINISH. Your email will begin to synchronize with your phone.

Note: To set up corporate email, contact your IT administrator.




### Create and send an email message

- 1. From the home screen, tap Apps (iii) > Email (iii)
- 2. To compose a new message. tap Compose 0.
- 3. Tap the To field and enter email address or name or tap Contacts + to access your contacts.
- 4. Enter a subject and email message.
- 5. To attach files to the email message, tap the **Paperclip** and make your selection.
- 6. Tap **Send** > to send the message.



# Cricket Apps & Services

These services make using Cricket even better and



Cricket Wi-Fi Manager: Helps you save your high speed data by seeking out free and open Wi-Fi hotspots whenever you're near them. Also remembers your favorite Wi-Fi

hotspots and connects you automatically. Cricket does the searching so you can do the saving.



Cricket Voicemail: Quickly view, access and play back your voicemail messages. Easily save important numbers to your Favorites list and respond to messages by calling back



**Deezer:** Listen on-the-go with ad-free streaming music, download your favorites to your phone and get customized playlists based on your preferences.

# Apps on Google Play™

The Alcatel PIXI THEATRE is preloaded with great apps like YouTube and Hangouts to help take your smartphone experience to the next level. To find additional apps, check out Google Play.

Google Play

APPS & GAMES ENTERTAIN

TOP CHARTS GAMES CATEGOR

Recommended for You MOR

Top categories

Android Wear

Communication

Business

Books & Reference

Photography Eartly Dicket Suggests

# **Access Google Play**

- 1. From the home screen, tap Play Store 🔊.
- 2. Enter your existing Google account or create one following the steps on the screen.

# Navigate Google Play

From Play Store, there are multiple ways to find apps, games, and Flow Free: | Moto | Plants vs. | Bridges Racer 3D Zombies

- 1. Tap a category to browse popular apps, games, movies, and music organized by popularity or genre. O 😉 💋
- 2. Tap **Search** Q to search the Play Store for a specific game or app.
- 3. To install, tap the app and follow instructions. Once installed, vou will see a notification in the Notifications panel. Open the app from this notification or by locating it in the Apps (iii

# Camera and video

### Take a picture

- 1. From the home screen, tap Camera 🔤
- Tap = to select different modes. Then tap 🔯 to display Camera
- 3. Zoom in and out by pinching with your fingers. 4. Tap the **Shutter button** or
- press either of the Volume Keys to take a photo.

# View pictures

1. From the home screen, tap **Apps** 

2. Tap Gallery 💽.

### Take a video

In camera mode, tap **Start** recording to start and tap **Stop recording** to stop recording video.

### Send a picture

- 1. After taking a picture, slide right to view the taked picture. Tap a selected picture and then tap Share <
- 2. Scroll through options to send via Messaging or Email, Bluetooth, and more.



00:67

# Color notification

Color highlighting lets you quickly identify unread call or message notifications on the

lock screen or notification panel.

Unique Alcatel Features

### **Quick Silence**

You can auickly mute an incoming call by simply turning over your phone. To activate this feature, tap Settings > Gestures and select Turn over to mute.



# Double tap to turn on/off screen

When the screen is off, double tap to turn it on. When the screen is on, double tap a blank area on the home screen to turn it off.

To activate this feature, tap **Settings > Gestures** and select Unlock.

#### Selfie

Take selfies auickly and easily. From the lock screen, double tap (a) to quickly open the front-facing camera and capture the moment without switching between camera modes.





Note: A Google Wallet™ payment method is required to purchase apps.

