

USER GUIDE

MAX STAR 6.0



Tablet

Trade Mark: IONE

MAX STAR 6.0

Manufacturer: SHENZHEN JREN TECHNOLOGY CO., LTD.

www.ionephone.com

Directory

1	Install		3
	1.1	Battery charging	3
	1.2	Format the storage card	4
	1.3	Use the storage card as U disk	4
	1.4	Standby screen	4
2	Custom Tablet		5
	2.1	Wireless and internet	5
	2.2	Equipment	5
	2.3	Personal	5
	System		6
	2.4	Install and unload apps	6
3	First Interface		6
	3.1	Dial	6
	3.2	Contacts	7
	3.3	Message	7
	3.4	Browser	8
	3.5	E-mail	8
	3.6	Camera & Vidicon	8
	3.7	Multi-media file management	9
	3.8	Music player	9
	3.9	Recorder	10
	3.10	Calendar	10
	3.11	clock	10
	3.12	calculator	10
	3.13	Other functions	10
4	Use a	Use and Maintenance	

Thank you for using the tablet; it's the world's premiere, the best classic 7 inches screen, gesticulation control. Provide you the high quality of mobile communication and entertainment enjoy.

This user guilds specially used to guide you understand the tablet function and characteristic.

Please read the instruction file first

Before you use this tablet, please read all the safety cautions in the instructions in detail, to ensure safety and correct use.

- The descriptions are based on the default settings
- > The pictures and screen shots may different from the actual product.
- ➤ Receive and send message, upload and download, automatic synchronism or GPRS service may cause other kinds of fee. If you want to avoid the extra fee, choose the probable charging plan. Any relevant information, please contact the service supplier.
- > To the unknown software, be careful when install, the strange website pop up when browsing the internet, you can click but better to avoid the operation or the tablet will be poisoned.
- > Please properly keep this instruction book for the future reference.

Mobile phone parts diagram

1 Install

1.1 Battery charging

- When using the tablet at the first time, need to charge for the tablet, can use charger or connect the phone with the computer via data cable.
- > The tablet will issue warning tone and display electricity shortage information when low battery, the battery icon will turn red, moreover, the tablet will turn off automatically when electricity is too low. Need to charge then you can use the tablet.
- ➤ If the battery is power off, can't turn on the phone immediately even connect to the charger, before you turn on the phone, please charge for several minutes.
- When charging with the charger, Please put the small end plug of the charger into the tablet in the multi-function socket, put the big end into the standard power socket, be attention the improper charger connection will lead to serious damage to the tablet, to the damage caused by misoperation, will not guarantee to repair.
- Can use the tablet when charging, but thus will influence the charging time of the tablet, the phone may get hot when charging, this is normal phenomenon, do not affect the using life and performance.
- When the batteries get full electricity (battery icon doesn't move), please disconnect the charger and the tablet, and take down the charger from the socket. Do not take off the battery when charging, this might damage the tablet.

Reduce battery loss

If launched automatic synchronization, bluetooth functon or WLAN function in the background, the battery will consumes faster. If you want to save electricity, please shut down unnecessary application. You can also reduce background light time and the brightness of the display screen, or press the power off key to switch over to sleep patterns.

1.2 Format the storage card

Format the storage card on the computer may lead to incompatibility between the card and the tablet, please format the card on the tablet.


Under standby pattern, setting>storage>format SD card>OK

Before you format the storage card, remember to back up the important file to the tablet.

1.3 Use the storage card as U disk

If you want to transfer the file from computer to the storage card of the equipment, please set the equipment to U disk pattern.

1, Use USB cable to connect the equipment and the computer, At this time will drop-down the



shortcut list, choose USB already connected.

2, In the pop-up interface, click to open the USB storage equipment,

Turn on USB storage

Attention: after open the USB equipment, some applications may can't be used, such as camera, music player etc. If want to close U disk pattern, please click to close the USB storage equipment.

1.4 Standby screen

- When the tablet is under standby pattern, can see standby screen. In the standby screen, can view the state of the phone and access program, and the standby screen have multiple panel, sliding to the left or right to choose a screen panel.
- > Can add application or the application project, the group file or folder shortcuts to custom the standby screen: under standby mode, long hold application icon click on the standby screen blank area.
- Move the project in the standby screen, click on the project, and drag to the position you want
- ➤ Delete project from standby screen: click on the project, the recycle bin appear above the screen, drag the project to the recycle bin, loosen when project turn red.
- Use shortcuts surface; under standby pattern or use the application, click on the indicator icon area and drag down to open the shortcut panel, can cancel or start data connection function and access notice list, such as information, call, activity or processing condition. If you want to hide list, drag up the list will be OK. On the shortcut panel can also start or shut down the following options: data connection, off-line mode, the screen brightness, standby, automatic roll screen and contextual model switching.

2 Custom Tablet

Standby interface->main menu->setting

2.1 Wireless and internet

SIM card management: can set SIM card and voice calls, information, data connection to start or

close.

Flow use situation: can check the current flow use situation, so that you can more clearly to

control the flow use.

Other mode setting: start or close flight mode, and the internet setting.

Use WIFI: setting>WLAN setting>open, will appear the wireless internet nearby, choose your

internet, enter the password will be ok.

2.2 Equipment

Audio Profiles: In audio profiles, it has General mode, Silent mode, Meeting mode, and Outdoor

mode. You also can add Custom mode according to your demand, and reset all the audio profiles

to default.

Display: You can custom the display settings.

➤ Brightness: Set the brightness of the screen.

> Wallpaper: Wallpaper setting has four modes, Live Wallpapers, Gallery, Wallpapers, Video

Wallpapers. You can choose your style by yourself, also can download from the Internet

Sleep: 15seconds/30seconds/1min/2min/5min/10min/30min, you can set the sleep time

according to your habit. Sleep time is shorter, you can save more electricity, increase your

mobile using time.

Font size: Set the size of System fonts.

Storage: Check the use condition, and install, unload, erase SD card.

Battery Percentage: Start or Close the battery percentage, know about the using condition of the

battery.

Apps: check and manage the downloaded apps, and unload the unnecessary apps.

2.3 Personal

Location services: set the location services.

Security: Security settings can set screen lock mode, encrypt the phone, set SIM card lock and

5

device administrators, and set the use and install of the unknown sources and apps.

Language & Input: Set the system languages and input methods.

Backup & reset: DRM reset, Factory data reset. Note that the data of your tablet will be erased when reset factory data.

System

Date & time: Manual setting time, automatic time mode.

- Automatic date & time: can choose use network provided time and off.
- ➤ Automatic time zone: On/Off.
- > Set date/time/ Select time zone: Manually set date, time and time zone.
- Use 24-hour format: On/Off.
- > Select date format: Select the format according to your habit.

Accessibility: some special functions settings.

About Phone: Include Status, Legal information, Model number, Android, Baseband version and Kernel version.

2.4 Install and unload apps


Install apps: download the app through e-market or browser, click install. Android system is APK format. You also can down from your computer, copy it to T-Flash card, then get into the T-Flash card through file manager, choose APK file, click install.

Unload apps: Click the menu> Manage applications, click the app you want to unload, click "unload" or "erase the data" to erase the app record, release the space.

Note: If the app downloaded from the browser can not be installed, please choose Setting > Security> Unknown sources. And you can find it from the download content.

3 First Interface

3.1 Dial



Press when incoming calls, Slide to left is rejecting the calls, slide to the top is rejecting the SMS, slide to right is answering the calls.

Note: When receive the incoming calls, will display the name, number, contacts photo, etc, information. And will choose ringtone hint and Vibration hint according to cell phone settings. If the incoming calls are not in the contacts list, it will only display the number and default photo.

3.2 Contacts



Note: If the contacts are too many, it will take some time to read the contacts information, please wait with patiently.

Search contacts

- 1. Press "search" in contacts list.
- 2. Input the contact name, then contact meet the requirements will display in the bottom of the input box.

Note: find the contacts, you can click it to make the phone call or send SMS/MMS/Emails, etc.

3.3 Message




convert to MMS. Or:

- 1, Click "Menu", click "add theme", type theme content.
- 2, Click "input content" box, type your message.
- 3, Click "Menu", add attachment.


Note: In attachment adding window, you can add pictures, videos, audios, records, PPT, contacts, calendar, etc. After adding the attachments, you can also check, replace, and delete them.

3.4 Browser



3.5 E-mail


- 1, In homepage, click "Email" > input email account and password>click next step, system will extract mail setting automatically.
- 2, Send-receive emails



Note: Click can search the mails. Click can refresh the mails. Click can get into mail folder list to check the draft and sent mails.

3.6 Camera & Vidicon


Take Picturesque








3.7 Multi-media file management



Choose picture and click, change pictures via horizontal left and right slide. Click menu button to choose play film slide.

Click to send email or massage for the selected picture. Click to delete pictures.




Click to transfer to full screen for the playing video.

Also could click in menu to enter into video playing list to play video.

3.8 Music player




Choose music to into playing interface:

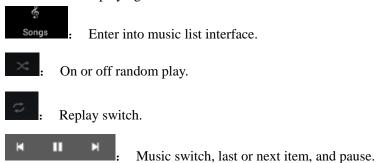


: Music fast reverse and fast forward.

Note: for more operation please click menu button, see above picture.

3.9 Recorder

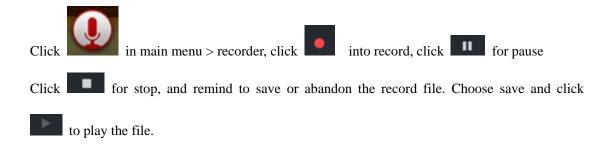


3.10 Calendar

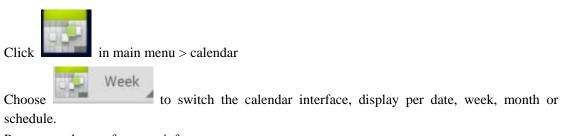

Press menu button for more info set.

3.11 clock



3.12 calculator



3.13 Other functions

- 1, SIM card application: this will be differ per your operators
- 2, Search: shortcut of search engine

4 Use and Maintenance

- Far from any liquid, do not put your tablet in water, raining or expose in any wet places.
- Far from extreme cold or hot, avoid expose the tablet in below 10°C or above 45°C.
- Far from dust and dirt, do not put tablet in dust, dirt, sandy, food and other improper physical environment.
- ➤ Please use dry and soft cloth to clear mobile, do not use alcohol or other kinds of cleanser
- Use carefully and prevent mobile from falling.

FCC Statement:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet (FCC ID: 2ACCL-MAXSTAR) has also been tested against this SAR limit. The highest SAR value reported under this standard during product certification for use at the ear is 0.231W/kg and when properly worn on the body is 0.805W/kg. This device was tested for typical body-worn operations with the back of the Tablet kept 5mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 5mm separation distance between the user's body and the back of the Tablet. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of **5mm** must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

IMAXX INTERNATIONAL INC, declares that this Tablet is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.