


Wireless mouse and keyboard can not communicate with the TV box directly , external USB tranceiver dongle should be plug in USB port of the TV box ,then Wireless mouse and keyboard can be used ,the external USB tranceiver dongle is not in the package of the TV box

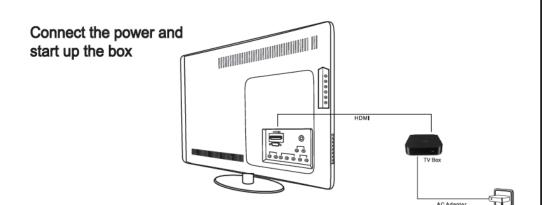

- 1. Turn on the TV or monitor and change the video output to be HDMI.
- 2. Connect the Android box to the HDMI connector of the TV or monitor with a HDMI cable.
- 3. Connect the power adapter into the wall socket, and the other end into the DC port on the box.
- 4. Then the device starts and LED light on the box is on.
- 5. When it finishes to start, the TV or monitor screen will show the Home interface, see Page 4.

Wownload Windows 8.1 Quick Start Guide from Microsoft official website.

Power ON/OFF

1.Power ON

Press and hold the Power Key for 3 seconds, the LED light will turn to green after 15 seconds and enter the system.



2.Standby / Wake up Press Power key once,the unit goes to standby, LED light turns to red. Press Power key once,the unit wakes up, LED light turns to green.




3.Power OFF

Move the mouse to the bottom right corner or the top right corner of the screen,then slide upward or downward to open the Charm menu, and then click the settings.




The introduction of the desk

1.This is the Start screen of Windows 8.1, applications are on this screen. Log in your Microsoft account then use these applications.

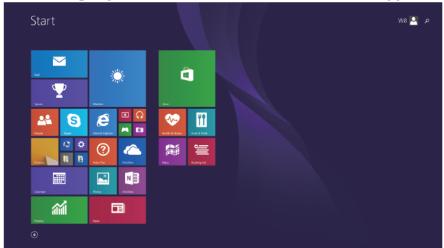

2.Slide and click

a: Multi-task bar: The Multi-task bar on the left of the screen is the list of all the applications that are running, you can switch between tasks. Move the mouse to the bottom left corner or the top left corner of the screen to show the Multi-task bar, then slide upward or downward to choose the application you want, and right click to close the application.

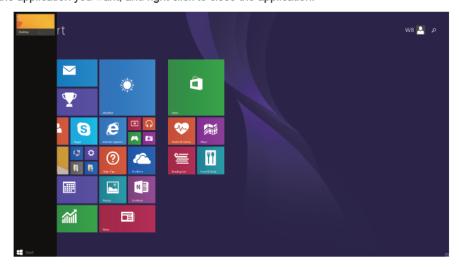

b: Charm bar: The items on Charm bar are fixed, such as Search, Share, Start, Device and	
Settings.	
	9
	-

c:Move the mouse to the bottom right corner or the top right corner of the screen to show the Charm bar, and slide upward or downward to choose the item you want.



d:Move the mouse to the bottom of the screen, and move the display bar towards left or right to see all the applications on the Start screen.




e:Click the Down arrow on the bottom left corner of the Start screen to enter the Apps screen.	
	12

3. Introduction of Apps screen


Apart from the applications that fixed on the Start screen, you can also open other applications on the Apps screen.



If you want to move more applications to the Start screen, please move the mouse to the icon of the application and right click, and click "Pin to Start" $\frac{1}{2}$

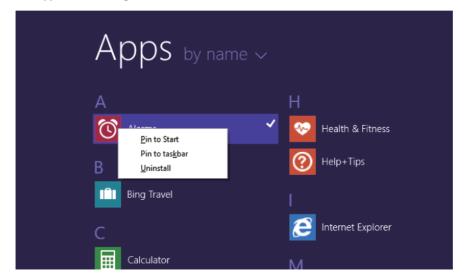

If you want to remove the application from the Start screen, please move the mouse to the icon of the application and right click, and click "Unpin from Start".

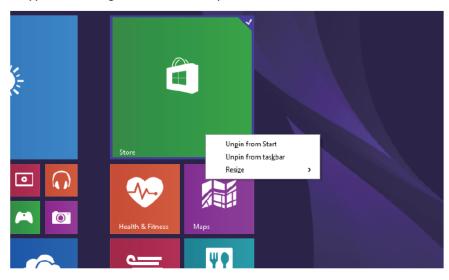

4. Charm bar

Move the mouse to the bottom right corner or the top right corner of the screen to show the Charm bar, slide upward or downward to choose the item you want: Settings, Device, Start, Share, Search.



Search: Search the files or applications in the Box.

Share: Share the applications by the social networking sites or E-mail.

Start: Return to the Start screen, or return to the opened applications from the Start screen.

Device: Read/Write or share files with devices connected to the Box, or connect to external

screen or print.

Settings: Set the Box.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna.
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is
- -- Consult the dealer or an experienced radio/TV technician for help

RF Exposure Warning Statements:

The device include it's antenna must be installed to provide a separation distance of at least 20 cm from all persons.