

swatch®

TOUCH
ZERO TWO

THE FAN WATCH

Glossary

TIME	Mode with time functions
DATE	Date function
ALARM	Alarm function
TIMER	Countdown function
CHRONO	Stopwatch-function
AM	Daytime from 00.00 – 12.00
PM	Daytime from 12.00 – 24.00
ACTIVITY	Mode with activity functions
%TODAY	Daily goal
KCAL	Daily burnt calories
STEPS	Amount of steps
Daily goal	Targets set for activity over 24h

FAN	Mode with fan functions
FAN HEAT	All over action from activity, claps and La-Olas
FAN RANK	Standings of fan activities
CONNECT	Connecting watch and smartphone
SYNC	Data synchronizing
Settings	App settings on smartphone
MY PROFILE	Profile settings on smartphone
BACKUP	Copying files onto smartphone
ON	Turning functions on
OFF	Turning functions off

swatch

© 2016 Swatch Ltd.

This manual may not be copied or reproduced, in whole or in part, without the prior written permission of Swatch Ltd.

SWATCH and SWATCH TOUCH are registered trademarks of Swatch Ltd.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Swatch Ltd. is under license.

Android and Google Play are trademarks of Google Inc.

Apple, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc.

IOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license by Apple Inc.

Other trademarks and trade names are those of their respective owners.

While every effort has been made to ensure that the information contained in this manual is complete and accurate, Swatch Ltd. cannot exclude the possibility of errors in typography or photography and disclaims any liability for such errors.

Watch purpose: The information provided by this watch is not meant to be used for any medical or treatment purposes; it is all purely fun information.

CONTENTS

2 Glossary

Getting started

4 Introduction

6 Handling

The functions in detail

8 TIME

14 ACTIVITY

16 FAN

18 CONNECT

Additional information


20 Taking care and troubleshooting

22 Restore to default user settings

24 Regulatory compliance information

32 Watch and battery disposal, battery change

The watch display explained

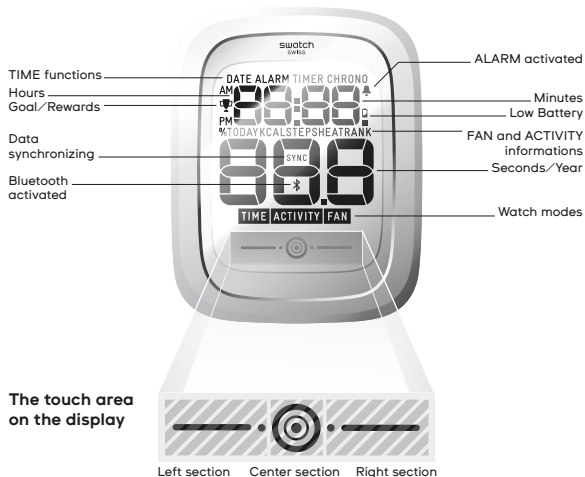

The touch area on the display

Control the watch with a fingertip


Quick tap

- Access and browse functions
- Start, stop and continue functions.
- Confirm settings.



Long press

- Access settings.
- Turn functions ON/OFF.

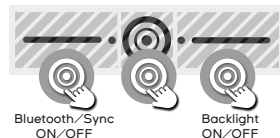

Swipe

- Access and switch between modes.
- Adjust settings.



Overview on how to access
the watch functions

- 1. Eco mode**
The watch drops into eco mode* during inactivity.


*Activated functions are still running in the background.

- 2. Modes**
The modes TIME, ACTIVITY and FAN contain all main watch functions.

- 3. Functions**
In each mode specific functions can be accessed and viewed in detail.

- 4. Settings**
Adjusted TIME Settings* according to your needs.

*No settings possible for ACTIVITY

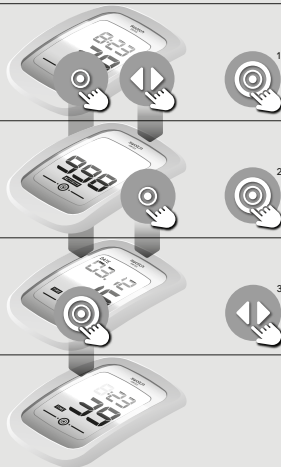

- Quit eco mode and access TIME functions with a quick tap.

- Quit eco mode and access watch modes TIME, ACTIVITY and FAN by swiping.

¹ Quick access TIME settings from eco mode with a single long press.

- Swipe to switch between the different modes TIME, ACTIVITY and FAN.

- Access TIME, ACTIVITY and FAN functions from each respective mode with a quick tap.

² Access TIME settings when on TIME with long press.

- Use quick taps to browse functions/statistics in the chosen mode.

- Access TIME settings with a long press.

³ Switch between modes by swiping.

- Swipe for increasing or decreasing values in TIME settings.

- Finish/confirm every step in TIME settings with a quick tap.

- Start, stop and continue functions.

THE FUNCTIONS IN DETAIL

TIME ► ACTIVITY ► FAN ► CONNECT

These functions are
available in TIME mode:



Use quick taps to browse
these functions.



TIME



DATE



ALARM



TIMER



CHRONO

THE FUNCTIONS IN DETAIL

TIME ► ACTIVITY ► FAN ► CONNECT

Access TIME settings:



Swipe to access
TIME mode.



Quick tap to browse TIME
functions. Go to TIME.



Long press to access
TIME settings.

- ① Swipe to adjust hours.
Quick tap to confirm.
- ② Swipe to adjust minutes.
Quick tap to confirm.
- ③ Swipe to adjust seconds.
Quick tap to confirm.
- ④ Swipe to adjust format 12/24*.
Quick tap to confirm.



Quick access to TIME settings from
eco mode with a single long press.

* Changing hour format
also changes date format.

① Hours



adjust



confirm

② Minutes



adjust



confirm

③ Seconds



adjust



confirm

④ Time Format



adjust



confirm

THE FUNCTIONS IN DETAIL

TIME ► ACTIVITY ► FAN ► CONNECT

Access DATE settings:



Swipe to access
TIME mode.



Quick tap to browse TIME
functions. Go to DATE.



Long press to access
DATE settings.

- 1 Swipe to adjust days.
Quick tap to confirm.
- 2 Swipe to adjust months.
Quick tap to confirm.
- 3 Swipe to adjust years.
Quick tap to confirm.



Quick access to DATE settings from eco mode
with quick tap followed by long press.

1 Day



2 Month



3 Year



THE FUNCTIONS IN DETAIL

TIME ► ACTIVITY ► FAN ► CONNECT

Access ALARM* settings:



Swipe to access
TIME mode.



Quick tap to browse TIME
functions. Go to ALARM.



Long press to turn ALARM
ON (or OFF).

- 1 Swipe to adjust hours.
Quick tap to confirm.
- 2 Swipe to adjust minutes.
Quick tap to confirm.
- 3 Alarm-symbol indicates
activated ALARM.

*ALARM Ringtones can be changed
from the mobile-app

1 Hours



2 Minutes



3 Activated



THE FUNCTIONS IN DETAIL

TIME ► ACTIVITY ► FAN ► CONNECT

Access TIMER settings:



Swipe to access
TIME mode.




Quick tap to browse TIME
functions. Go to TIMER.



Long press to access
TIMER settings.

- 1 Swipe to adjust hours.
Quick tap to confirm.
- 2 Swipe to adjust minutes.
Quick tap to confirm.
- 3 Swipe to adjust seconds.
Quick tap to confirm.
- 4 Quick taps on left or right section
to start, stop and continue.
- 5 Long press on center section to
reset.

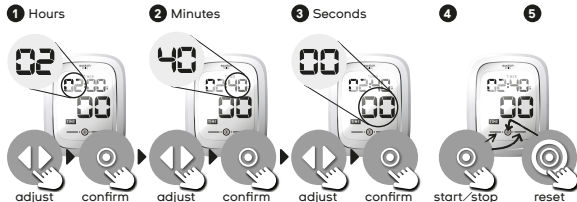

THE FUNCTIONS IN DETAIL

TIME ► ACTIVITY ► FAN ► CONNECT

Access CHRONO settings:



Swipe to access
TIME mode.



Quick tap to browse TIME
functions. Go to CHRONO.

- 1 CHRONO starts running immediately after quick tap on left or right section. Another tap on the same sections stops CHRONO. To continue tap again.
Long press on center section resets the value to 00.00



If CHRONO is ON you can access it with a
single swipe from any other mode or function.



If CHRONO is ON, watch does not drop
automatically into eco mode.