
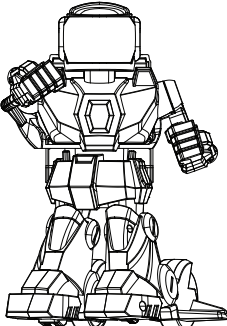
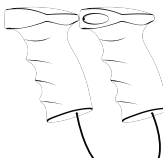

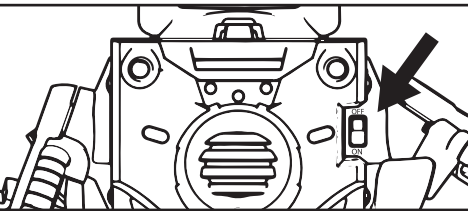
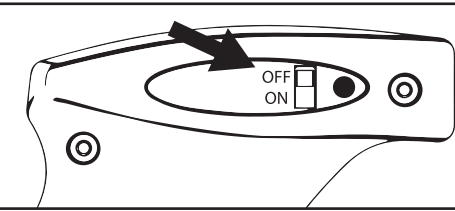
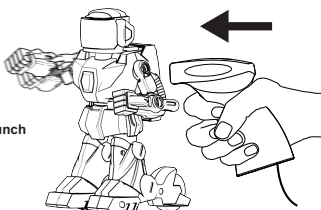
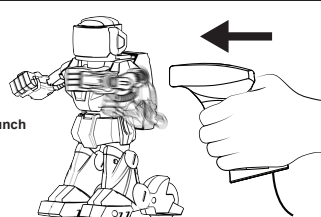
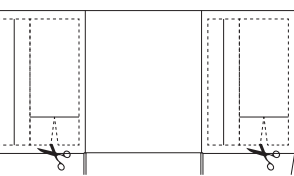
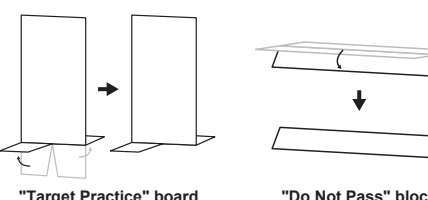
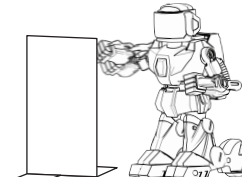
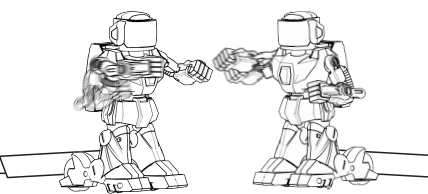
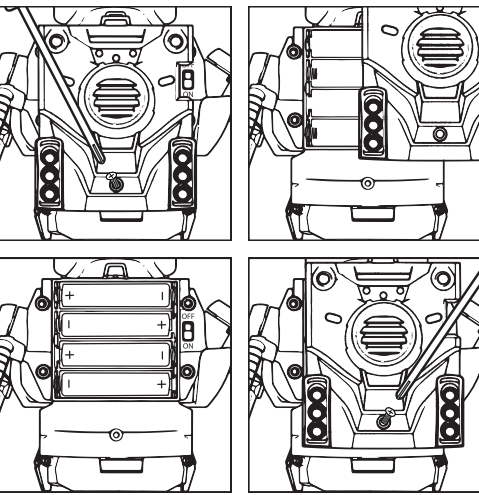


Product: ET-0011-Gesture Control Battle Robot

Size : 420 x 110 mm

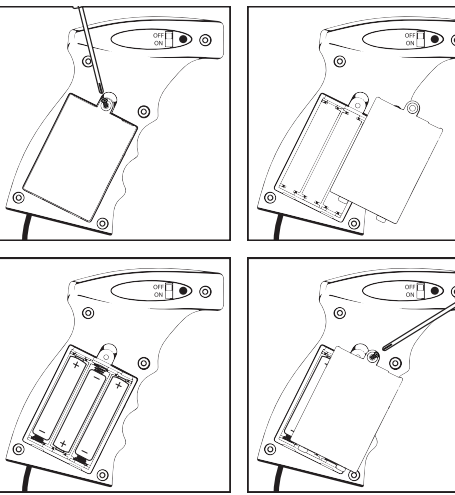

GESTURE CONTROL BATTLE ROBOT Instruction Manual Thank you for purchasing the Gesture Control Battle Robot. This manual provides more information about this product, please read the instructions before using. 	Product Overview  Gesture Control Battle Robot  Gesture Remote Control  Instruction Manual Gesture Control Battle Robot Power On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Gesture Control Battle Robot. Slide the ON/OFF Switch to OFF to turn off the Gesture Control Battle Robot.	Package Contents Gesture Control Battle Robot x 1 Gesture Remote Control x 1 Instruction Manual x 1 Specifications Gesture Control Battle Robot Power Supply: 4 x "AAA" 1.5V Batteries (Alkaline type preferred, not included) Gesture Remote Control Power Supply: 3 x "AAA" 1.5V Batteries (Alkaline type preferred, not included) Frequency: 27.145 MHz Gesture Remote Control On/Off  Power On/Off Slide the ON/OFF Switch to ON to turn on the Gesture Remote Control. Slide the ON/OFF Switch to OFF to turn off the Gesture Remote Control.	Operate Your Robot Note: To avoid losing control, always pay attention when playing the Gesture Control Battle Robot. Right Punch  Hold the right Gesture Remote Control and punch Left Punch  Hold the left Gesture Remote Control and punch How To Play  Back of the insert card Follow the dashed line to cut out the "Target Practice" board & "Do Not Pass" block.	 "Target Practice" board "Do Not Pass" block  Operate Gesture Control Battle Robot to hit the "Target Practice" board to count the score You can also create more "Target Practice" board by yourself  Battle with other Gesture Control Battle Robot and avoid crossing the "Do Not Pass" block *Other Gesture Control Battle Robot sold separately
Batteries Installation-Car  To install batteries into the Gesture Control Battle Robot, unscrew the screw on the battery box cover to open the battery compartment. Insert 4 x "AAA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown in the diagram. Put back in place the battery box cover and tighten the screw. Notice: When placing the batteries, you must insert according to the correct polarity, the Gesture Control Battle Robot won't function if batteries are reversed.	Batteries Installation-Remote Control  To install batteries into the Gesture Remote Control, unscrew the screw on the battery box cover to open the battery compartment. Insert 3 x "AAA" 1.5V batteries (Not Included) into the battery box. Batteries should be placed as shown in the diagram. Put back in place the battery box cover and tighten the screw. Notice: When placing the batteries, you must insert according to the correct polarity, the Gesture Remote Control won't function if batteries are reversed.	Performance Tips - Do not control the Gesture Control Battle Robot on grass, sand or go through water. - Do not control the Gesture Control Battle Robot in windy or rainy weather. - Do not control the Gesture Control Battle Robot into any sharp object. - Keep fingers, hair and loose clothing away from Gesture Control Battle Robot. Care and Maintenance Always use dry and soft cloth to clean this product. Avoid this product from being exposed to sunlight or heat. Avoid immersing these toys in water, otherwise, the electronic parts may be damaged. Check the product regularly. If any damages are discovered, please stop using immediately, until it is completely repaired in good working condition. IMPORTANT: BATTERY INFORMATION ⚠ CAUTION: 1. TO AVOID BATTERY LEAKAGE a. Always follow the instructions carefully. Use only batteries specified and be sure to insert them correctly by matching the + and - polarity markings. b. Do not mix old batteries and new batteries or standard (carbon-zinc) with alkaline batteries. c. Remove exhausted or dead batteries from the product. d. Remove batteries if product is not to be played with for a long time. e. Do not short-circuit the supply terminals. 2. Should this product cause, or be affected by local electrical interference, move it away from other electrical equipment. Reset (switching ON & OFF again or removing and re-inserting batteries) if necessary.	Warning This product is suitable to be used by people who has operating experience in remote toy or aged no less than 8 years old. Please do not put the product in your mouth to prevent choking hazard of small parts. Please do not put the finger into available interspaces. Please do not play the product in a brutal way such as throwing, crashing or twisting it. Please store the smaller-sized product accessories in places that are out of reach of children, in order to avoid the occurrence of accidents. Avoid placing the batteries in places in high temperatures and avoid exposure to heat. When young children are operating the product, it shall be ensured that the adults are guiding and making sure the product control is within the viewing range of the controller (or instructor) so that it makes the control of the toy more convenient. When the product is not in use, please switch off the power supplies of the toy, and remove the batteries from the product. Please note that we won't take any responsibility for any wrong operation as this may result in severe injury or loss of property, and we cannot control the operating process during the time when the user assembles or uses this product. Once this product is sold, we won't be responsible for any safety responsibility during the time the user operates or uses controls this products.	FCC Statement This device complies with the part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Caution: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with instructions may cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on. The user is encouraged to try to correct the interference by one or more of the following measures: • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or experienced radio/ TV technician for help. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction. FCC ID: ZADM5-ET-0011-27 Item# ET-0011 1 92234 06177 0 Made in China Keep All Relevant Information for Future Reference