



#### INTRODUCTION

Thank you for purchasing our product model SP5049 ARES XL, a high performance Smartphone.

The product is designed with several functions, including WCDMA, WIFI, BT, GPS, FM, voice calls and many more. You can easily storage wireless and Internet communications, you can surf the Internet when and where you wish; the equipment has a GPS module, so you can surf through software already installed (or to be installed). The device has multiple sensors, providing it a total innovative functioning.

The current manual will provide you with the basic technical functions. Before first use, please, read it fully and carefully.

#### Maintenance

- The Smartphone must be always dry. In order to avoid damage in the device, malfunctioning due to corrosion or short-circuit, avoid the following elements being exposed to water: the device, battery and charger. Under no circumstance manipulate the device or charger with wet hands.
- Prevent the device, battery or charger from suffering a shake or violent impact.
- Prevent the device, battery or charger from being exposed to extreme, high or low temperatures.
- Under no circumstance the device must be dropped, squeezed or bent.
- Under no circumstance the device or any
  of its complements must be disassembled,
  otherwise both the device and its complements will not be covered by their guarantee. (This action must be only performed by
  qualified personnel).

# **Security Instructions**

Before first use, please, read this section and familiarized your children with its content. For further information, please go to security instructions and warnings.


- In order to guarantee road safety, under no circumstance this device must be used while driving or operating machinery.
- Regarding the use of the device in medical areas, please, respect the rules and regulations and prevent yourself from using it. Turn off the device while being near a center or medical equipment.
- In order to avoid interruptions in airplane electronic equipments, please turn off the Smartphone or select airplane mode.
- Under no circumstance disassemble the Smartphone or any of its complements. This action can only be performed by qualified personnel.

- The Smartphone must be far from magnetic sources since they could erase stored information
- Never expose the Smartphone to high temperatures, liquid or inflammables gases.
- The Smartphone and its complements must be out of reach of children and if a child uses the Smartphone, make sure he is supervised.
- While using the Smartphone, please, respect the rules and regulations; respect privacy and rights of others.
- In order to guarantee the security of your Smartphone, while using the USB cable please observe carefully the instructions established in this manual.
- Never use the Smartphone while being in wet atmosphere and avoid spraying or cleaning with liquids.

# **INDEX**

Características del equipo	8
Getting Started	10
Turning the phone On/Off	10
To turn On the phone	10
To turn Off the phone	10
Unlocking screen	10
Locking screen	11
Using touch screen 1	1-13
Status bar	14
Screen orientation	14
Keys and functions	15
Apps y Widgets	16
Connecting to Internet WLAN	17
Connecting to Internet broadband	18
Safety Information	19

# **PRODUCT OVERVIEW**

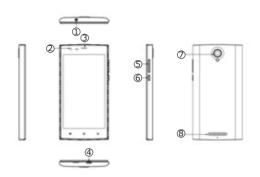

1	Earphone 3.5mm Slot	2	Front-Camera
3	Receiver	4	Micro USB 2.0 HS
5	Volume Key	6	Power Key
7	Rear-Camera	8	Speaker

#### Assemble SIM Card & SD Card



# Assemble the battery



Assemble the back cover



# Turning the phone On/Off

#### To turn On the phone

- Press and hold the PWR key for a few seconds.
- 2. Unlock the screen with your finger.

# To turn Off the phone

- Press and hold the PWR key, select Power Off.
- Tap OK. The phone will be off in a few seconds.

# Unlocking screen

The screen is locked by default when you turn on the phone. To unlock the screen,

- 1. Press the PWR key.
- Drag the inner ring to the edge of the circle to unlock the screen. Draw a pattern if the screen is protected by pattern

lock. Enter a PIN or a password if the screen is locked by a PIN or a password.

# Locking screen

To lock the screen, press the PWR key. It is recommended to lock the screen to protect information in the phone and reduce battery usage. You can also configure your phone to automatically lock after a certain period of time.

Tap - Settings -Display -Sleep to set the sleep time from 15 seconds, 30 seconds, 1 minute, 2 minutes, 5 minutes, 10 minutes, or 30 minutes.

# Using touch screen

All of the functions of the phone, except for power and volume, are performed on the touch screen. Therefore, it is essential to know how to use the touch screen.

The following finger actions might help you easily understand how to use the touch screen.

- <u>Tap</u>: Touch an item (e.g. application or widget) once that appears on the screen with your finger to run it or access a menu or an option
- <u>Doble Tap</u>: Tap an item twice with your finger
- <u>Drag</u>: Tap and hold your finger on an item and move it without losing contact with the screen.
- Flick: Place a finger on an empty space of the screen and move the screen up or down, or left or right
- <u>Pinch</u>: Place two fingers on the screen and move them apart to zoom in a picture, a document or a web page, or move them together to zoom out
- <u>Select and Tap</u>: Tap an item in the list of options available
- <u>Press and Hold</u>: Press a key or any item for a few seconds until a list of options appears.

## **Cautions**

- Do not use sharp tools that can scratch the touch screen.
- Do not allow the touch screen to come in contact with chemicals. The screen may malfunction in chemicals.
- Do not sit on the phone: the touch screen can be damaged.

#### Status bar

The status bar at the top of the screen notifications from various apps, time, and the states of various devices such as battery status, WLAN status, Signal status and so on.

- Notification panel displays notification icons to inform you of new Email, messages, and so on. Slide the panel down to view the notifications and then tap a notification icon to view details of the notification.
- Status panel displays status icons to show the current state of your phone, such as battery charging progress, alarms, Bluetooth, and so on. Slide the panel down to access more settings and configuration options.

#### Screen orientation

For optimal viewing experience, the screen orientation changes automatically depending on how you hold the phone.

NOTE: To enable or disable auto-rotate, slide down the status panel and tap the Autorotate icon.

## Keys and functions

#### 1. Back key

 Tap to return to the previous screen and exit the running application.



• Tap to close the on-screen keyboard in text input mode.

# 2. Home key

- Tap to return to the main screen.
- Tap and hold to open the Google search.

# 3. Menu key

• Tap to open the applications list used recently.

# Apps and widgets

#### <u>Apps</u>

Software that allows you to perform a specific task. Your phone is preloaded with a variety of applications, and additional applications can be downloaded from the Play Store.

# Widgets

A small application which resides on the home screen and provides quick and easy access to information.

#### CONNECTING TO THE INTERNET USING WLAN

NOTE: The range and quality of the WLAN signal is affected by the distance between the phone and the wireless router, the number of connected devices, infrastructure, and objects through which the signal is transmitted.

- 1. Tap Settings WIRELESS & NET WORKS WLAN.
- Enable WLAN by moving the slider to On position. The phone scans for WLAN networks in range.
- **3**. Tap the network you want to connect to.
- Type a password (if connecting to a secure network) and tap Connect to connect to the selected WLAN network.

NOTE: To connect to a secured WLAN network, you must provide the security key. If you do not have the security key, contact the person who manages your WLAN network or the router manufacturer.

NOTE: To start a new search for available WLAN networks, on the WLAN screen, tap

Scan

# CONNECTING TO THE INTERNET USING MOBILE BROADBAND

- 1. Tap is Settings -WIRELESS & NET-WORKS - WLAN, then touch WLAN to disable it.
- The phone automatically searches for the carrier signal and connects to the network. When the phone is connected to a mobile broadband network, the network type appears in the status bar.

NOTE: On the LTE/HSPA+ models, if both WLAN and mobile broadband networks are available, the phone gives priority to WLAN connection.

#### SAFETY INFORMATION

The following list shows how to maintain your phone, together with precautions to take.

- Keep your phone and its accessories out of the reach of pets.
- Do not allow children to use your phone. If children use the device, make sure that they use the phone properly.
- Maintain your phone in dry conditions and keep it within normal operating temperatures.
- Do not use or store your phone in dusty or dirty areas.
- Do not attempt to disassemble your phone
- Do not drop or cause severe impact to your phone.
- Do not use chemical products, cleaning solvents or detergents to clean your phone.
- If your phone does not work properly, contact your dealer immediately.
- Use only authorized batteries, battery chargers and accessories. Any malfunction or damage caused by the use of unauthorized batteries, battery chargers and accessories will void the limited product warranty.

**CAUTION**: We do not assume any responsibility for the failure to comply with the guidelines described above or for inappropriate use of the Smartphone. We reserve the right to make changes to any of the contents of this manual without notice. The contents of this manual may differ from the actual content displayed on the Smartphone. In which case the latter should prevail.



# WOO®

# **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

# Specific Absorption Rate (SAR) Information

SAR tests are conducted using standard operating positions accepted by the FCC with the Phone transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the phone While operating can be well below the maximum value, in general, the closer you are to a Wireless base station antenna, the lower the power output. Before a new model phone is a available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each the FCC that it does not exceed the exposure limit established by the FCC, Tests for each required by the FCC. For body worn operation, this model phone has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 15 mm from the body. Non-compliance with the above restrictions may result in violation of RF exposure guidelines.