





BY MARATHON EST. 1939 88

WIRELESS FAST DUAL CHARGING CLOCK
USER MANUAL


HORLOGE À DOUBLE RECHARGE RAPIDE SANS FIL MODE D'EMPLOI


OROLOGIO A DOPPIA RICARICA VELOCE E SENZA FILI ISTRUZIONI PER L'USO

INSTRUCCIONES DE FUNCIONAMIENTO DEL RELOJ INALÁMBRICO DE CARGA DUAL RÁPIDA

SCHNELLER DRAHTLOSER DOPPELTER LADETAKT BENUTZERHANDBUCH

OVERVIEW

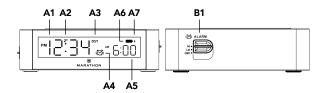

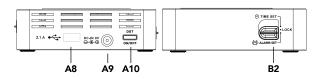

Part A – Front and Back

Part B - Sides

A1: Time

A2: zz lcon

A3: **DST** Icon

A4: Ølcon

A5: Alarm Time A6: Icon

A7: flcon

A8: USB Port


A9: A/C Adapter Jack

A10: ONOFF Button

B1: MALARM Switch

B2: ⊗ TIME SET / (☼) ALARM SET

Switch

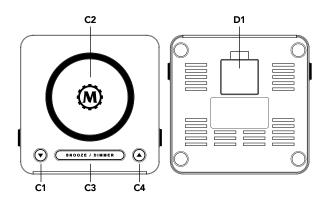

Part C - Top

C1: ▼ Button

C2: Charging Pad
C3: SNOOZE / DIMMER

Button

C4: ▲ Button

Part D - Bottom

D1: Battery Compartment

FEATURES

- Qi wireless charging: Simply place any Qi enabled wireless charging device on the charging pad. No cable connection required.
- · Digital clock with daily alarm function.
- Crisp and vibrant full colour LED display.

POWER SOURCE

This unit uses 1 A/C power adapter and $1 \times CR2032$ battery for backup.

GETTING STARTED

- Plug in the A/C adaptor into the adaptor jack (A9), remove the battery tag from the rear compartment (D1) to activate the clock backup battery which is already installed in the clock when you first receive it.
- When both the A/C adaptor and CR2032 battery have been installed, the unit will automatically switch to the external power supply.
- The CR2032 battery will store all programmed settings in case the A/C adapter is unplugged. If the CR2032 battery is removed, all programmed settings will be lost immediately when the A/C adapter is unplugged.

NOTE: The clock will not operate without the A/C adapter.

SETTING THE TIME

Hold the SNOOZE / DIMMER (C3) button for 2 seconds to select time display in 12-hour or 24-hour format.

- Slide ⊕ TIME SET / 1 ARM SET SWITCH (B2) to ⊕ TIME SET to enter time setting mode.
- Press ▼ or ▲ button (C1 or C4) to adjust the time setting. Press and hold the ▼ or ▲ button to speed up the rate at which the value changes.
- 3. Side @ TIME SET / @ ALARM SET Switch (B2) to LOCK to confirm the current displayed settings.

NOTE: The HOUR value CANNOT be adjusted directly. The HOUR value can only be changed through the adjustment of the MINUTE value.

DAYLIGHT SAVINGS TIME (DST)

- To activate daylight savings time for the clock, press the offer button (A10). You will note that on the display, the time (A1) will increase by 1 hour and the DST icon (A3) will appear.
- To deactivate daylight savings time, press the
 »
 White button (A10). You will note that on the display, the time (A1) will decrease by 1 hour and the DST icon (A3) will disappear.

SETTING THE ALARM

- 1. Slide ⊕ TIME SET / ☞ ALARM SET Switch (B2) to ☞ ALARM SET to enter alarm setting mode.
- 2. Press ▼ or ▲ button (C1 or C4) to adjust the alarm time setting, slide ② TIME SET / ② ALARM SET SWITCH (B2) to LOCK to confirm setting.
- Press and hold the ▼ or ▲ button to speed up the rate at which the value changes.

NOTE: The HOUR value CANNOT be adjusted directly. The HOUR value can only be changed through the adjustment of the MINUTE value.

USING THE ALARM AND SNOOZE FUNCTION

- Slide Maram switch (B1) to activate or deactivate the alarm function. There are three options: HI (alarm sound will be louder), LO (alarm sound will be quieter), OFF (alarm will not sound at all).
- When the alarm function is activated, the ♠ icon (A4) will appear on the display.
- When the alarm sounds, press the snooze / DIMMER button (C3) to pause it and enter snooze mode which will delay the alarm for 5 minutes.