

SETUP GUIDE & OWNERS MANUAL

PABLO DESIGNS 888 MARIN STREET SAN FRANCISCO, CA 94124

PABLODESIGNS.COM
UMA SUPPORT: 888-355-0636
UMASUPPORT@PABLODESIGNS.COM




UMA MINI

UMA MINI INDICATOR OVERVIEW

INDICATOR LIGHT FUNCTIONS:

POWER INDICATOR LIGHT	ILLUMINATED WHITE	POWER IS ON / BATTERY CHARGE 10%-90%
	BREATHING GREEN	POWER IS ON / BATTERY CHARGE 90%-99%
	ILLUMINATED GREEN	POWER IS ON / BATTERY CHARGE 100%
	BREATHING RED	POWER IS ON / BATTERY CHARGE LOW
	UNLIT	POWER IS OFF
	BREATHING BLUE	BLUETOOTH PAIRING MODE ACTIVATED
	ILLUMINATED BLUE	UNIT IS IN PARTY HOST MODE

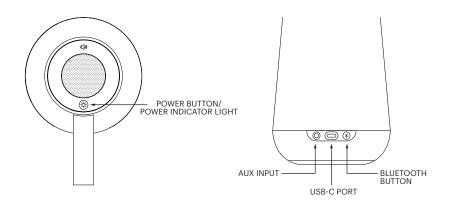

Pablo[®]


UMA MINI

CHARGING UMA MINI

UMA MINI USES AN INTERNAL RECHARGEABLE LITHIUM POLYMER BATTERY THAT WILL LAST THE LIFETIME OF THE DEVICE. FULLY CHARGE UMA MINI'S BATTERY PRIOR TO FIRST USE. TO CHARGE THE BATTERY, CONNECT THE INCLUDED USB-C CABLE TO UMA MINI THEN TO A POWER SUPPLY (NOT PROVIDED)

ANY USB CHARGER WILL WORK WITH UMA MINI. WE RECOMMEND A 10-WATT (5V / 2.1A) USB CHARGER.

KEEP UMA MINI CONNECTED TO THE POWER SOURCE UNTIL POWER INDICATOR LIGHT TURNS SOLID GREEN TO INDICATE A FULL CHARGE. IT MAY TAKE UP TO 2.5 HOURS (FROM ZERO) TO FULLY CHARGE UMA MINI WITH A 10-WATT CHARGER.

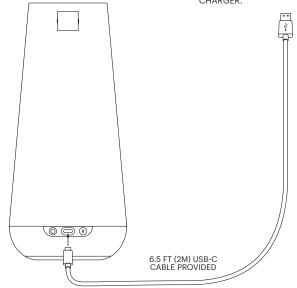

UMA MINI

UMA MINI LIGHT FUNCTION

TO TURN UMA MINI ON, PRESS & HOLD POWER BUTTON FOR 2 SECONDS. POWER INDICATOR LIGHT WILL ILLUMINATE, AND LIGHT WILL TURN ON AT HIGH BRIGHTNESS.

PRESS POWER BUTTON AGAIN BUT BRIEFLY TO CYCLE THROUGH HIGH LIGHT, LOW LIGHT, AND LIGHT OFF.

TO TURN POWER OFF, PRESS & HOLD POWER BUTTON FOR 2 SECONDS.

CONTROLS

- PRESS & HOLD FOR POWER ON.
- PRESS BRIEFLY TO CYCLE LIGHT INTENSITY.
- PRESS & HOLD TO POWER OFF.

POWER BUTTON/ POWER INDICATOR LIGHT

NOTF:

UMA MINI WILL TURN OFF AUTOMATICALLY AFTER 15 MINS OF INACTIVITY. (INACTIVITY = LIGHT IS OFF & NO SOUND IS PLAYING)

Pablo[®]

UMA MINI


UMA MINI SOUND FUNCTION

VOLUME IS CONTROLLED THROUGH A TOUCH CAPACITIVE PAD ON THE TOP OF UMA MINI. USING YOUR FINGER, SLIDE CLOCKWISE TO TURN VOLUME UP, SLIDE COUNTER CLOCKWISE TO TURN VOLUME DOWN.

NOTE: MAKE SURE THE CONNECTED DEVICE'S VOLUME IS TURNED UP.

CONTROLS

- TOUCH INTERFACE.
- REQUIRES 540 DEGREES OF TOUCH ROTATION TO TRAVEL FROM 0%-100% VOLUME.
- SLIDE FINGER CLOCKWISE TO INCREASE VOLUME.
- SLIDE FINGER COUNTER CLOCKWISE TO DECREASE VOLUME.
- VOLUME IS CONTROLLED BY DIRECTION AND DISTANCE OF SLIDE REGARDLESS OF POSITION.

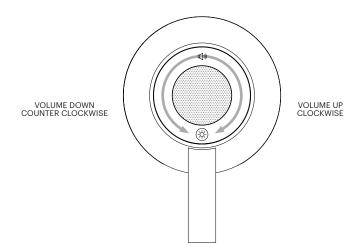

NOTF:

UMA MINI WILL TURN OFF AUTOMATICALLY AFTER 15 MINS OF INACTIVITY. (INACTIVITY = LIGHT IS OFF & NO SOUND IS PLAYING)

pg. 3

UMA MINI


CONNECTING UMA MINI TO A BLUETOOTH® WIRELESS TECHNOLOGY ENABLED DEVICE

PAIRING:

WHEN CONNECTING A BLUETOOTH DEVICE TO UMA MINI FOR THE FIRST TIME, THE DEVICE MUST BE REGISTERED WITH UMA MINI. THIS IS CALLED PAIRING. ONCE PAIRING IS COMPLETED, UMA MINI WILL REMEMBER YOUR DEVICE AND CONNECT AUTOMATICALLY. UMA MINI CAN REMEMBER UP TO 8 DEVICES. TO PAIR YOUR DEVICE WITH UMA MINI, FOLLOW THESE STEPS:

- 1. PRESS & HOLD POWER SWITCH TO TURN UMA MINI ON. POWER INDICATOR LIGHT WILL ILLUMINATE.
- 2. PRESS & HOLD THE BLUETOOTH PAIRING BUTTON ON UMA MINI FOR 1.5 SECONDS TO PUT UMA MINI INTO PAIRING MODE, INDICATED BY A BREATHING BLUE LIGHT. UMA MINI WILL REMAIN IN PAIRING MODE UNTIL A CONNECTION IS MADE, OR FOR UP TO ONE MINUTE.
- 3. TURN ON THE BLUETOOTH FUNCTION ON YOUR DEVICE.
- 4. IN THE BLUETOOTH SETTINGS OF THE DEVICE, SELECT "UMA MINI" FROM THE LIST OF AVAILABLE CONNECTIONS.
- 5. INDICATOR LIGHT ON UMA MINI WILL CHANGE TO WHITE WHEN THE CONNECTION IS SUCCESSFUL
- PLAY MUSIC ON YOUR DEVICE. ENSURE VOLUME ON YOUR DEVICE IS NOT SET TO MUTE.
- AFTER YOUR DEVICE HAS PAIRED WITH UMA MINI, IT WILL CONNECT AUTOMATICALLY TO THE MOST RECENTLY CONNECTED DEVICE. IF IT DOES NOT CONNECT AUTOMATICALLY, REPEAT THE PAIRING PROCESS TO REGISTER YOUR DEVICE.

IF YOU HAVE DIFFICULTY CONNECTING TO UMA MINI, PLEASE REFER TO THE TROUBLESHOOTING GUIDE IN THIS INSTRUCTION MANUAL.

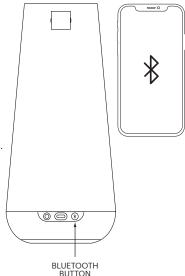

Pablo^{*}


UMA MINI

CONNECTING UMA MINI TO A DEVICE VIA PROVIDED AUXILIARY CABLE

UMA MINI CAN PLAY MUSIC FROM AN AUDIO DEVICE BY CONNECTING THE AUX-IN CABLE (NOT PROVIDED). TO CONNECT YOUR DEVICE TO UMA MINI WITH AUXILIARY CABLE, FOLLOW THESE STEPS:

- PRESS POWER SWITCH FOR 2 SECONDS TO TURN UMA MINI ON. POWER INDICATOR LIGHT WILL ILLUMINATE.
- PLUG AUXILIARY CABLE INTO UMA MINI'S AUDIO-IN PORT. BLUETOOTH WIRELESS TECHNOLOGY WILL BE DISABLED AND ALL WIRELESS CONNECTIONS WILL BE DISCONNECTED, EXCEPT FOR PARTY MODE CONNECTIONS.
- 3. PLUG THE OTHER END OF THE AUXILIARY CABLE INTO THE AUDIO-OUT (HEADPHONE) PORT ON YOUR DEVICE.
- PLAY MUSIC ON YOUR DEVICE. ENSURE VOLUME ON YOUR DEVICE IS NOT MUTED.

NOTE: AUXILIARY CABLE IS NON-DIRECTIONAL.

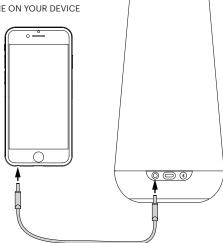


Pablo*

PARTY MODE ON UMA MINI

"PARTY MODE" REFERS TO CONNECTING MORE THAN ONE UMA MINI TO A SINGLE PHONE (OR OTHER SOURCE OF MUSIC/SOUND)

PARTY MODE **HOST**: IS THE FIRST UMA MINI THAT CONNECTS TO THE PHONE (OR OTHER SOURCE OF MUSIC/SOUND). THE HOST STREAMS MUSIC TO ALL CONNECTED SATELLITES.

PARTY MODE **SATELLITES**: ARE THE ADDITIONAL UNITS THAT CONNECT TO THE HOST. THE SATELLITES DO NOT CONNECT DIRECTLY TO THE PHONE WHEN IN PARTY MODE. EACH OF THE SATELLITES CONNECTS TO THE HOST, LIKE SPOKES TO A HUB. THIS IS AN IMPORTANT CONSIDERATION FOR RANGE AND FOR HOW THE CONNECTIONS ARE MADE. THE VOLUME ON SATELLITES CANNOT BE INDIVIDUALLY CONTROLLED WHILE IN PARTY MODE; VOLUME CAN ONLY BE CONTROLLED BY THE HOST OR THE PHONE.

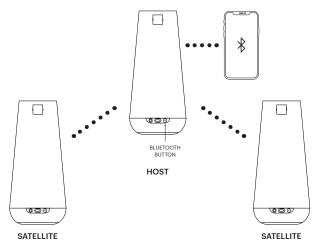

NOTE: THE HOST CAN BE CONNECTED TO THE PHONE (OR OTHER SOURCE OF MUSIC/SOUND) VIA BLUETOOTH OR AUX CABLE.

Pablo[®]

UMA MINI


SETTING UP PARTY MODE ON UMA MINI

THIS FEATURE REQUIRES MORE THAN ONE UMA MINI. YOU CAN CONNECT THE HOST UP TO 23 SATELLITE UMA MINIS FOR PARTY MODE.

- CONNECT ONE UMA MINI TO A PHONE (OR OTHER SOURCE OF MUSIC/SOUND) VIA BLUETOOTH OR AUX CABLE. REFER TO PAGES 5 & 6 FOR STEPS. THIS UMA MINI WILL BE THE HOST.
- 2. ON THE SAME UMA MINI (THE HOST), PRESS & HOLD BLUETOOTH BUTTON FOR 5 SECONDS TO ACTIVATE PARTY MODE HOST. DISREGARD THE PAIRING TONE AFTER 1.5 SECONDS AND CONTINUE HOLDING THE BLUETOOTH BUTTON UNTIL HEARING "PARTY MODE HOST." THE UNIT IS NOW SEARCHING FOR A SATELLITE AND WILL STOP AFTER 1 MINUTE IF NO CONNECTION IS MADE.
- 3. ON A DIFFERENT UMA MINI, QUICKLY DOUBLE PRESS THE BLUETOOTH BUTTON TO ACTIVATE PARTY MODE SATELLITE. THE UNIT SHOULD SAY "PARTY MODE SATELLITE" AFTER PRESSING THE BUTTON AND IS NOW SEARCHING FOR THE HOST AND WILL STOP AFTER 1 MINUTE IF NO CONNECTION IS MADE.
- 4. WHILE BOTH UNITS ARE SEARCHING, SHORT PRESS THE BLUETOOTH BUTTON ON EACH UNIT TO COMPLETE THE CONNECTION. BOTH UNITS WILL MAKE A SOUND INDICATING THEY ARE CONNECTED. NOTE: THIS STEP IS ONLY NECESSARY AT INITIAL SETUP, NOT EVERY TIME THE UNITS CONNECT. THE INDICATOR LIGHT ON THE HOST WILL TURN SOLID BLUE, AND REMAIN BLUE THE ENTIRE THE UNIT IS IN HOST MODE. THE INDICATOR LIGHT ON THE SATELLITE WILL TURN SOLID BLUE FOR 1 MINUTE AFTER STARTUP, THEN RETURN TO NORMAL WHITE COLOR.
- 5. TO CONNECT MORE UMA MINI SATELLITES, PERFORM THE SAME STEPS ABOVE WITH EACH ADDITIONAL SATELLITE AND THE SAME UMA MINI HOST. YOU CAN CONNECT THE HOST UP TO 23 SATELLITE UMA MINIS FOR PARTY MODE.
- ONCE THE HOST AND SATELLITES HAVE MADE A CONNECTION, THEY WILL REMEMBER EACH OTHER AND AUTOMATICALLY CONNECT EVERY TIME.

NOTE: THE VOLUME ON SATELLITES CANNOT BE INDIVIDUALLY CONTROLLED WHILE IN PARTY MODE; VOLUME CAN ONLY BE CONTROLLED BY THE HOST OR THE PHONE.

UMA MINI

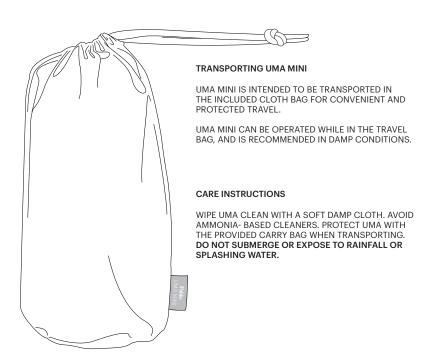

Pablo[®]

UMA MINI

BLUETOOTH® WIRELESS TECHNOLOGY CONNECTION TROUBLESHOOTING GUIDE

IF YOU HAVE DIFFICULTY CONNECTING YOUR DEVICE TO UMA MINI, FOLLOW THIS GUIDE:

DDOD! FM	CAUCE	COLUTION
PROBLEM	CAUSE	SOLUTION
UMA MINI CANNOT MAKE A BLUETOOTH CONNECTION	UMA MINI IS TURNED OFF	PRESS POWER SWITCH 2 SEC. TO TURN UMA MINI ON. POWER INDICATOR LIGHT WILL ILLUMINATE.
	BLUETOOTH FUNCTION IS TURNED OFF	PRESS THE BLUETOOTH BUTTON TO ENABLE BLUETOOTH FUNCTION.
	UMA MINI HAS NOT YET BEEN PAIRED WITH THE BLUETOOTH DEVICE	PERFORM PAIRING PROCESS (P.5).
	UMA MINI IS TOO FAR FROM THE BLUETOOTH DEVICE	MOVE THE AUDIO SOURCE CLOSER. MAXIMUM DISTANCE FROM DEVICE IS 30M (98 ft) UNOBSTRUCTED.
	AN AUX-IN CABLE IS CONNECTED	DISCONNECT AUX-IN CABLE.
	ANOTHER BLUETOOTH DEVICE IS CONNECTED	DISCONNECT OR POWER OFF THE OTHER BLUETOOTH DEVICE.
	THE PAIRING INFORMATION HAS BEEN DELETED. UMA MINI CAN REMEMBER UP TO 8 DEVICE PAIRINGS. IF A 9TH DEVICE IS PAIRED, UMA MINI WILL FORGET THE FIRST DEVICE	PERFORM PAIRING PROCESS AGAIN (P.5).
	UMA MINI IS NOT REGISTERED ON THE DEVICE'S BLUETOOTH CONNECTION LIST	PERFORM PAIRING PROCESS AGAIN (P.5).
	THERE IS A DEVICE (MICROWAVE, WIRELESS LAN, ETC.) THAT OUTPUTS SIGNALS IN THE 2.4 GHZ FREQUENCY BAND NEARBY	MOVE UMA MINI AWAY FROM ANY DEVICE THAT EMITS RF SIGNALS OR INTERFERENCE.

pg. 9

UMA MINI

LIGHT AND AUDIO FUNCTION TROUBLESHOOTING GUIDE

IF YOU HAVE DIFFICULTY PROPERLY OPERATING UMA MINI, FOLLOW THIS GUIDE

PROBLEM	CAUSE	SOLUTION
BLUETOOTH AUDIO CONNECTION IS DISTORTED OR DROPPING OUT	THE SOURCE DEVICE IS TOO FAR AWAY FROM UMA	MOVE THE AUDIO SOURCE CLOSER. MAXIMUM DISTANCE FROM DEVICE IS 30M (98 ft) UNOBSTRUCTED.
	THERE IS A DEVICE (MICROWAVE, WIRELESS LAN, ETC.) THAT OUTPUTS SIGNALS IN THE 2.4 GHz FREQUENCY BAND NEARBY	MOVE UMA MINI AWAY FROM ANY DEVICE THAT EMITS RF SIGNALS OR INTERFERENCE.
	THE VOLUME ON EITHER THE AUDIO SOURCE OR UMA MINI IS TOO LOW	ADJUST THE VOLUME ON BOTH UMA MINI AND THE AUDIO SOURCE.
	POOR CONNECTION BETWEEN UMA MINI AND THE SOURCE DEVICE	RESTART BOTH THE AUDIO SOURCE AND UMA MINI.
	BLUETOOTH PAIRING FAILED	RE-PAIR YOUR DEVICE WITH UMA MINI.
	SOURCE DEVICE IS PAIRED TO A DIFFERENT BLUETOOTH DEVICE	DISCONNECT OR POWER OFF THE OTHER BLUETOOTH DEVICE.
3.5MM AUXILIARY AUDIO CONNECTION IS DISTORTED OR DROPPING OUT	3.5MM AUXILIARY CABLE IS NOT FULLY CONNECTED TO EITHER UMA MINI OR THE SOURCE DEVICE	CHECK THAT THE 3.5MM AUXILIARY CABLE IS SECURELY CONNECTED TO BOTH UMA MINI AND THE SOURCE DEVICE.
	SOURCE DEVICE ISN'T WORKING PROPERLY	TRY DIFFERENT SOURCE DEVICE TO ENSURE THE ISSUE ISN'T THE SOURCE DEVICE.
	3.5MM AUXILIARY CABLE IS FAULTY OR DAMAGED	TRY A DIFFERENT 3.5MM AUXILIARY CABLE.
STREAMED AUDIO CONTENT IS DISTORTED OR DROPPING OUT	INTERNET CONNECTIVITY ISSUES	FOLLOW YOUR ROUTER/ISP INSTRUCTIONS TO ENSURE YOUR INTERNET CONNECTION IS FUNCTIONING PROPERLY.

IF PROBLEMS PERSIST, PLEASE CONTACT UMA SUPPORT: 888-355-0636 / UMASUPPORT@PABLODESIGNS.COM

Pablo[®]

UMA MINI

PARTY MODE TROUBLESHOOTING GUIDE

IF YOU HAVE DIFFICULTY PERFORMING PARTY MODE, FOLLOW THIS GUIDE:

PROBLEM	CAUSE	SOLUTION
UMA MINI IS NOT ACTIVATING PARTY MODE HOST	UNIT IS POWERED OFF	MAKE SURE UMA MINI IS CHARGED AND IS POWERED ON.
	BLUETOOTH BUTTON WAS NOT PRESSED & HELD FOR 5 SECONDS	PRESS & HOLD BLUETOOTH BUTTON FOR 5 SECONDS TO ACTIVATE PARTY MODE HOST. CONTINUE HOLDING THE BLUETOOTH BUTTON UNTIL HEARING "PARTY MODE HOST."
UMA MINI IS NOT ACTIVATING PARTY MODE SATELLITE	UNIT IS POWERED OFF	MAKE SURE UMA MINI IS CHARGED AND IS POWERED ON.
	BLUETOOTH BUTTON WAS NOT QUICKLY DOUBLE PRESSED	THE UNIT SHOULD SAY "PARTY MODE SATELLITE" AFTER DOUBLE PRESSING THE BLUETOOTH BUTTON.
UMA MINI IS ONLY PLAYING MUSIC ON ONE DEVICE	BLUETOOTH BUTTON WAS NOT PRESSED ONCE ON EACH UNIT AFTER ACTIVATING PARTY MODE HOST & PARTY MODE SATELLITE	MAKE SURE TO SHORT PRESS THE BLUETOOTH BUTTON ON EACH UMA MINI UNIT AFTER ACTIVATING PARTY MODE HOST & PARTY MODE SATELLITE TO COMPLETE THE CONNECTION.
	PARTY MODE HAS NOT BEEN SET UP	REFER TO PAGES 8-9 TO SET UP PARTY MODE.
WHICH ONE IS THE HOST?	CAN'T IDENTIFY HOST	THE UMA MINI HOST WILL HAVE A SOLID BLUE INDICATOR LIGHT WHEN POWERED ON.
DON'T HAVE THE UMA MINI HOST ANYMORE	THE UMA MINI HOST IS LOST/ NOT WORKING	PERFORM A FACTORY RESET FOR ALL UMA MINI'S AND ESTABLISH ANOTHER UNIT AS THE HOST.
UNABLE TO CHANGE UMA MINI PARTY MODE HOST	THERE IS ANOTHER HOST	PERFORM A FACTORY RESET. NOTE THAT THIS WILL DELETE ALL STORED CONNECTIONS.
SATELLITES' CONNECTIONS ARE CUTTING OFF	UMA MINI SATELLITES ARE TOO FAR FROM THE HOST	MOVE THEM CLOSER. MAXIMUM DISTANCE FROM HOST IS 30M (98 ft) UNOBSTRUCTED.
CAN'T CONTROL VOLUME	ADJUSTING VOLUME FROM SATELLITE	VOLUME CAN ONLY BE CONTROLLED FROM HOST OR PHONE WHEN IN PARTY MODE.

Pablo^{*} UMA MINI

PERFORMING FACTORY RESET ON UMA MINI

YOU CAN PERFORM A FACTORY RESET ON UMA MINI IF NEEDED. THIS WILL DELETE ALL PAIRED BLUETOOTH DEVICES AND PARTY MODE CONNECTIONS.

- 1. TURN UMA MINI ON BY PRESSING & HOLDING THE POWER BUTTON FOR 2 SECONDS.
- 2. PRESS & HOLD THE BLUETOOTH BUTTON FOR **10 SECONDS**. DISREGARD THE PAIRING TONE AND "PARTY MODE HOST."
- 3. RELEASE THE BUTTON AFTER HEARING "FACTORY RESET."
- 4. WAIT APPROXIMATELY 1 MINUTE AFTER RESETTING UMA MINI BEFORE RESTARTING IT.
- 5. UMA MINI IS NOW RESTORED TO FACTORY SETTINGS AND READY FOR NEW CONNECTIONS.

Pablo[®]

UMA MINI

MORE INFO

FOR MORE INFORMATION AND PRODUCT DETAILS VISIT WWW.PABLODESIGNS.COM

SPECIFICATIONS

LIGHT OUTPUT: 100 LUMENS MAX

BATTERY RUNTIME: UP TO 20 HOURS DEPENDING ON USE

CHARGE TIME: UP TO 3 HOURS

POWER CONSUMPTION: 4W (LIGHT) 8W MAX (SPEAKERS)

SPEAKER WATTAGE: 8W MAX

BLUETOOTH VERSION: 5.0

BLUETOOTH RANGE: 30M

DIMENSIONS: 8.4" X 4" X 5.6" (21.4CM X 10CM X 14.2CM)

WEIGHT: 1.54LBS (0.7KGS)

PATENT PENDING

MADE IN CHINA

WARRANTY

FOR WARRANTY AND ADDITIONAL TROUBLESHOOTING INFORMATION VISIT

WWW.PABLODESIGNS.COM/PRODUCT/UMA-MINI

FOLLOW US

FOLLOW US ON FACEBOOK AND INSTAGRAM

WWW.FACEBOOK.COM/PABLODESIGNSSF @PABLODESIGNSSF



Dablo[®] SAFETY GUIDE

SAFETY INFORMATION **▲** DANGER

DI FASE DEAD THESE SAFETY WARNINGS AND CAUTIONS CAREFULLY.

FAILURE TO READ LINDERSTAND, AND FOLLOW THESE WARNINGS CAN RESULT IN DEATH OR SERIOUS IN IURY AND PROPERTY DAMAGE

A WARNING FIRE AND ELECTRIC

SHOWER SINK SAUNA POOL OR

STEAM POOM, DEATH OR SERIOUS

• DO NOT EXPOSE YOUR UMA MINI TO

LIQUID MOISTURE HUMIDITY OF RAIN

EXPOSURE OF UMA MINI TO MOISTURE

COULD RESULT IN ELECTRIC SHOCK

PERSONAL INJURY FROM

FLECTROCUTION WILL RESULT

SHOCK HAZARD · NEVER USE UMA MINI NEAR A BATHTUE

CRUSH, BEND, DEFORM, PUNCTURE SHPED MICROWAVE INCINERATE PAINT OR INSERT FOREIGN OBJECTS IN TO LIMA MINI, SUCH ACTIONS COULD RESULT IN ELECTRIC SHOCK. DO NOT ATTEMPT TO DISASSEMBLE LIMA MINI OR FORCE OPEN THE BUILT-IN RATTERY IN DAMP AREAS OR IN EXTREME! HIGH OR LOW TEMPERATURES RECAUSE THIS COULD RESULT IN ELECTRIC SHOCK · DO NOT CLEAN UMA MINI WHEN IT IS BEING CHARGED, ALWAYS LINPLUG LIMA MINI BEFORE CLEANING. · CLEAN LIMA MINI ONLY WITH A DRY CLOTH

· DO NOT DROP, DISASSEMBLE, OPEN,

▲ WARNING BATTERY EXPLOSION HAZARD · DO NOT DISPOSE OF UMA MINI IN A FIRE

· DISPOSE OF UMA MINI AND UMA MINI'S

BATTERY IN ACCORDANCE WITH LOCAL

BATTERY WITH REGULAR HOUSEHOLD

REGULATIONS DO NOT DISPOSE OF THE

EXPLOSION

THE BATTERY COULD EXPLODE CAUSING DEATH OR SERIOUS PERSONAL INJURY. · DO NOT EXPOSE UMA MINI TO EXTREME HIGH OR LOW TEMPERATURES RECAUSE THIS COULD RESULT IN AN EXPLOSION. · DO NOT LEAVE YOUR UMA MINLIN DIRECT SUNLIGHT FOR EXTENDED PERIODS OF TIME BECAUSE THIS COULD RESULT IN AN · DO NOT LEAVE YOUR UMA MINI NEAR OPEN FLAMES OR OTHER HEAT SOURCES SLICH AS COOKING BURNERS, CANDLES OR FIREPLACES BECAUSE THIS COULD RESULT IN AN EXPLOSION. • DO NOT BLOCK ANY VENTILATION

INSTRUCTIONS SUPPLIED WITH LIMA MINI AUTOMOBILE ACCIDENT HAZARD

· ONLY CHARGE THE BATTERY IN

ACCORDANCE WITH THE USER

· ROAD SAFETY COMES FIRST; OBEY ALL LOCAL LAWS, ALWAYS KEEP YOUR HANDS FREE TO OPERATE THE VEHICLE WHILE

INSIDE A VEHICLE IE NOT PROPERLY

. DO NOT USE LEAVE OR STORE LIMA MINI

OR ANY OF ITS ACCESSORIES, NEAR OR

RECALISE SERIOLIS PERSONAL INJURY OR

CHECK THE VEHICLE OWNER'S MANUAL

FOR THE LOCATION OF ALL AIR RAGS.

DEATH MAY RESULT IF AN AIR BAG DEPLOYS.

OVER YOUR AUTOMOBILE'S AIR BAG

. LIMA MINI PRESENTS A PROJECTILE HAZARD

. DO NOT ATEMPT TO REPLACE YOUR UMA WARNING MAY RESULT IN SERIOUS DEDSONAL INTERV

▲ CAUTION

DURING MUSIC PLAYBACK, AN

AND INJURE SOMEONE.

MINI'S RATTERY, IT IS BUILT-IN AND IS NOT CHANGEABLE FAILURE TO FOLLOW THIS · DO NOT ATTEMPT TO REPAIR MODIFY OR DISASSEMBLE YOUR LIMA MINLYOURSELE IT DOES NOT CONTAIN ANY USER-SERVICEABLE COMPONENTS. · DO NOT USE ABRASIVE CLEANERS TO CLEAN YOUR LIMA MINI RECAUSE THIS COULD CAUSE SCRATCHES AND DAMAGE . DO NOT BRING YOUR UMA MINLIN TO CONTACT WITH ANY SHAPP OR JECTS RECAUSE THIS COULD CAUSE SCRATCHES AND DAMAGE • DO NOT INSERT ANYTHING INTO YOUR

UMA MINI UNLESS OTHERWISE SPECIFIED

IN THE USER INSTRUCTIONS. THIS MAY

FALL HAZARD · DO NOT PLACE UMA MINI ON HIGH SURFACES UNLESS PROPERLY SECURED.

IMPROPERLY SECURED UMA MINI MAY MOVE. WHICH COULD CAUSE IT TO FALL LIMA MINI INSIDE AN AIRCRAFT LINI ESS

ALLOWED BY YOUR AIRLINE FCC NOTICE

DESIGNATED AREAS

DAMAGE THE INTERNAL COMPOMENTS

REQUIRE AN ELECTRICAL DEVICE OR RF

• TURN OFF YOUR UMA MINI PRIOR TO

BOARDING AN AIRCRAFT DO NOT LISE

OBSERVE ALL SIGNS AND DISPLAYS THAT

RADIO PRODUCT TO BE SWITCHED OFF IN

THIS EQUIPMENT HAS BEEN TESTED AND FOUND TO COMPLY WITH THE LIMITS FOR A CLASS B DIGITAL DEVICE PURSUANT TO PART 15 OF THE ECC PULLES. THESE LIMITS ARE DESIGNED TO PROVIDE REASONARIES PROTECTION AGAINST HARMFUL INTERFERENCE IN A RESIDENTIAL INSTALLATION THIS FOLIPMENT GENERATES LISES AND CAN RADIATE PADIO ERFOLIENCY ENERGY AND 15 NOT INSTALLED AND USED IN ACCORDANCE WITH THE INSTRUCTIONS MAY CAUSE HARMELII INTERFERENCE TO PADIO COMMUNICATIONS HOWEVER THERE IS

NO GUARANTEE THAT INTERFERENCE WILL

INSTALLATION IF THIS FOLLIPMENT DOES

CAUSE HARMFUL INTERFERENCE TO

RADIO OR TELEVISION RECEPTION

NOT OCCUP IN A PARTICULAR

INTERFERENCE BY ONE OF THE FOLLOWING MEASURES: · REORIENT OR RELOCATE THE RECEIVING · INCREASE THE SEPARATION BETWEEN THE EQUIPMENT AND RECEIVER CONNECT THE EQUIPMENT INTO AN OUTLET ON A CIRCUIT DIFFERENT FROM THAT TO WHICH THE RECEIVER IS CONNECTED · CONSULT THE DEALER OR AN

FXPFRIFNCED RADIO/TV TECHNICIAN

FOR HELP

INTEREPREDENCE AND

LINDESIRED OPERATION

2. THIS DEVICE MUST ACCEPT ANY

INTEREPRENCE THAT MAY CAUSE

INTERFERENCE RECIEVED INCLUDING

WHICH CAN BE DETERMINED BY TURNING

IS ENCOURAGED TO TRY TO CORRECT THE

THE EQUIPMENT OFF AND ON, THE USER

FCC NOTICE THIS DEVICE COMPLIES WITH PART 15 OF THE ECC RULES OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: 1. THIS DEVICE MAY NOT CAUSE HARMFUL

THE DEVICE HAS BEEN EVALUATED TO MEET GENERAL RF EXPOSURE REQUIREMENT, THE DEVICE CAN BE USED IN PORTABLE EXPOSURE CONDITION WITHOUT

FCC CAUTION

· ANY CHANGES OR MODIFICATIONS NOT

RESPONSIBLE FOR COMPLIANCE COLLID

THIS DEVICE AND ITS ANTENNA(S) MUST

NOT BE CO-LOCATED OR OPERATING IN

RADIATION EXPOSURE

EXPRESSIV APPROVED BY THE PARTY

VOID THE USER'S AUTHORITY TO

CONJUNCTION WITH ANY OTHER

OPERATE THIS EQUIPMENT

ANTENNA OR TRANSMITTER

STATEMENT

INTERFERENCE, AND

2 THIS DEVICE MUST ACCEPT ANY

INTERFERENCE THAT MAY CAUSE

UNDESIRED OPERATION OF THE DEVICE.

INTERFERENCE, INCLUDING

PESTRICTION THIS DEVICE COMPLIES WITH INDUSTRY CANADA LICENSE-EXEMPT RSS STANDARD(S) OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: 1. THIS DEVICE MAY NOT CAUSE

PARI ODESIGNS COM

FCC ID: 2AGV2UMAMINI IC: 20979-UMAMINI TO LOCATE THE ECC AND IC IDENTIFICATION NUMBERS PLEASE LOOK ON THE LINDERSIDE OF LIMA MINI

2019 PARLO DESIGNS, ALL RIGHTS RESERVED

INFORMATION SÉCURITAIRE **A** DANGER

S'IL VOUS PLAÎT LIRE CES CONSIGNES DE SECURITE

ET MISES EN GARDE DÉFAUT DE LIRE COMPRENDRE ET SUIVRE CES

AVERTISSEMENTS DELIT ENTRAÎNER LA MORT OLLDES BLESSURES GRAVES DE DOMMAGES MATÉRIELS

A ATTENTION INCENDIE ET RISQUE

DE CHOC ÉLECTRIQUE . IF IAMAIS LITH ISER HIMA MINI PRES D'HNE BAIGNOIRE DOUCHE LAVARO SAUNA PISCINE OLI ALI HAMMAM MORT OLI DE BLESSURES GRAVES PAR ELECTROCUTION EN · NE PAS EXPOSER L'UMA MINI AU LIQUIDE

POLIPPAIT PROVOCILER LINICHOO

ELECTRIQUE

MOISISSURES, L'HUMIDITE OU LA PLUIE EXPOSITION DE UMA MINI A HUMIDITE

- . NE LAISSEZ PAS TOMBER DEMONTER OUVRIR, ECRASER, PLIER, DEFORMER PERCER LACERER MOCROLONDES INCINERER. DE PEINTURE OU OBJETS INSERT FTRANGER POUR UMA MINI. AU RISQUE DE BROVOQUER UN CHOC
- FLECTRIQUE · NE PAS TENTER DE DEMONTER UMA MINI AU DE FORCE OUVRIR LA BATTERIE INTEGRES DANS DES ENDROITS HUMIDES OU A DES TEMPERATURES EXTREMEMENT FLEVEES OUR BASSES CAR CELA
- POURRAIT PROVOQUER UNE FLECTROCLITION · NE PAS NETTOYER LIMA MINI OLIAND II EST EN CHARGE, TOUJOURS
- DEBRANCHER UMA MINI AVANT LE
- NETTOYAGE · CLEAN LIMA MINI LINIOLIEMENT AVEC LIN

CHIFFON SEC

BATTERIE D'EXPLOSION

UNE EXPLOSION

VENTAL ATION

A ATTENTION

- · NE PAS JETER DE L'UMA MINI DANS UN INDENDIF LA BATTERIE PEUVENT EXPLOSI CAUSANT LA MORT OU DES BLESSURES
- · NE PAS EXPOSER A DES TEMPERATURES UMA MINI EXTREMEMENT ELEVEES OU BASSES CAR CELA POLIPPAIT PROVOCILE LINE EXPLOSION · NE LAISSEZ PAS VOTRE LIMA MINI ALI SOI FII DIRECTE POUR LONGUES PERIODES DE

. IETEZ UMA MINI ET DE BATTERIE UMA MINI

TEMPS CAR CELA POLIRRAIT PROVOQUEE · NE LAISSEZ PAS VOTRE FLAMMES UMA MINI PRES OUVERTE OU D'AUTRES SOURCES D CHALFUR TELLES QUE DES BRUILEURS D CHISSON BOLIGIES OF DES FOYERS CAR CELA POURRAIT PROVOQUER LINE

EN CONFORMEMENT ALLY REGLEMENTATION CONFLABLES

· NE PAS BLOQUER LES OUVERTURES DE

AVEC ORDINAIRE LES ORDURES

LOCALES, NE PAS JETER DE LA BATTERIE · SEULEMENT CHARGER LA BATTERIE EN CONFORMITE AVEC LES INSTRUCTIONS DE L'UTILISATEUR FOURNI AVEC L'UMA MINI.

· SECURITE ROUTIERE AVANT TOUT

RESPECTEZ LA REGLEMENTATION

· I IMA MINI PRESENTE UNE MENACE

PAS CORRECTEMENT ATTACHE

UMA MINI, NI AUCUNE DE SES

POUR L'EMPLACEMENT DES SACS.

D'UNE VOITURE

LOCALE GAPDEZ TOLLIQUES LES MAINS

PROJECTILE INTERIUR D'UN VEHICULE SI

LIBRES POUR CONDUIRE LE VOLANTE

. NE DAS LITHUSED I AISSED NI DANGED

ACCESSOIRES A PROXIMITE OU SURE

VOTRE ALITOMORILE'S AIR RAG PARCE

MANUEL DU PROPRIETAIRE DU VEHICULE

QUE DES BLESSURES GRAVES OU LA

MORT PEUT PROVOQUER SI UN SAC

ACCIDENT AUTOMOBIL DANGER

· NE TENTEZ PAS DE REMPI ACER VOTRE'S BATTERIE LIMA MINI: IL EST CONSTRUIT-IN ET EST PAS MODIEIARI E LE NON-RESPECT CET AVERTISSEMENT PEUT ENTRAINER DES BLESSURES GRAVES . NE DAS ESSAVED DE DEDADED DE MODIFIER OU DE DEMONTER VOTRE LIMA MINI VOUS: IL NE CONTIENT PAS DE COMPOSANTS UTILISATEUR. · NE PAS LITILISER DE NETTOYANTS ABRASIES POUR NETTOYER VOTRE LIMA

MINI CAR CELA POLIPRAIT PROVOCUER

DES RAYURES ET DES DOMMAGES

POINTUS CAR CELA POURRAIT

· NE PAS APPORTER VOTRE LIMA MINI

PROVOQUER DES RAYURES ET DES

· NE RIEN INSERER DANS VOTRE LIMA MINI

POUR CONTACTER AVEC DES OBJECTS

SECURISES. PENDANT UNE LECTURE

MUSIQUE MAL FIXES UMA MINI PEUT SE

DEPLACED OF POLIPRAIT CALISER SA

CHUTE ET BLESSER QUELQU'UN.

RISQUE DE CHUTE · NE PAS PLACER UMA MINI SUR LA HAUTE

SURFACES MOINS D'ETRE CORRECTEMENT

▲ PRÉCAUTION

AVIS FCC CET EQUIPEMENT A ETE TESTE ET TROUVE CONFORME AUX LIMITES POUR UN DISPOSITIF NUMERIQUE DE CLASSE B. CONFORMEMENT ALL CHARITRE 15 DE LA REGLEMENTATION FCC. CES LIMITES SONT CONCLES POLIP OFFRIR LINE PROTECTION CONTRE LES INTEREFRENCES NUISIRIES DANS LINE INSTALLATION RESIDENTIFILE CET FOLLIDEMENT GENERE LITTLESE ET PELIT FREQUENCES RADIO ET. SI NON INSTALLE ET LITILISE CONFORMEMENT AUX

INSTRUCTIONS PEUT PROVOCUER DES

COMMUNICATIONS. CEPENDANT, IL YA

INTEREPRENCES A LA PADIO

POURRAIT ENDOMMAGER LES COMPOSANTS INTERNES · RESPECTER TOUS LES PANNEAUX ET LES AFFICHAGES OUR NECESSITENT UN APPAREIL ELECTRIQUE OU RF RADIO PRODUIT ETRE ETEINT DANS LES ZONES

SAUF INDICATION CONTRAIRE DANS LES

INSTRUCTIONS D'UTILISATION. CELA

ETEIGNEZ VOTRE UMA MINI AVANT

LITH ISER LIMA MINI INTERILIR D'UN

COMPAGNIE AFRIENNE

L'EMBARQUEMENT D'UN AVION NE PAS

AFRONEE SALIE ALITORISATION DE VOTRE

- QUI PEUT ETRE DETERMINE EN METTANT L'APPAREIL HORS TENSION, L'UTILISATEUR EST ENCOURAGE A ESSAYER DE CORRIGER LES INTERFERENCES PAR UNE DES MESLIPES SLUVANTES: · REORIENTER OU DEPLACER L'ANTENNE DE
 - L'EQUIPEMENT ET LE RECEPTEUR · BRANCHEZ L'APPAREIL DANS LINE PRISE SUR UN CIRCUIT DIFFERENT DE CELUI SUF AVIS FCC

AUGMENTER LA SEPARATION ENTRE LEQUEL LE RECEPTEUR EST BRANCHE.

1. CET APPAREIL NE PAS PROVOQUER

2 CET APPAREIL DOIT ACCEPTER TOLLTE

UN FONCTIONNEMENT INDESIRABLE.

RECIEVED D'INTERFERENCES, INCLUANT

LES INTERFERENCES POLIVANT ENTRAINER

D'INTERFERENCES ET

AUCUNE GARANTIE QU'AUCUNE

EQUIPEMENT PROVOQUE DES

INSTALLATION PARTICULIERS SLCET

INTERFERENCE NE SE PRODUIRA DANS UNE

INTERFERENCES RADIO OU TELEVISION CE

CET APPAREIL EST CONFORME ALLIS DES REGLES DE LA FCC, OPERATION EST SOUMISE AUX DEUX CONDITIONS

EXPOSITION AUX RADIO FREQUENCIES.

FCC ATTENTION

FONCTIONNER CET FOUIPEMENT

ANTENNE OU EMETTEUR.

RADIATIONS

EXPOSITION AUX

DÉCLARATION D'EXPOSITION AUX

EN CONJONCTION AVECUINE AUTRE

TOUTE MODIFICATION OU MODIFICATIONS

PARTIE RESPONSABLE DE LA CONFORMITE

ANNULER LE DROIT DE L'UTILISATEUR FAIRE

· CET APPAREIL ET SON ANTENNE(S) NE DOIT

PAS FTRF CO-LOCALISE OU FONCTIONNER

RADIATIONS: L'APPAREIL A ETE EVALUE POUR

REPONDRE AUX EXIGENCIES GENERALS D

NON EXPRESSEMENT APPROLIVES PAR LA

L'APPAREIL PEUT ETRE UTILISE EN CONDITION D' EXPOSITION PORTARI E SANS RESTRICTION CET APPAREIL EST CONFORME AVEC INDUSTRIE CANADA EXPEMPTS DE LICENSE STANDARD RSS (S). OPERATION EST SOLIMISE

1 CET APPAREIL NE PAS PROVOQUER

D'INTERFERENCES, ET

2. CET APPAREIL DOIT TOUTE INTERFERENCES, Y COMPRIS CELLES POUVANT CAUSER UN DYSFONCTIONNEMENT DE L'APPAREIL

AUX DEUX CONDITIONS SUIVANTES

PARLODESIGNS COM

FCC ID: 2AGV2UMAMINI IC: 20979-UMAMINI

POLIR LOCALISER LE NUMEROS D'IDENTIFICATION ECC ET IC S'IL VOLIS PLAIT

REGARDEZ SUR LE DESSOUS DE L'UMA MINI

2019 PABLO DESIGNS, TOUS LES DROITS SONT RESERVES.