

## User Manual

### Battery installation

#### For Sailboat:

Turn the rear latch to the side.

Remove the screw and open the batteries cover.

Insert 3\*AAA batteries (1.5V) and close the batteries cover.

Put the screw back, turn the rear latch back and lock the batteries cover.

#### For Remote Controller:

Remove the screw and open the batteries cover.

Insert 2\*AAA batteries (1.5V) and close the batteries cover.

Put the screw back.

### Operation procedure

Put the sailboat on the water and make sure the frequency docking successfully when the sailboat and the controller are turned on.

Use the remote controller to control the sailboat.

The sailboat will move forward when you press the up button in both sides.

The sailboat will move backward when you press the down button in both sides.

The sailboat will turn left forward when you press the up button in right side.


The sailboat will turn right forward when you press the up button in left side.

The sailboat will turn left backward when you press the down button in right side

The sailboat will turn right backward when you press the down button in left side

The sail boat will rotate left when you press the down button in left side and up button in right side

The sail boat will rotate right when you press the up button in left side and down button in right side

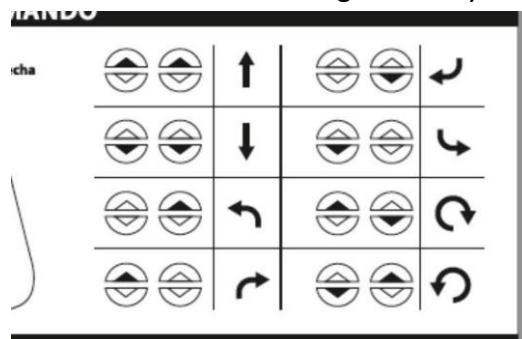

### Notes:

Please make sure the sailboat and remote controller within 8-10meter range.

Age Recommendation: 10+ years and adult supervision required.

If you do not play the sailboat, you must remove the batteries from both of the remote controller and the sailboat.

### Packaging includes:

Boat unit 1pc

Keel unit 1pc

Sail unit 1pc

Remote controller unit 1pc

### Product dimension:

Sailboat unit: 4" W\*12.25" D\*1.25" H

Remote controller unit: 9" W\*2" D\*12.5" H

## User Manual

### Description:

Remote controller batteries: 2\*AAA (1.5V) batteries are not included.

Sailboat batteries: 3\*AAA (1.5V) batteries are not included.

Range: 8-10 meters

Duration: about 15-18mins

Suitable for children of 10 years old or above

Put the sailboat on the water in place before playing

The sailboat will be malfunction if the whole body of sailboat is pressed into the water intentionally

For safety, do not touch the propeller from stern when the sailboat is on the water



FCC ID: 2AHGJJMSDB758-49-1

This device complies with Part 15 of FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for the compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part, 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.