



Nothing Comes Close to a Cobra®

Operation Using Your Radio

- USB Charger Jack**
- To charge batteries in radio:**
1. Check to see that the batteries have been inserted properly.
 2. Insert the cable into the charge jack located at the right side of the radio.
 3. Plug the cable into USB-compatible power port.
 4. The radio will display flashing battery icon while charging.

Only use the supplied rechargeable batteries and desktop charger (not included) for recharging your Cobra microTALK® radio.

Please charge new batteries for 14 hours for first time of use.

Note: Cobra recommends your radio is turned off while being charged.

- Quick Start**
1. Turn **ON/OFF/Volume** Knob clockwise to turn the radio on and counter clockwise to turn the radio off.
 2. Select a desired channel. (Details please refer P.8)
- Both radios must be tuned to the same channel/privacy code to communicate.
3. Press and hold the **Talk** button while speaking into the microphone.
 4. When finished talking, release the **Talk** button and listen for a response.

Before operating the radio, please read all safety and operating instructions. Save all instructions in a safe place for future reference.

- WARNING: Important Safety Instructions**
1. Only accessories included in this package or specified by the manufacturer should be used with the radio. The 5V micro-USB charging input is compatible with most high quality micro-USB chargers that fully conform to the USB standards.
 2. Do not use cleaners or solvents to clean the exterior of the radio. Use only a damp or dry cloth.
 3. Do not expose this product to splashing or dripping water.
 4. Do not attempt to service the receiver yourself. Removing the cover will void the warranty. Changes or modifications not expressly approved by Cobra may void the user's authority granted by the FCC to operate this device and should not be made.
 5. Do not plug the wall adaptor into the power outlet if the outlet is wet.
 6. Do not use any portable radio that has a damaged antenna. If a damaged antenna comes into contact with your skin, a minor burn can result.

- WARNING: Important Safety Instructions for Battery**
- Read All Instructions**
- Do not incinerate the battery even if it is severely damaged or is completely worn out.
 - Do not discard battery in a fire. The battery can explode in a fire.
 - Do not replace battery in any area labeled "Hazardous Atmosphere". Any sparks created in a potentially explosive atmosphere can cause an explosion or fire.
 - Do not disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.
 - Do not dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
 - Do not attempt to charge alkaline batteries.
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.

Recycle Battery

Local, state or federal laws may prohibit disposal of batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

Introduction Making Life Easier and Safer

Staying in touch with your family and friends is convenient and easy when using your microTALK® radio. Some of the many uses you will discover include:

Communicating with others while hiking, biking, and working; keeping track of family and friends at a crowded public event; checking with travel companions in another car; talking with neighbors; arranging meeting spots with others while shopping at the mall.

- Belt Clip**
- Secure your microTALK® radio while on the go.**
- Carrying your microTALK® radio with you is easy when using the belt clip or optional wrist strap.
- The belt clip easily attaches to your belt, purse, or backpack.

Customer Assistance Product Service & Support

For any questions about operating this new Cobra branded product, PLEASE CONTACT US FIRST...do not return this product to the retail store. The contact information for support will vary depending on the country in which you purchased and utilize the product.

To obtain warranty service or other information for products purchased from Altis itself or through its authorized reseller or agent and utilized in the U.S.A., please call our consumer support line at (866) 721-3805, or email us at support@altistec.com. You will receive instructions on how to ship the products at your expense to an Altis Global Limited Authorized Service Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; and, most importantly; (c) your address and telephone number.

For warranty and customer service information outside the US, please contact your local dealer.

For further information needed on its features, please visit www.cobrawalkietalkie.com for frequently asked questions and the electronic manual.


Customer Assistance Operational Cautions

Exposure to high volume sound levels may cause temporary or permanent damage to your hearing. Although there is no single volume setting that is appropriate for everyone, you should always use your radio with the volume set at low level and avoid prolonged exposure to high volume sound levels.

1. Set the volume control in a low position and use as low a volume as possible.
2. Avoid turning up the volume to block out noisy surroundings. Whenever possible, use your radio in a quiet environment with low background noise.
3. Limit the amount of time you use headsets or earpiece at high volume levels.
4. When using the radio without a headset or earpiece, do not place the radio's speaker directly against your ear.
5. Observe all signs and instructions that require an electrical device or RF radio product to be switched off in designated areas, such as gas/refueling stations, hospitals, blasting areas, potentially explosive atmospheres, or aircraft.
6. If you experience a skin irritation after using this product, discontinue use and seek medical attention.
7. If the product or charger: overheats; has a damaged cord or plug; has been dropped or damaged; has been dropped into water, disconnect any charger from its power supply, discontinue use of the product.

- Electromagnetic Interference**
- Nearly every electronic device is susceptible to electromagnetic interference (EMI) if inadequately shielded, designed, or otherwise configured for electromagnetic compatibility. Turn off your radio in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.
- When instructed to do so, turn off your radios when on board an aircraft. Any use of a RF device must be in accordance with applicable laws, regulations and airline crew instructions.
 - Some radios may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer or physician to discuss alternatives.
 - If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your doctor or physician may be able to assist you in obtaining this information.

Introduction Product Features

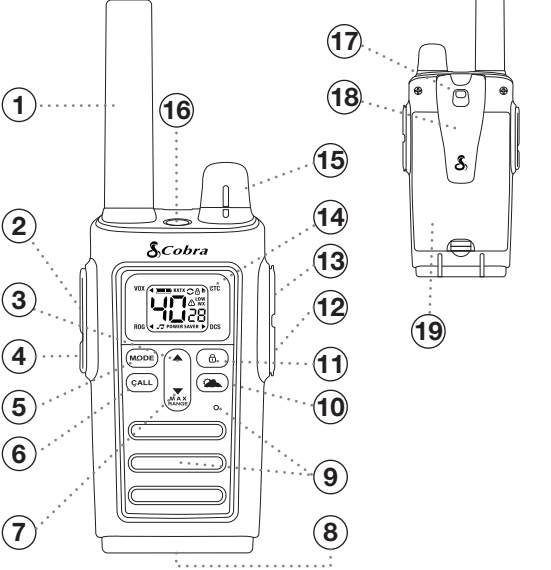

- | | |
|--------------------------|--------------------------------------|
| 1. Antenna | 11. Lock Button |
| 2. Push-to-Talk Button | 12. USB Charge Jack |
| 3. Up/Hi/LOW Button | 13. External Speaker/Microphone Jack |
| 4. Flashlight Button | 14. Backlit LCD Display |
| 5. Mode Button | 15. ON/OFF/Volume Knob |
| 6. Call Button | 16. Emergency Alert Button |
| 7. Down/Max-Range Button | 17. Wrist Strap Connection |
| 8. LED/S.O.S Flashlight | 18. Belt Clip |
| 9. Speaker/Microphone | 19. Battery Compartment Door |

- Backlit LCD Display**
-
- | | |
|----------------------------|------------------------------------|
| 1. VOX Icon | 7. Low Power Icon |
| 2. Battery Level Indicator | 8. Weather Icon |
| 3. Receive/Transmit Icon | 9. Weather Alert Icon |
| 4. Scan Icon | 10. DCS/CTCSS Privacy Code Numbers |
| 5. Lock Icon | 11. DCS Icons |
| 6. CTCSS Icons | 12. Power Saver Icon |
| 7. Low Power Icon | 13. Key Tone Icon |
| 8. Weather Icon | 14. Roger Beep Indicator |
| 9. Weather Alert Icon | 15. Channel Numbers |

Maximum range may vary and is based on unobstructed line-of-sight communication under ideal conditions.

Privacy Codes

Your microTALK® radio incorporates two advanced coded squelch systems that can help to reduce interference from other users on any given channel. CTCSS (Continuous Tone Coded Squelch System) provides 38 privacy codes and DCS (Digitally Coded Squelch) provides 83 privacy codes. This provides a total of 121 Privacy Codes. Either system can be used on channels (CH1-CH22), but both systems cannot be used on the same channel at the same time.

- To successfully communicate using a privacy code, both the sending and receiving radios must be tuned to the same channel and to the same privacy code system (CTCSS or DCS) and privacy code number. Each channel will remember the last privacy code system and number you select.
- The privacy code 00 is not a privacy code, but allows all signals to be heard on a channel that is set to 00 on both the CTCSS and DCS systems.

- Set CTCSS Privacy Codes**
- Mode Button**
- To select a CTCSS privacy code:**
1. After selecting a channel (only be available on channel 1~22), press the **Mode** button until the **CTCSS** Indicator appears and the small numbers next to the channel number flash on the display.
- If DCS is turned on at the channel selected, the display will flash the CTCSS icon and "OFF." To switch from DCS to CTCSS, press the **Up** or **Down** button while the display is flashing "OFF." The display will then show the small numbers flashing and you will then be able to proceed to step 2.

2. Press using the **Up** or **Down** button to select a privacy code. You can hold the **Up** or **Down** button for fast advance.
3. When your desired CTCSS privacy code is displayed, choose one of the following:
 - a. Press the **Mode** button to enter the new setting and proceed to other functions.
 - b. Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - c. Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.

Caring for Your microTALK® Radio

Your microTALK® radio will give you years of trouble-free service if cared for properly. Handle the radio gently. Keep the radio away from dust. Never put the radio in water or in a damp place. Avoid exposure to extreme temperatures.

- Installing Batteries (Battery already pre-installed)**
- Remove Belt Clip**
- To install or replace batteries:**
1. Remove belt clip by releasing belt clip latch and sliding clip up.
 2. Pull up on the battery door latch to remove the battery compartment cover.
 3. Insert the supplied three AA rechargeable batteries or non-rechargeable alkaline batteries. Position batteries according to polarity markings.
 4. Replace battery compartment cover and belt clip.



A-1

A-2

A-3

1

2

3

- Listening for a Response**
- Listening**
- Release the **Talk** button to receive incoming transmissions. Your microTALK® radio is always in **Standby** mode while the **Talk** or **Call** buttons are not pressed.

- To Adjust Volume**
- Volume Knob**
- Press and hold **MAX-RANGE** Button for three seconds to turn off the auto squelch, then rotating **Volume** Knob until you reach a comfortable listening level.
1. Rotate **Volume** Knob clockwise to increase the volume.
 2. Rotate **Volume** Knob counterclockwise to decrease the volume.
 3. Press and hold **MAX-RANGE** Button to enable the auto squelch.
- Do not hold the radio close to your ear. If the volume is set to an uncomfortable level, it could hurt your ear.

- Call Button**
- Call Button**
- Press and release the **Call** button to alert others that you are calling. The other person will hear a two second call tone. This tone is used only to establish voice communications.
- See page 14 on how to select between ten call tone settings.

- LED/S.O.S. Flashlight**
- LED/S.O.S. Flashlight**
- Press and release the **LED/S.O.S. Flashlight** button below the **Talk** button to use the LED flashlight located at the bottom of the radio.
- To activate S.O.S. function, press and hold the **LED/S.O.S. Flashlight** button to turn on. Press and release to turn off the flashlight or S.O.S. function.

- Auto Squelch/Maximum Range**
- Your microTALK® radio will automatically shut off weak transmissions and unwanted noise due to terrain, conditions or if you've reached your **Maximum Range** limit.
- You can turn **off** auto squelch (or turn **on** maximum range extender), allowing all signals to be received and extending the maximum range of your radio.

- MAX-RANGE Button**
- To turn maximum range extender on (Turn off auto squelch):**
- Press and hold the **MAX-RANGE** button for at least three seconds until you hear background noise which indicates the maximum range extender is **on**.
- To turn maximum range extender off (Turn on auto squelch):**
- Press and hold the **MAX-RANGE** button.

- Lock Function**
- Lock Button**
- The **Lock** function locks the **Up**, **Weather** and **Mode** buttons to prevent accidental operation.
- To turn the lock on or off:**
- Press and hold the **Lock** button for two seconds.
- A beep sound is used to confirm your lock **on** or **off** request. When in **Lock** mode, the **Lock** icon will be displayed.

- microTALK® Range**
- Maximum Range**
- Your range will vary depending on terrain and conditions. In flat, open country your radio will operate at maximum range.
- Reduced Range**
- Buildings and foliage in the path of the signal can reduce the range of the radio.
- Reduced Range**
- Dense foliage and hilly terrain will further reduce the range of the radio.
- Reduced Range**
- On Channels 8 through 14, 34 through 37, your radio automatically switches to low power, which will limit the range the radio can communicate.

Remember, you can achieve maximum range by using maximum range extender. See page 6 for details.

7

Operation Mode Functions

Scrolling Through the Mode Function

By scrolling through the **Mode** function, you will be able to select or turn on preferred features of your microTALK® radio. When scrolling through the **Mode** function, your radio features will be displayed in the same predetermined order:

- Mode Button**
- Channel Selection
 - Set CTCSS Privacy Codes
 - Set DCS Privacy Codes
 - Set Vox On/Off
 - Set Vox Sensitivity
 - Set Channel Scan
 - Set Call Tones 1-10
 - Set Roger Beep On/Off
 - Set Key Tones On/Off

- Channel Selection**
- The radio has 40 channels, Channel 1 to 22 are compatible with other brands of Two-Way radios.
- Mode Button**
- Up/Down Button**
- Channel Number**
1. Briefly press and release **Mode** button, the channel number flashes.
 2. Press **Up** or **Down** button to select a channel. (You can hold the **Up** or **Down** button for fast advance)
 3. When the desired channel is displayed, choose one of the following:
 - a. Press the **Mode** button to enter the new setting and proceed to other functions.
 - b. Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - c. Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.

Both radios must be tuned to the same channel to communicate.

See page 18 for frequency allocations charts.

8

4

5

6

Mode Functions (continued on back side)


10

Operation


Mode Functions (continued)

Voice Activated Transmit (VOX)

In **VOX** mode, your microTALK® radio can be used “hands-free,” automatically transmitting when you speak. You can set the **VOX** sensitivity level to fit the volume of your voice and avoid transmissions triggered by background noise.




1. Press the **Mode** button until the **VOX** indicator flashes on the display. The current **On** or **Off** setting is displayed.




2. Press the **Up** or **Down** button to turn **VOX On** or **Off**.

3. Choose one of the following:

- Press the **Mode** button to enter the new setting and proceed to other functions.
- Press the **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
- Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.




VOX **OFF**



To set **VOX** sensitivity:

- Press the **Mode** button until the **VOX** icon flashes and the current sensitivity level is displayed.

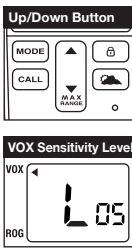

The current **VOX** sensitivity level is displayed with letters “L” and a Number 1 through 5, with Number 5 being the most sensitive level and Number 1 being the least sensitive level.




Channel Scan

Your microTALK® radio can automatically scan channels.

To scan channels:

- Press the **Mode** button until the **Scan** icon and the current **off** setting are flashing.
- Press the **Up** or **Down** button to select Channel Scan **on** or **off**.
- Choose one of the following:
 - While the current setting is **on**, press **Talk** or **Call** button to begin scanning channels.
 - While the current setting is **on**, do not press any button for 6 seconds to begin scanning channels.
 - While the current setting is **off**, press **Mode** button to proceed to other functions.
 - While the current setting is **off**, press **Talk** or **Call** button to return to **Standby** mode.
 - While the current setting is **off**, do not press any buttons for 6 seconds to return to **Standby** mode.



Scan Icon



Scan Channels



Up/Down Button




The radio will check privacy codes while scanning channels.

The **Scan** icon will continue to be displayed when scan is **on**. Your radio will continue to scan all channels and stop if an incoming transmission is detected. Your radio will remain on that channel for 8 seconds.

During scanning (while receiving an incoming transmission), you can choose from the following:

- Press and hold the **Talk** button to communicate on that channel. Your radio will remain on that channel and return to **Standby** mode.
- Press the **Up** or **Down** button to resume scanning channels.
- Press the **Talk** or **Call** button to return to Standby.




Ten Call Tone Settings

You can choose between ten different **Call Tone Settings** to transmit a call alert.

To change a call tone setting:

- Press the **Mode** button until the letter “C” and the current call tone number (01 through 10) is displayed. The current call tone will sound for three seconds.
- Press the **Up** or **Down** button to hear the other call tone settings.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.



Up/Down Button




Call Tone Setting



Roger Beep Confirmation Tone

Your listener will hear an audible tone when you release the **Talk** button. This alerts the other party that you are finished talking and it is OK for them to speak.




To turn roger beep on or off:


- Press the **Mode** button until the **Roger Beep** indicator flashes. The current **on** or **off** setting is displayed.
- Press the **Up** or **Down** button to select Roger Beep **on** or **off**.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and proceed to other functions.
 - Press **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.



Up/Down Button



Roger Beep indicator




Key Tone On/Off

When **Key Tone** is **On**, an audible tone will sound each time a button is pressed.

To turn key tone on or off:


- Press the **Mode** button until **Key Tone** icon flashes. Current key tone status **on** or **off** will flash.
- Press the **Up** or **Down** button to select key tone on or off.
- Choose one of the following:
 - Press the **Mode** button to enter the new setting and return to **Standby** mode.
 - Press **Talk** or **Call** button to enter the new setting and return to **Standby** mode.
 - Do not press any buttons for 6 seconds to enter the new setting and return to **Standby** mode.



Up/Down Button



Key Tone Icon




Set High / Low Transmit Power Level

Your radio can transmit selectively at 0.5 or 1.5 watts of power. Use the low power setting for short-range communications and use the high power setting for long-range communications.



To toggle between High/Low Power Modes:

- Press and hold the **Hi/Low** button until **Low** icon toggled. (**Low** icon means the current channel that set as low power output, otherwise it is in **High** power mode)

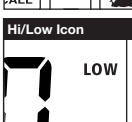

Hi/Low Icon



Channel 8–14, 34–37 only operates on Low power setting.



NOAA® All Hazards Radio Channels

You can use your microTALK® radio to listen to **NOAA All Hazards Radio** channels transmitting in your area.

To listen to All Hazards Radio channels:

- Press the **Weather** button once until the **All Hazards Radio** icon and the currently selected All Hazards Radio channel are displayed.
- Use the **Up** or **Down** button to change **All Hazards Radio** channels.
- The **All Hazards Radio** icon will continue to be displayed when **All Hazards Radio** is on.
- To exit **All Hazards Radio**, press and hold the **Weather** button.




Hazards Radio Icon



Up/Down Button

*National Oceanographic and Atmospheric Administration



Weather (WX) Alert Mode

Turning On the Weather Alert function will allow your radio to automatically receive NOAA weather signals and warnings from designated weather broadcast stations. If the radio is turned ON, it will alert to Weather and other emergency alerts broadcast by NOAA.



To turn Weather Alert On or Off:

- Press the **Weather** button twice until the **Weather Alert** icon flashes on the display. The current On or Off setting is displayed.
- Press the **Up** and **Down** button to turn Weather Alert On or Off.
- Press and hold the **Weather** button again to save the new setting and exit the **Weather Alert** Mode and return to **Standby** mode. The Weather Alert icon show on the display when it turned on.



Weather Radio Icon




Up/Down Button



This feature is set to OFF by default.



Make sure the strongest Weather channel is selected for your area using the channel selection in the previous menu.



Emergency Alert Mode

The Emergency Alert feature can be used to signal members in your group of your need for urgent help. RX380 series radios will operate in an automatic “hands-free” emergency control mode for a total of 30 seconds after activating the Emergency Alert. RX380 series radios in your group will automatically advance the speaker volume to the maximum setting and sound a warbling alert tone for 8 seconds. The alert tone is emitted from your own radio speaker and the receiving radios in your group. After the 8 seconds alert, any spoken words or incidental sounds at your end will be transmitted to the group for 22 seconds. For the 30 seconds duration of Emergency Alert mode, RX380 series radio controls and buttons will be locked to maximize reception of the emergency message.



1. Press and hold the **Emergency Alert** button for 3 seconds.



2. Release the button after the LCD backlight flashes and the alert tone begins to sound. There is no need to continue to hold the **Emergency Alert** button or use PTT for your message to be transmitted.



3. After the alert tone ends you may speak into the microphone. Your voice or incidental sounds will be transmitted. The LCD backlight will continue to flash for the duration of the 22 seconds period.

4. After 30 seconds your radio speaker will emit a Talk Confirmation Tone and the LCD backlight will stop flash. Operation then returns to normal two-way mode.



Note: All Cobra RX380 / RX680 / CXY900 / PX650 series radios are fully compatible with the Emergency Alert feature if they would be tuned to the same channel and same privacy code. Radio brands other than Cobra RX380 / RX680 / CXY900 / PX650 series can receive the emergency alert signal, but may not respond with adjusted volume settings, locked controls, or a warbling alert tone. Users of other radio models set to the same channel and code will hear a steady tone for 8 seconds followed by the voice transmission for 22 seconds.



Warning: The Emergency Alert feature should only be used in the event of an actual emergency. Cobra is not responsible if there is no response to the emergency alert from the receiving group.

Operation

General Specifications

Frequency Allocation and Compatibility

A = Channel No. for 40 Channel Models
B = Frequency in MHz
C = Power Output
D = Code System / Code No.

A	B	C	D	A	B	C	D
1	462.5625	High	ANY	21	462.7000	High	ANY
2	462.5875	High	ANY	22	462.7250	High	ANY
3	462.6125	High	ANY	23	462.5625	High	CTCSS / 38
4	462.6375	High	ANY	24	462.6125	High	CTCSS / 35
5	462.6625	High	ANY	25	462.6625	High	CTCSS / 32
6	462.6875	High	ANY	26	462.7125	High	CTCSS / 29
7	462.7125	High	ANY	27	462.5500	High	CTCSS / 26
8	467.5625	Low	ANY	28	462.6000	High	CTCSS / 23
9	467.5875	Low	ANY	29	462.6500	High	CTCSS / 20
10	467.6125	Low	ANY	30	462.7000	High	CTCSS / 17
11	467.6375	Low	ANY	31	462.5875	High	DCS / 1
12	467.6625	Low	ANY	32	462.6375	High	DCS / 4
13	467.6875	Low	ANY	33	462.6875	High	DCS / 7
14	467.7125	Low	ANY	34	467.5625	Low	DCS / 10
15	462.5500	High	ANY	35	467.6125	Low	DCS / 13
16	462.5750	High	ANY	36	467.6625	Low	DCS / 16
17	462.6000	High	ANY	37	467.7125	Low	DCS / 19
18	462.6250	High	ANY	38	462.5750	High	DCS / 22
19	462.6500	High	ANY	39	462.6250	High	DCS / 25
20	462.6750	High	ANY	40	462.6750	High	DCS / 28



IMPORTANT NOTICE:

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received,including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Safety Information for microTALK® Radios

Your wireless handheld portable transceiver contains a low power transmitter. When the talk button is pushed, it sends out radio frequency (RF) signals. The device is authorized to operate at a duty factor not to exceed 50%. In August 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for handheld wireless devices

Important

FCC RF Exposure Requirements: For body-worn operation, this radio has been tested and meets the FCC RF exposure guidelines when used with Cobra accessories supplied or designated for this product. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. Use only the supplied antenna. Unauthorized antennas, modifications or attachments could damage the transmitter and may violate FCC regulations.

Normal Position

Hold the transmitter approximately 2 inches from your face and speak in a normal voice, with the antenna pointed up and away.

FCC Part 15.21 Warning Statement-

NOTE: THE GRANTEE IS NOT RESPONSIBLE FOR ANY CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE PARTY RESPONSIBLE FOR COMPLIANCE. SUCH MODIFICATIONS COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.



ISED RSS warning

This product meets the applicable Industry Canada technical specifications. / Le présent matériel est conforme aux spécifications techniques applicables d'Industrie Canada.

This device complies with ISED license-exempt RSS standard (s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes:

(1) l'appareil ne doit pas produire de brouillage, et

(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



ISED Radiation Exposure Statement:

For body worn operation, this model device has been tested and meets the FCC/ISED RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that Contains no metal and that positions of the face up minimum distance is 25 mm

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Pour le corps, ce modèle d'appareil a été testé et adapté à la RF renforcée Lignes directrices relatives à l'exposition lorsqu'elles sont utilisées avec un accessoire pour ce produit ou lorsqu'elles sont utilisées avec celui-ci Un accès-soire ne contenant pas de métal et dont la distance minimale de la face est de 25 mm

Tout changement ou modification non expressément approuvé par la partie responsable de la conformité l'équipement



MODEL RX380:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) This device may not cause harmful interference, and 2) this device must accept any interference received,including interference that may cause undesired operation.

FCC Warnings: Replacement or substitution of transistors, regular diodes or other parts of a unique nature, with parts other than those recommended by Cobra may cause a violation of the technical regulations of part 95 of the FCC rules, or violation of type acceptance requirements of part 2 of the rules.

Warranty & Trademark Acknowledgment



Limited One-Year Warranty

Altis Global Limited warrants to the original consumer purchaser only that this product and the component parts thereof, will be free from defects in workmanship and materials for a period of one year from the date of first consumer purchase. During this period, Altis will, repair or replace, at its sole option and discretion, this product or any defective parts. Altis' liability hereunder shall be limited to repair or replacement of the defective part or parts, and such correction shall constitute a fulfillment of all of Altis' warranties hereunder.

This limited warranty is only valid for the original consumer purchaser in limited jurisdictions and is not transferrable. This limited warranty will automatically terminate prior to expiration if this product is sold or otherwise transferred to another party. The product must be purchased from Altis or an authorized dealer or the warranty is void. This limited warranty is valid only for products purchased and utilized in specific jurisdictions. Please visit our website at www.cobrawalkietalkie.com for a list of jurisdictions wherein this limited warranty is valid.

This limited warranty does not cover damage due to misuse, abuse, negligence, acts of God, accident, commercial use or modification of, or to any part of this product. This warranty does not cover damage due to improper operation, maintenance or installation; ordinary wear and tear; or attempted alterations or repairs by anyone other than Altis or someone authorized by Altis to do warranty work. Any unauthorized alterations or repairs will void this warranty. This limited warranty does not cover product sold AS IS or WITH ALL FAULTS. This limited warranty is invalid if the factory applied serial number or date stamp has been altered, defaced or removed from this product. This limited warranty does not cover product purchased or utilized in a jurisdiction not covered.

The procedure for obtaining service and support, and the applicability of this warranty, will vary depending on the country or jurisdiction in which you purchase and utilize the product. For details on obtaining product service, support and other warranty information please visit www.cobrawalkietalkie.com.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

EXCEPT AS EXPRESSLY SET FORTH IN THIS WARRANTY, ALTIS MAKES NO OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. ALTIS EXPRESSLY DISCLAIMS ALL WARRANTIES NOT STATED IN THIS LIMITED WARRANTY. ANY IMPLIED WARRANTIES THAT MAY BE IMPOSED BY LAW ARE LIMITED TO THE TERMS OF THIS EXPRESSED WARRANTY.

LIMITATION OF REMEDIES AND DAMAGES. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. ALTIS SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO ATTORNEYS' FEES AND/OR COSTS OF LITIGATION. FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. ALTIS IS NOT LIABLE FOR ANY DAMAGES CAUSED BY THE PRODUCT OR BY THE PRODUCT TO PERFORM, INCLUDING ANY LOST PROFITS, LOST SAVINGS, INCIDENTAL DAMAGES, OR CONSEQUENTIAL DAMAGES.

ALTIS IS NOT LIABLE FOR ANY CLAIM MADE BY A THIRD PARTY OR MADE BY YOU FOR A THIRD PARTY. THIS LIMITATION APPLIES WHETHER DAMAGES ARE SOUGHT, OR A CLAIM MADE, UNDER THIS WARRANTY OR AS A TORT CLAIM (INCLUDING NEGLIGENCE OR STRICT PRODUCT LIABILITY), A CONTRACT CLAIM, OR ANY OTHER CLAIM. THIS LIMITATION CANNOT BE WAIVED OR AMENDED BY ANY PERSON. THIS LIMITATION OF LIABILITY WILL BE EFFECTIVE EVEN IF ALTIS OR AN AUTHORIZED REPRESENTATIVE OF ALTIS HAS BEEN ADVISED BY YOU OF THE POSSIBILITY OF ANY SUCH DAMAGES.

Some states and countries do not allow limitations on how long an implied warranty lasts and do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state and country to country.

Provided that the product was purchased from Altis itself or through its authorized reseller or agent and utilized in the U.S.A., Altis will, without charge, repair or replace, at its option, defective products, products or component parts upon delivery to the authorized Altis Global Limited Authorized Service Center, accompanied by proof of the date of first customer purchase, such as a duplicated copy of a sales receipt.

You must pay any initial shipping charges required to ship the product for warranty service, but the return charges, to an address in the U.S.A, will be at Altis' expense, if the product is under warranty.

For Products Purchased Outside the U.S.A.

Please contact your authorized local reseller or agent for warranty information.



Trademark Acknowledgment

Manufactured, distributed, or sold by Altis Global Limited, official licensee for this product. Cobra®, microTalk®, Nothing Comes Close to a Cobra®, and the snake design are registered trademarks of Cobra Electronics Corporation, USA. Cobra Electronics Corporation™ is a trademark of Cobra Electronics Corporation, USA. All other product or service names are the property of their respective owners.

©Cobra Electronics Corporation, USA 2020. All rights reserved.

Altis Global Limited,
2140 McGee Road,
Suite A-2200,
Snellville, GA, USA
support@altistec.com

Notes

