

USER'S MANUAL

PROFESSIONAL MOBILE SPEAKER

Model: PKL122PRO

FCC ID: 2AHQ8PKLPRO

INSTRUCTION

Dear Customer,

This product is a well-designed portable multimedia acoustics which applies to karaoke, stage, household, outdoor activities, parties or other activities. It offers you a chance to indulge yourself in music at any time and place, and provides perfect sound service to your computers, digital media players, mobile phone and other audio-visual products.


IN order to achieve the best performance of your product, please read this instruction manual carefully before using, and keep it for future reference.

CONTENT:

General Information-----	Page1
warning-----	Page2
Safety-----	Page3
About the speaker-----	Page4
Battery Speaker Notice-----	Page5
Trouble Shooting-----	Page6

WARNING FOR YOUR PROTECTION, PLEASE READ THE FOLLOWING:

- Keep these instructions
- Heed all warnings
- Follow all instructions
- The apparatus shall not be exposed to dripping or splashing liquid and no object filled with liquid, such as vases, shall be placed on the apparatus
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Only use attachment/accessories specified by the manufacturer.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Don't put the speaker in a high moisture or a dusty place.
- Please don't open the back and touch the inner parts by yourself.
- It's better to call the experienced repairman to help you if get problems.
- keep it away from the children please

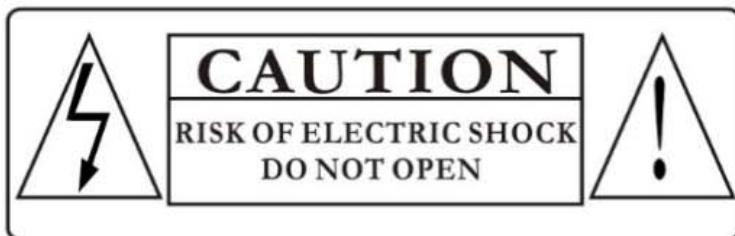

The symbols shown above are internationally accepted symbols that warn of potential hazards with electrical products. The lightning flash with arrow point in an equilateral triangle means that there are dangerous voltages present within the unit. The exclamation point in an equilateral triangle indicates that it is necessary for the user to refer to the owner's manual.

These symbols warn that there are no user serviceable parts inside the unit. Do not open the unit. Do not attempt to service the unit yourself. Refer all servicing to qualified personnel. Opening the chassis for any reason will void the manufacturer's warranty. Don't get the unit wet. If liquid is spilled on the unit, shut it off immediately and take it to a dealer for service. Disconnect the unit during storms to prevent damage.

INSTRUCTION

SAFETY INSTRUCTIONS:

This product is specially designed base on the full attention to safety, in order to make sure the accident-free operation, please abide the guidelines listed belowd:

POWER: The equipment only can be drove by the power mentioned.

ELECTRIC SHOCK: In case of electric shock, do not pull up or insert plug with your hand wet.

HEAVY PREASURE / HEAT: The equipment con not be pressed and can be over heated.

DISMOUNTING: Do not dismount the equipment yourself, if needed, please refer to well-trained person

POWER CABLE PROTECTION: Please be assured power cable can not be stepped on or pressed by heavy object, do not drag power cable forcefully.

NOT USAGE: Please pull out plug from outlet and switch key POWER while not use the equipment for a little long time.

INSTRUCTION

ABOUT THE SPEAKER:

1. Accessories

When you open the package, you will find the speaker/ remote control/ cable ... or others.

2. Voltage

-Please make sure the voltage is AC~110V/60Hz before starting the machine
-If you use the wrong voltage, the transformer will be broken at once.

3. Power

Press "Power" switch to choose ON or OFF to control the speaker,
After using the speaker, please set the master volume to the min.
This help to keep the speaker for long term use.

4. Input Select

USB/SD/Microphone input/AUX input etc....

Please choose the suitable ones to play the songs.

5. Play Mode

You can press the "MODE" button to change the mode and play the songs by USB, SD, FM Radio, Aux in or even Bluetooth if the machine has this function.

6. VOL/M.VOL/G.VOL/ECHO/BASS/TREBLE/EQ

-VOLUME: Main volume control

-M.VOL: Microphone volume adjusting. To control on MIC1, MIC2

-G.VOL: Guitar volume adjusting.

-ECHO: ECHO adjusting

-BASS: Bass volume control

-TREBLE: Treble volume control

-EQ: Same songs but different feelings under control of Equalizer.

7. AUDIO INPUT

You can connect the DVD or CD player to play the songs.

8. PREV/PLAY/PAUSE/NEXT/REPEAT

-PREV: Under music playing, press the button to return previous song.

-PLAY/PAUSE: Under music playing, press to chose play or pause.

-REPEAT: Under music playing, press the button to single song repeat mode, press again to go back the default mode, say, all songs repeat mode.

9. LAMP SWITCH

If the speaker with the party lights, there's additional "LAMP" switch on the backing panel, you can press "ON/OFF" base on personal usage.

INSTRUCTION

If the speaker with Rechargeable battery, please read this:

- 1: You have to charge the battery for about 5-6 hours for the first time. Next time recharge the battery for about 4 hours. The normal working time of battery is 4 hours, but based on how you use the speaker. Please refer to the charming indicator lights on the control panel.
- 2: In order to keep battery life longer, please charge the battery every time after the power is finished. Otherwise the battery will be damaged easily if long time without charging or using.
- 3: When low power occurs and system been power off automatically, or the voice become very small and weak, please charge in time.
- 4: If not use this product a long period, please charge at least once a month so as to keep the battery more durable.

If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that required treatment, recovery and recycling.

Correct disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or our human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. The can take this product for environmental safe recycling.



WARNING:

The battery(battery to batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like. No naked flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

TROUBLE SHOOTING

1:The equipment without sound,what to do?

A:Please check if the power plug insert into outlet well?

 Outlet switch on?Equipment power key in?

B:Please check if the audio cable connected correctly?

C:Please check if the main volume knob under the minimum position?

D:The wall socket is not workable

E:The speaker and parts disconnected

2:Bad Sound

A:The place is not good for the speaker

B:Incorrect speaker connections

C:Bass and Treble knobs are set too low or too high

D:Environmental influence

E:The music format is not good

3:karaoke with sharp noise,what to do?

A:Please tune the wireless microphone properly

B:Please adjust the distance between equipment and the wireless microphone

C:If two person singing at the same time,adjust the distance between of the two person.

4:Equipment Noise:

The equipment is with the feature of low noise,However, occasionally with noise, may it come from sound source, While checking, please pull up audio input cable first, then to listen if there's still noise or not at the distance about 80 centimeters away from the equipment.

If you still can not solve the problems,please call the seller for help.

FCC Warning

1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - (1) This device may not cause harmful interference.
 - (2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.