



HYUNDAI **THINNOTE 13**

13.3" Tablet for Windows 10,
Intel Celeron N3450, 1920x1080 IPS, 4GB/32GB.

USER MANUAL

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF Exposure

The equipment has been evaluated to meet general RF exposure requirement. The device can be used in portable condition without restriction.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Indoor use only.

Index

1 Safety Notices	- - - - -	2
2 Configuration information	- - - - -	2
3 Device overview	- - - - -	3
4 Basic operation	- - - - -	5
4.1 Boot	- - - - -	5
4.2 shutdown	- - - - -	5
4.3 Standby	- - - - -	5
4.4 Restart	- - - - -	5
4.5 Get online	- - - - -	5
4.6 Connect to Bluetooth devices	- - - - -	6
4.7 Sign in with a Microsoft account	- - - - -	7
4.8 Start menu	- - - - -	8
4.9 Action Center	- - - - -	11

ENGLISH


1 Safety Notices

- ① Avoid dropping the unit on the ground or by other strong impact.
- ② Do not use in extreme cold, heat (<35 °C), excessively humid, dusty environment, long-term use, do not let the machine in the sun.
- ③ Try to avoid using in magnetic, strong electrostatic environment.
- ④ Once water or other liquids to spill on the unit, should be immediately shut down, the unit wipe dry before use.
- ⑤ Do not use any cleaner or other liquid containing chemical ingredients to clean the machine to avoid corrosion and moisture damage, if absolutely necessary cleaning, use a soft, dry cloth or paper towel.
- ⑥ The company's hardware and software were non-normal operation, the machine repair or other data loss resulting from unforeseen circumstances or delete is not responsible for, nor bear the losses caused.
- ⑦ When using the file card of T-Flash, do not remove the card to avoid damage to the memory card or device.
- ⑧ Please feel free to back up your important data to avoid loss.
- ⑨ Do not disassemble the unit, otherwise it will lose warranty rights.
- ⑩ Manual and related software updates at any time without notice, and Quick Start Guide found discrepancies, please prevail in kind.

2 Configuration information

LCD Display:	13.3" FHD 1920x1080 IPS
CPU:	Intel® Celeron N3450
GPU:	Intel® HD Graphics 500
RAM:	4GB
Storage:	32 GB
OS:	Windows 10 Home
Web Camera:	2MP
WiFi:	Intel 3165 AC Wireless
External Interface:	1) Mini HDMI 2) 2xUSB 3.0 3) 3.5mm Audio Jack 4) Micro SDHC Slot 5) 1x M.2 2242 Slot

3 Device overview

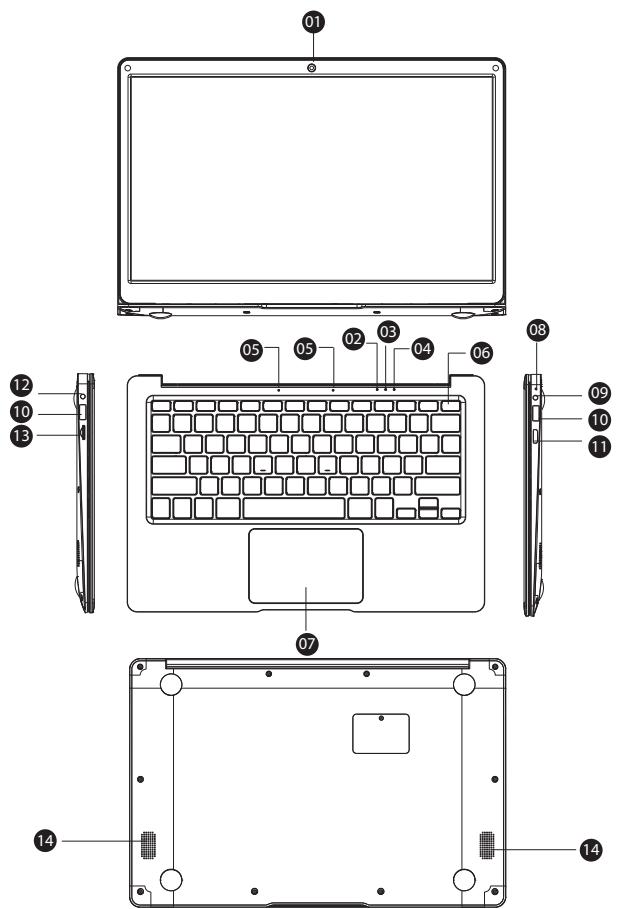

ENGLISH

Index

- 1) Front camera: you can take pictures and video.
- 2) Power light: In the power on, the power light will be lit.
- 3) Caps Lock light: When the Caps Lock button is pressed to turn on the light, it indicates that the capital letters are enabled and locked.
- 4) FN function key lock light: Press FN + NumLK key to lock the function key input, FN function key lock light is on.
- 5) MIC: Supports high-quality recording.
- 6) Power button: You can use the power button to achieve on / off and sleep wake up the computer.
- 7) Touchpad: You can operate on the touchpad to achieve all the functions of Windows.
- 8) Power lights : When the charger is plugged in, the power indicator lights up.
- 9) DC interface: Can be connected to DC power supply.
- 10) USB 3.0 interface: USB interface can read and write U disk / removable hard disk and other equipment data.
- 11) Micro HDMI interface: support high-definition image synchronization output.
- 12) Headphone jack: 3.5mm stereo headphones can be connected.
- 13) TF deck: support Micro SD
- 14) Speaker: Built-in stereo speakers.

4 Basic operation

4.1 Boot

Press the On / Off button 3-5 seconds and release the seed.
(Note: There is no response when you press the power button, the device may need to recharge).

4.2 shutdown

- ① press the power button for 4 seconds, and then use the touchpad to close the interface can be shut down.
- ② Press the power button for 10 seconds to force the shutdown.
- ③ Click the Start menu, click the "Power" button, select "Shutdown" button.

4.3 Standby

In the power-on state Short press the power button to enter standby or wakes up from standby.


4.4 Restart

Open the Start menu, click on the "Power" button, select "Restart" button.

4.5 Get online

To connect to a Wi-Fi network in Windows, select the Network icon (Wi-Fi or Ethernet) on the taskbar.
Select the Wi-Fi network you want > Connect, then type the password and follow the instructions. That's it—you're connected! This icon  will appear in the taskbar.

ENGLISH

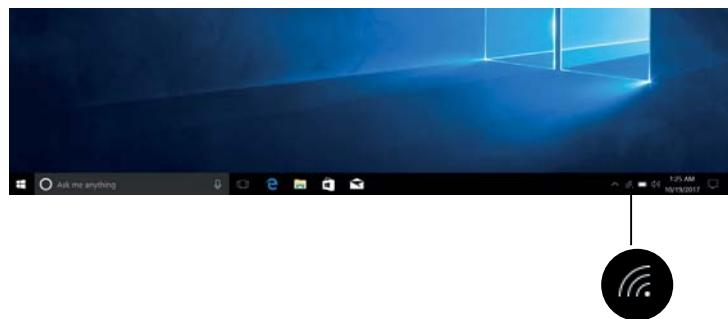

After you're connected, you're ready to set up email, browse the web, and do a whole lot more online.

If Wi-Fi isn't available, or you just want the assurance of a wired connection, the Ethernet cable is your friend—just connect your PC to your router or modem, and then do your thing.

4.6 Connect to Bluetooth devices

Thanks to Bluetooth, you can use all sorts of wireless devices with your Windows PC—Bluetooth headphones, speakers, phones, fitness trackers—just to name a few. Start by pairing your Bluetooth device with your PC. The way you do this depends on the kind of Bluetooth device you're using.


To connect a Bluetooth headset, speaker, or other audio device

① Turn on your Bluetooth audio device and make it discoverable. The way you make it discoverable depends on the device. Check the device or visit the manufacturer's website to learn how.

② Turn on Bluetooth on your PC if it's not on already. To do this, on the taskbar, select action center 

Bluetooth

③ In action center, select Connect > the device name.

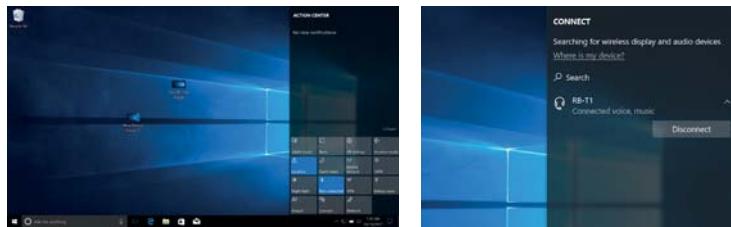

④ Follow any more instructions that might appear. Otherwise, you're done and connected.

Your Bluetooth device and PC will usually automatically connect anytime the two devices are in range of each other with Bluetooth turned on.

To connect a Bluetooth keyboard, mouse, or other device


- ① Turn on your device and make it discoverable.
- ② Select the Start  button, then select Settings  > Devices > Bluetooth.
- ③ Turn on Bluetooth > select the device > Pair.
- ④ Follow any more instructions if they appear.

4.7 Sign in with a Microsoft account

Select the Start  button, then select Settings  > Accounts > Email & app accounts.

ENGLISH

Under Accounts used by other apps, select Add a Microsoft account. Follow the prompts to add your Microsoft account. You may need to verify your identity by entering a confirmation code.

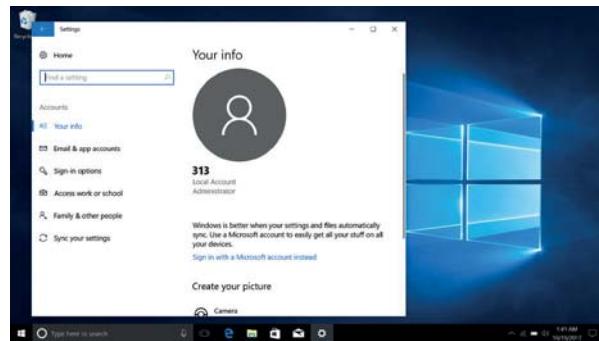

4.8 Start menu

Apps, settings, files—they can all be found on the Start menu. Just select the Start button on the taskbar. Next, make it yours by pinning apps and programs, or moving and regrouping tiles. If you need more space, resize the Start menu.

4.8.1 Your apps and programs—right at your fingertips

Open File Explorer, Settings, and other apps you use often from the left side of the Start menu. Scroll down the app list to see all apps and programs alphabetically, from A to Xbox.



- ① Account
- ② Settings
- ③ Power

4.8.2 Organize your apps

Pin apps to the Start menu to see live updates on what's happening in your world—such as new email, your next appointment, or the weekend weather. When you pin an app, it's added to the Start menu as a new tile.

Pin apps to Start

- ① Select the Start  button, then press and hold (or right-click) the app you want to pin.
- ② Select Pin to Start.

ENGLISH



Once you pin a new app, resize it. Press and hold (or right-click) the app tile, select Resize, and then choose the tile size you want.

Tip

Drag and drop apps from the apps list to pin them to the Start menu as tiles.

4.8.3 Group your apps

After you've pinned an app, move it into a group.


After you've pinned an app, move it into a group. To create a new group of tiles, move an app's tile up or down until a group divider appears, and then release the tile. Move apps in or out of the group to organize your tiles for perfect productivity.



To give your new group a name, select the open space above your new group and type a name.

4.9 Action Center

Click in the lower right corner of the taskbar to open the "Action Center", you can quickly open or close the tablet mode, rotation mode, flight mode, VPN, power-saving mode, the networking, Bluetooth, location, project and adjust brightness.

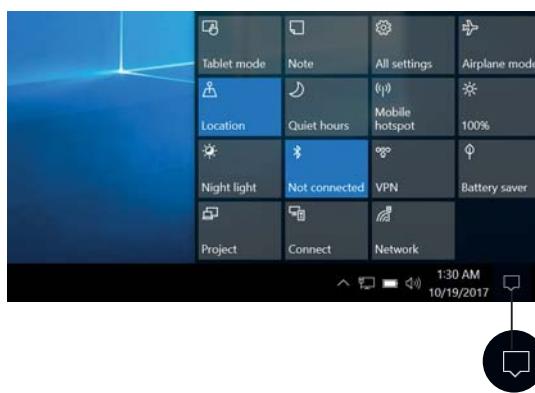

You no longer need to open action center to see how many notifications you have—the number on the action center icon shows you how many notifications are waiting for you. Other apps pinned to the taskbar can also show the number of notifications you've missed.

ENGLISH

HYUNDAI®
All Rights Reserved

Google, Android, Google Play, Google Play Logo and other marks are trademarks of Google Inc.

The information contained herein is subject to change without notice. The only warranties for Hyundai and services are set forth in the express warranty statements accompanying such products and services.

Nothing herein should be construed as constituting an additional warranty. Hyundai shall not be liable for technical or editorial errors or omissions contained here in.

First Edition: May 2016

Advertencia Nota para uso en Mexico

La operación de este equipo está sujeta a las siguientes dos condiciones: (1) es posible que este equipo o dispositivo no cause interferencia perjudicial y (2) este equipo o dispositivo debe aceptar cualquier interferencia, incluyendo la que pueda causar su operación no deseada.

Contact Us

Visit us at <http://www.hyundaitechnology.com/>

For sales inquiry (US & Worldwide)
Email: sales@hyundaitechnology.com

For technical support, please contact HYUNDAI®

U.S. and Worldwide
Toll Free Number: 1-800-560-0626
Monday - Friday 8:00 am - 5:00 pm PST
Email: support@hyundaitechnology.com

Mexico (Spanish)
Toll Free Number: 1-800-639-5535
Monday - Friday 8:00 am - 5:00 pm PST
Email: soporte@hyundaitechnology.com

ENGLISH