



## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

## TouchOne User's Guide



## Contents

1	1
1.1	1
1.2	1
1.3	1
2	2
2.1	2
2.2	3
2.3	4
2.3.1	4
2.3.2	5
2.3.3	7
2.3.4	9
3	10
3.1	10
3.2	11

4 Users	12	7 WiFi	20
4.1 Adding a User	12	7.1 Connect the TouchOne to a WiFi network	21
4.2 Deleting a User	13	7.2 Disconnect from a WiFi network	22
4.3 Renaming a User	13		
4.4 Adding / Changing a User Photo	14	8 Display, Wallpaper & Sounds	22
4.5 Editing a User PIN	15	8.1 Change the TouchOne Volume	21
4.6 Adding a Mobile Device	16	8.2 Change the TouchOne Brightness	23
4.7 Removing a Mobile Device	17	8.3 Change the Wallpaper	23
4.8 Adding an RF Keyfob	17	8.4 Standby Screen	24
4.9 Deleting an RF Keyfob	18	8.4.1 Make the Screen sleep during Standby.	24
		8.4.2 Show a Photo Slideshow during Standby.	25
5 Outputs	18	8.4.3 Change the Standby Time	26
5.1 Controlling Outputs	19	8.4.4 Enable Standby when the system is armed in AWAY Mode	26
5.2 Renaming Outputs	19	8.4.5 Show the Alarm Status on the Standby Screen.	27
6 Date and Time	20	9 Language	28
6.1 Change the System Date and Time	20	9.1 Change the TouchOne Language	28
		10 Tutorials	30
		10.1 Viewing a Tutorial Video	30



## 1. Introduction

### 1.1. Product Summary

The TouchOne is a High Definition 7"Touchscreen keypad for Bosch Control Panels that provides a rich user interface and extended functionality.

### 1.2 Version

This User Guide has been written for TouchOne Software Version 2.2. Please contact your installer for a revised User Guide should the options shown in this document differ from what is on your touchscreen.

### 1.3 Features not covered

The TouchOne provides a graphical interface to the major functions of the system. Other less common features are accessed using the Keypad screen in the same way in which you would interact with a Bosch TEXT LCD Codepad. As the interface is the same, please refer to the "Operation with TEXT LCD Codepad" section in the Control Panel User Guide for operating instructions of the features listed below:

- Forced Arming
- Programming STAY Mode 2 Zones
- Reset Latching Outputs
- Telco Arm/Disarm Sequence
- Testing
- General Usage

## 2.1 Home Screen

Figure 1 shows the TouchOne Home Screen. This screen allows you to view critical status information of the system and perform common actions:

### 2.2 Keypad Screen

Figure 2 shows the TouchOne Keypad Screen. This allows you to perform system functions that do not have a graphical interface on the TouchOne. Please refer to the "Operation with TEXT LCD Codepad" section in the Control Panel User Guide for instructions on performing these functions on this screen.

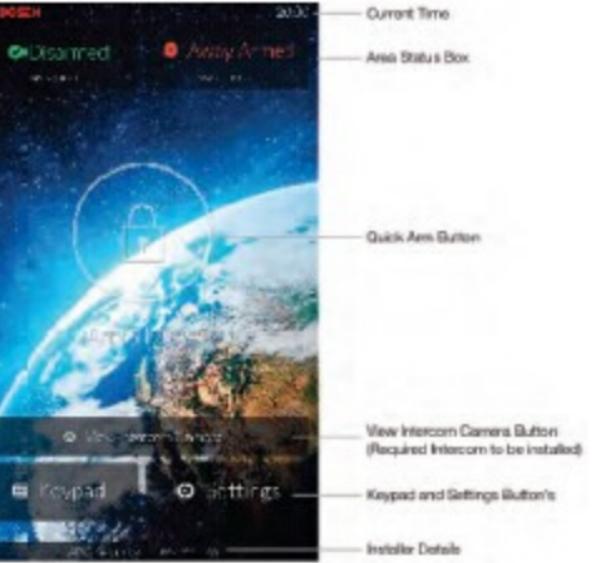


Figure 1: Home Screen

## 2.3 Arming the System


### 2.3.1 Arming in AWAY Mode

When you leave your premises and require all zones to be in a ready state to detect intrusion, arm the system in AWAY Mode. There are two different methods for arming the system in AWAY Mode. Method one is optional and can be disabled by your installer if you do not want to use single button arming. Method two is standard and always operates.



Figure 2: Keypad Screen

Method One (Quick Arm)	<ol style="list-style-type: none"><li>1. From the Home Screen, touch the Arm Area button. Two beeps will sound and the Area Status Card changes.</li></ol> <p>Note: if you have multiple areas enabled, you will need to enter your user code. If your user code has authority for both areas, both areas will arm.</p>
Method Two	<ol style="list-style-type: none"><li>1. From the Home Screen, touch and drag the Area Status Box you want to arm.</li><li>2. Drag the Area Status Box into the Away Arm circle.</li><li>3. Enter your user code.</li></ol> <p>Two beeps will sound and the Area Status Card changes.</p>
Method Three	<ol style="list-style-type: none"><li>1. Touch the Keypad button to show the Keypad screen.</li><li>2. Enter your user code followed by the [#] button (for example, [2580 #]).</li></ol> <p>Two beeps will sound and the Area Status Card changes.</p>



### 2.3.2 Arming in STAY Mode 1

STAY Mode 1 is only used when the perimeter and unused areas of the premises need to be armed to detect an intruder from entering the premises. At the same time, you can move freely within an area that is automatically isolated. Only your installer can program zones automatically isolated in STAY Mode 1. There are two different methods for arming the system in STAY Mode 1. Method one is standard and always operates. Method two is optional and may be disabled by your installer if you do not want to use single button arming.

#### Entry Guard Timer for STAY Mode 1

When arming the system in STAY Mode 1, an optional entry timer called Entry Guard Time for STAY Mode is available. Use this entry timer to delay the sirens if a zone is not automatically isolated and activates an alarm condition.

Entry Guard Time for STAY Mode is the delay time used for all zones except 24-hour zones when the system is armed in STAY Mode 1 or STAY Mode 2.

If the Entry Guard Time for STAY Mode is programmed and a zone that was not automatically isolated is activated, the TouchOne beeps twice per second until the entry timer expires or the system is disarmed. If the alarm condition is not reset by entering your user code (such as [2580]) before the entry time expires, the sirens

activate into alarm. Only your installer can program this feature.

<b>Method One</b>	<ol style="list-style-type: none"><li>1. Touch the Keypad button to show the Keypad screen.</li><li>2. Enter your user code followed by the [*] button (for example, [2580 *]).</li></ol> <p>Two beeps will sound and the Area Status Card changes.</p>
<b>Method Two</b>	<ol style="list-style-type: none"><li>1. From the Home Screen, touch and drag the Area Status Box you want to arm.</li><li>2. Drag the Area Status Box into the Stay Arm circle.</li><li>3. Enter your user code.</li></ol> <p>Two beeps will sound and the Area Status Card changes.</p>

### 2.3.3 Arming in STAY Mode 2

STAY Mode 2 is only used when the perimeter and unused areas of the premises need to be armed to detect an intruder from entering the premises, at the same time allowing you to move freely within an area that is automatically isolated. Any Master Code or Installer Code user can program zones to be automatically isolated in STAY Mode 2.



## Entry Guard Timer for STAY Mode 2

When arming the system in STAY Mode 2, an optional entry timer called Entry Guard Time for STAY Mode is available. Use this entry timer to delay the sirens if a zone is not automatically isolated and activated into alarm condition.

Entry Guard Time for STAY Mode is the delay time used for all zones except 24-hour zones when the system is armed in STAY Mode 1 or STAY Mode 2.

If the Entry Guard Time for STAY Mode is programmed and a zone that was not automatically isolated is activated, the TouchOne beeps twice per second until the entry timer expires or the system is disarmed. If the alarm condition is not reset by entering your user code (such as [2580]) before the entry time expires, the sirens activate into alarm. Only your installer can program this feature.

## How to Arm the System in STAY Mode 2

Touch the Keypad button to show the Keypad screen.

Hold down the [0] button until two beeps sound. Then the Home Screen will be displayed and the Area Card Status will change.

At the end of Exit Time, the TouchOne emits one short beep.

## 2.3.4 Disarming the System

When you enter the premises after the system is armed in AWAY mode, or if you armed the system in STAY Mode 1 or STAY Mode 2, you must disarm the system to disable detection devices that activate an alarm.

If there was an alarm condition prior to disarming the system, the Activation Keypad screen will display. Once you have disarmed the system, the System Status Button will scroll through the zones that activated. To view more detail, touch the System Status Button to open the System Status screen.

### How to Disarm the System

If the Keypad Dialog is not automatically displayed, you must touch the Disarm Area button before proceeding to the next step.  
Enter your user code (for example, [2580]).

Two beeps will sound to confirm the system has disarmed.

If you make a mistake when entering your user code, touch the [<] button and try step 2 again.

### 3 Zones

#### 3.1 Isolating Zones

Use isolating zones to manually disable one or more zones before arming the system. Once a zone is isolated, you can access that zone during the armed state without activating an alarm. For example, you need to isolate a zone as, before arming the system, a PIR detector may be false alarming, or you need to leave a pet inside a particular zone while away.

If any User Code has the "Code to Isolate" priority level, you will be required to enter your User Code before being able to isolate a zone.

#### How to Isolate a Zone

1. From the Home Screen, touch the Settings button.
2. Touch the Zones menu item.
3. Enter a User Code if requested.
4. Under the Zone you want to isolate, slide the Isolate switch from the left to the right so a tick icon is shown. You can select multiple zones to isolate at a time.
5. Touch the back button in the screen title bar to confirm the isolation action(s) and go back to the Settings Screen.
6. Two beeps will sound to confirm the zone(s) have been isolated. Touch the back button in the screen title bar again to go back to the Home Screen.

#### Please note:

You must complete step 5 before the TouchOne will isolate the zone(s).

#### 3.2 Renaming Zones

Zones can be renamed to provide more meaningful information when being displayed on the TouchOne, a TEXT LCD Codepad or the RS Control Mobile App. The zone name must be 12 characters or less.

#### How to Rename a Zone

1. From the Home Screen, touch the Settings button.
2. Touch the Zones menu item.
3. Enter a User Code if requested.
4. Under the Zone you want to rename, touch the Rename button.
5. The current zone name will be cleared. Using the keyboard, type in the desired zone name.
6. Touch the enter button on the keyboard to confirm the name.
7. Repeat steps 4 to 6 to rename another zone.
8. Touch the back button in the screen title bar to confirm the renaming action(s) and go back to the Settings Screen.



**Please note:**

The renaming process can take up to 20 seconds per zone name that is changed.

## 4 Users

Only the Master Code holder can add or change other system user codes, including the Master Code. Up to 32 user codes / radio user codes can be programmed to operate the system.

### 4.1 Adding a User

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the [+] button at the right of the screen title bar.
5. Touch the [Edit] button under the PIN section.
6. Enter the digits required for the new code.
7. Touch the back button in the screen title bar to confirm the Add User action and go back to the Users Screen.

### 4.2 Deleting a User

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.

3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user you want to delete.
5. Touch the [-] button at the right of the screen title bar.

### 4.3 Renaming a User

Users can be renamed to provide more meaningful information when being displayed on the TouchOne, a TEXT LCD Codepad or the RS Control Mobile App. The user name must be 12 characters or less.

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user you want to rename.
5. Touch the Rename button.
6. Using the keyboard, type in the desired user name.
7. Touch the enter button on the keyboard to confirm the name.
8. Touch the back button in the screen title bar to confirm the Rename User action and go back to the Users Screen.

**Please note:**

The renaming process can take up to 20 seconds.



#### 4.4 Adding / Changing a User Photo

Users can have photos added to them to provide a faster means of identifying them when you have many users on the system. This photo is only stored on the TouchOne.

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user you want to add / change the photo of.
5. Touch the Change Photo button.
6. The circle photo image will show the camera. Centre your face in the circle and touch the Take Photo button. A countdown from 3 will display, and the photo will be taken at the end of the countdown. A shutter sound will confirm the photo has been taken.
7. Touch the back button in the screen title bar to confirm the Change Photo action and go back to the Users Screen.

#### 4.5 Editing a User PIN

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user whose PIN you wish to edit.
5. Touch the [Edit] button under the PIN section.
6. Enter the digits required for the new code.

7. Touch the back button in the screen title bar to confirm the Edit User action and go back to the Users Screen.

#### 4.6 Adding a Mobile Device

The TouchOne allows you to pair your Bluetooth 3.0 enabled mobile phone with your user on the Control Panel. When at least one mobile phone has been paired with a user, 30 seconds after the Control Panel has been armed in AWAY Mode, the TouchOne will search for your Mobile Phone periodically and automatically disarm the system with the user PIN that mobile was associated to.

In order for this feature to work, you must have Bluetooth enabled on your phone when you come within 5 to 10 metres of the TouchOne device.

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user you want to associate with your mobile phone. This user's PIN is entered when your mobile device comes within range.
5. Touch Add Mobile Device
6. On your mobile phone, open the Bluetooth settings and ensure your Bluetooth is on discoverable mode.

7. The TouchOne will display a list of discoverable Bluetooth devices in range. Touch the Bluetooth device you want to pair.
8. A pairing dialog box will be shown on both the TouchOne and your mobile device. Touch the pair button on both.
9. Touch the back button in the screen title bar to go back to the Users Screen.

#### 4.7 Removing a Mobile Device

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user whose associated mobile phone should be removed.
5. Touch Remove Mobile Device.
6. Touch the back button in the screen title bar to go back to the Users Screen.

#### 4.8 Adding an RF Keyfob

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user who needs the RF Keyfob adding.
5. Touch the Add RF Keyfob button.
6. Follow the instructions on screen to pair the RF Keyfob.

#### 4.9 Deleting an RF Keyfob

1. From the Home Screen, touch the Settings button.
2. Touch the Users menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Touch the user needs the RF Keyfob removing.
5. Touch the Remove RF Keyfob button.

### 5 Outputs

This feature is only applicable if your installer set up an output that can be turned on or off by the codepad. The output programmed by your installer can control a pool pump or outside lighting. Up to 3 separate outputs can be programmed.

#### 5.1 Controlling Outputs

1. From the Home Screen, touch the Settings button.
2. Touch the Control menu item.
3. Choose the output you wish to control. Slide the Toggle switch from the left to the right so a tick icon is shown to turn on an output, or slide it from the right to the left so a cross icon is shown to turn the output off.



## 5.2 Renaming Outputs

Outputs can be renamed to provide more meaningful information when being displayed on the TouchOne.

1. From the Home Screen, touch the Settings button.
2. Touch the Control menu item.
3. Under the output you want to rename, touch the Rename button.
4. Using the keyboard, type in the desired output name.
5. Touch the enter button on the keyboard to confirm the name.
6. Touch the back button in the screen title bar to confirm the Rename Output action and go back to the Settings Screen.

## 6 Date and Time

### 6.1 Change the System Date and Time

1. From the Home Screen, touch the Settings button.
2. Touch the Date and Time menu item.
3. Enter your Master Code. The keypad will shake if the code is incorrect.
4. Using the Date and Time selectors, slide your finger up or down on each time segment to change it.
5. Touch the back button in the screen title bar to confirm the Change Date and Time action and go back to the Settings Screen.

## 7 WiFi

You can connect your TouchOne to your local WiFi network in order to utilize the following features:

1. Installing of Apps
2. Use of the Intercom App (to communicate with a Video Door Station or another TouchOne).
3. Automatic Updating
4. Automatic Diagnostics

### 7.1 Connect the TouchOne to a WiFi network

1. From the Home Screen, touch the Settings button.
2. Touch the WiFi menu item.
3. Slide the WiFi Toggle switch from the left to the right so a tick icon is shown.
4. Wait up to 20 seconds for the TouchOne to scan available networks in range.
5. Touch the desired WiFi network to connect to.
6. If the Network is secured, you must touch the area to the right of the word "Password:" and enter your WiFi password using the on-screen keyboard.
7. Touch the Connect button.
8. Wait for up to 30 seconds for the TouchOne to connect to the WiFi network. If the network connection is successful, the network name will appear under Current Network.

#### **Please note:**

It is strongly encouraged that the TouchOne is only connected to a network with at least WPA encryption.

The 5 bars to the left of the WiFi network name indicates the signal strength. When using the TouchOne with a Video Door Station / Intercom App, the better the signal strength, the better the quality the video and audio will be.

#### **7.2 Disconnect from a WiFi network**

1. From the Home Screen, touch the Settings button.
2. Touch the WiFi menu item.
3. Touch the WiFi network shown under Current Network.
4. Touch the Forget button.

### **8 Display, Wallpaper & Sounds**

#### **8.1 Change the TouchOne Volume**

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Slide the Sound slider left or right to the desired volume.

#### **8.2 Change the TouchOne Brightness**

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Slide the Brightness slider left or right to the desired brightness.

#### **8.3 Change the Wallpaper**

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Touch the Wallpaper menu item.
4. If you would like to select one of the default photos, touch the Default Photos menu item and skip to step 7.
5. If you would like to select your own photo, insert a Micro SD card into the Micro SD slot on the TouchOne as described in Figure 4.
6. Touch the My Photos (SD Card) menu item.
7. Touch the thumbnail of the desired wallpaper image.
8. To change the position of the image, slide your finger up, down, left or right to the desired position. To change the zoom, use two fingers in a pinching motion.
9. Touch Save to save the image.
10. If using an image from a Micro SD card, wait 2 minutes before removing the Micro SD card as the TouchOne will copy the image from the Micro SD card.



**Please note:**

Supported image formats are: JPEG, GIF, PNG, BMP and WebP.

#### 8.4 Standby Screen

##### 8.4.1 Make the Screen sleep during Standby.

**Please note:**

This option is configured by default.

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Touch the Standby Screen menu item.
4. Touch the Sleep standby item.

##### 8.4.2 Show a Photo Slideshow during Standby.

**Please note:**

You must select more than one image when using this feature to prevent long-term damage to the LCD screen.

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Touch the Standby Screen menu item.
4. Touch the Photo Slideshow Settings menu item.
5. Touch the [+] button at the right of the screen title bar.

6. If you would like to select any of the default photos, touch the Default Photos menu item and skip to step 8.

7. If you would like to select your own photos, insert a Micro SD card into the Micro SD slot on the TouchOne as described in Figure 4.

8. Touch the thumbnail of the desired slideshow images. A tick icon will be displayed on each thumbnail that is selected.

**Please note:**

Supported image formats are: JPEG, GIF, PNG, BMP and WebP.

##### 8.4.3 Change the Standby Time

The Standby time is the length of time from the last touch on the screen until the selection Standby option (Sleep or Photo Slideshow) is displayed.

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Touch the Standby Screen menu item.
4. Slide the Standby Time left or right to the desired Standby Time.

##### 8.4.4 Enable Standby when the system is armed in AWAY Mode

Be default, the Standby screen will only display when the system is disarmed or armed in STAY Mode so the alarm status is always visible when the system is armed in AWAY Mode. You can change this behaviour by following the steps below.



1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Touch the Standby Screen menu item.
4. Slide the Show Standby when Armed AWAY switch to the right. A blue switch with a tick indicates this feature is turned on.

#### 8.4.5 Show the Alarm Status on the Standby Screen.

You can display the Area Status Card(s) on the standby screen so you do not have to touch the screen to view the Alarm Status from a distance.

1. From the Home Screen, touch the Settings button.
2. Touch the Display, Wallpaper & Sounds menu item.
3. Touch the Standby Screen menu item.
4. Slide the Show Alarm Status in Standby switch to the right. A blue switch with a tick indicates this feature is turned on.

### 9 Language

#### 9.1 Change the TouchOne Language

The TouchOne supports multiple languages. As of version 2.0, the supported languages are:

English, Chinese & Polish

More languages may be delivered on request via Automatic Updates.

1. From the Home Screen, touch the Settings button.
2. Touch the Language menu item.
3. Touch the desired Language menu item.
4. Wait up to 10 seconds for the Language to change.

In case a language change is done accidentally, see the steps below for returning the language to English:

<b>From Chinese</b>	<p>You can get back to the Home screen from anywhere in the menu by pressing the Blue title bar multiple times.</p> <p>From the Home screen, touch the "设置" button.</p> <p>Touch the "语言" menu item.</p> <p>Touch the English menu item (this is displayed in English).</p>
<b>From Polish</b>	<p>You can get back to the Home screen from anywhere in the menu by pressing the Blue title bar multiple times.</p> <p>From the Home screen, touch the "Ustawienia" button.</p> <p>Touch the "Język" menu item.</p> <p>Touch the English menu item (this is displayed in English).</p>



## 10 Tutorials

Instructions on carrying out the most common functions of the TouchOne are available to watch in Video form on the TouchOne itself. Touching the [?] button at the right of the screen title bar on any screen will show you tutorials specific to that screen.

### 10.1 Viewing a Tutorial Video

1. From the Home Screen, touch the Settings button.
2. Touch the [?] button at the right of the screen title bar.
3. Select the desired instruction video menu item.
4. The video will play automatically.

## Inserting a Micro SD Card

When facing the TouchOne in portrait orientation, the SD Card Slot is on the top left. Insert the SD cards with its contacts facing towards you. You may need to use a small pin or paperclip to push the Micro SD card in fully. You will hear a "click" once it is inserted correctly.

## Retrieving the Micro SD Card

Using a small pin or paperclip, push the Micro SD card in (towards the right of the unit if mounting in portrait). The slot will release the SD Card and a spring will push it out.



Figure 4. Inserting and Retrieving a Micro SD Card