


# User Manual

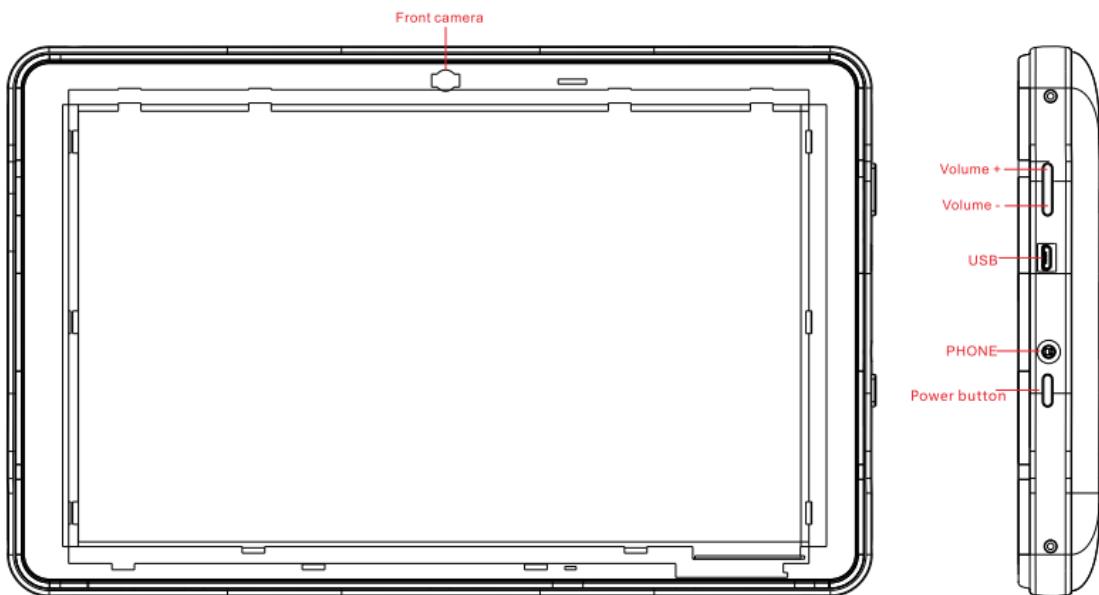

In order to use your tablet PC safely and effectively, please read the following information carefully.

## Startup and Shutdown

If you want to turn on the Tablet PC, long press **【ON/OFF】**.

If you want to turn off the Tablet PC, long press **【ON/OFF】**, choose **【shut down】**.

In areas (such as airplanes, hospitals) where wireless devices are forbidden, please comply with all posted warnings and authorized officer's indication.

If you need to use the non-network services of the device, you can switch to Flight Mode.

Long press **【ON/OFF】** button, and then select the "Flight Mode".

## Safe Boot

In areas (such as airplanes, hospitals) which wireless devices are forbidden, please comply with all posted warnings and authorized officer's indication.

If you need to use the non-network services of the device, you can switch to Flight Mode.

Hold the **【ON/OFF】** button, and then select the flight mode.

### **Waterproof**

Keep the Tablet PC dry. Rain, humidity and all types of liquids may contain minerals that will corrode electronic circuits.

### **Interference**

Mobile communication may be subject to the radio interference, which could affect performance.

### **Traffic Safety**

Do not use the tablet PC to call when driving, this could disturb safe driving.

### **In restricted areas please shut down Tablet PC**

Please comply with restrictions or regulations on the plane. Tablet PC should also be shut down near inflammable substances, chemicals or medical equipment.

### **Tablet PC placement**

Place the Tablet PC and its accessories out of children's reach.

### **Accessory and Battery**

Please use the specified battery and charger.

Do not attempt to disassemble the Tablet PC and accessories. If you need to service the Tablet PC, please contact an authorized Agent or a Professional Repair person.

### **Battery charge**

Before using the Tablet PC for the first time, you must charge the battery. You can use the provided travel charger or the USB cable to charge the Tablet PC. Only use the charger and USB cable provided by our company. Unauthorized battery charger may cause the battery to explode or damage your Tablet PC.

When the battery is low, the Tablet PC will issue a warning tone and show the information.

If it's too low, the Table PC will shut down automatically. You need to recharge the battery.

#### **➤ Travel charger charging**

❖ Insert the small end plug of the travel charger into the multifunction socket. If the travel charger is connected incorrectly, you may cause serious damage to the Tablet

PC. Any damage due to misuse warranty will not be guaranteed.

- ✧ Insert the big end of the travel charger into power jack.
- ✧ Using the Tablet PC when charging will extend the charging time.
- ✧ When charging, the Tablet PC will get hot, this phenomenon is normal, and will not affect the life span or performance of the Table PC;
- ✧ When the battery is fully charged (the battery icon will stop scrolling), disconnect the Tablet PC from the travel charger, and then pull it out from the power jack.

#### ➤ **Using USB cable to charge**

Before charging, please make sure that the Tablet PC has been turned on.

1. Plug one end (micro USB) of the USB cable into the multifunction socket.
2. According to the type of USB cable, connect the other end to the computer's USB port , you may need to wait for a moment to begin charging.
3. When the battery is fully charged (the battery icon will stop scrolling), disconnect the USB cable from the Tablet PC, then pull it out of the computer.

#### **Using touch screen**

Using touch screen makes it easier to select items or perform functions.

Learn the basic operation of the touch screen:

- ✧ Avoid scratching the touch screen, do not use sharp tools.
- ✧ Do not allow the touch screen to get close to other electronic equipment. Electrostatic discharge may cause the touch screen failure.
- ✧ Do not allow the touch screen to touch water or stay in humid environments. Touch screen may malfunction.
- ✧ In order to achieve the best results, remove protective film before using the touch screen.
- ✧ To control the touch screen please see below:

Click once to select or start menu options or applications with your fingers.

Click and press: click and press for more than 2 seconds, options list will pop-up.

Scroll: Click, drag your finger up, down, left or right to move the item in the list.

Drop: with your finger to click and press an item, and then drag your finger to move the item.

Double-click: when viewing photos or web pages, click twice quickly with your finger to zoom in or out.

- ✧ If you do not use the Tablet PC for a specified length of time, the touch screen will be turned off. If want to re-open, press **【switch key】** .
- ✧ You also could adjust the backlight time. In standby mode, open the application list, and then select **Settings → Display → Sleep**.

### **Lock or unlock the touch screen and button**

Lock or unlock touch screen and buttons

You can lock the touch screen and buttons, to prevent any accidental operation.

To lock, press **【ON/OFF】** button, to unlock, press **【ON/OFF】** , and then according to the prompts on the screen to manually unlock.

### **Move items on the standby screen**

- Click and press item you want to move.
- After vibration, drag it to the desired location.

### **Remove items from the standby screen**

- ✧ Click and press the item that you want to remove, after vibration the application area will show the Recycle Bin Icon, this shows that the application area on the bottom of the screen has changed to be Recycle Bin.

Drag the item to the Recycle Bin.

When the item turns red, release it.

### **Use shortcuts panel**

In standby mode or when using the application, touch the indicator icons area on the top of the screen, then drag your finger down to open the shortcuts panel. You can start or cancel wireless connectivity and other features, access to the notification list, such as information, call activities, or processing status. To hide the list, please drag up the bottom border.

Sliding shortcut icon left or right in the panel, you can use the following options:

- ✧ Ambient light sensor: turn on or off ambient light sensor.
- ✧ Standby: adjust delay time of screen automatically turns off.
- ✧ Automatic rotate screen: turn on or off auto rotate screen function.

- ❖ WLAN: turn on or off WLAN connection feature. Long press the icon to enter the WLAN settings interface.
- ❖ Settings: enter the setting interface.

## ■ Access to application

### ➤ If you want to access an application

- ❖ In standby mode, select start program to enter applications list.
- ❖ Slide shortcut icon left or right to other application screen, you can also choose the bottom point and move to the main menu screen directly.
- ❖ Select Start program:
- ❖ Click and press application icon, add a shortcut of the application from list, click. You can move the icon to the desired position in the standby screen.
- ❖ Click 【Back】 to return to the previous screen.
- ❖ Tablet PC has a built-in motion sensor that can detect the direction of the Tablet PC. Rotating Tablet PC 90° in clockwise or anti-clockwise direction, the Tablet PC interface will automatically switch to a horizontal screen accordingly. To disable the function, click the “AUTO ROTATION” icon such that it is not highlighted. You can find the icon in the following path.  
Settings → Display → Auto-rotate screen.


## ■ Widget

Click application from standby interface, choose widget, select one and long press, drag to the interface

Customize more features based on personal preferences.

### ➤ Set the current time and date

- ❖ In standby mode, open the application list, then select Settings → Date and time.

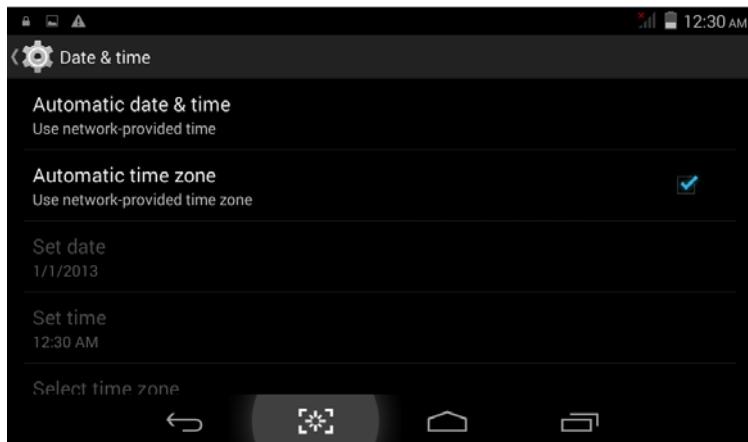

❖ Set time and date and change other options.

➤ **Adjust ringtone volume**


Press **【+/-】** to adjust the ringtone volume.

➤ **Change ringtone**

In standby mode, open the application list, and then select **Settings** → **Audio Profiles** → **General** → **voice call ringtone** or **message ringtone**.

❖ Select a ringtone from the list, and then select **OK**.

➤ **Select wallpaper**

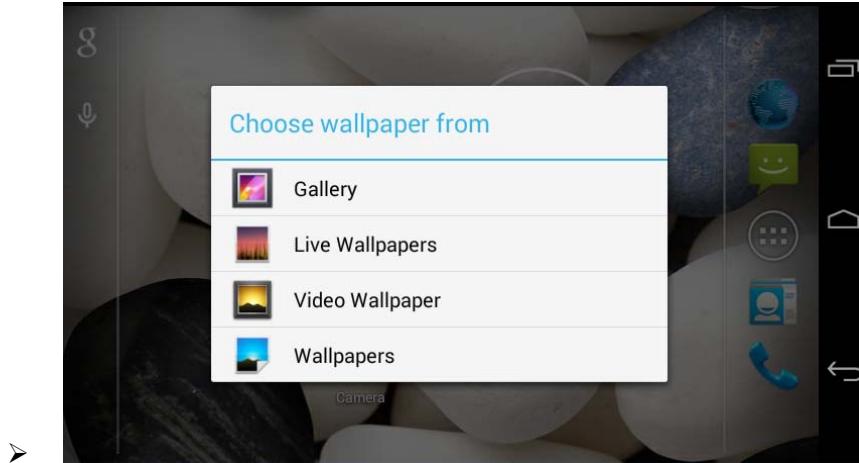

1. In the standby mode, long press standby interface → **Wallpaper** → **Select wallpaper sources**.
2. Select the image.
3. Set it as wallpaper.


**Choose wallpaper from :**

- ❖ Wallpaper: set background image.
- ❖ Live wallpaper: You can set live wallpaper.
- ❖ video Wallpaper: set the background video.
- ❖ Album: You can select the pictures from album to be wallpaper.

#### ➤ **Adjust display brightness**

In the setup menu to adjust screen brightness:

In standby mode, open the pull-up bar, then select Settings → Display → Brightness.

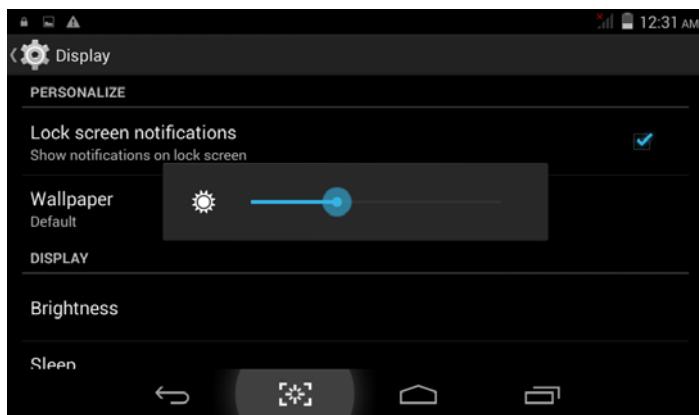


1. Clear check box before auto-adjust brightness.
2. Drag the slider to adjust brightness level.
3. Select OK.

Brightness level of the display will run down the battery power faster.

#### ➤ **Set up screen lock pattern**

Set lock pattern to prevent unauthorized use.

1. In standby mode, open application list, then select Settings → Security → Screen lock → Pattern.

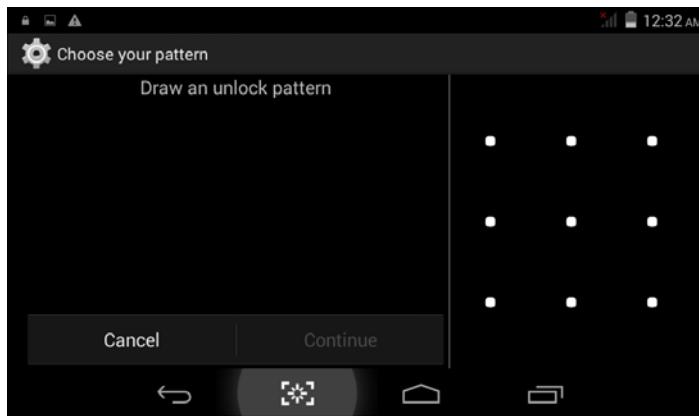

2. Carefully watch the instructions and patterns, select **【Next】** (if necessary).
3. Drag your finger to connect at least four points to draw a pattern.
4. Choose **【Continue】** .
5. Re-draw pattern to confirm.
6. Select OK.
  - ✧ After setting lock pattern, every time you start the Tablet PC, you will be asked to enter the unlock pattern. If you want to cancel the function of screen lock pattern, please following the steps **Settings → Security → Screen lock → draw the pattern lock → No.**

Note: If you select "No", screen will not be locked.

## Call Records

To check call history

- 1 Under standby mode, click "dial" to select call history.
- 2 In the interface of call history, classify it by source.
- 3 Select the record you want to know for details

### 1. Group

#### Setting Groups

Collect those contacts who are special or contacted frequently by you, to help you manage them easily.

Note: This collect function is only for those contacts in the Tablet PC.



**Clock**

Set clock


Note: Shut down alarm is not supported.



**Browser**

Visit web and add it to bookmark.

**Browse web**

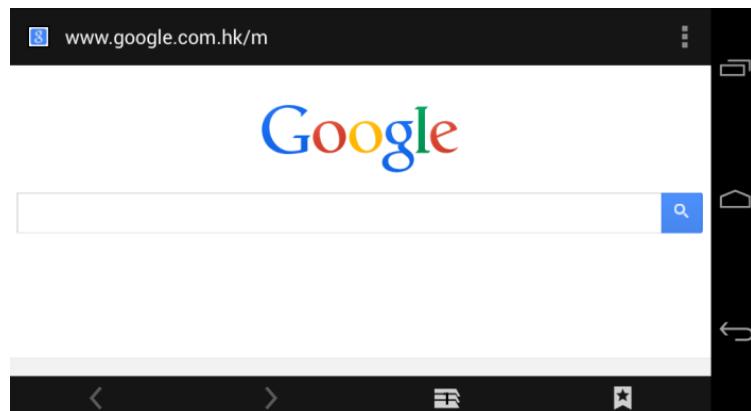


- ✧ Under standby mode, open applications, select browser to open the desired webpage .
- ✧ If you visit a certain webpage, select URL, input the web address, then press enter and search the icon.



**Files Management**

Open the images, videos, music, files or other documents in your tablet or SD card.

1. If the Tablet was down or in freezing condition, i.e. no response, please turn off it by long pressing the ON/OFF button. Then you can turn it on again by long pressing the button again.

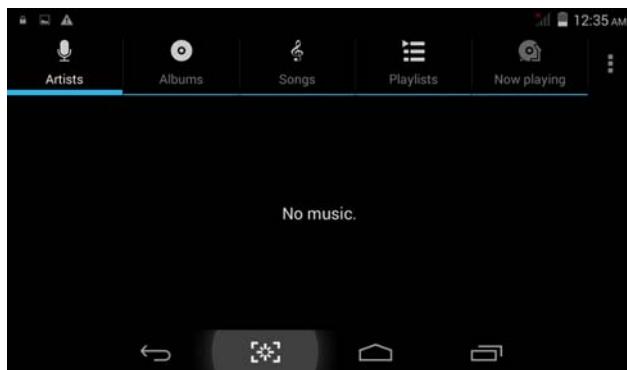

Play the music you like.

Music player can support formats such as: aac, amr, ape, flac, imy, m4a, mid, mp2, mp3, ogg and wav.

Music Player cannot support some formats. It depends on the version of the software in the device.

If the file exceeds the memory, it will indicate error.

Play quality will differ from the type of the content.

Some files may not play normally, it depend on how it was coded.

#### ✧ **Add music**

Adding files to device

- ✧ Downloading from wireless web
- ✧ Copy by USB cable
- ✧ Transfer through Bluetooth

#### **Video**

To watch, delete and order videos.



Under standby mode, go to camera through applications, to take photos, Take high quality photos, support continuous shooting, special effect, and high quality **video**.

### **Album**


Check the photos and videos stored on your SD card and tablet.

### **Settings**

#### **SIM Card Management**

To close or open the SIM card, select the SIM card to make video call, select if open data connect or international roaming. Check the SIM card application.

## **WLAN**

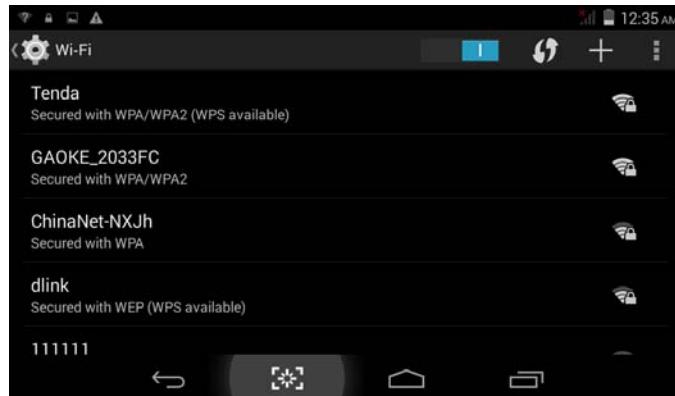

Set the status of WLAN, internet notice, add network, etc.

### **Flux status**

### **More settings**

To set airplane mode, VPN, network share and portable hotspot, mobile network,

## **Scene**

Set ringtones and volume levels of incoming calls, messages, meanwhile, set self-defined scene.

## **Display**

Set functions related to the display of the tablet, such as scene change, screen lock style, brightness adjustment, auto-rotate screen, screen timeout, etc.

### **Battery**

Show the status of charging and the remaining life of the battery in terms of percentage.

### **Apps**

Modify the settings of installed apps.

## **Accounts and Sync**

Change or manage the account which need sync function.

## **Location**


Check the location in Apps with wireless network

## **Security**

Setting various passwords to protect the tablet from being used if stolen.

Notice: Generally the initial PIN code is 1234

## **Language and keyboard**

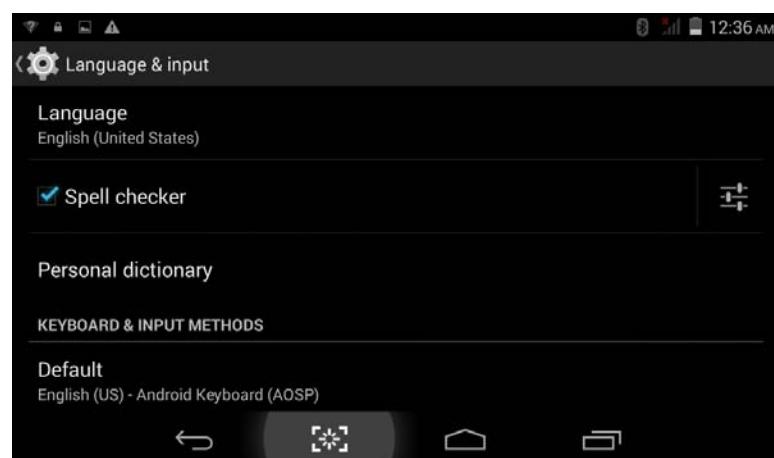

Select language, set keyboard, select input

## **Reset**

Factory data reset will clear all data in the tablet, please operate with attention.

## **Date and time**

Set date and time displayed in the tablet

## **Shut down or turn on timely**

According to the user's habit to start this function.

## **Auxiliary function**

Turn on the function of power button, then press the button to end a call.

## **Developers options**

For developers to use.

## **About Tablet PC**

Query information about tablet, check its state.




## **Calculator**

Learn how to perform calculations, as normal hand-held or desktop calculator. Horizontal screen will be shown when switching to scientific calculator.



## **Video player**

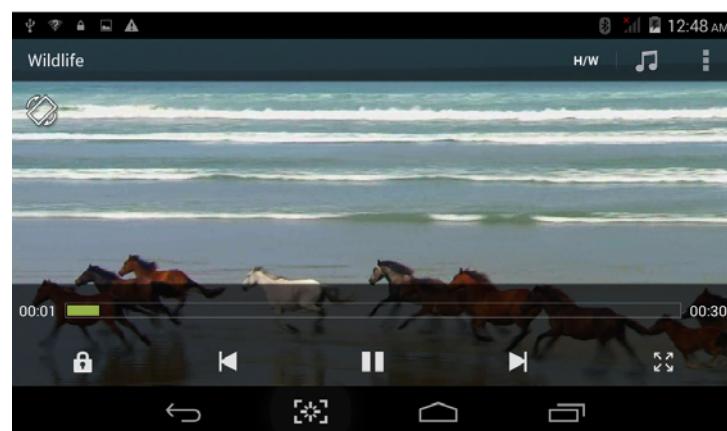

Learn how to view the video files stored in the memory card. Long press and operate as follows: share, delete, rename and view details.

This application can identify all video files the machine support in the memory card. User is free to watch video.

### **Wireless input device**

You can connect to wireless keyboard.

### **Question & Resolution**

In order to save your time and unnecessary costs, please contact professional services staff when you need the services, and make the following statements:

#### **Unable to start tablet PC**

Check you've pressed **【ON/OFF】** more than 1 second.

Check the battery. If the battery power is low, please charge it.

#### **Start tablet, and message alert**

Input tablet lock password, choose automatic lock function, before using you must input

#### **Unable to connect to network**

If signal is weak, please change location and retry.

If SIM card is invalid, please contact your network provider.

#### **Poor call quality**

Please adjust the volume.

If using the tablet PC to make a call in a poor reception area, such as around tall buildings or in an underground room, the radio wave will not be effective

#### **Contact**

Please keep microphone close to your mouth.

#### **Standby time become short**

Standby time is related to the network system setting. If you stay in poor reception area, the Tablet PC will continue to launch in order to find the base station.

When signals could not be received, a lot of battery power will be consumed, and standby time will be short. Please turn it off temporarily.

#### **No power**

Check if the plug is connected.

If dirt has accumulated, wipe the Tablet PC and battery connection port with a soft clean cloth.

Please change the charging environment when the temperature is below 0° or above 45 °.

Battery or charger need to be replaced when damaged.

If the guide information couldn't help you to solve the problems, please record your Tablet PC's model and serial number, license or insurance policy information, and a clear description of the problem, then contact the local customer service.

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To assure continued compliance, any changes or modifications not expressly approved by the party.

Responsible for compliance could void the user's authority to operate this equipment. (Example- use only shielded interface cables when connecting to computer or peripheral devices).

This equipment complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.