
- 2) Once aligned (phone will be at slight angle resting on top of rubber piece), push phone onto USB plug until fully inserted.
- 3) Once phone is securely connected to plug, push phone into case and over rubber lip. The easiest method of doing this is to place one thumb at each corner of the phone with forefingers on back of case near camera opening and pressing down with thumbs.
- 4) After phone is seated in place, rubber tab may be curled underneath phone. To fix this, place middle fingers near camera on back of Galaxy S7 Edge (BE CAREFUL NOT TO PUSH DIRECTLY ON CAMERA) and slightly push phone back out of case enough so that the rubber piece pops out from underneath phone.
- Finally, push phone back into case as in step 3.

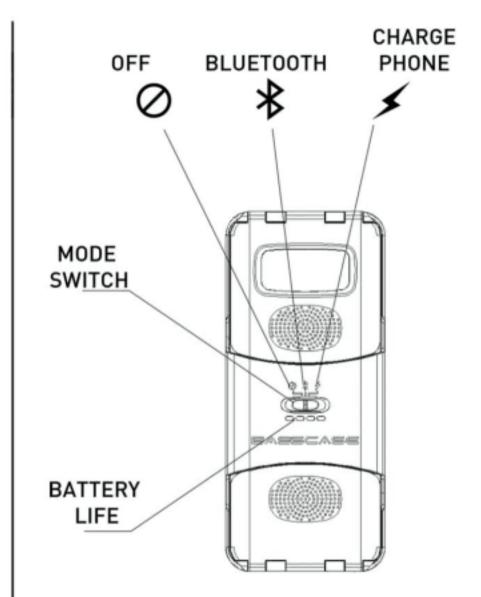

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.