



User Manual of Libertas RFID Reader R06-HL-RF-4P

FETC International Co., Ltd
(V1.0.1)

Catalogue

Catalogue	2
1. Technical Specification	6
1.1 Feature	6
1.2 Technical.....	6
1.2.1 Main function.....	6
1.2.2 Technical parameter.....	6
1.2.3 Operational environment	7
2. Sketch map	8
2.1 Physical construction.....	8
2.2 Weight.....	8
2.3 Illustration of LED display	8
2.4 Interfaces	9
2.4.1 Power supply, communication and I/O interface	9
2.4.2 I/O Interface definition	10
2.4.3 Coaxial RF Feeder Cable (optional).....	12
2.4.4 Network connection diagram.....	12
3. Installation	14
3.1 Notes	14
3.2 Installation conditions	14
3.3 Device connection	14
3.3.1 Power on	14
3.3.2 Antenna connection.....	15
3.3.3 PC connection.....	15
3.4 Device installation.....	15

3.5 Acceptance	15
3.5.1 Acceptance of structure.....	15
3.5.2 Performance acceptance.....	16
4. Common failures	17
4.1 Daily maintenance	17
4.2 Common failure analysis and solution	17
5. Package	19
5.1 Package	19
5.2 Accessories	19
5.3 Storage environment.....	20
6. After-sale service	21

1. Technical Specification

1.1 Feature

R06-HL-RF-4P LIBERTAS is a high performance four antenna port fixed UHF RFID reader; support ISO18000-6C/6B protocols. The work frequency includes frequency standard FCC Part 15 902MHz ~ 928MHz Output power from 0 ~ 30dBm optional, with long identification distance, fast reading speed, high accurate rate, strong anti-interference ability, good protection performance and easy installation.

1.2 Technical

1.2.1 Main function

- Air interface protocol: support ISO18000-6C/6B standard
- Built-in LINUX operating system
- Multiple communication port (Ethernet, RS232, RS485, USB), Wi-Fi, Bluetooth extensible
- Support tag data filtering
- Support RSSI: the intensity of the perceived signal
- Adjustable RF output power
- Optional working mode: constant frequency / frequency hopping
- Support antenna detection function
- Support online and remote upgrade
- I/O interface: 4 port optocoupler input, 4 port relay output and Wigand output

1.2.2 Technical parameter

- Working frequency: FCC 902MHz ~ 928MHz
- Output power (port): 30dBm ± 1dB (MAX)
- Power adjustment: 1 dB step-by-step
- Reading distance: 0 ~ 8 meters (depending on tags, antennas and environment)
- RS232 serial communication rate: 115200bps (default), 19200 bps, 9600bps
- RS485 interface communication rate: 115200bps (default), 19200 bps, 9600bps
- Support: Wiegand 26, 34, 66 interfaces
- Power supply: 10V ~ 30V (power capacity is not less than 60W)
- Power adapter: AC input 100V ~ 240V, 50Hz ~ 60Hz

DC output: 24V/2.5A

- High protection grade: IP53

1.2.3 Operational environment

- Working environment: -20°C ~ +70°C
- Relative Humidity: 5%RH ~ 90%RH (+25°C)

2. Sketch map

2.1 Physical construction

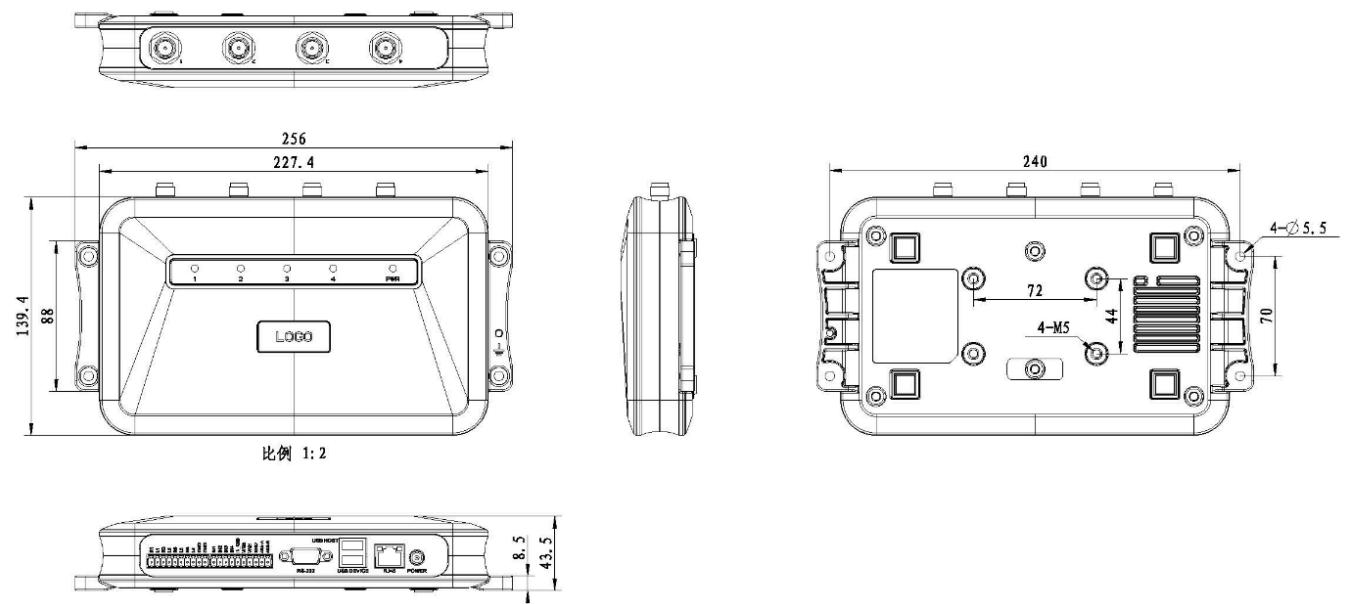


Image 2-1 Structure diagram of R06-HL-RF-4P LIBERTAS

Size: 256mm*147.6mm*43.47mm

2.2 Weight

Net Weight: 1.41kg

2.3 Illustration of LED display



Image2-2 Sketch map of reader's LED indicator

LED indicator panel describe as below Form 2-1:

Form 2-1 LED indicator description

LED Mark	Mark NO.	Status description
----------	----------	--------------------

NO.		
ANT1	Antenna 1 indicator	Indicates antenna 1 is working
ANT2	Antenna 2 indicator	Indicates antenna 2 is working
ANT3	Antenna 3 indicator	Indicates antenna 3 is working
ANT4	Antenna 4 indicator	Indicates antenna 4 is working
POWER	Power indicator	Keep bright indicates power supply working normally

2.4 Interfaces

2.4.1 Power supply, communication and I/O interface

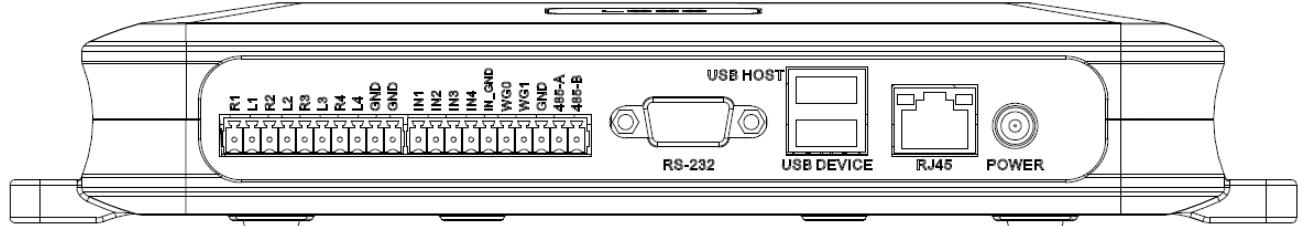


Image 2-3 Sketch map of reader's power supply, communication and I/O interface,

Details are shown in form 2-2

Form 2-2 Reader's power supply, communication and I/O interface,

Interface ID	Interface Name	Detail description
POWER	Power supply	DC,10~30V, power capacity no less than 60W.
RJ45	Ethernet interface	10/100M Ethernet interface, the reader control and communication interface.
USB DEVICE	USB device port	Connect PC or other upper computer, the reader control

		and communication interface.
USB HOST	USB host port	For external U disk, wireless LAN card and other expansion devices.
RS-232	RS-232 serial port	Serial port, the reader control and communication interface.
Other	I/O interface	See detailed definition 2.4.2.

2.4.2 I/O Interface definition

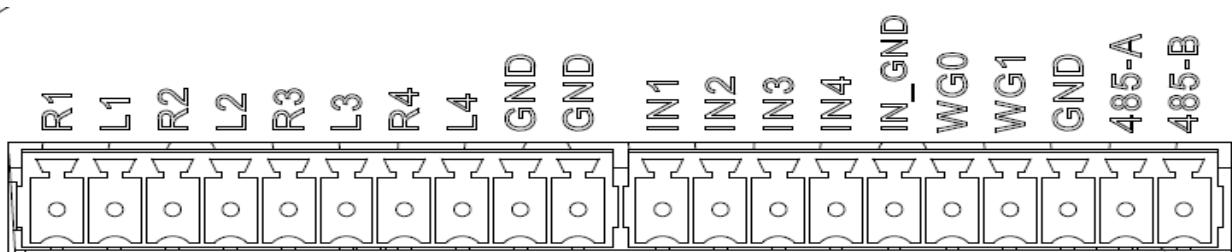


Image 2-4 Sketch map of I/O control interface

I/O control signal define as follow form 2-3

Form 2-3 I/O control signal definitions

Pin ID	Pin Description
R1	Relay 1# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
L1	Relay 1# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
R2	Relay 2# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
L2	Relay 2# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0'

	indicates open circuit, logic '1' indicates closed, default is open circuit.
R3	Relay 3# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
L3	Relay 3# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
R4	Relay 4# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
L4	Relay 4# output; DC_MAX: 30V, 2A; AC_MAX: 125V, 0.3A; logic '0' indicates open circuit, logic '1' indicates closed, default is open circuit.
GND	Ground
GND	Ground
IN1	Optocoupler 1# input, DC, 0~12V, higher than 9V is high level, lower than 8V is low level
IN2	Optocoupler 2# input, DC, 0~12V, higher than 9V is high level, lower than 8V is low level
IN3	Optocoupler 3# input, DC, 0~12V, higher than 9V is high level, lower than 8V is low level
IN4	Optocoupler 4# input, DC, 0~12V, higher than 9V is high level, lower than 8V is low level
IN_GN D	Optocoupler input ground, reader optocoupler external input signal ground
WG0	Wiegand data 0 signal, the default state is high level
WG1	Wiegand data 1 signal, the default state is high level
GND	Ground

485-A	RS485 A signal
485-B	RS485 B signal

2.4.3 Coaxial RF Feeder Cable (optional)



Image 2-6 schematic diagram of feeder line

RF cable TNC(Reverse polarity, internal thread, inner pin) connector connect with reader antenna TNC connector, RF cable SMA connector connect with external circular polarization antenna' s SMA connector, cable maximum length is 5m, impedance 50Ω , insertion loss is less than 2dB, high-performance cable can also be selected, and the length can be increased appropriately, insertion loss is less than 2dB.

Note: Poor contact of cable connector or an ultra-long RF cable can cause excessive attenuation of the transmitted signal and received echo signal, resulting in deterioration of read/write performance.

2.4.4 Network connection diagram

Network interface used for long-distance high-speed connection (less than 80 m), can be connected with the switcher or router through the network cable, or directly connected with the PC network interface, as shown in figure 2-7:

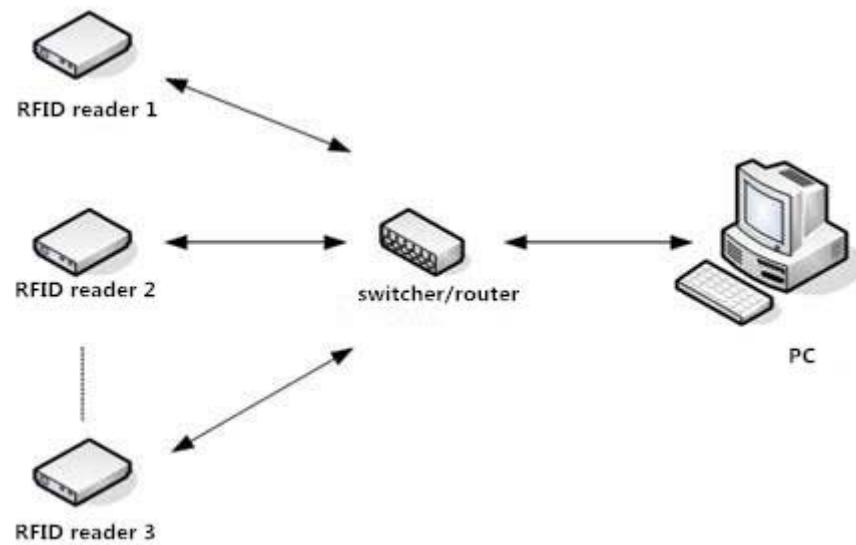


Image 2-7 Network application connection diagram

3. Installation

3.1 Notes

To ensure the normal and stable operation of the device and your personal property and safety, please carefully read the following notes before install R06-HL-RF-4P LIBERTAS reader and writer:

1. Firstly, check whether the power socket is connected to the ground, and to see whether the local power supply voltage is in accordance with the applicable voltage range of the reader;
2. Check the device and the external connection if is closely connected;
3. Pay attention to the type selection and the length limit of the network cable and the serial cable:
 - Network cable connects directly, no longer than 80 meters
 - Serial cable connects directly, no longer than 10 meters
4. When installing several readers, the antenna position and the antenna spacing should be appropriate to avoid interference with each other.

3.2 Installation conditions

Before installing the reader, please check carefully whether the product is in good condition and the accessories are complete. If there is any parts missing or damage, please contact the supplier in time.

3.3 Device connection

3.3.1 Power on

Insert the power cord into the AC power supply socket and plug another end into the

power connector of the device and tighten.

Turn on and wait about 20 seconds, the system initialization process is completed and is standby state.

3.3.2 Antenna connection

The device built with four TNC coaxial cable connector for connecting an external antenna, select low consumption RF cable, connectors should be tightened (Ensure to be waterproof when install outdoors);

The reader antenna angle or tilt need to adjust to the best position through the actual test according to the specific application.

3.3.3 PC connection

The device provides special adapter cable, including interface of network, serial and power, RS232 interface is for short distance communication (less than 10m), through the DB9 connector and the PC serial port connection to realize the communication of PC and the device, RJ45 network port used for long distance communication (less than 80m), connect PC with extend network cable.

3.4 Device installation

The reading and writing range of the reader depends on the on-site application, the tilt angle of the antenna is adjusted to achieve the best reading and writing performance.

3.5 Acceptance

Mainly from two aspects of acceptance criteria: structure and performance.

3.5.1 Acceptance of structure

Check below details:

- Whether reader is fixed firmly, without loose
- Whether the cable connected firmly
- Whether the screws are tighten

3.5.2 Performance acceptance

- Whether the reader is working properly
- Whether the read and write range is reasonable

4. Common failures

4.1 Daily maintenance

The routine maintenance of R06-HL-RF-4P LIBERTAS usage:

- ☆To check whether the tightening of RF connector
- ☆To check if the screw fixed reader and antenna is loose
- ☆To check whether the RF cable connector is disconnected from the shielding layer
- ☆To check if the reader power cable connection is reliable

4.2 Common failure analysis and solution

Power supply system failures:

Check whether the power adapter is normal, and the AC supply voltage is between 100V ~ 240V.

The panel indicator light failed when power on:

Check whether the communication is normal; please contact customer service if it's not normal.

The serial port unable to connect:

Check if the serial cable is not connected or connected unstable.

Check if the serial port connect baud rate of the reader is correct

Check if the selected COM port is right.

The network port cannot connect:

The default IP address and port of R06-HL-RF-4P LIBERTAS is 192.168.1.116:9090, ensure the IP address of the PC and reader in the same network segment, such as "192.168.1.XXX" then you can connect to the reader, if you forget the IP address of the device, you can reset

the reader' s IP address through the serial port.

The reader can't read the tag

Check if the setting of antenna number is correct

Check if the label is damaged

Check if the label is placed in the reader's valid reading and writing range.

Check if the electromagnetic interference between the reader and the other device.

For the problem users cannot solve, please contact customer service.

5. Package

5.1 Package

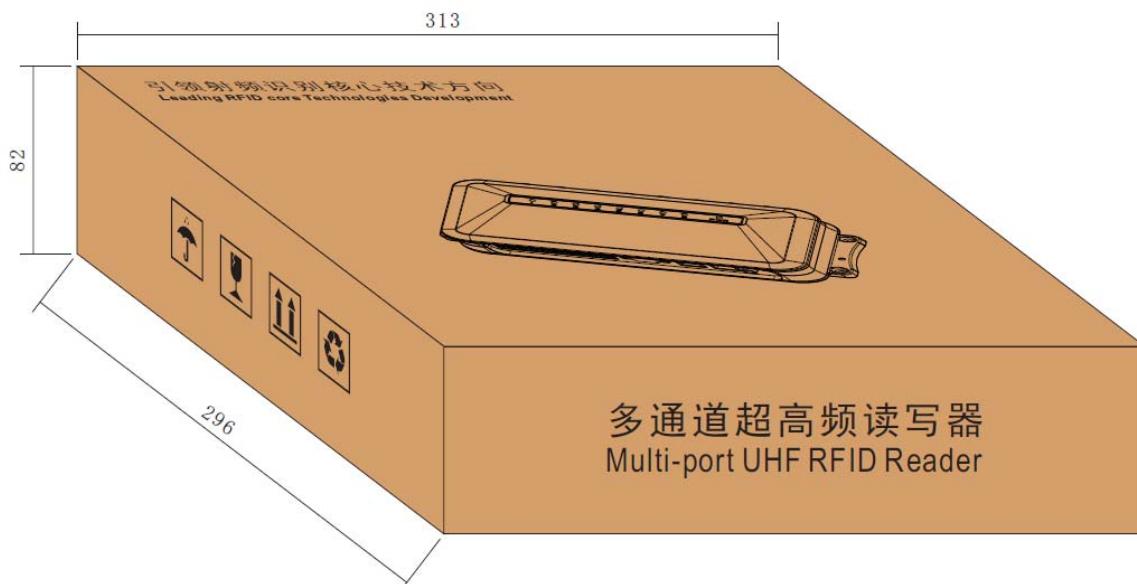


Image5-1 Carton box size

Carton box size: 313X296X82mm

5.2 Accessories

In order to facilitate the storage and transportation in near future, the packing box and the packing material should be kept properly after unpack.

Besides of the device in the box, accessories equipped with the reader are also included in, please check the product packing list to confirm whether the product and accessories are complete, if any discrepancies or damage, please contact with the after-sale service in time.

The specific list of accessories as shown in table 5-1

Table 5-1 Package list

NO.	Name	Material Code	Qty	Unit	Remark
1	R06-HL-RF-4P LIBERTAS	_____	1	set	Included
2	Power adapter 24V/2.5A	20109000000324	1	pcs	Included
3	AC power cord	20350000000195	1	unit	Included
4	Network cable	20350000000188	1	unit	Included
5	RS232 black cable	20351000000478	1	pcs	Included
6	USB cable	20351000000036	1	pcs	Included
7	9dBi circularly polarized antenna	20351000000035	4	pcs	Optional
8	Coaxial RF Feeder Cable BRL-07 SMA-K--TNC-J reversed polarity	20351000000814	4	pcs	Optional
9	Mounting screws M4*28	W01-104028-100	4	pcs	Included
10	Warranty card	20420000001651	1	pcs	Included
11	Certificate of approval	20420000001650	1	pcs	Included
12	CD	N10-010000-002	1	pcs	Optional

5.3 Storage environment

R06-HL-RF-4P LIBERTAS fixed reader should be stored in below conditions:

☆ Environment temperature : -40°C ~ +85°C

☆ Relative humidity : 5% RH ~ 95%RH

6. After-sale service

Letter to Customers

Since our aim is to continuously improve our products for better user experience, we may modify the product characteristics, composition and design of circuits without given notifications. Thus the real product may be not in accordance with this manual. Generally, we will provide timely amendments to this manual. If it's not provided timely, please consult our service department.

After sales description

Product Name		Model No.	
Product Code		Level	
Description of troubles			
User's name		Postcode	
Contact person		Contact no.	

Warranty Description: In order to offer users better service, our company provide warranty card with each device, please keep it to enjoy the service.

1, Products from the date of purchase, under normal operation use without repair, one year warranty service.

2, Free maintenance won't be given under the following circumstance:

- ① The damage of the reader caused by high voltage of the power grid.
- ② The damage caused by misuse or operated improperly.
- ③ The damage caused by excessive vibration when user delivering.

3, The software of this product can be upgraded freely, users can be training in our company for free.

4, Will be charge appropriately if the user don't have a warranty card.

5, Users will need to fill out the warranty card for repair service, and sent back to FETCi

FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

FCC ID: 2AQ8J-R06HLRF4P