



Meet delights for your home here



Home of Delights

Massage Chair
Fauteuil de Massage

JL10052

THIS INSTRUCTION BOOKLET CONTAINS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

USA office: Fontana

AUS office: Truganina

FRA office: Saint Vigor d'Ymonville

GBR office: FDS Corporation Limited, Unit 4, Blackacre Road, Great Blakenham, Ipswich, IP6 0FL, United Kingdom




Before You Start

- ⚠ Please read all instructions carefully.
- ⚠ Retain instructions for future reference.
- ⚠ Separate and count all parts and hardware.
- ⚠ Read through each step carefully and follow the proper order.
- ⚠ We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
- ⚠ Always place the product on a flat, steady and stable surface.
- ⚠ Keep all small parts and packaging materials for this product away from babies and children as they potentially pose a serious choking hazard.

IMPORTANT SAFETY INSTRUCTIONS

OPERATING SURROUNDINGS

- OPERATING ENVIRONMENT
- Do not use or store the massage chair under damp conditions; i.e.bathroom, sauna, spa, to avoid any mold development, electric shock, fire or mechanical failure.
- Don't use the massage chair outdoors.
- Don't use the massage chair under dusty and temperature-varying conditions.
- Don't place the massage chair near heater(s) stove or direct.
- Sunlight to avoid inner components overheating which may lead electrical fires and shock.
- Make sure to place the massage chair on flat level ground surface.
- The chair should be placed on carpet, wood or hard surface flooring.
- Make sure the power plug is properly grounded to avoid shock and injury.
- Don't use the machine while smoking

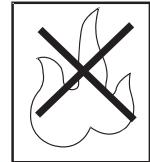

FOLLOWING CONDITIONS REQUIRING CONSULT FROM A MEDICAL DOCTOR BEFORE USE

- Suffered from malignant tumor
- Serious heart disease
- Serious skin disease
- Bone disease
- While pregnant or menstruating
- On rest by the doctor
- Spinal conditions including injuries associated to the back and spine
- Hypertension and cramping
- Arthritic bone disease
- Any implanted medical device such as pacemaker
- Suffering from internal conditions(i.e.gastritis, enteritis, diarrhea, hepatitis)
- Serious blood circulation trouble
- Consciousness issues such as vertigo and other equilibrium matters

WARNING

Children under the age of 18 years old or with physical or mental conditions are not permitted to use this product unattended by an able adult and with the permission of a medical doctor. These precautions are taken to prevent injury and damage.

IMPORTANT SAFETY INSTRUCTIONS

For safety reasons and in order to clearly indicate potential dangers should the product be used improperly, instructions have been marked in the following should be strictly noted.

🚫 CAUTIONS

Non-qualified technicians are not permitted to dismantle or repair this product to avoid fire, electrical shock or serious injury.



Do not clean or wipe down this product with anything wet or moist when this symbol is shown.



When storing or during maintenance, be sure to disconnect the power plug from socket. Do not detach the plug with wet hands.



Make sure to turn the power switch to the "off" position and detach the power plug when cleaning or storing the product.



During cleaning or when moving the chair, make sure to detach power cord from the wall and chair to avoid fire or electrical shock. Do not place the machine on a unstable, uneven surface to avoid damage, insulation, failure or electrical shock.



When storing the machine, make sure to disconnect power plug from the outlet and chair to avoid fire caused by electrical surges.



Clean power plug periodically to avoid buildup leading to possible fire.



Do not use it at any unsafe area or for any other purposes than personal use. Not for commercial use.



Do not store the chair in areas that are not climate controlled. Must be in room temperature with very low humidity.



Keep the power cord unobstructed at all time, i.e. not twisted, knotted, over bent or pulled and do not place anything heavy on it.



IMPORTANT SAFETY INSTRUCTIONS

🚫 CAUTIONS

Do not make any modifications or change components by an unqualified person.



Do not dismantle the machine by unauthorized person to avoid electrical shock, short-circuit or fire.



Do not store it near a fire, heater or flammable substances it is one of the major reasons of causing product damage.



Should any abnormality occur(i.e. burning smell), stop using immediately and detach power plug from outlet.



Please contact your local seller or authorized service agent for maintenance to avoid electrical fire and injury.



Only proper rated voltage must be used. Stop using immediately if power cord or power plug is damaged or not tightly fitted into the outlet or the base of the chair.



Be sure to keep children and pets away while operating to avoid any injury. Do not place the chair in direct sunlight at all times.



If the supply cord is damaged, it must be replaced by a unqualified technician.



IMPORTANT SAFETY INSTRUCTIONS

RF exposure statement

This equipment complies with the FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Warning

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:



(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.


NOTE 2: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NAME OF EACH PART

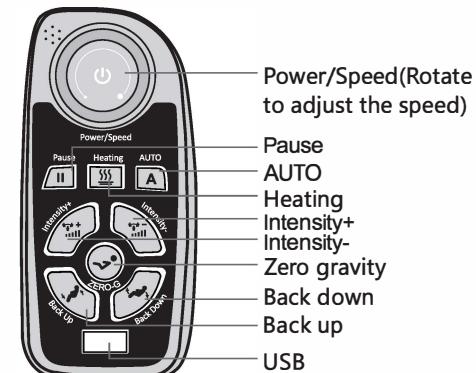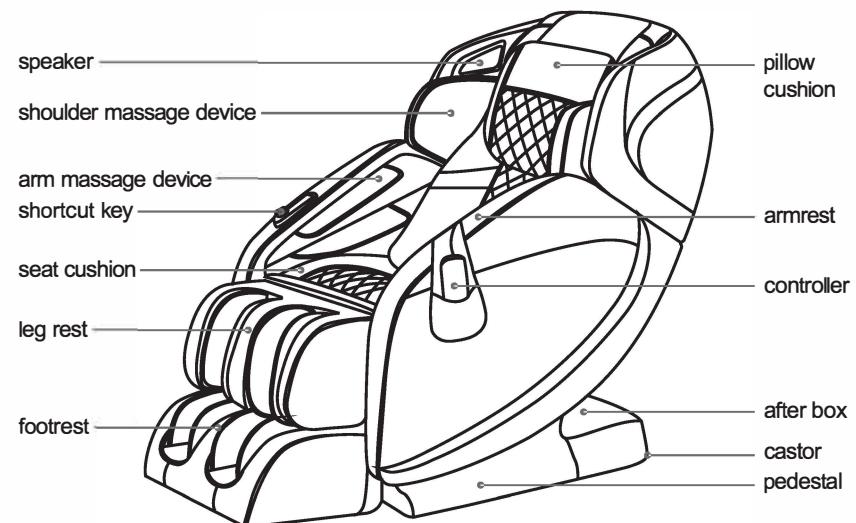

Shortcut Keys

INSTRUCTIONS ON CONTROL PANEL

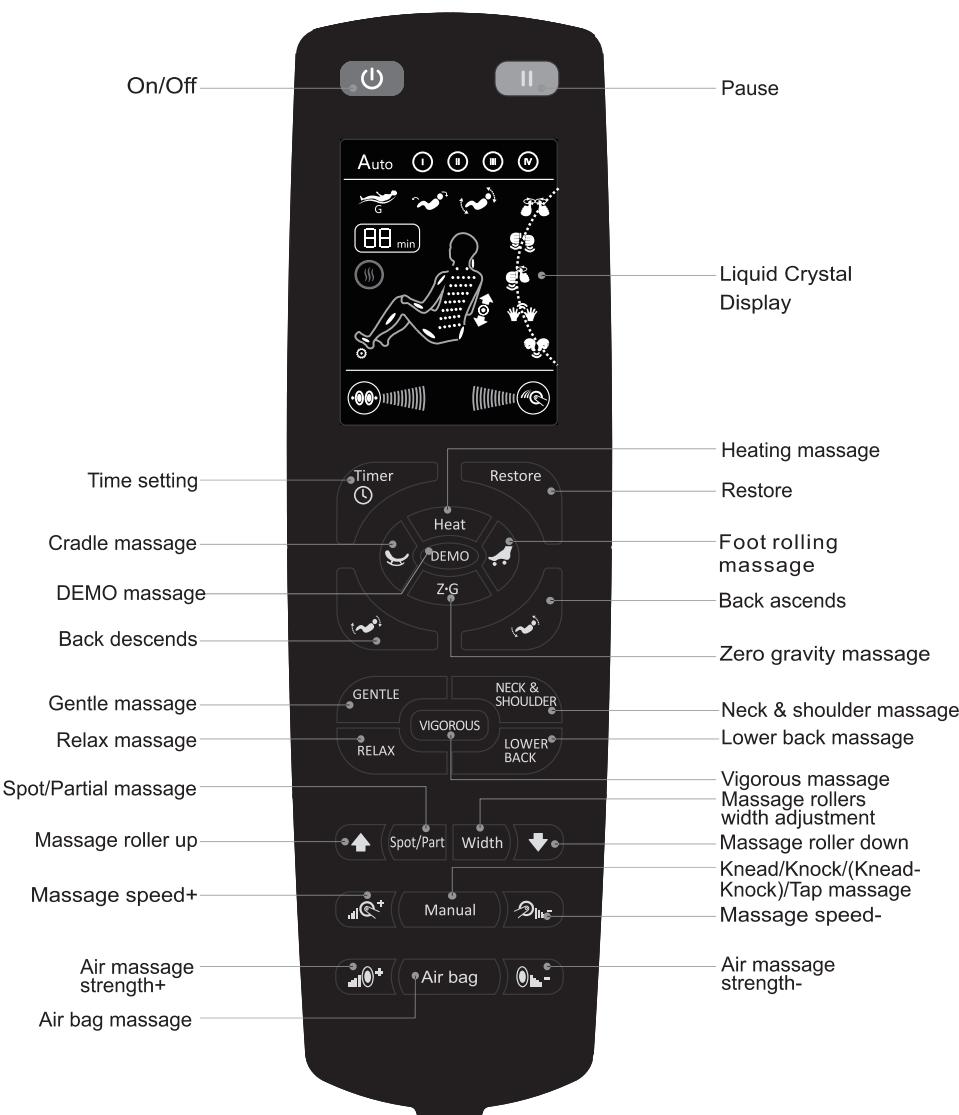


! Warning: Only rated supply 110V must be used to avoid damage to electronic components.

OPERATION GUIDE

1. Powering up the massage chair

First be sure the power switch at the back of the massage chair is in the off "O" position. then insert the power cable into the port to the left of the switch. Once firmly plugged in, proceed to plug the power cord into the outlet. Then put the switch to the on "I" and the remote should light up.

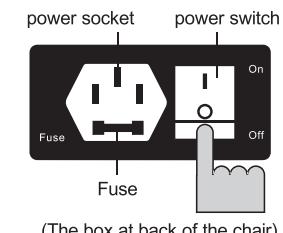

2. Starting your massage

Sit in the chair with your buttocks firmly pressed against the backrest to ensure that the chair will provide a consistent massage pressure from top to bottom. The press "on" button and select a massage.



Press the "time setting" button to adjust massage time. You can adjust time to maximum of 30 minutes. The unit of increment is 5 minutes.

3. Adjusting the angle of the recline

Please adjust the backrest and leg rest angle prior to selecting a massage function. Getting into position before selecting the massage function allows for the chair to deliver a more accurate massage. The chair and leg rest can be adjusted simultaneously or independently, depending on the button selected on the remote as illustrated below.



4. Stop or finish massage



Normal stop: the timing function automatically fix time is 15 minutes, time out, all the program will stop and keep the setting posture. Force stop: when press the restore during massage, it will stop massage immediately, press again to continue.

OPERATION GUIDE

5. Electing a Preset Programmed Massage

DEMO, Gentle, Neck & shoulder, Relax, Lower back, Vigorous, Cradle massage.

Automatic programs combine shiatsu, kneading, tapping and air massage.

Button	Description	Main function
	DEMO massage program	Press for a 7-minute demonstration of all available massage techniques.
	Gentle massage program	Kneading massage, air massage and tapping massage. The recline of the backrest can be adjusted during the massage.
	Neck & shoulder massage program	Kneading and beat massage program. The angle of backrest cushion and leg rest cushion could be adjusted during the process.
	Relax massage program	This course combines mainly with quick kneading, tapping and air massage. The angle of backrest cushion and leg rest cushion could be adjusted during the process.
	Lower back massage program	Kneading and scraping massage program. The angle of backrest cushion and leg rest cushion could be adjusted during the process.
	Vigorous massage program	A slower pace massage, delivering a soothing intensity with full airbag massage.
	Cradle massage program	This course combines mainly with cradle massage. The angle of backrest cushion and leg rest cushion could be adjusted during the process.

- For above programs, the fixed time is 15 minutes and the default of airbag intensity is low.
- The above automatic full-body massage courses can not be combined with other programs.

OPERATION GUIDE

Manual setting course

Introduction of manual setting course

Partial air massage is the course which targets different needs and areas of body.

Button	Description	Main function
	 Kneading	Press button one time to start kneading massage. The speed is adjustable.
	 Knocking	Press two times to start the knead-knocking massage. The speed is adjustable.
	 Knead-Knocking	Press three times to start the knocking massage. The speed and width is adjustable.
	 Tapping	Press four times to start the tapping massage. The speed and width is adjustable.
	 Shiatsu	Shiatsu massage.

- The above manual setting course could not be combined with other courses.
- For the above manual setting course, the default setting for the massage is spot-specific with medium width. Speed and width are adjustable by pressing relative button.


Function introduction for manual setting course

Button	Description	Main function
	Speed adjustment	There are five levels to choose.
	Width adjustment	There are three levels to choose from narrow, medium and wide.
	Spot	Partial massage/Press the button one time the rollers will stay in one location Press two times to start the partial massage. The third time to start full course massage.
 	Massage roller move up Massage roller move down	Press down the button to move massage roller, release the button to stop.

OPERATION GUIDE

Functions on buttons

Introductions on buttons used for manual setting course

Button	Description	Main function
	Air pressure intensity adjustment	Air pressure intensity is adjustable. It could be adjusted only in air pressure massage. There are 5 levels of strength that can be adjusted.
	Air massage	Press one time to start air massage for upper body. Press two times to start air massage for lower body. Press three times to start air massage for full body. Close by four times.
	Rolling massage	Foot rolling control key. Press the button to start foot rolling massage, press again to stop.
	Heating function	Waist heating function. Press the button to start waist heating massage, press again to stop.

Music Function

Connecting your mobile device: Turn on blue tooth of mobile phone or tablet. then select blue tooth device labeled (code JL10052GB-DK, password "9999"), after it syncs with massage chair speakers, you can now play your favorite tunes or audio books from your massage chair. Enhance your massage experience!



Warning: Supervision and guidance are necessary when people with disabilities and mental illness. Please advise with your doctor before using the chair if you have any medical conditions. Children under 18 should not use the chair and consult with a doctor for approval if attempted. Do not operate the chair and consult with a doctor for approval if attempted. Do not operate the chair if there are any children or pets near by. Serious injuries may occur if these instructions are not followed.

SAFETY INSTRUCTIONS

1. Should any abnormality occur, shut off and detach power plug from socket.
2. When power cord are damaged, it must be changed from special power cord or available from other manufacturer or service department.



!Warning: Do not dismantle, modify or change components by unqualified person to avoid electric shock or fire.

DAILY CARE AND MAINTENANCE

Storage guide

- Do not dismantle any part the chair or make modifications. Serious injury may occur.
- Do not attempt to repair the machine by unqualified person to avoid electric shock or fire.
- Make sure to shut off and detach the power plug when cleaning to avoid electric shock or hazard.
- Keep the massage chair clean and free dust. Do not place the massage chair in a humid area.
- If not in use for a long period, please cover it with a cloth to protect from dust.
- Do not place the massage chair under sunlight or heating source like a heater or directly by a window that has direct sunlight.

Maintenance

- Use a neutral detergent only that is free of acid and alcohol.
- Use a neutral detergent to clean the back cushion, head cushion and leg cushion. Let it dry.
- With a damp cloth wipe down the plastic parts, pipe and synthetic leather material of the chair.

- Make sure not to use any gasoline, banana oil, benzene based cleaners to avoid leather color fading or discoloring.
- Do not spray pesticide or aerosols near or on the chair to avoid electric shock or fire.
- Please clean with dry cloth to avoid mechanical failure.

Controller maintenance

- Do not place the massage chair near heater or fire.
- Keep away from humidity to avoid electric shock and damage to the chair.
- Please clean dust with soft cloth or small banister brush.
- Make sure not to use detergents containing benzene, gasoline,banana oil.

TROUBLE SHOOTING

Checking is necessary in frequent usage.

Make sure the machine work normally before usage, after not in used for long time.

Abnormality situation	Solution guide
Failure to start and indication light is off	Check the plug is well connected./Check the switch on the chair is turned on in the “ ” position.
Sound in operation	<p>The following sounds are normal</p> <ul style="list-style-type: none"> • The mechanism will produce a sound for kneading or knocking • Sound changes after speed adjustment • Sound from when the rollers go up or down. • When the chair does a tapping massage it will make the chair vibrate making a sound. • When the air inflates and deflates it will make a swooshing sound • Sound for airbag inflating and venting. Airbags may crackle. • Sound for leg adjustment. • Sound for motor when the massage chair is loaded.

SPECIFICATION

Product name	Massage Chair
Model	JL10052
Power supply	110V~ 60Hz
Rated power	150W
Rated working time	15min

VOICE CONTROL ENTER

Serial No	Automatic Program	Voice Control Entry	Answer Entry
1		Hello Massage	I Am Here
2		Massage On	Powered On
3		Switch Off	Shut Down
4		Pause Massage	Paused
5		Resume Massage	Massage Resumed
6	Z.G	Zero Gravity On	Zero Gravity On
7	⌚	Stretch Mode	Stretch Mode Is On
8	DEMO	Vitality Mode	Vitality Awakening Has Been Turned On
9	GENTLE	Soothing Mode	Soothing Mode Is On
10	NECK&SHOULDER	Shoulder Neck Mode	Shoulder Neck Mode Is On
11	VIGOROUS	Motion Mode	Sport Mode Is On
12	RELAX	Relaxation Mode	Relaxation Is On
13	LOWER BACK	Hip Mode	Beauty Mode Is On
14		Turn On Heating	Heating On
15		Stop Heating	Heating Off
16		Sole Massage	The Sole Roller Is Turned On
17		Stop Foot Massage	Sole Roller Closed
18		Back Up	Backrest Raised
19		Lie Down A Little	Backrest Lowered
20		Backrest Stop	Backrest Stopped
21		Increase Efforts	Efforts Have Been Intensified
22		Reduce Force	The Force Has Been Reduced