



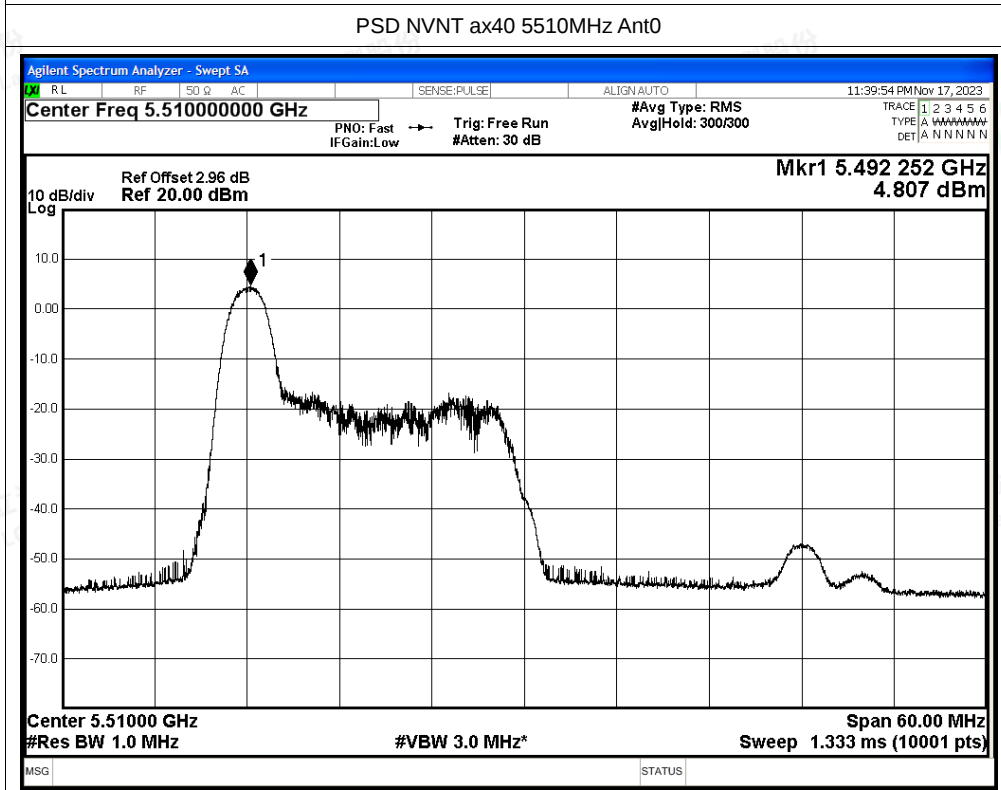
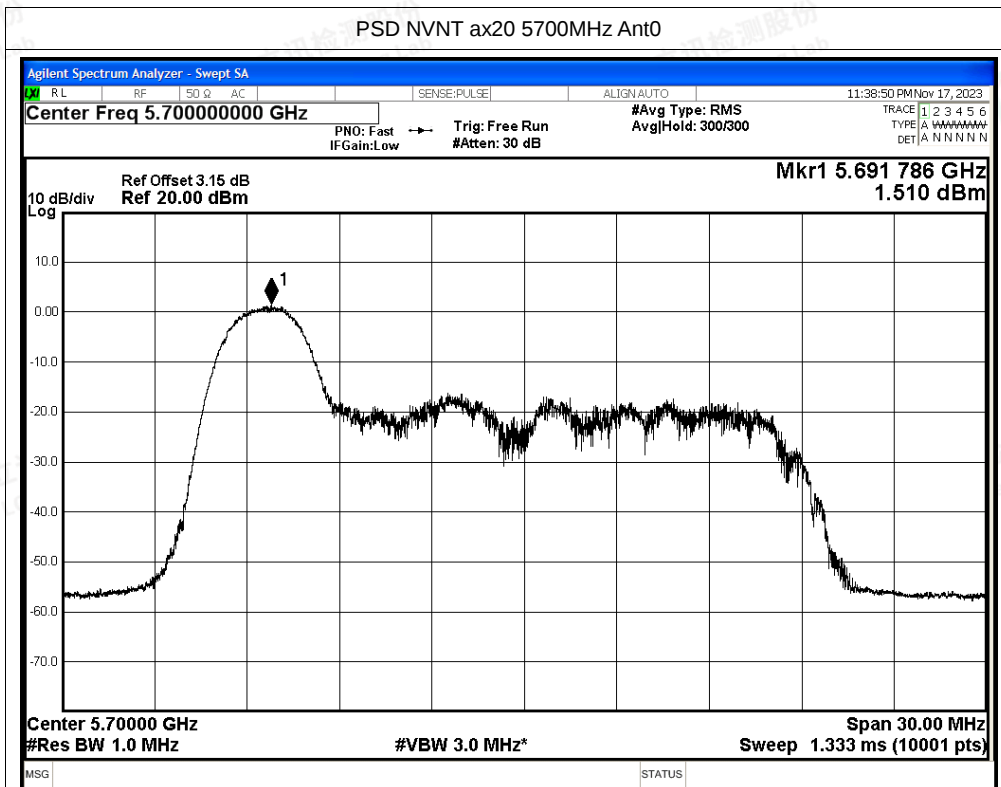


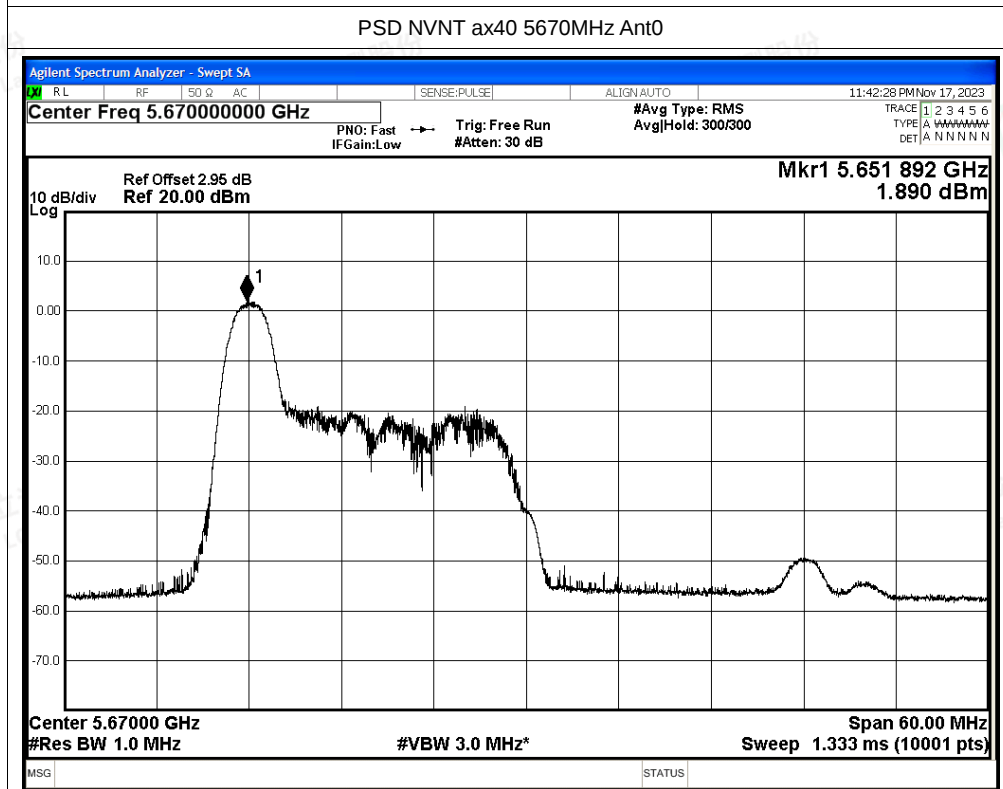

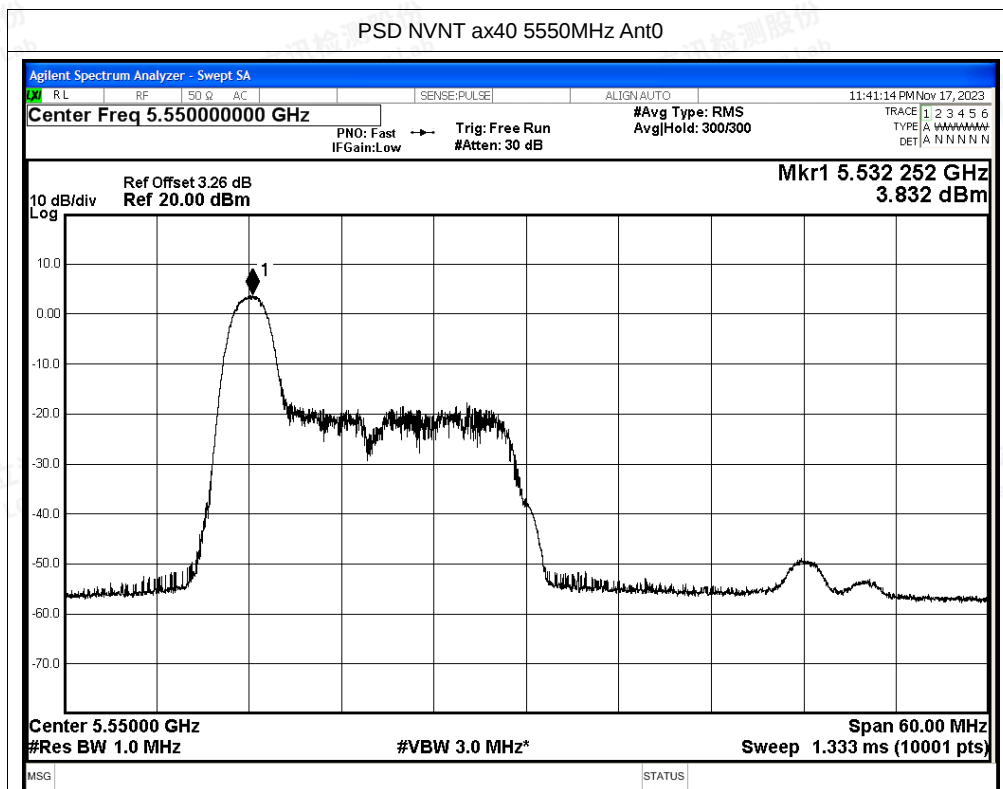


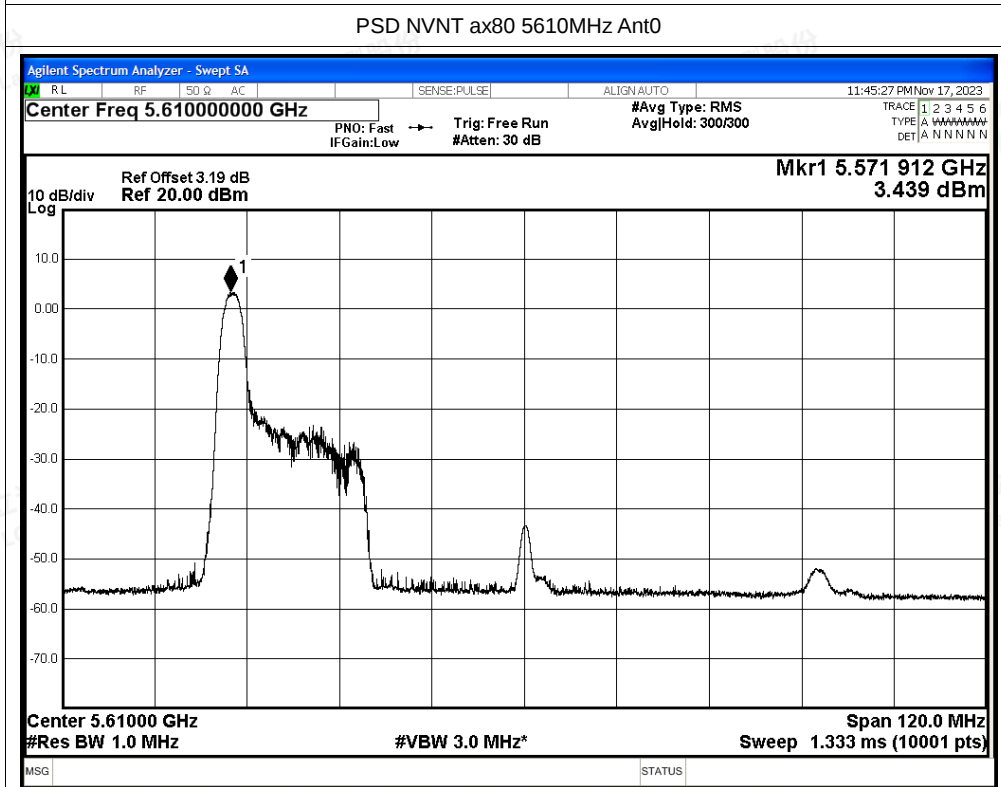

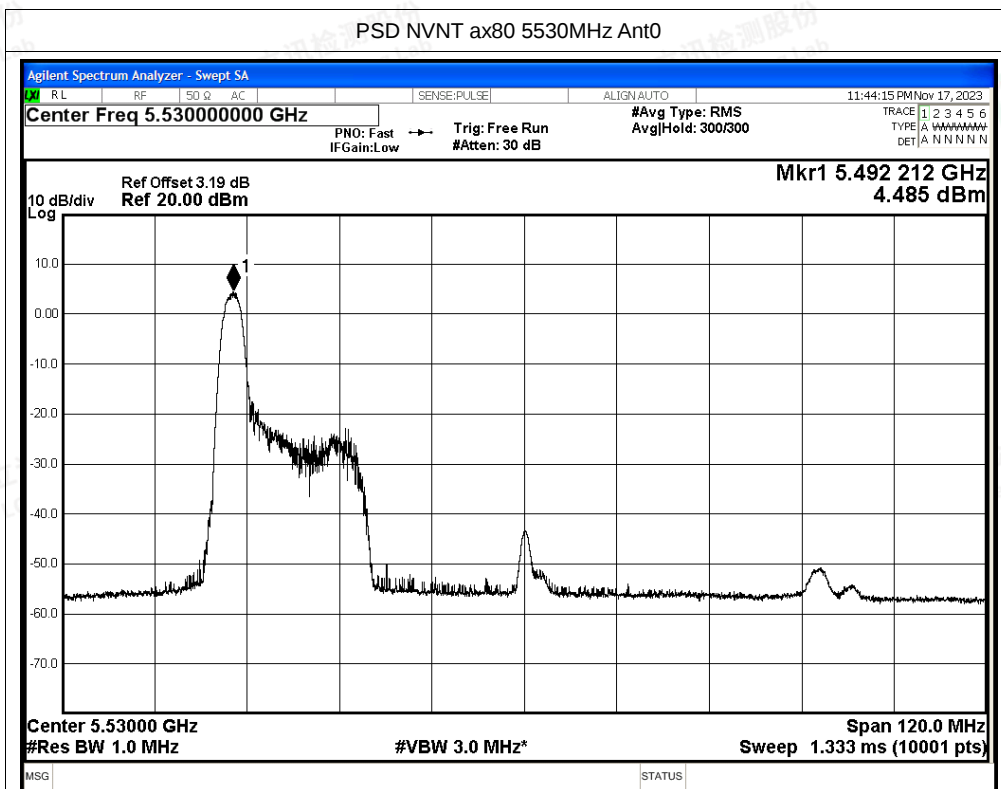




Test Graphs



PSD NVNT ax20 5500MHz Ant0


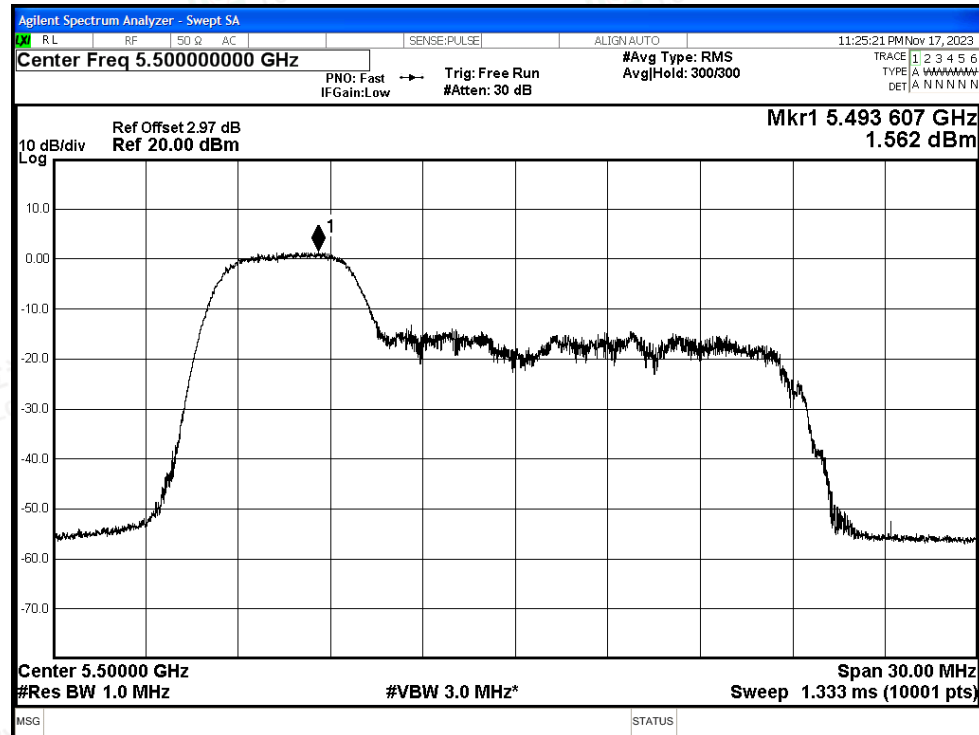


PSD NVNT ax20 5580MHz Ant0

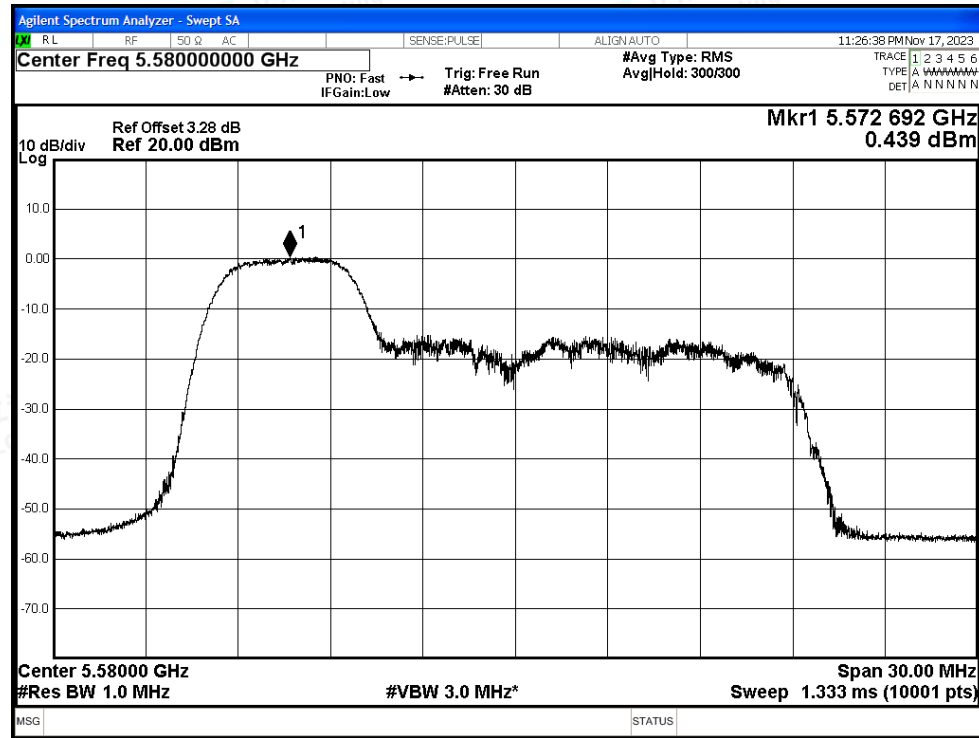

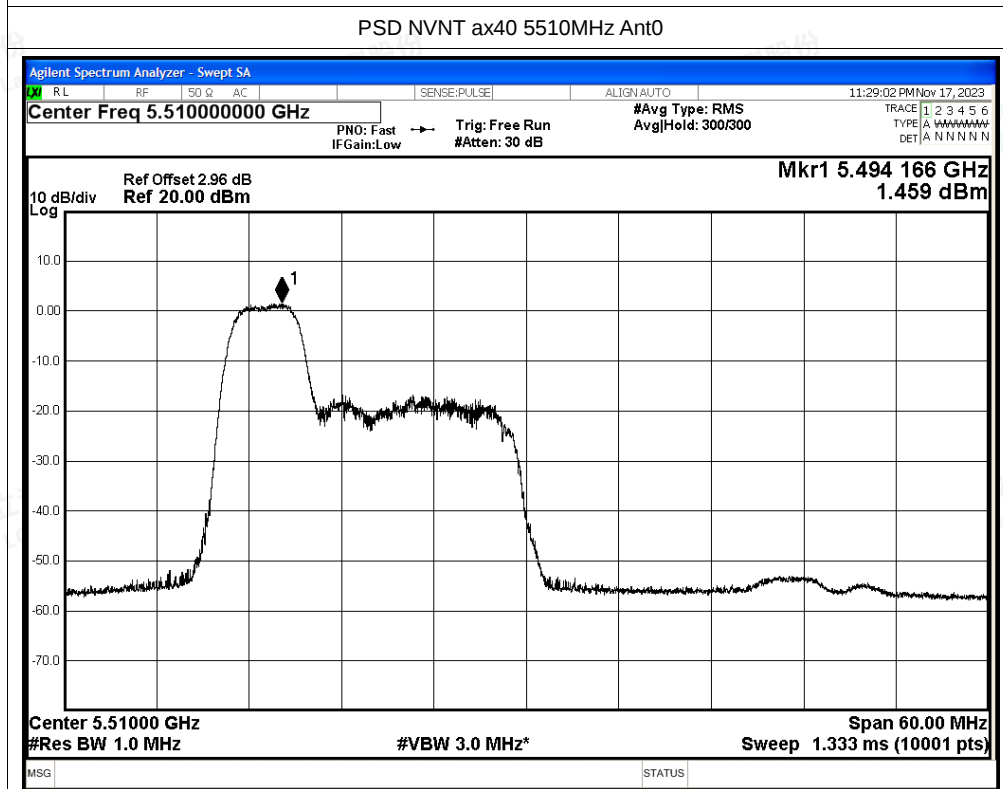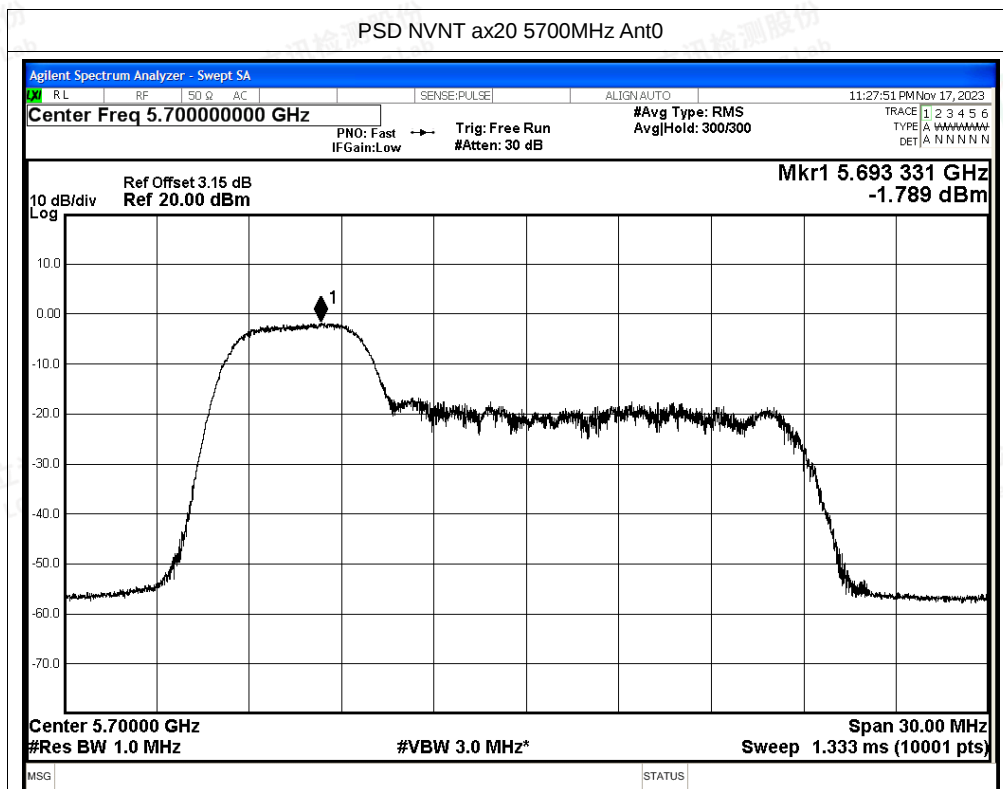

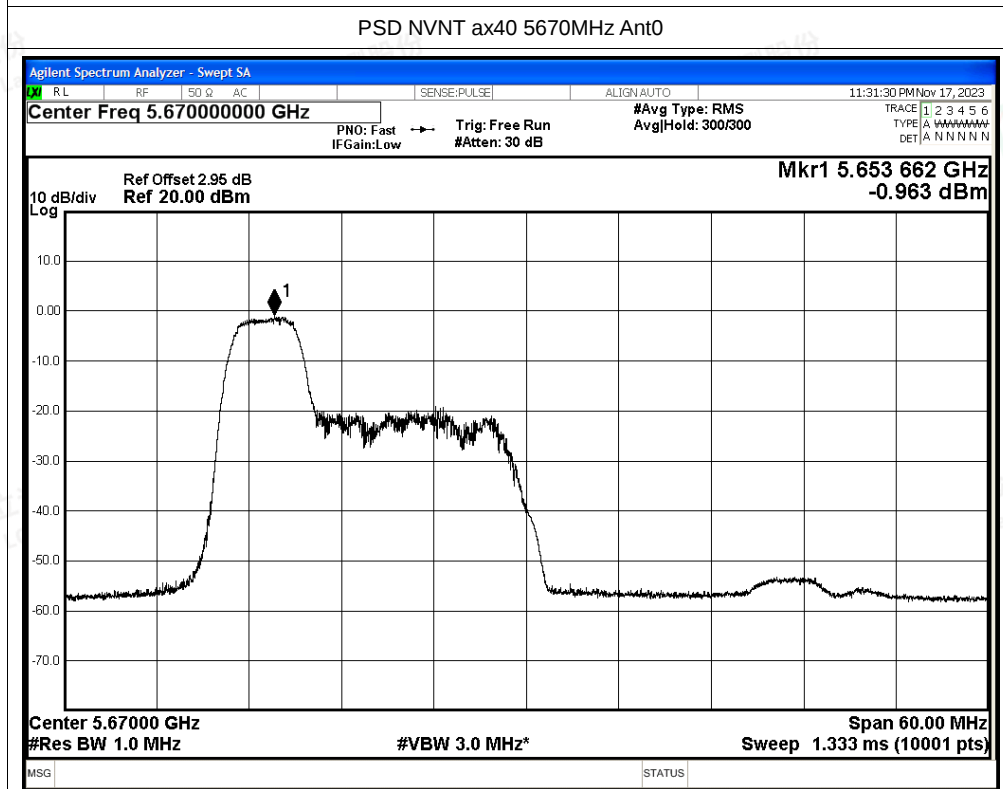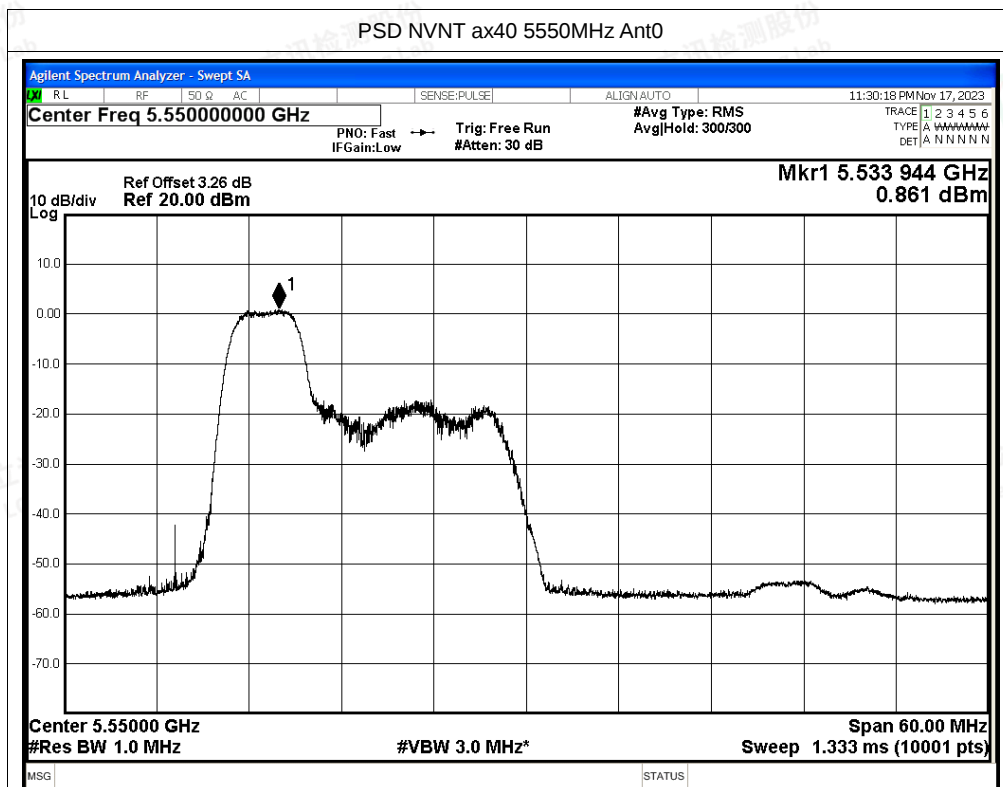


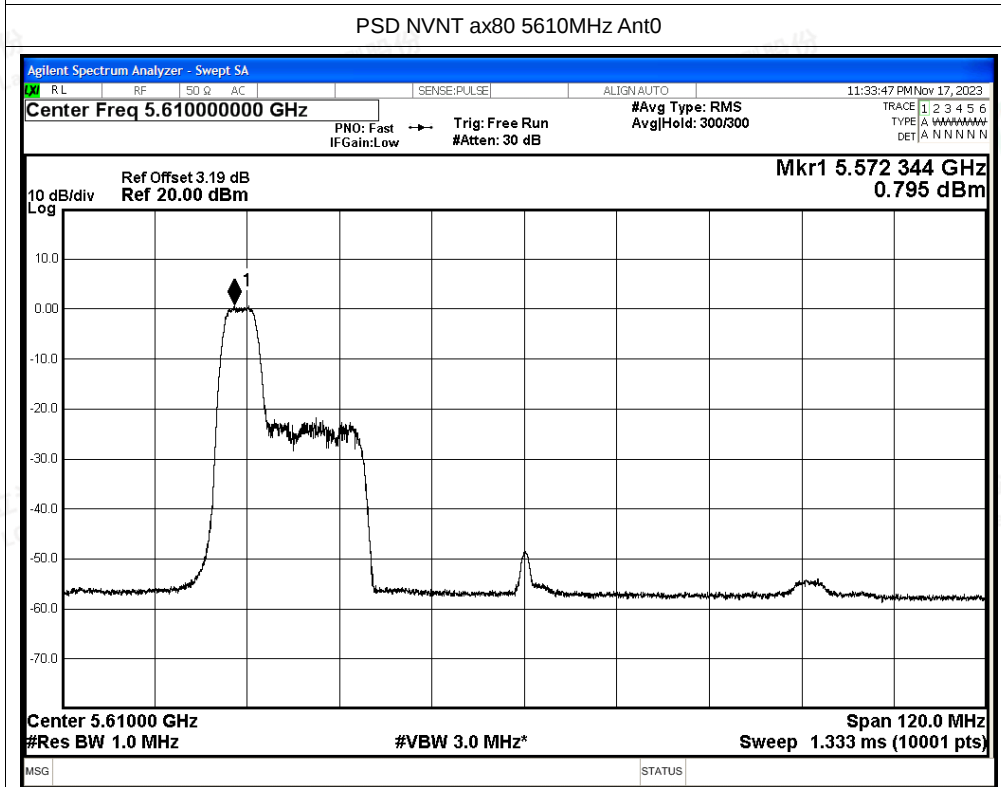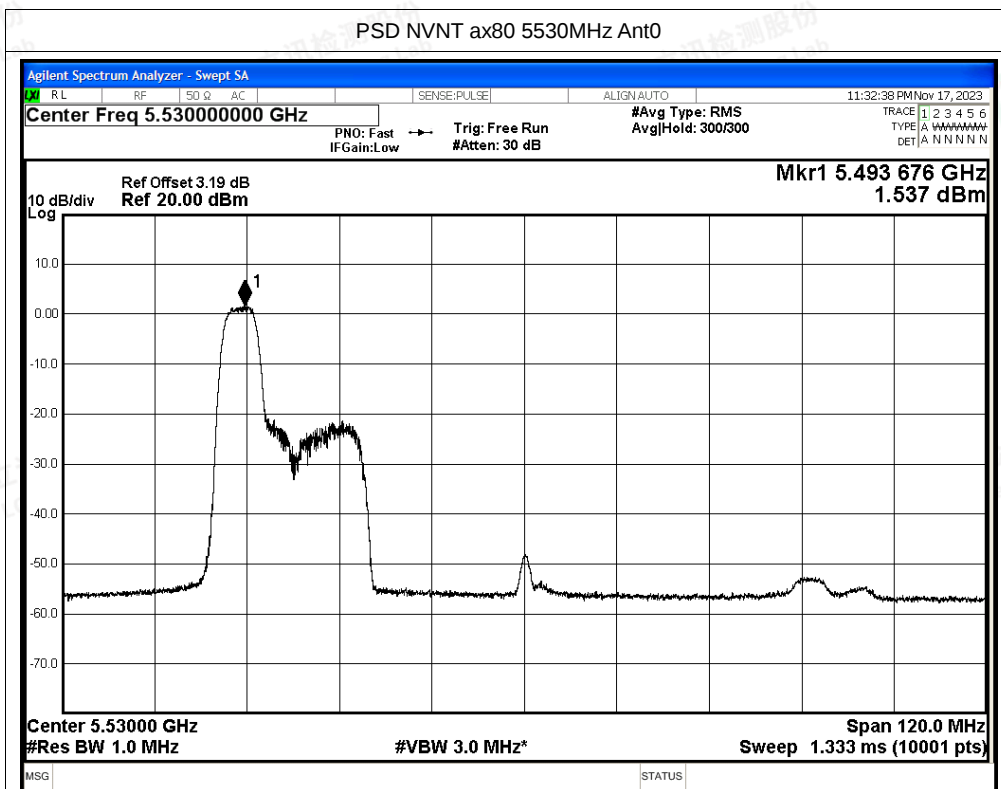






Test Graphs



PSD NVNT ax20 5500MHz Ant0


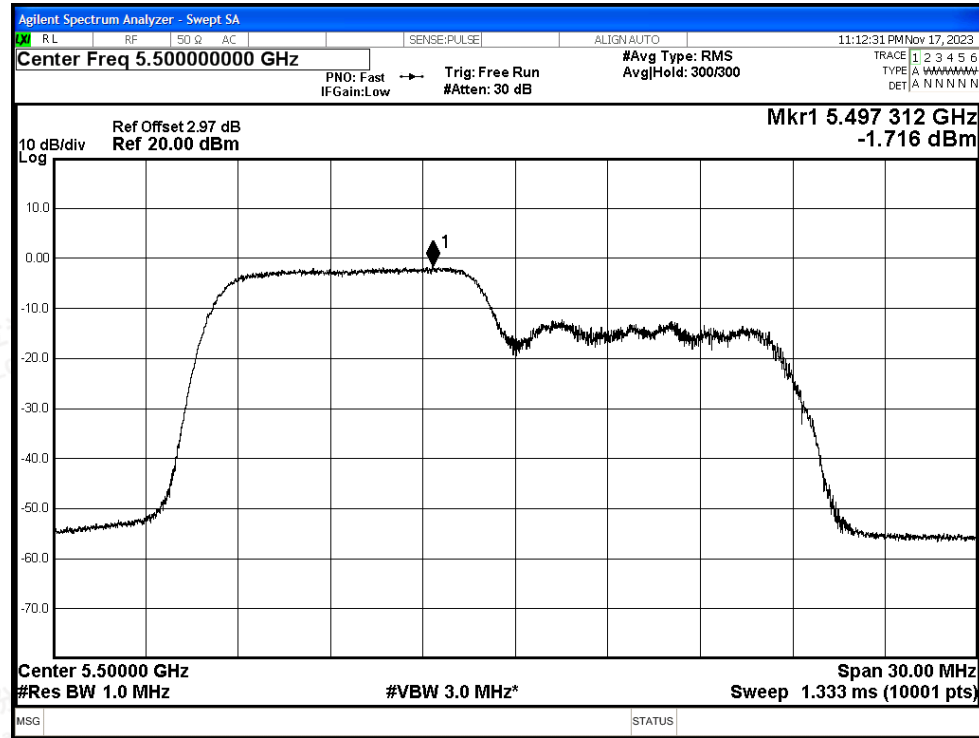


PSD NVNT ax20 5580MHz Ant0

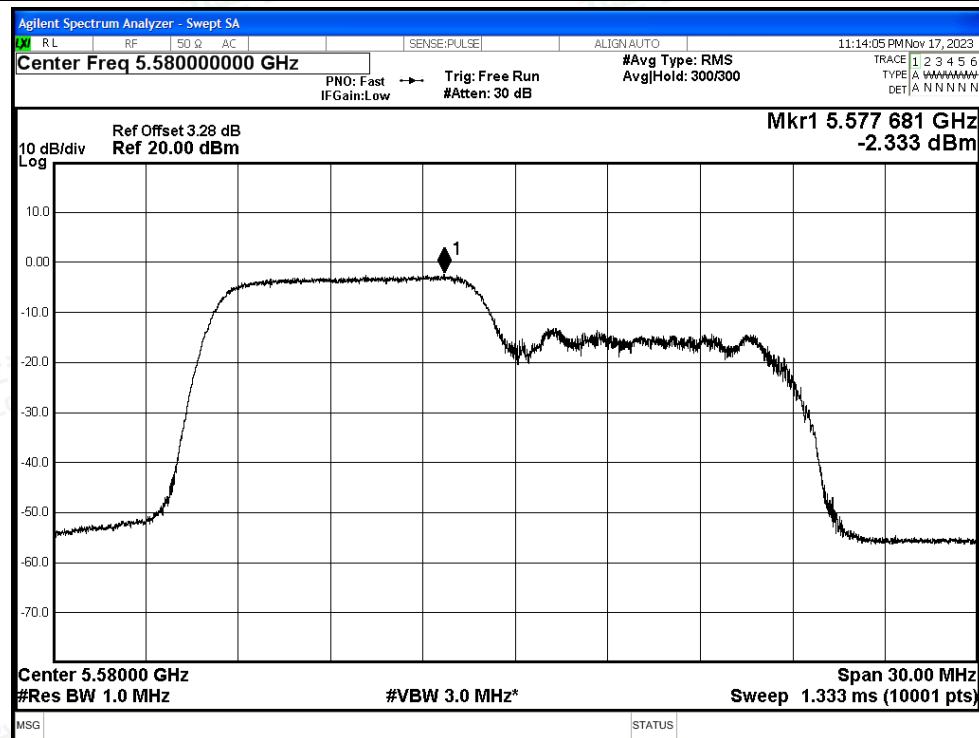

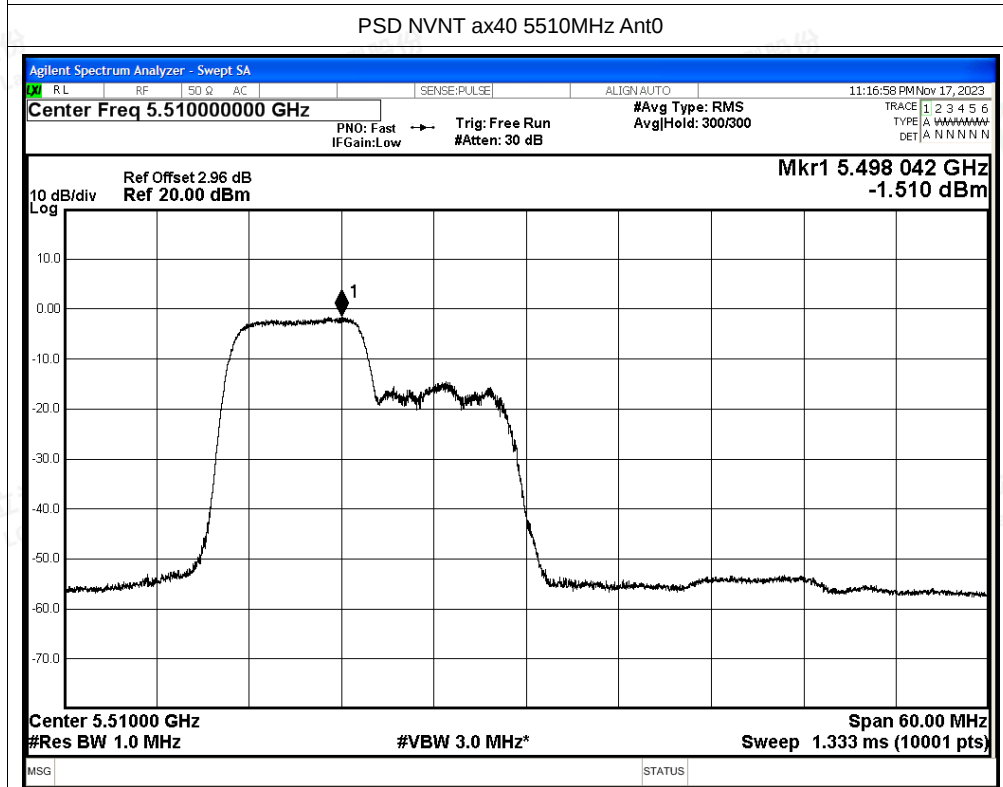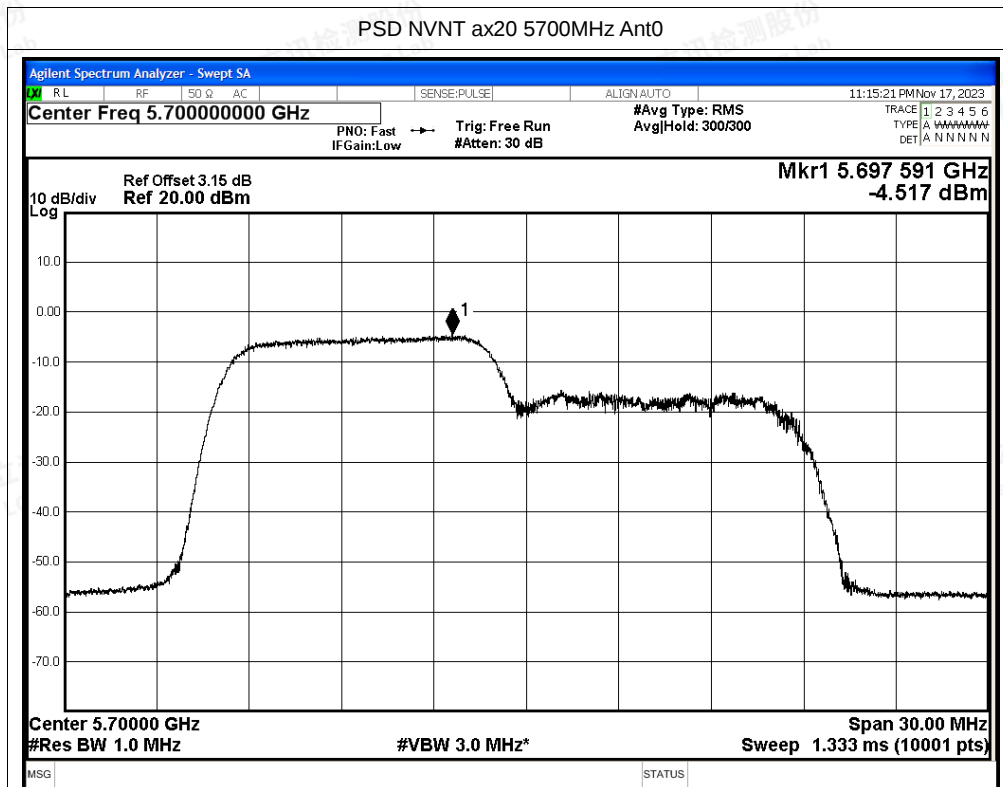

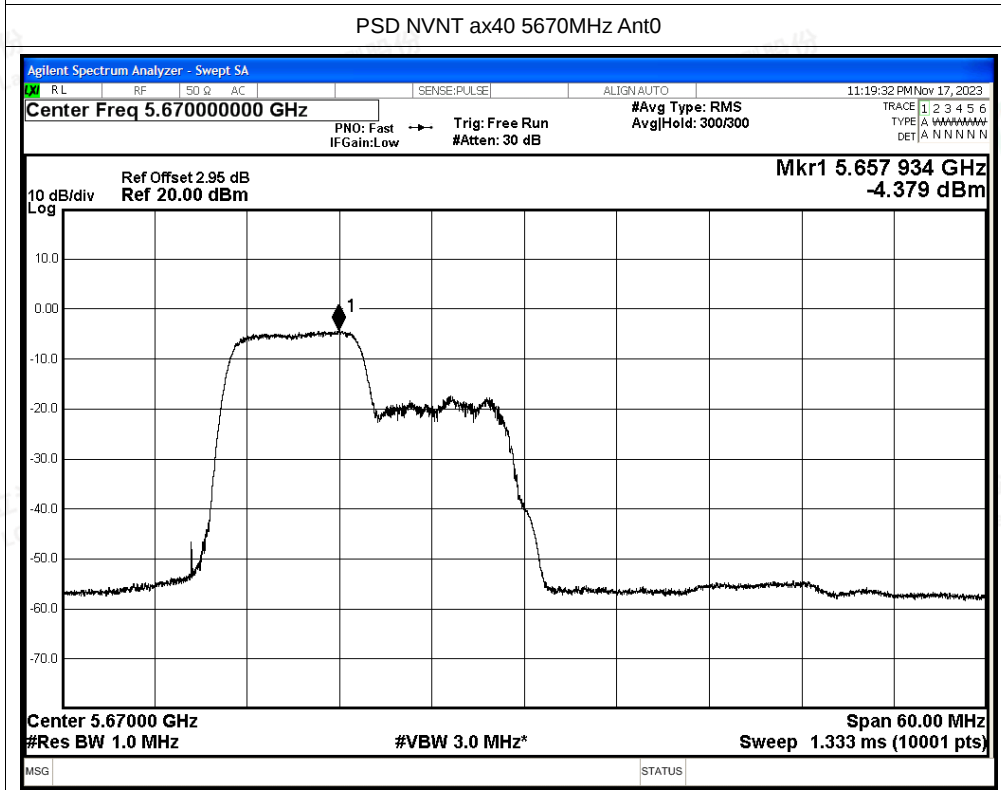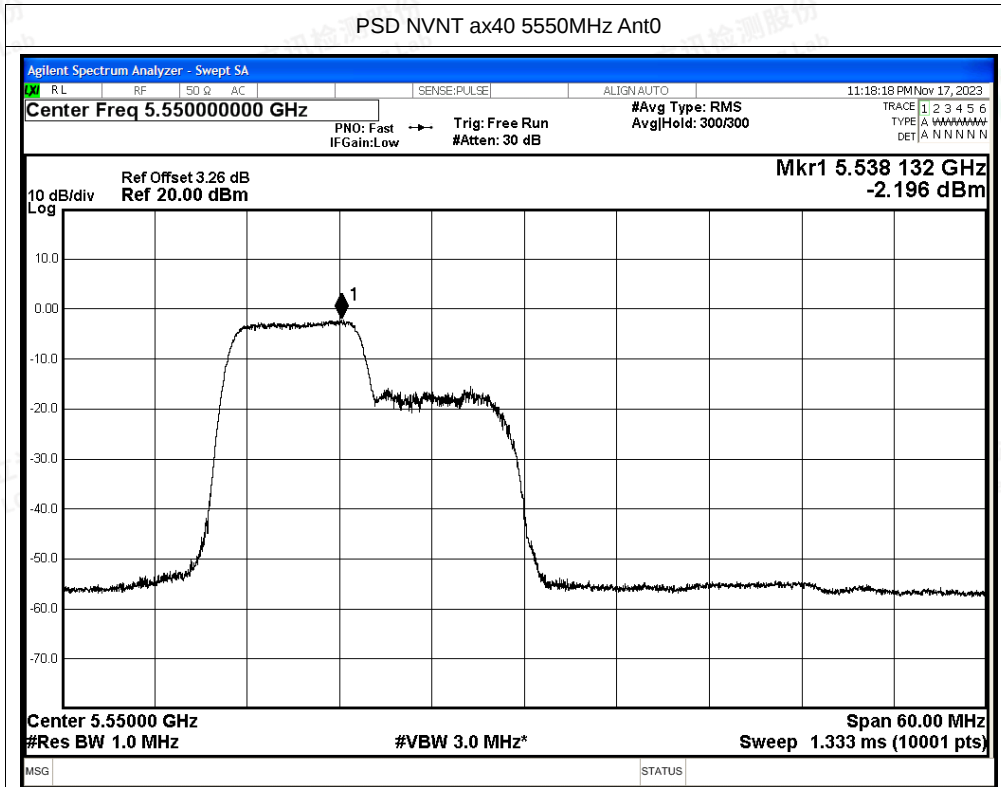


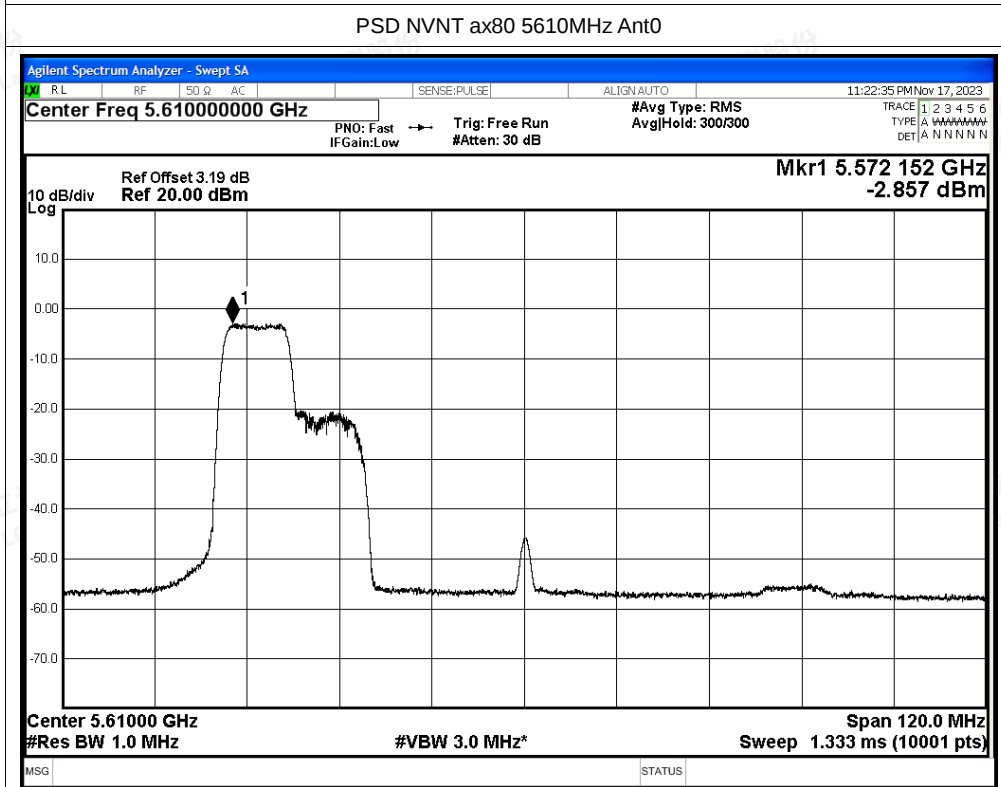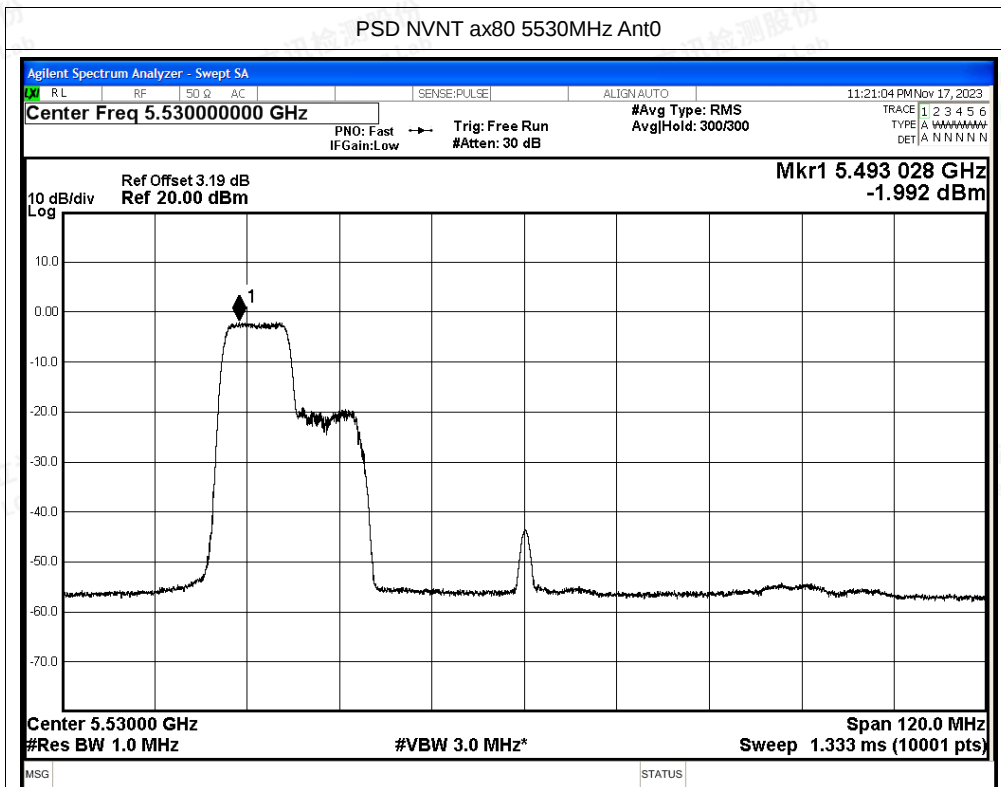






Test Graphs



PSD NVNT ax20 5500MHz Ant0


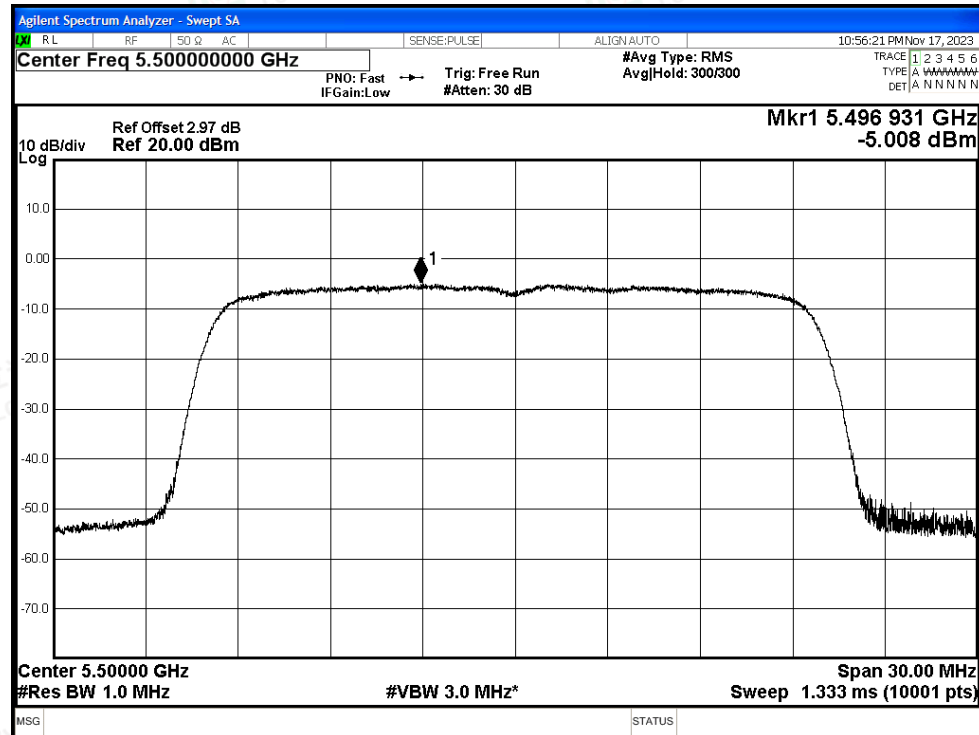


PSD NVNT ax20 5580MHz Ant0

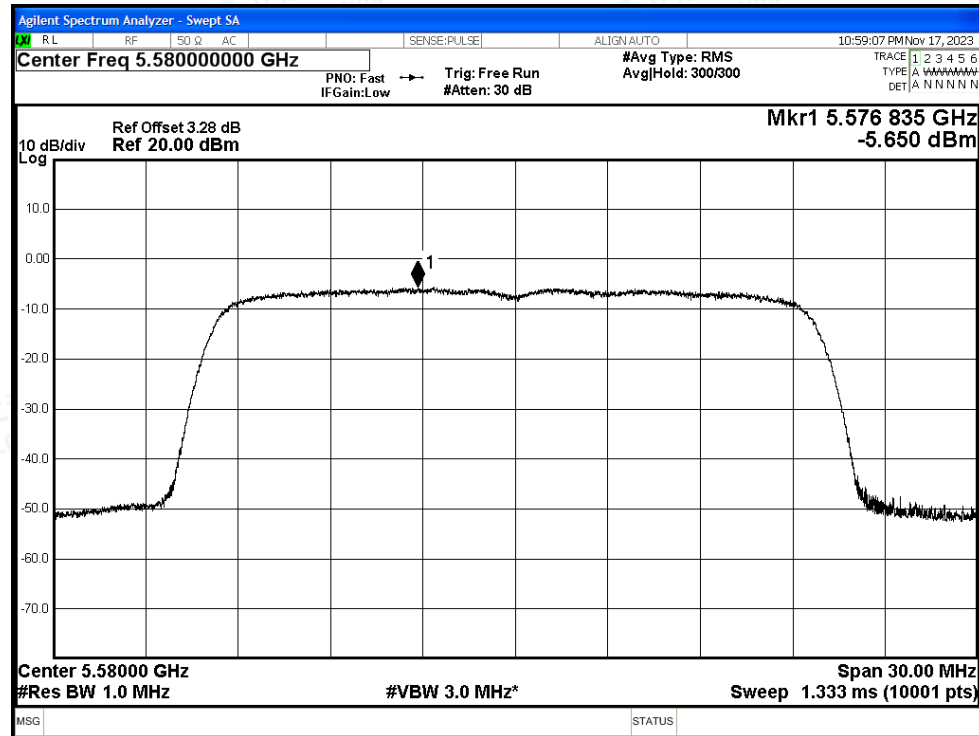

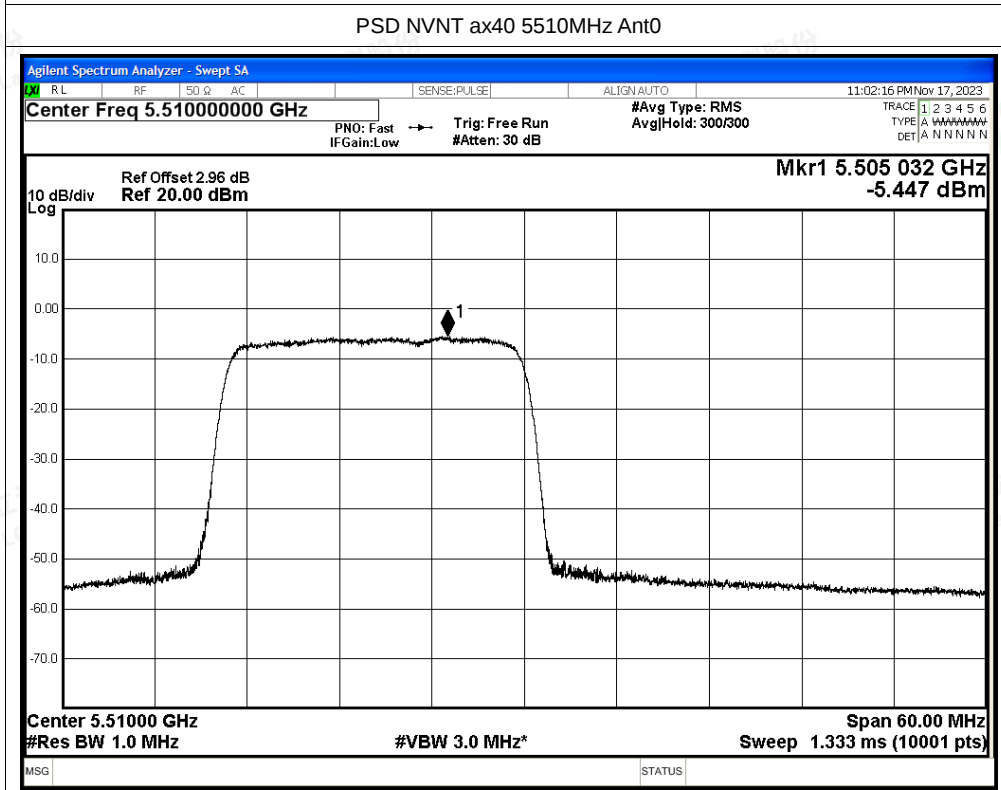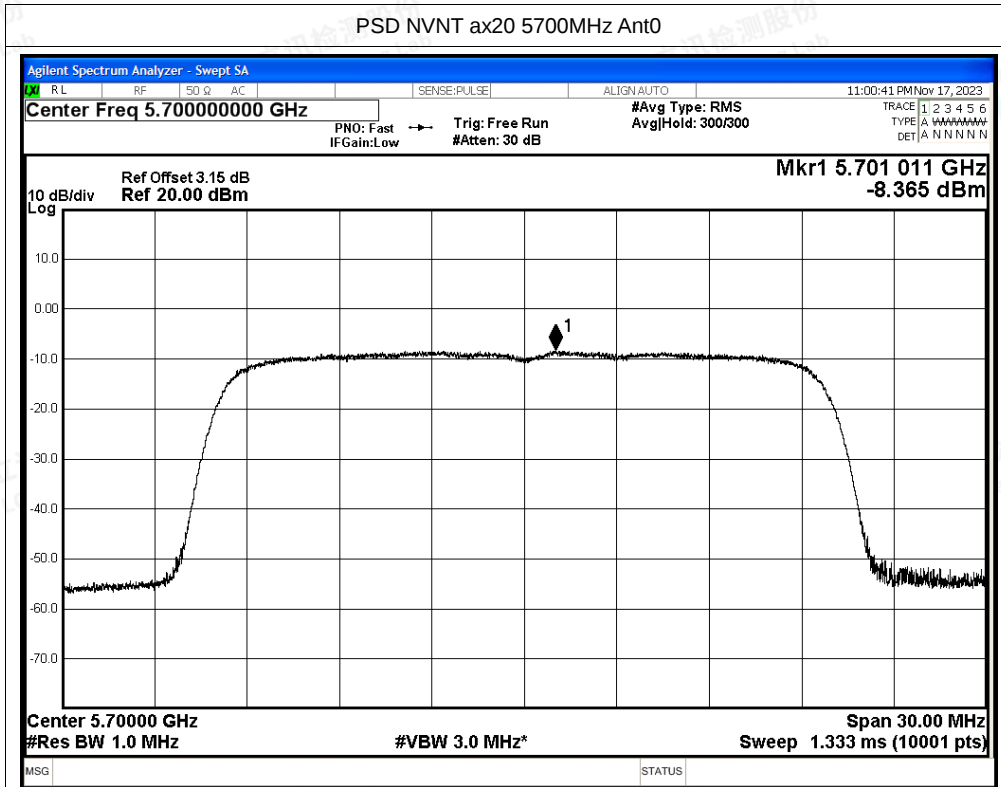

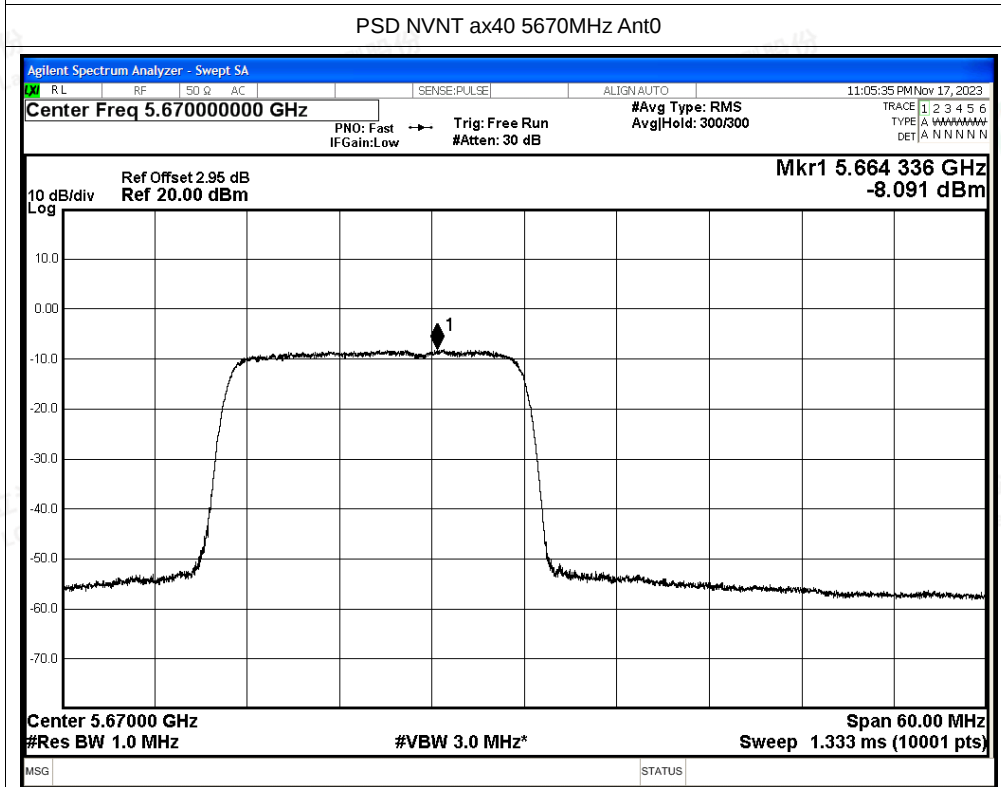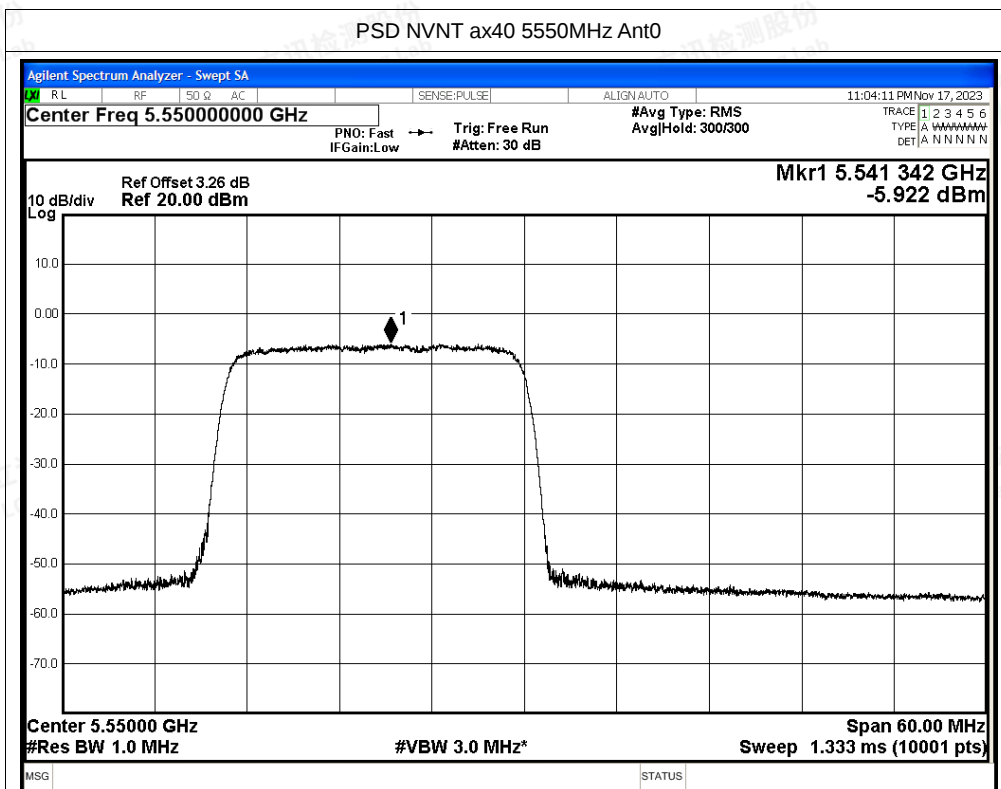


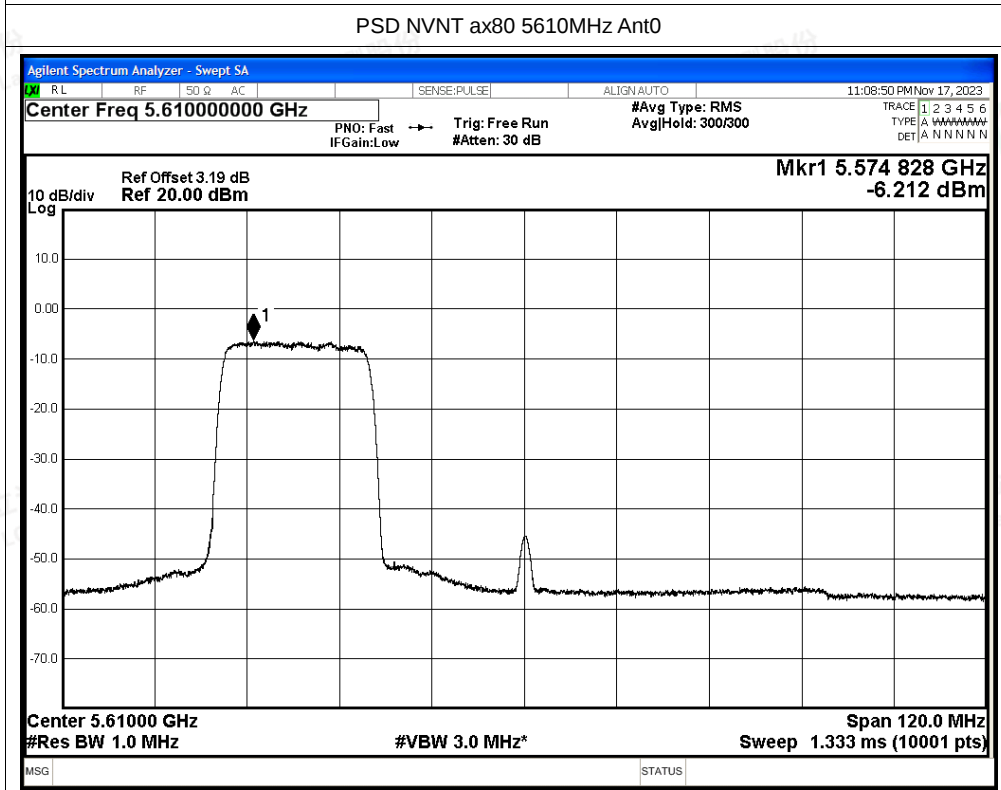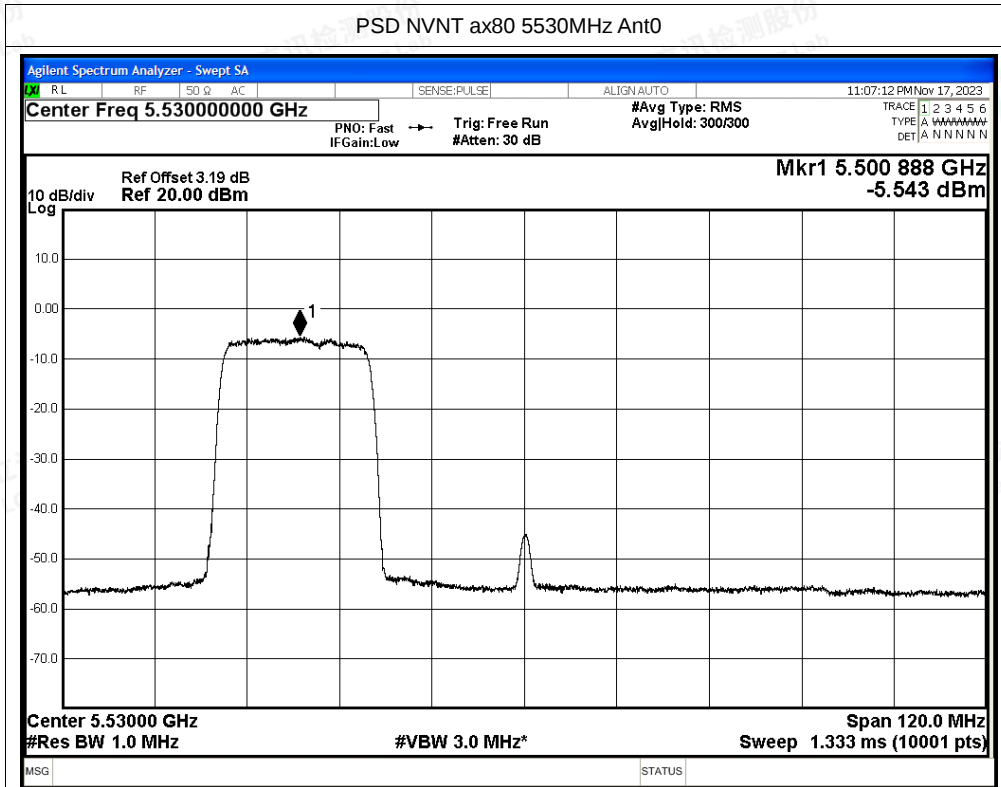






Test Graphs


PSD NVNT ax40 5510MHz Ant0

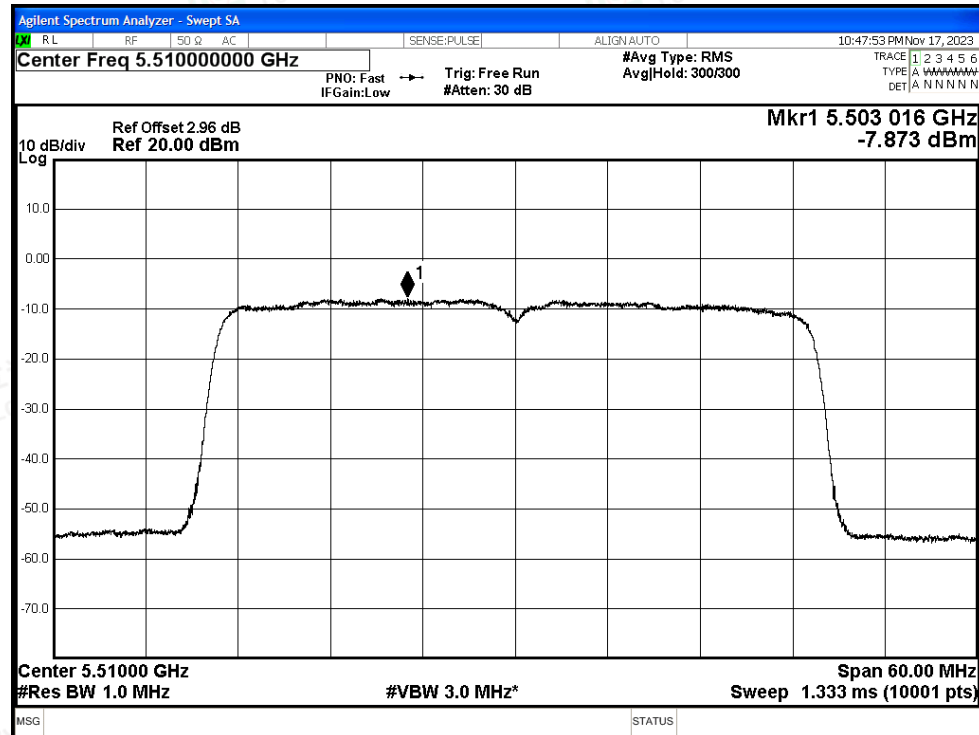

PSD NVNT ax40 5550MHz Ant0

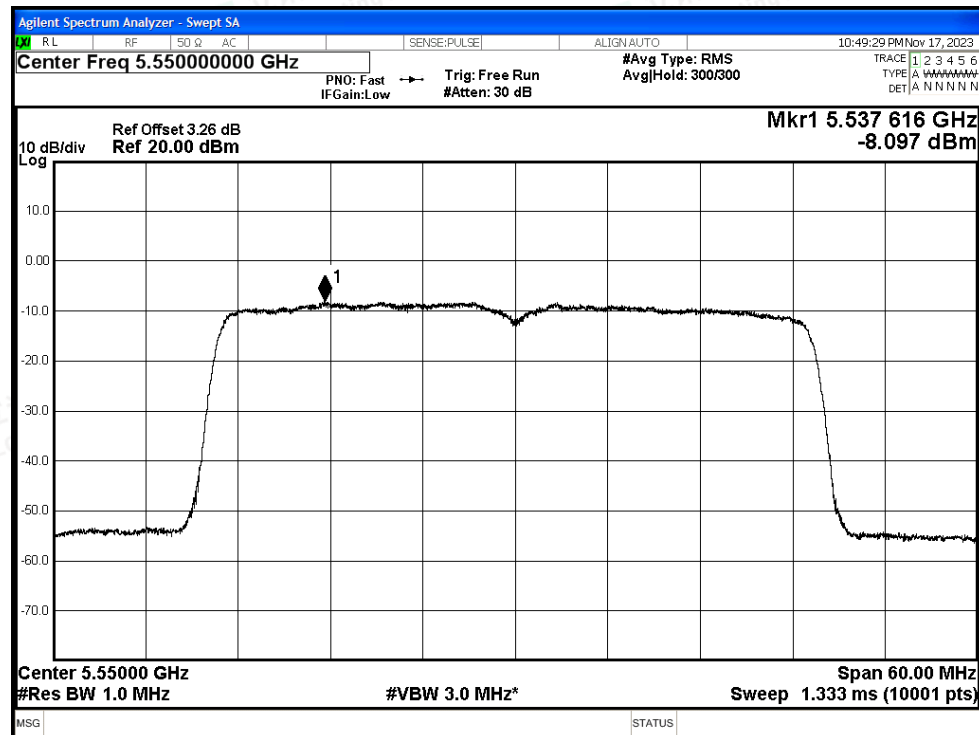

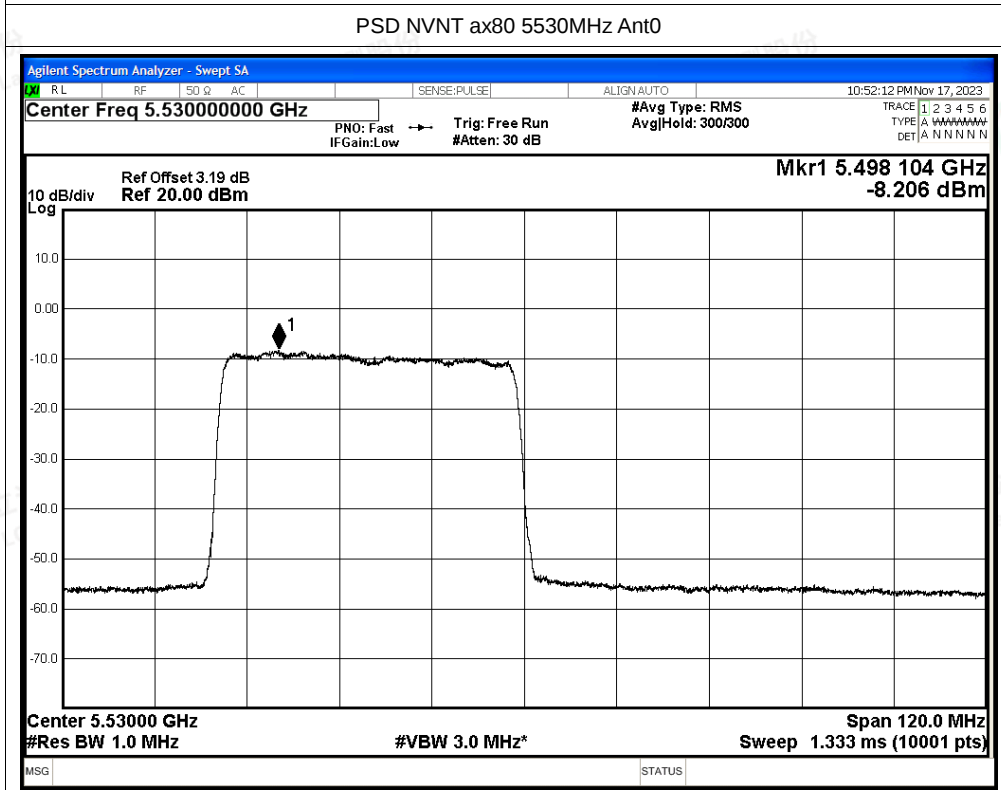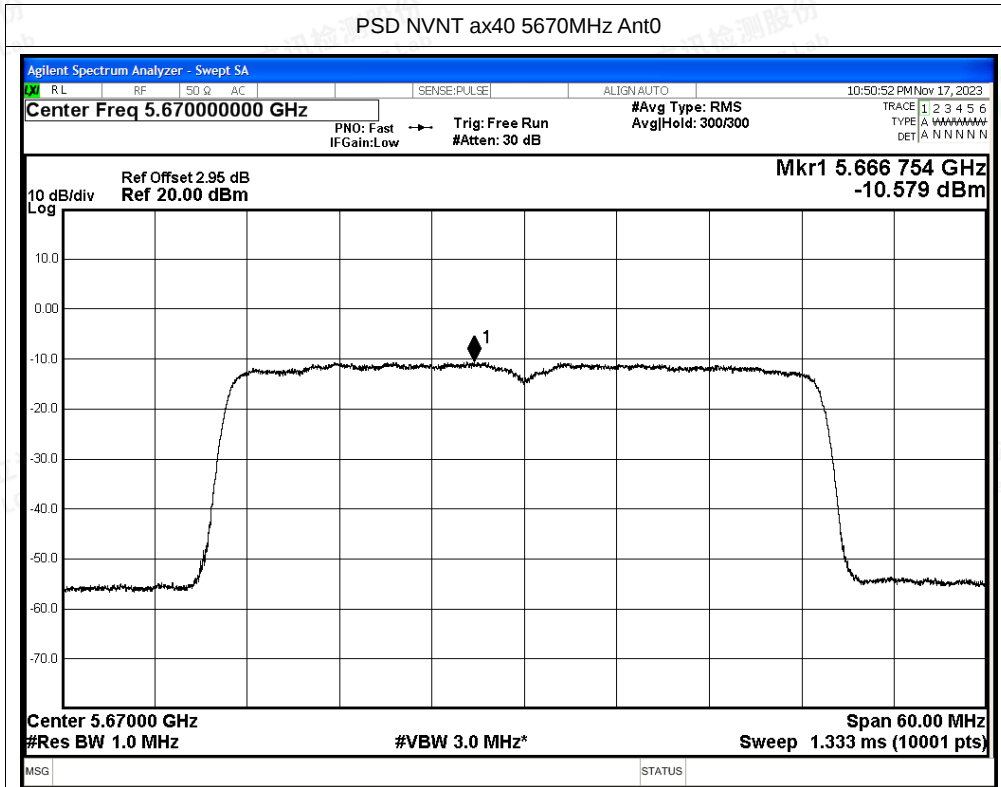


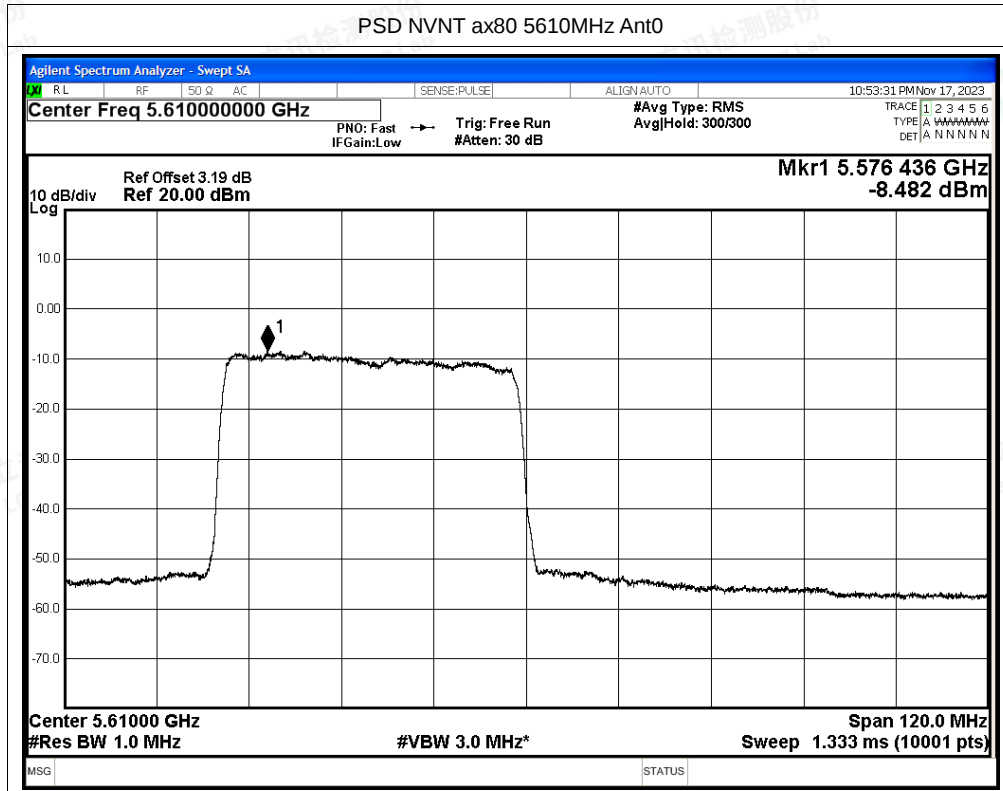




Test Graphs

PSD NVNT ax80 5530MHz Ant0

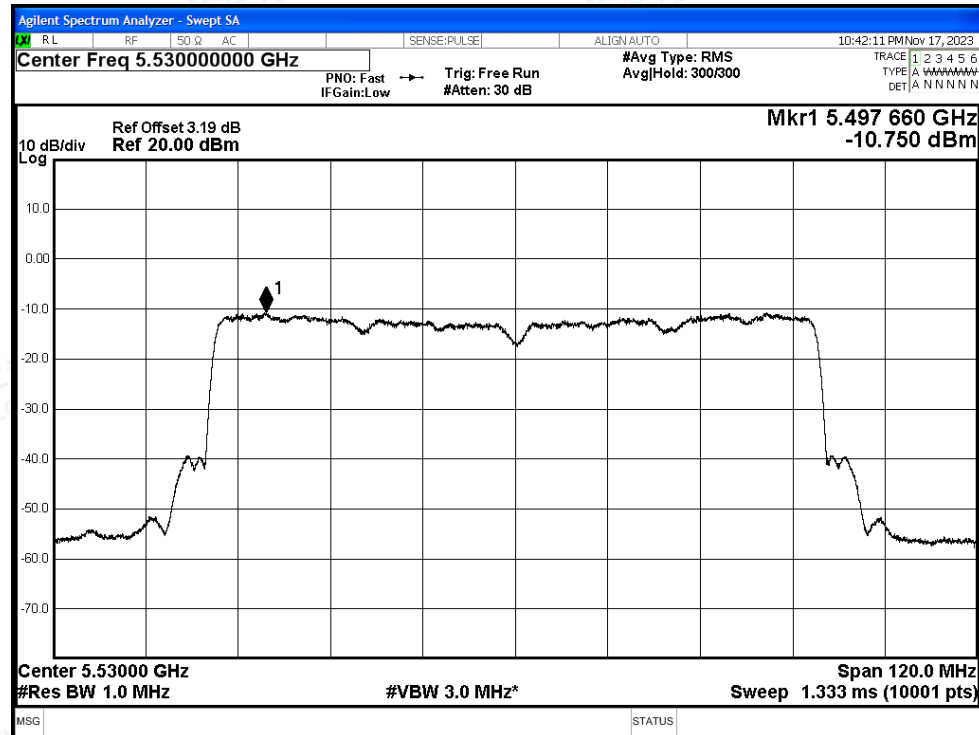


PSD NVNT ax80 5610MHz Ant0

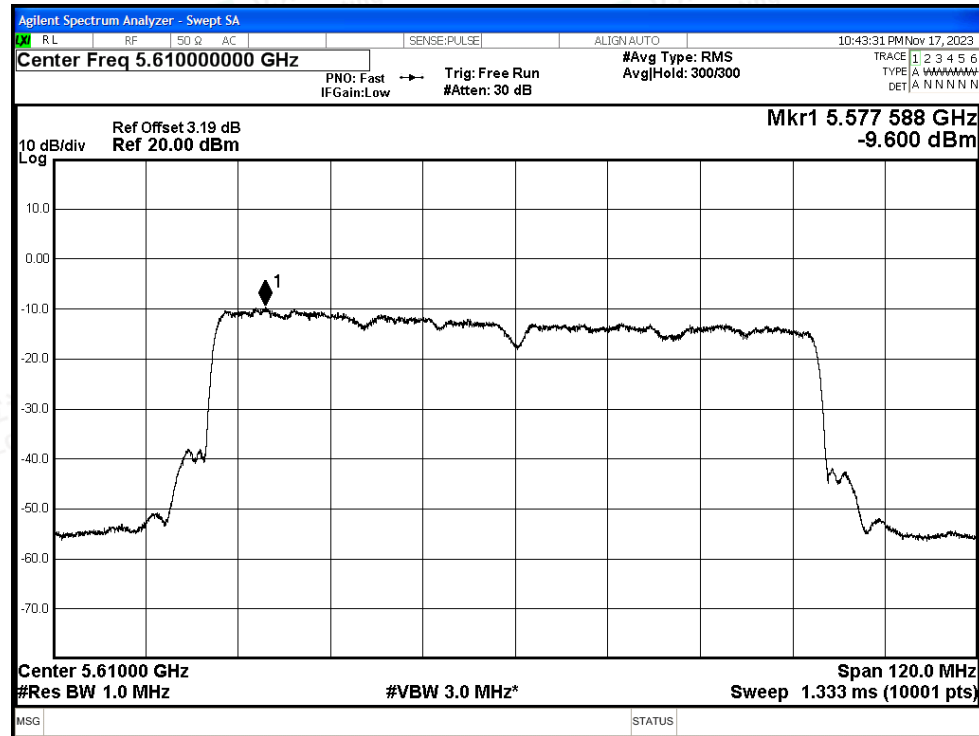






Test Graphs



PSD NVNT ax20 5500MHz Ant1


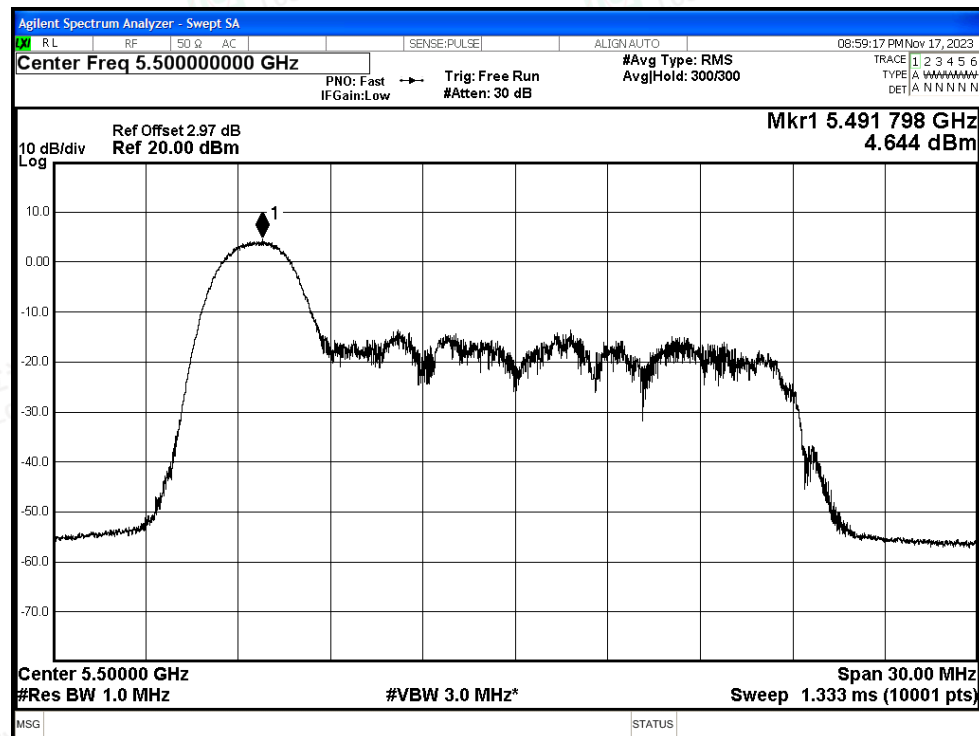


PSD NVNT ax20 5580MHz Ant1

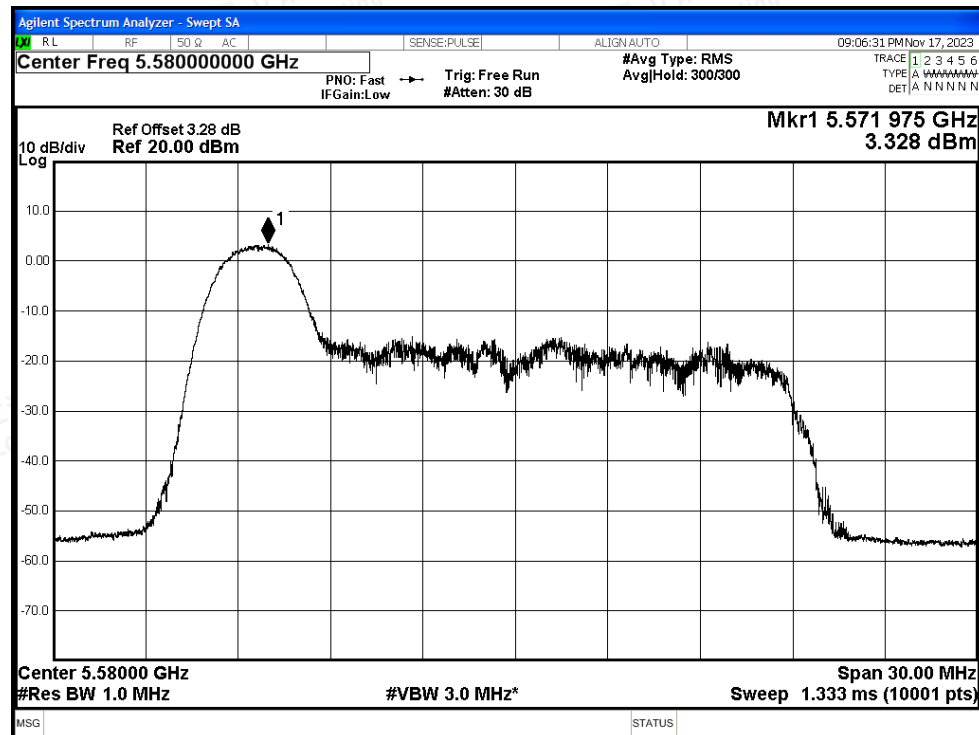

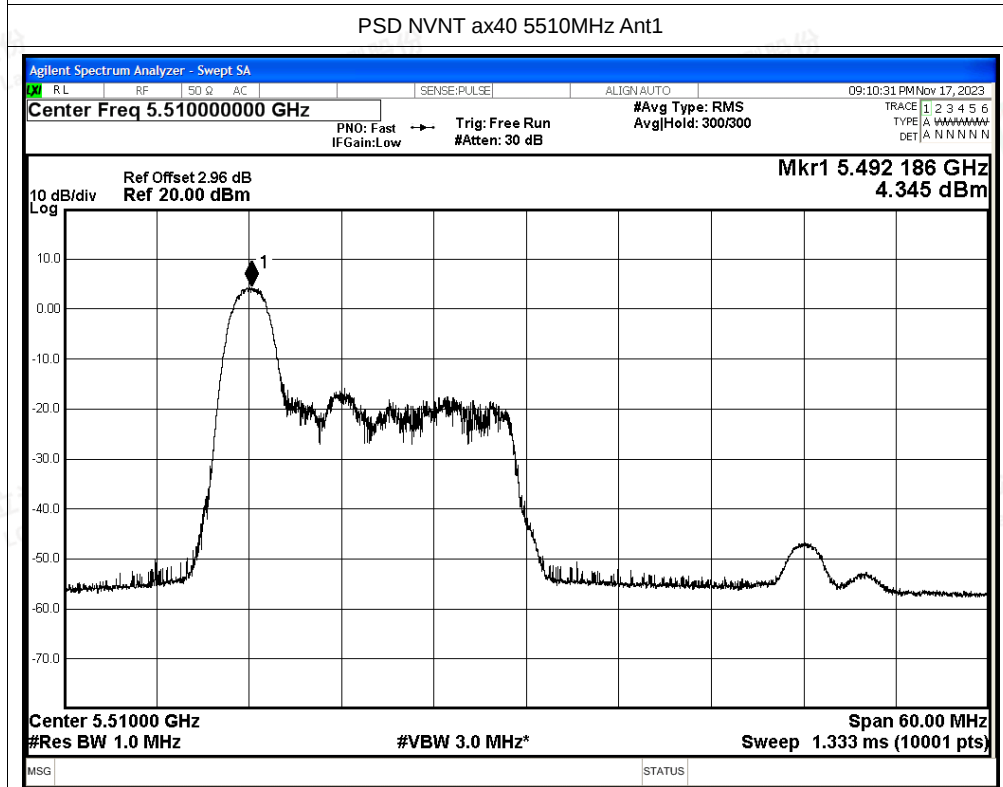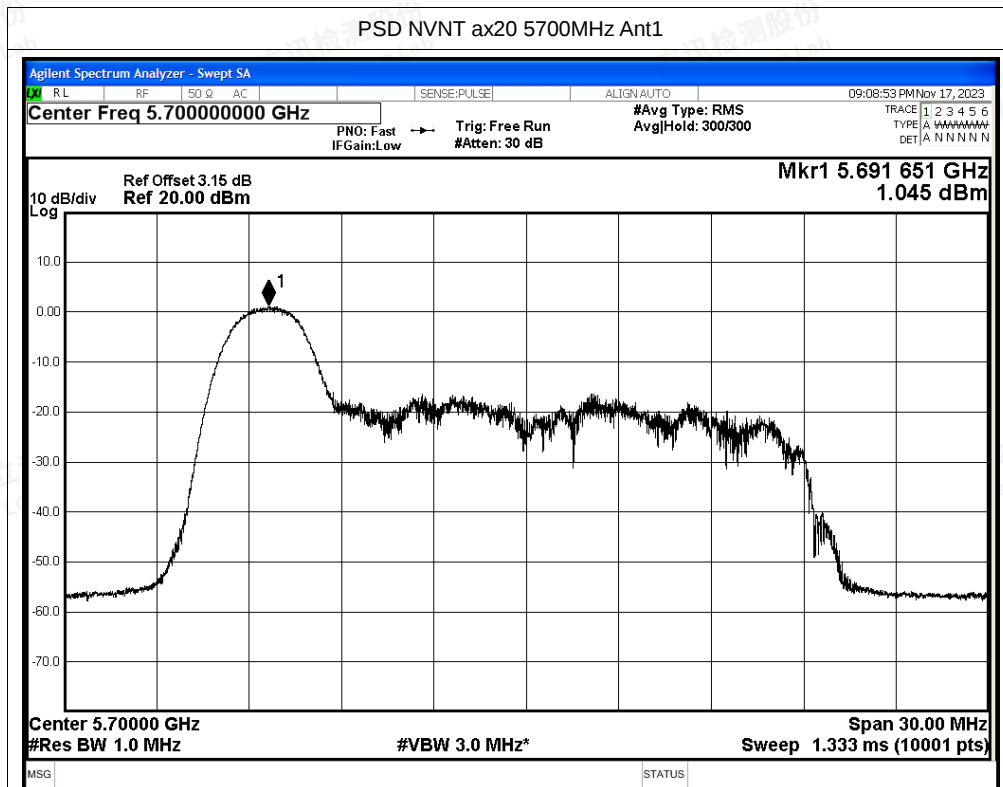

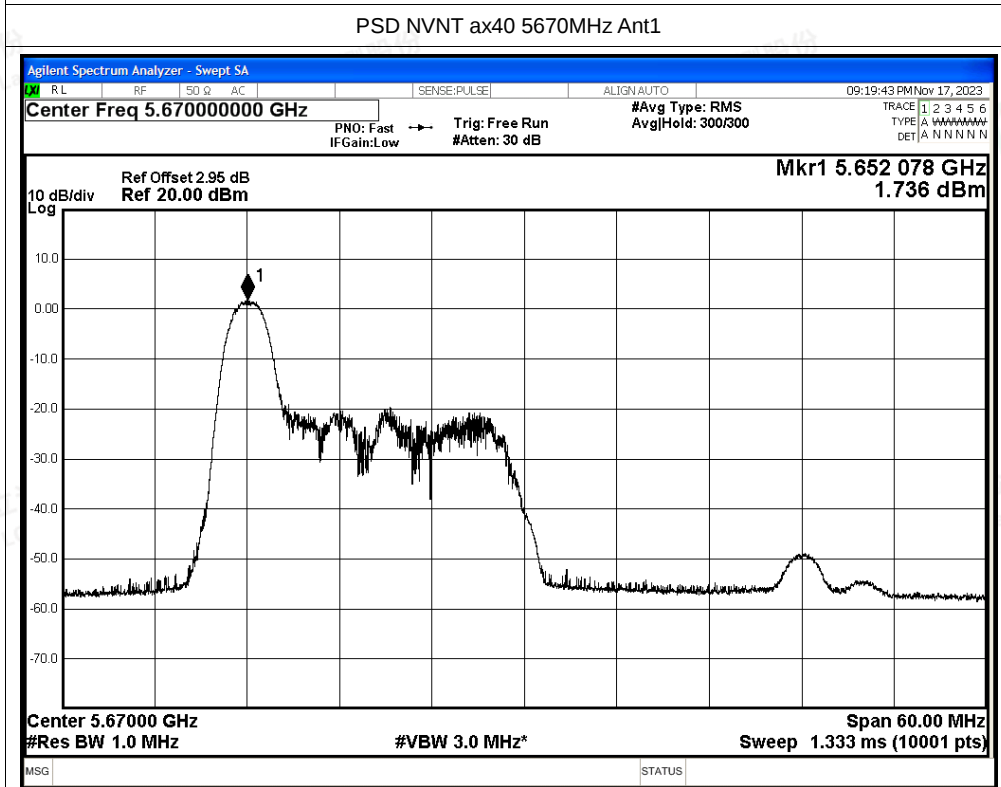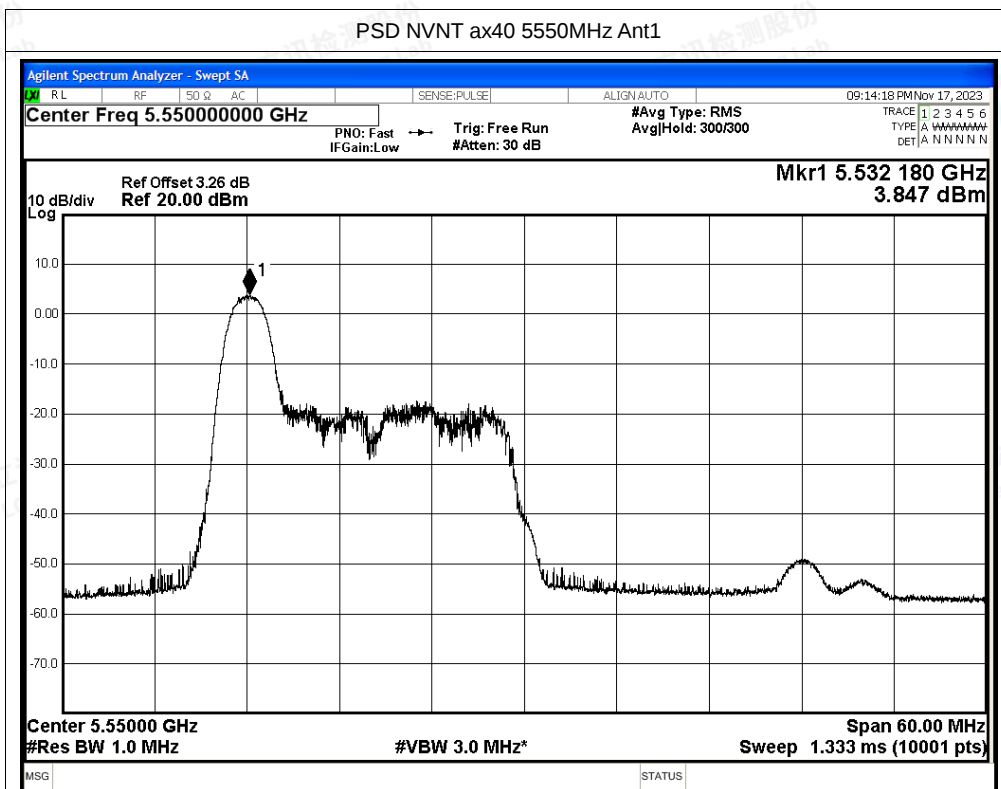


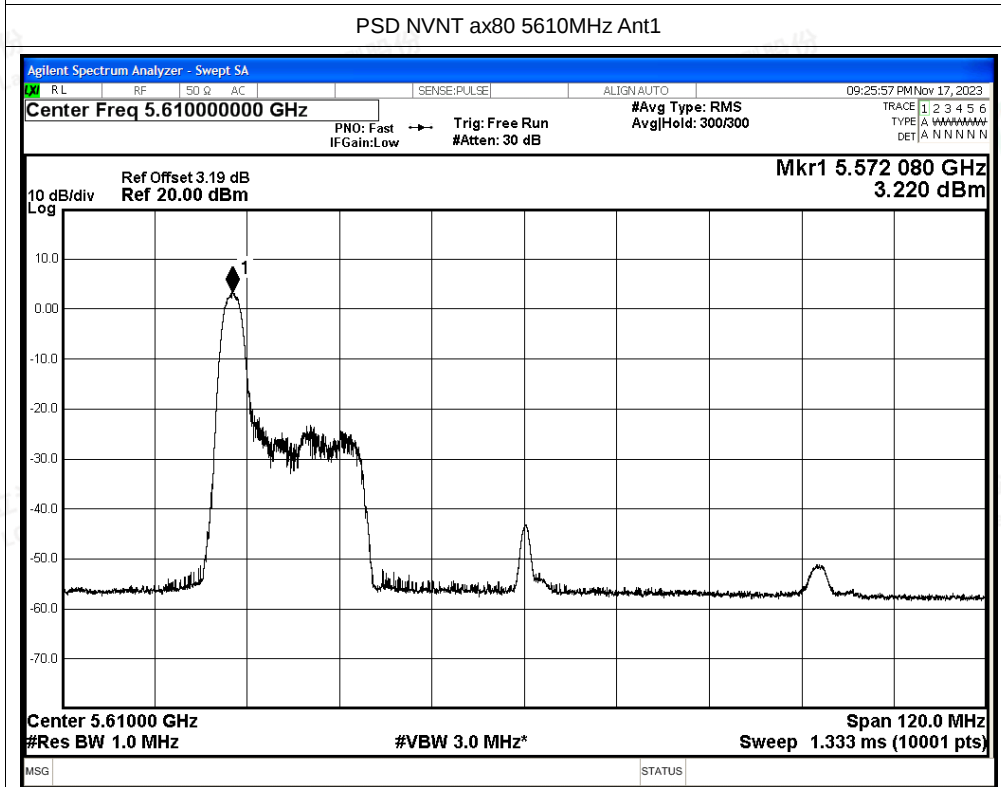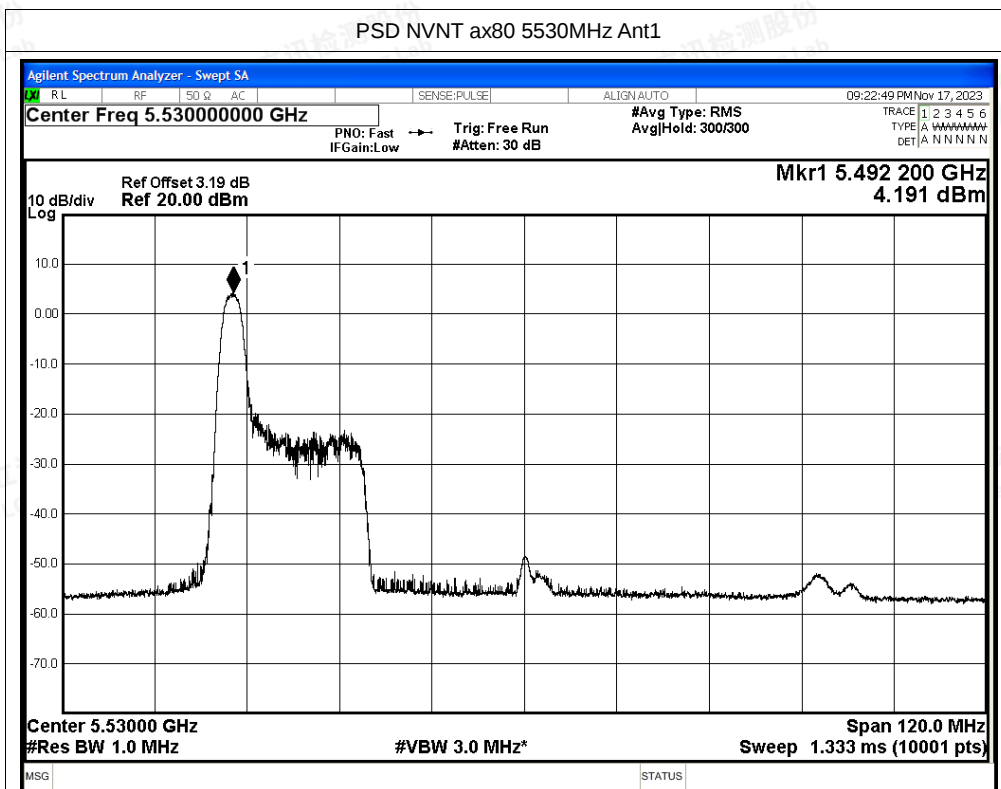






Test Graphs



PSD NVNT ax20 5500MHz Ant1


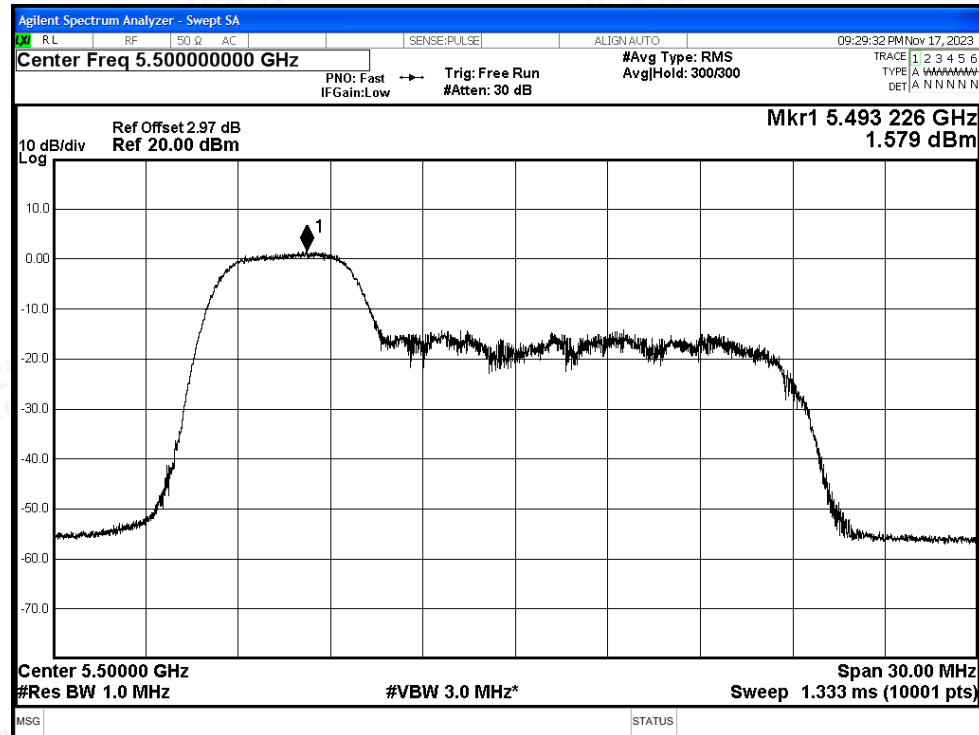


PSD NVNT ax20 5580MHz Ant1

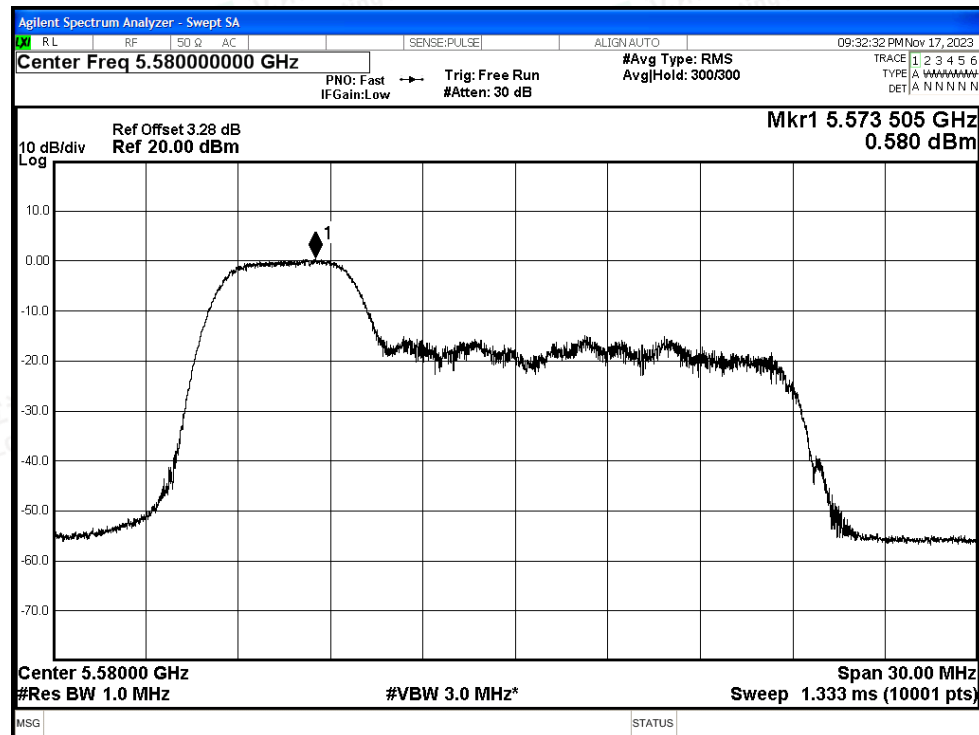

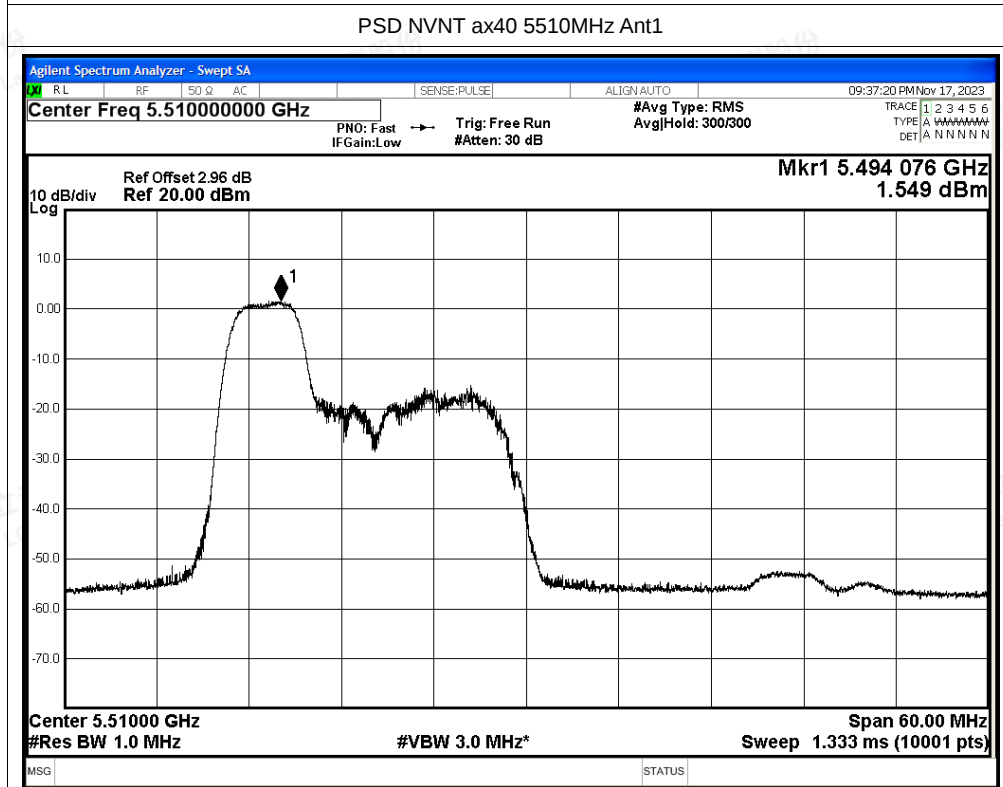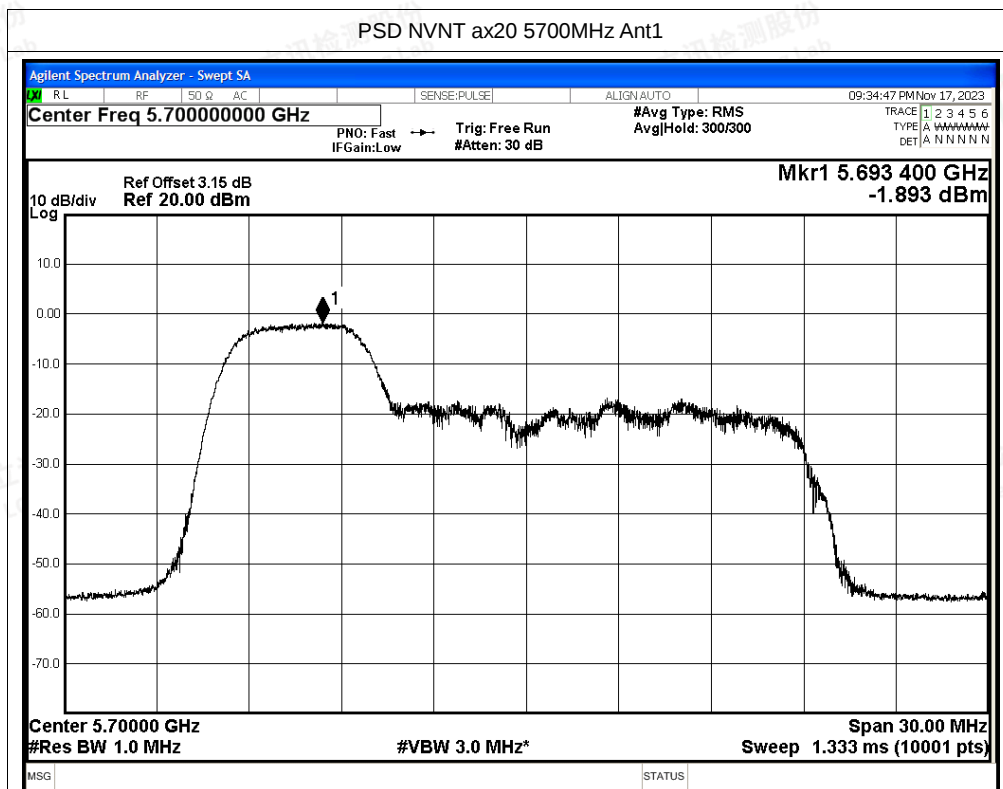

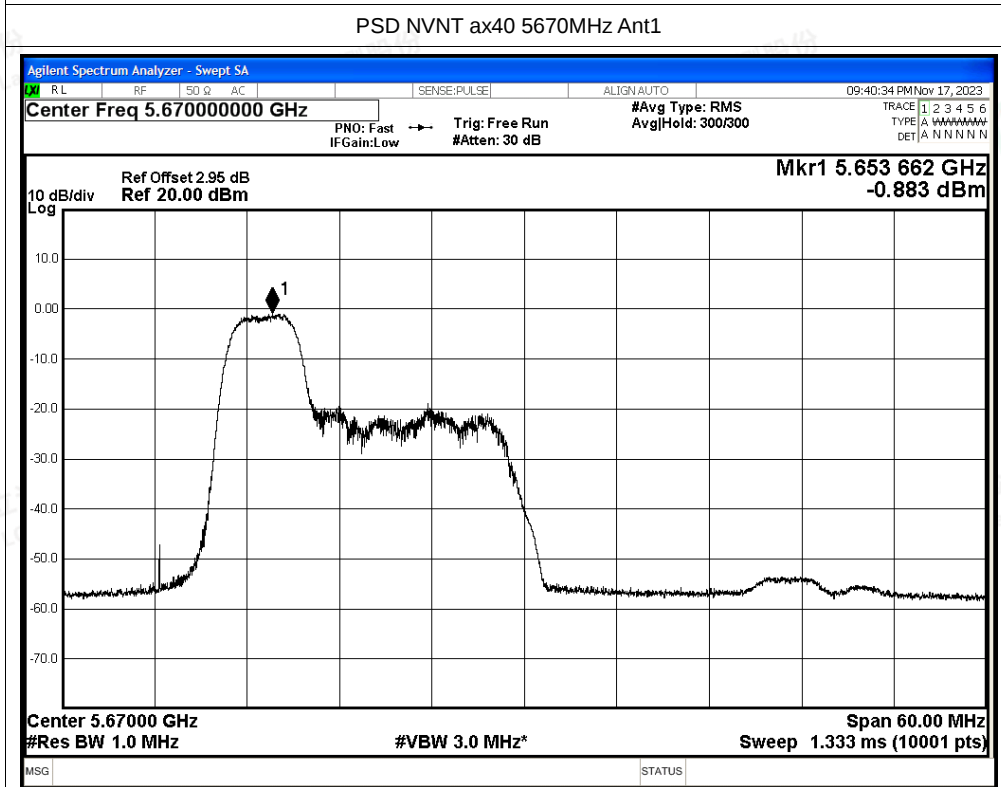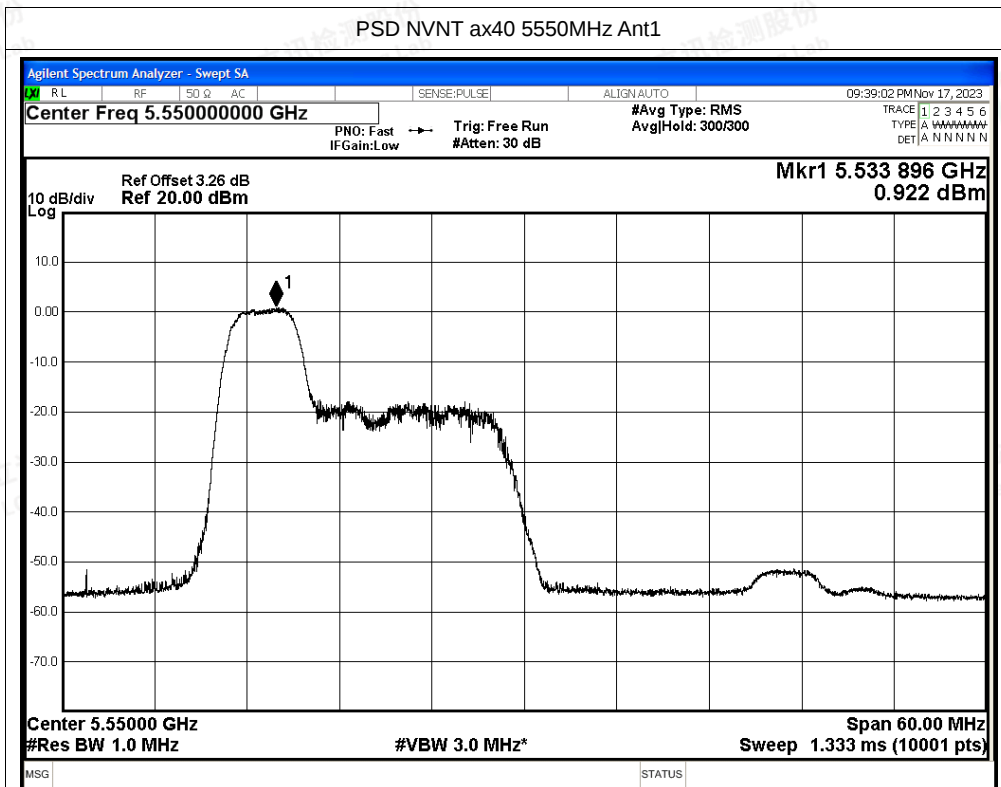


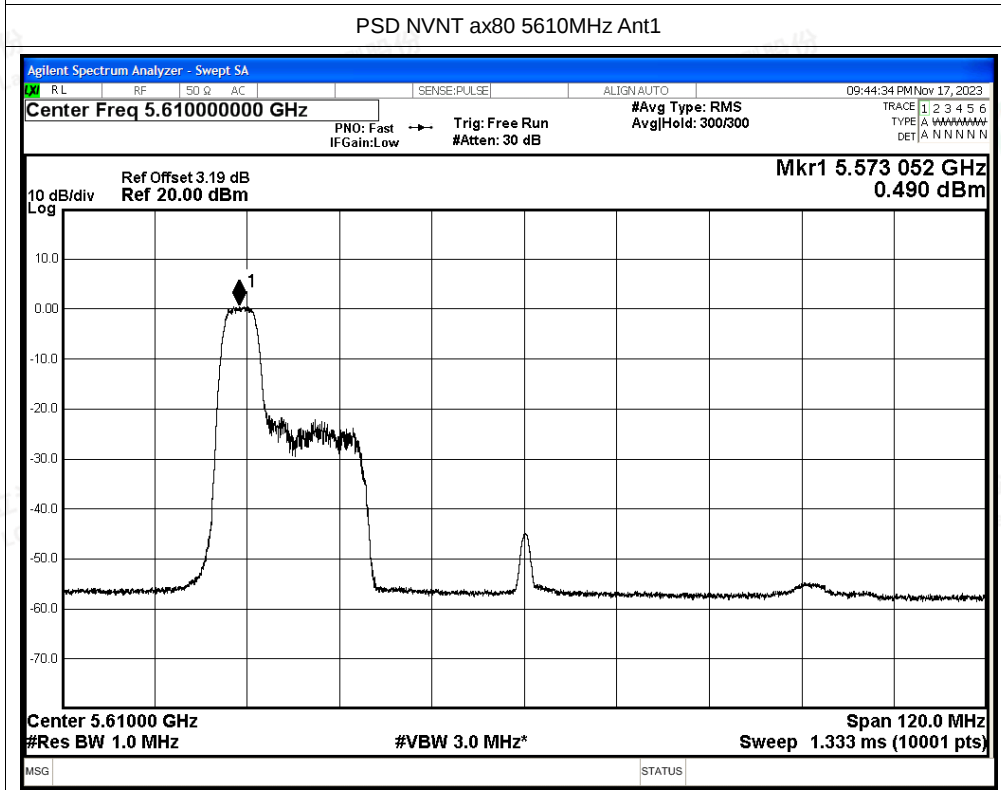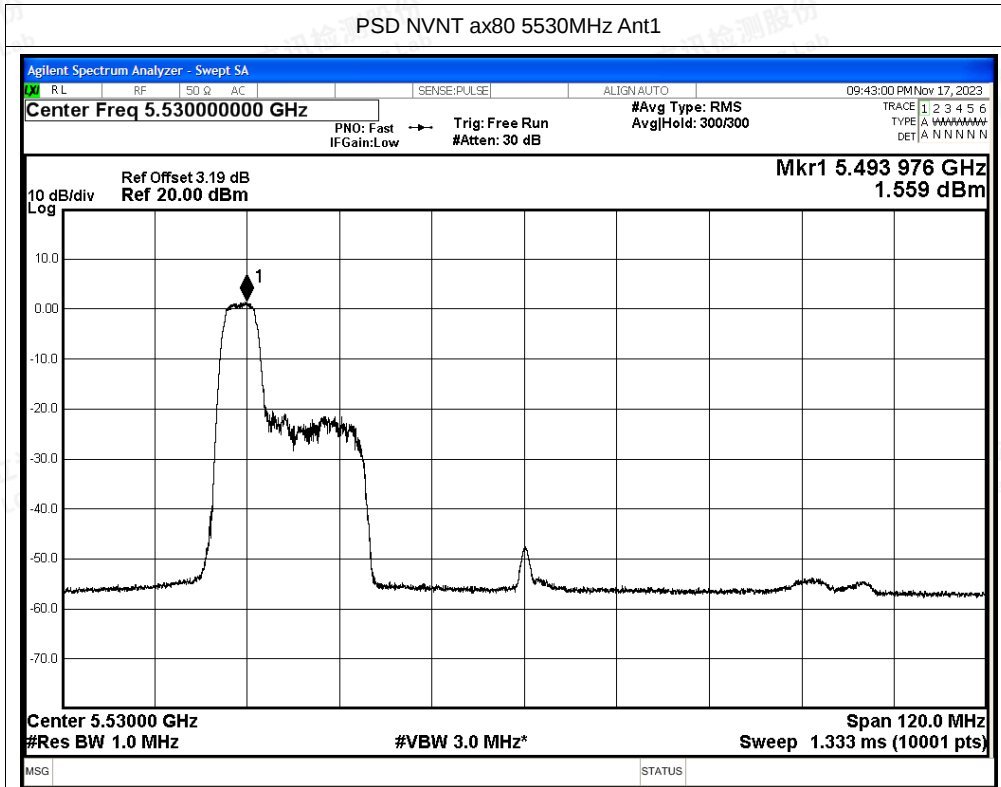






Test Graphs



PSD NVNT ax20 5500MHz Ant1


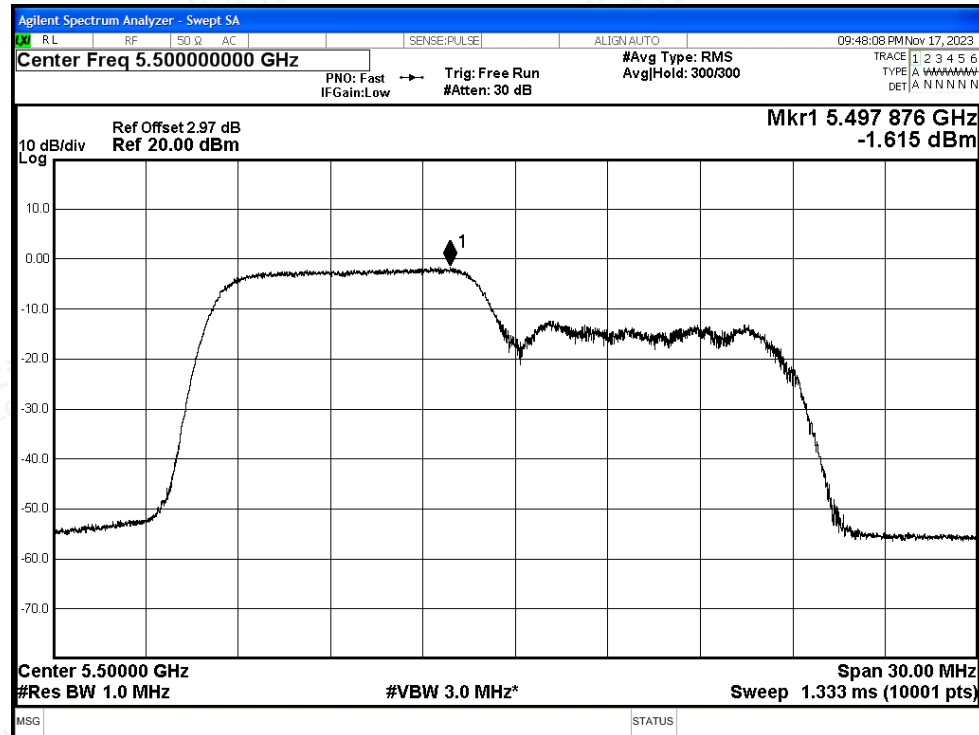


PSD NVNT ax20 5580MHz Ant1

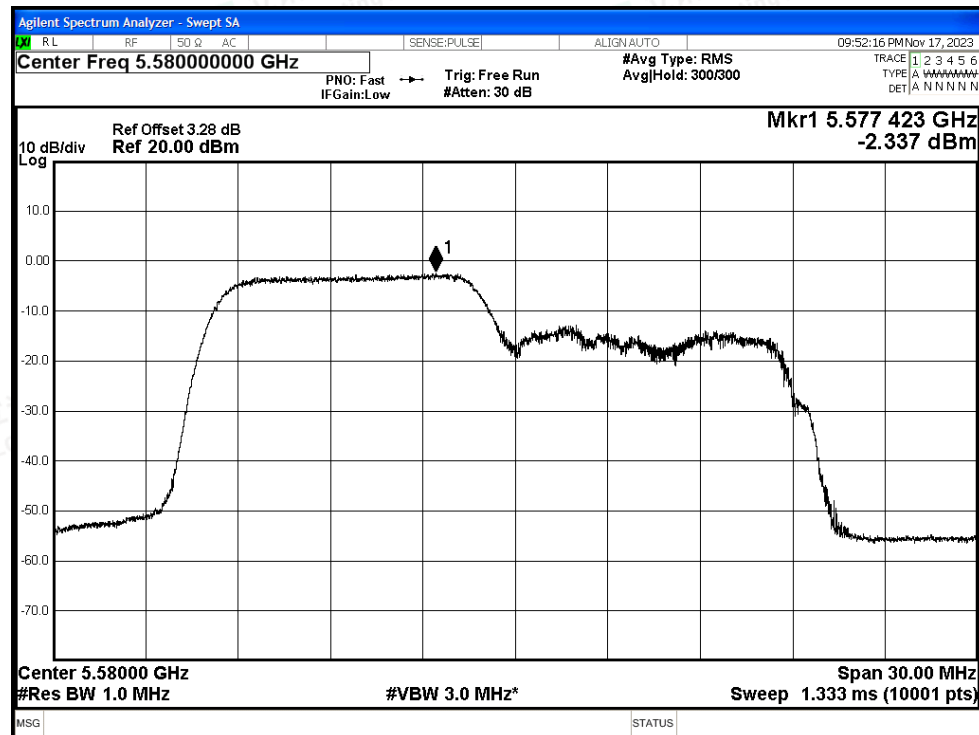

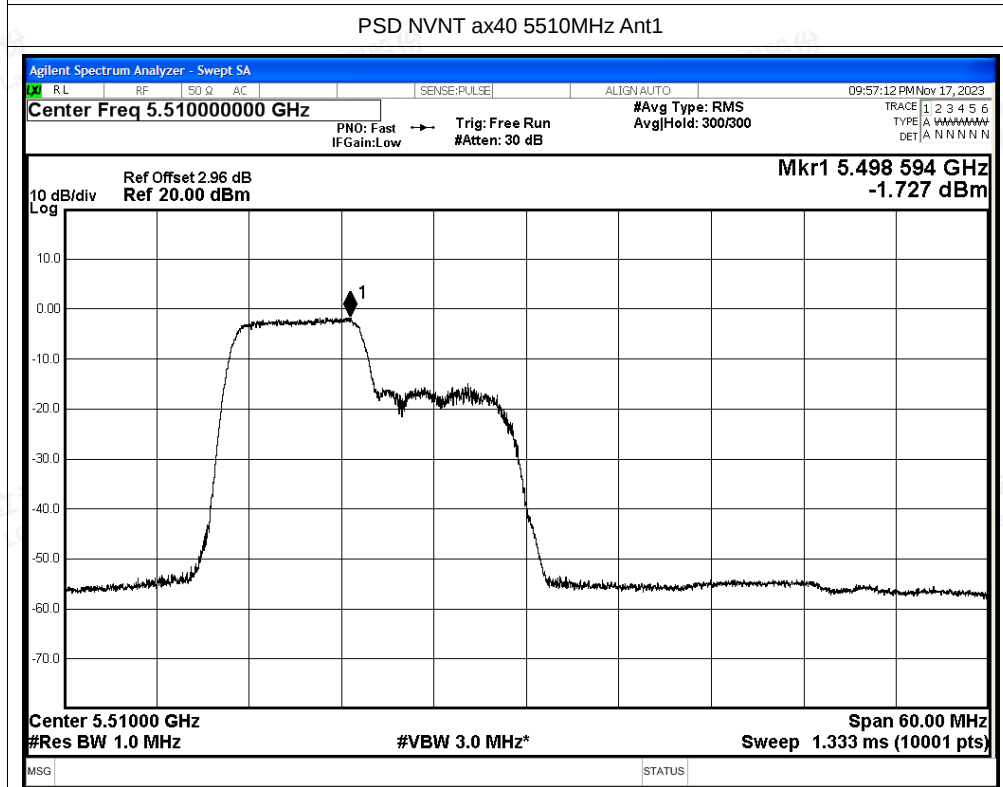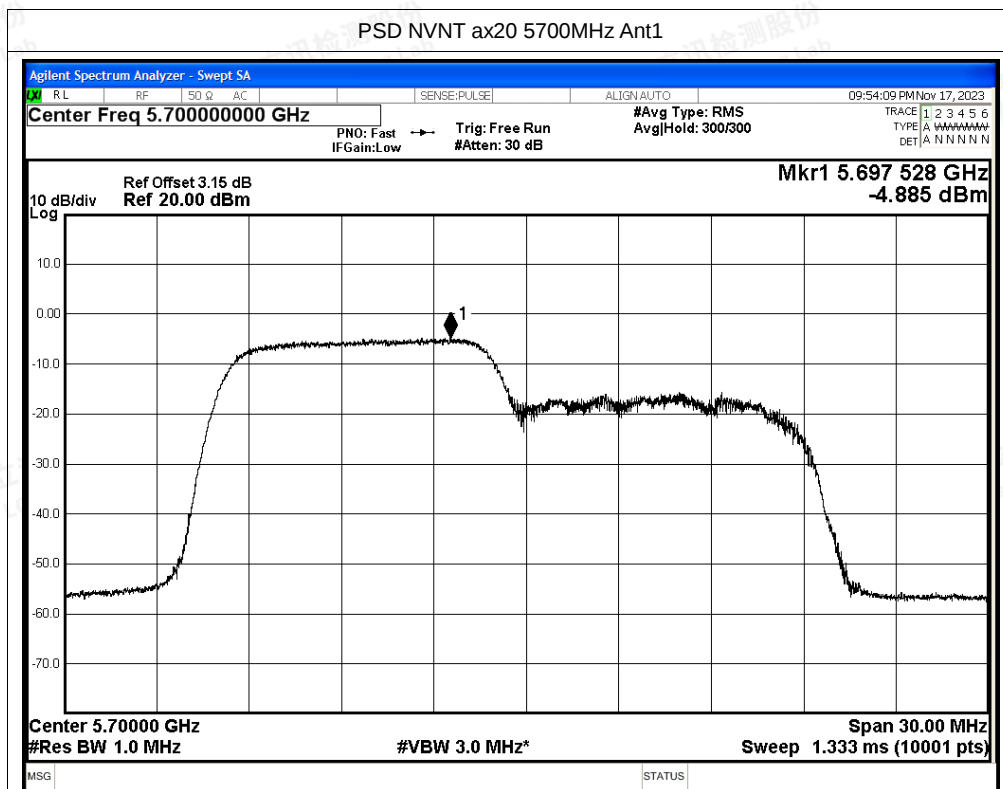

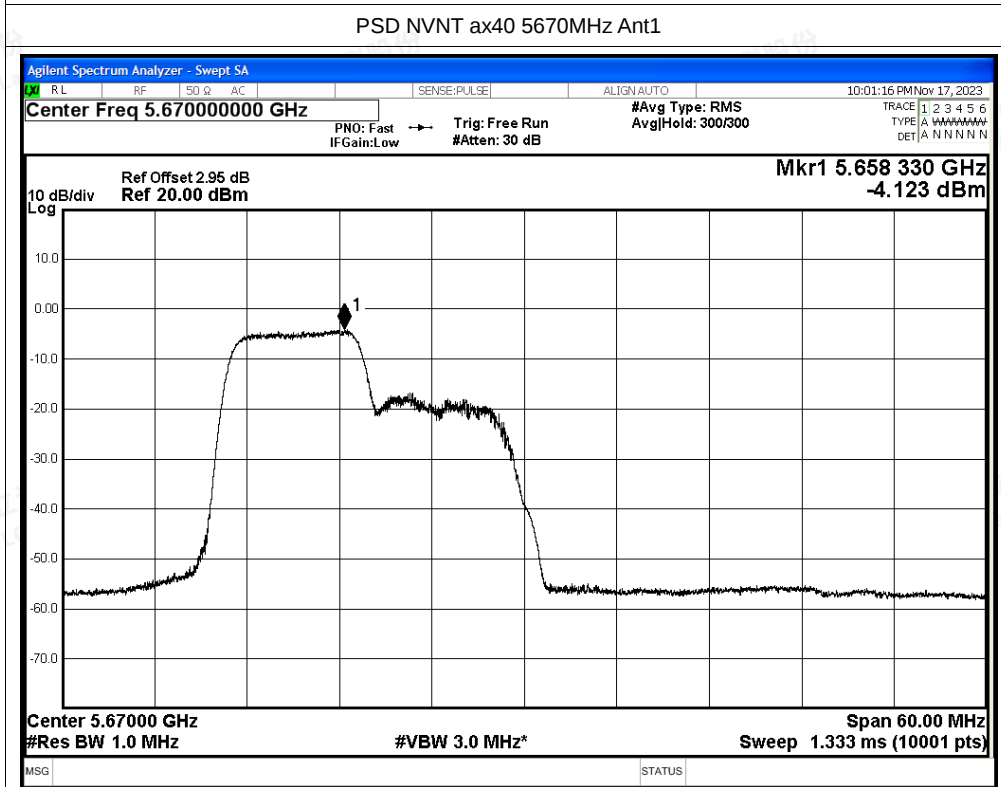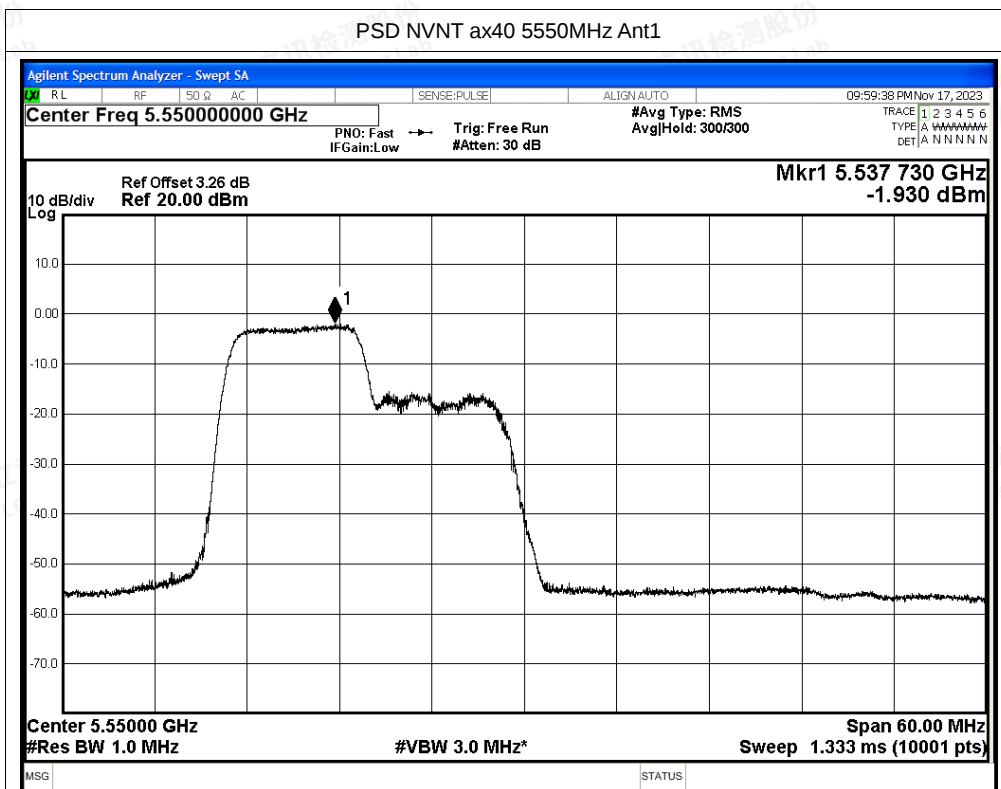


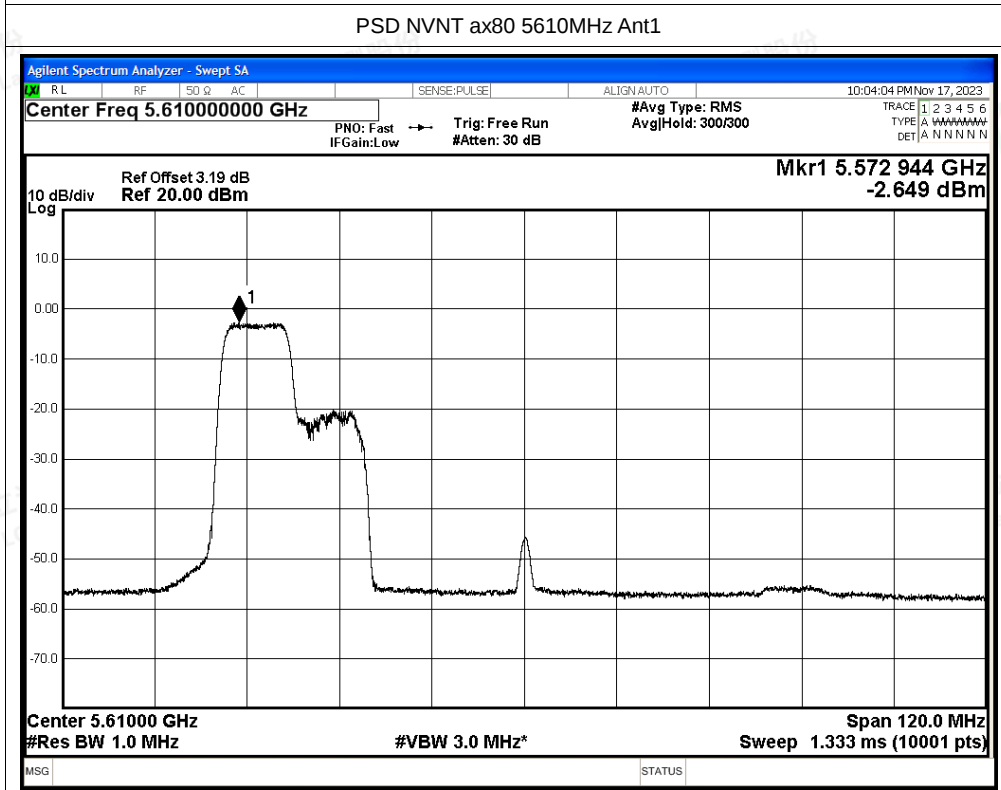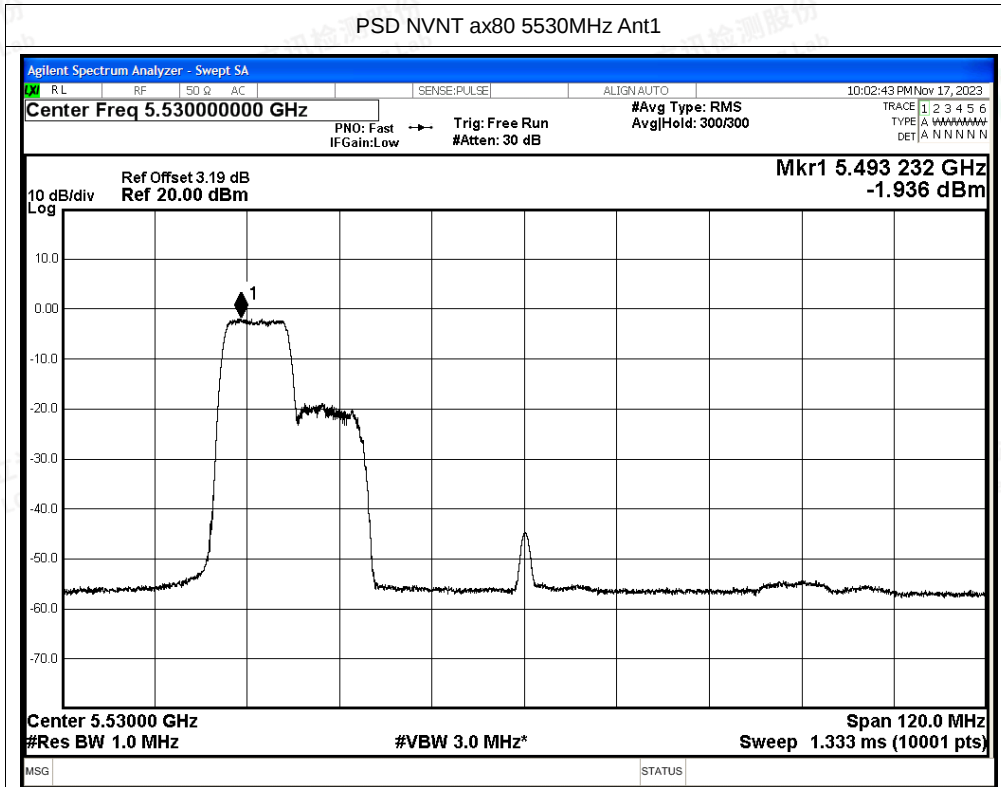






Test Graphs



PSD NVNT ax20 5500MHz Ant1


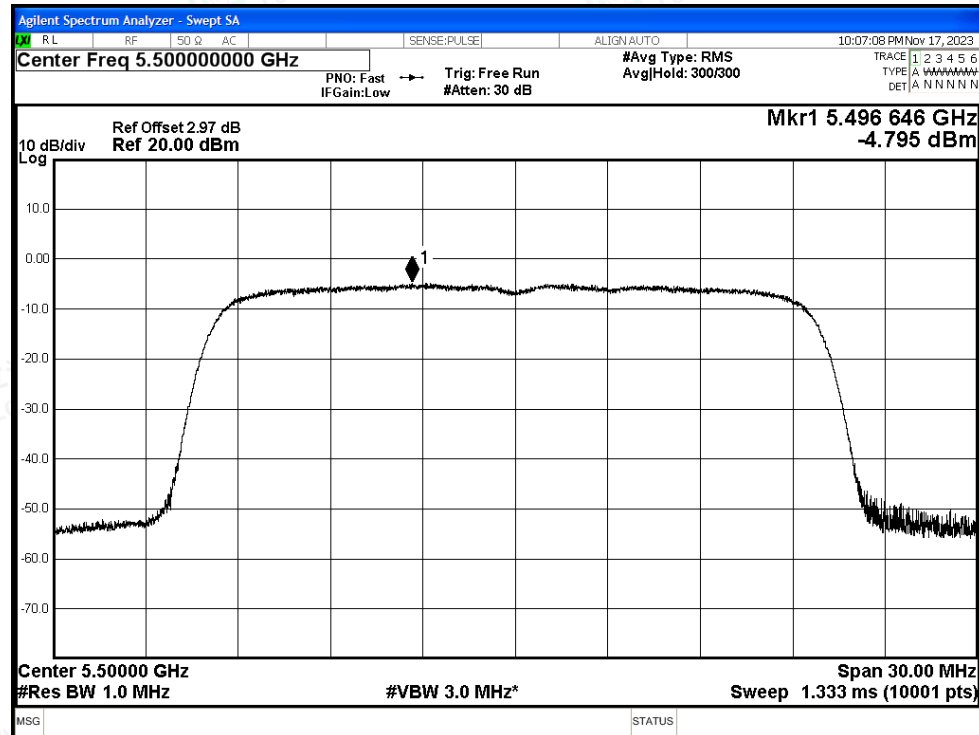


PSD NVNT ax20 5580MHz Ant1

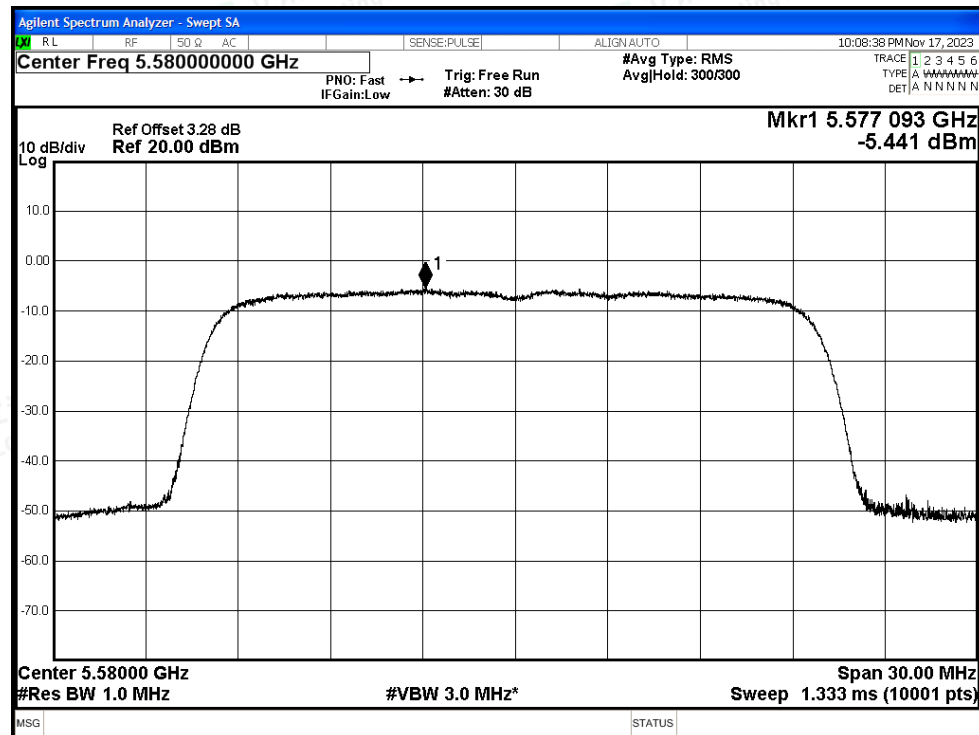

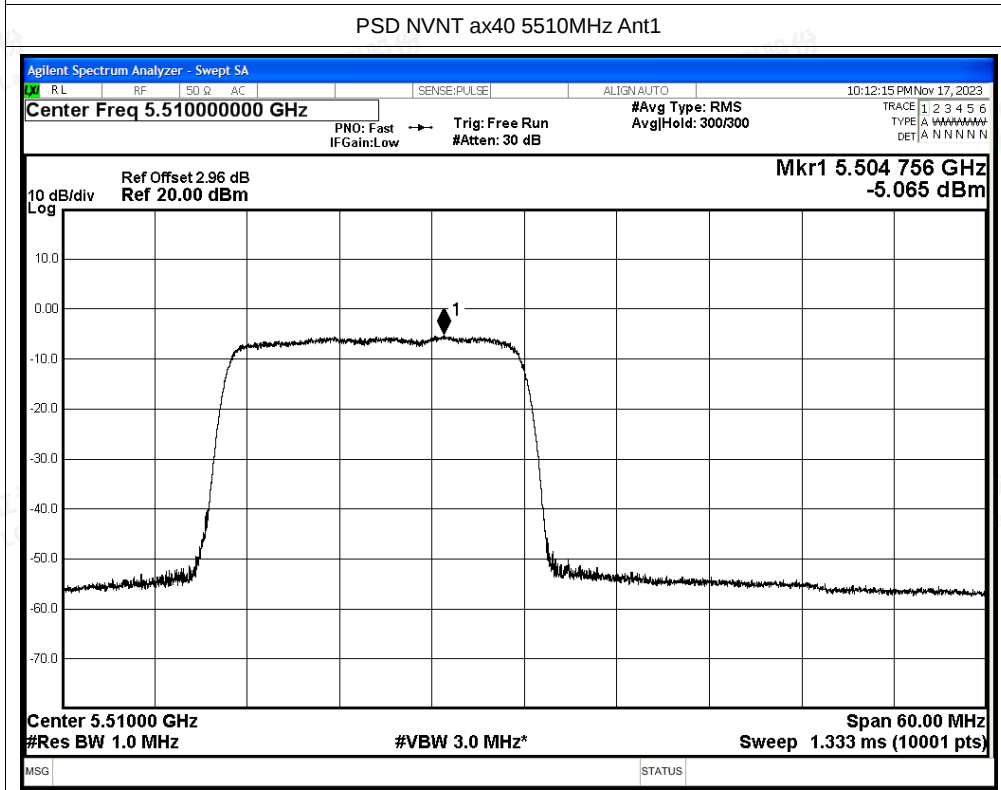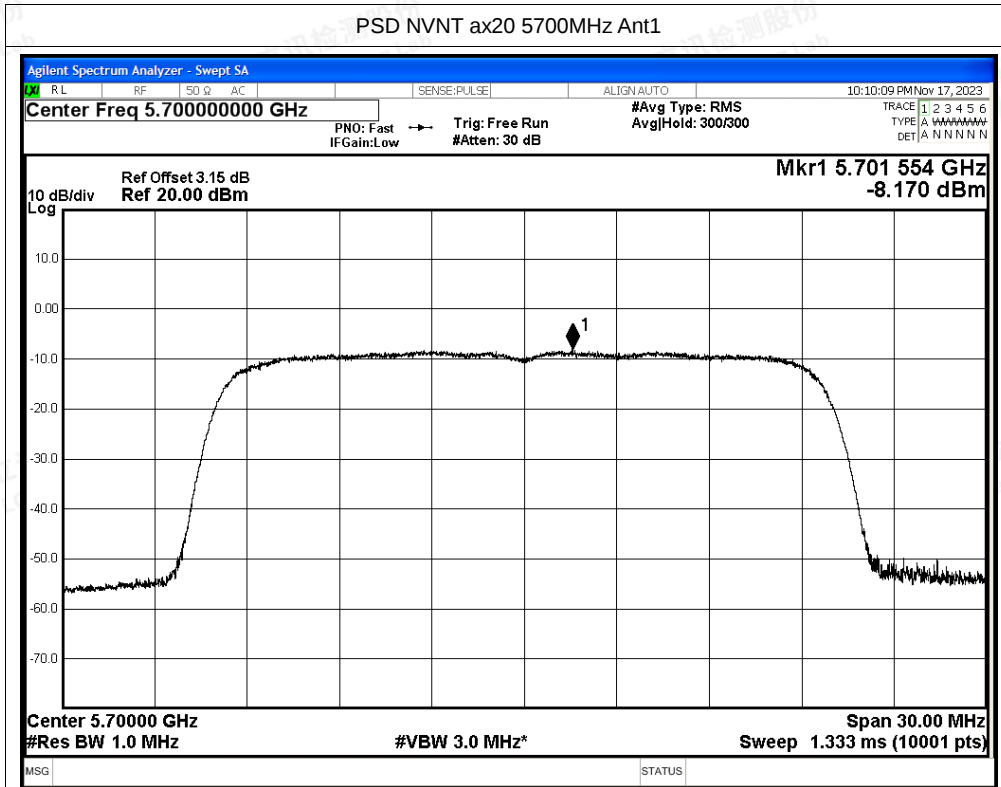

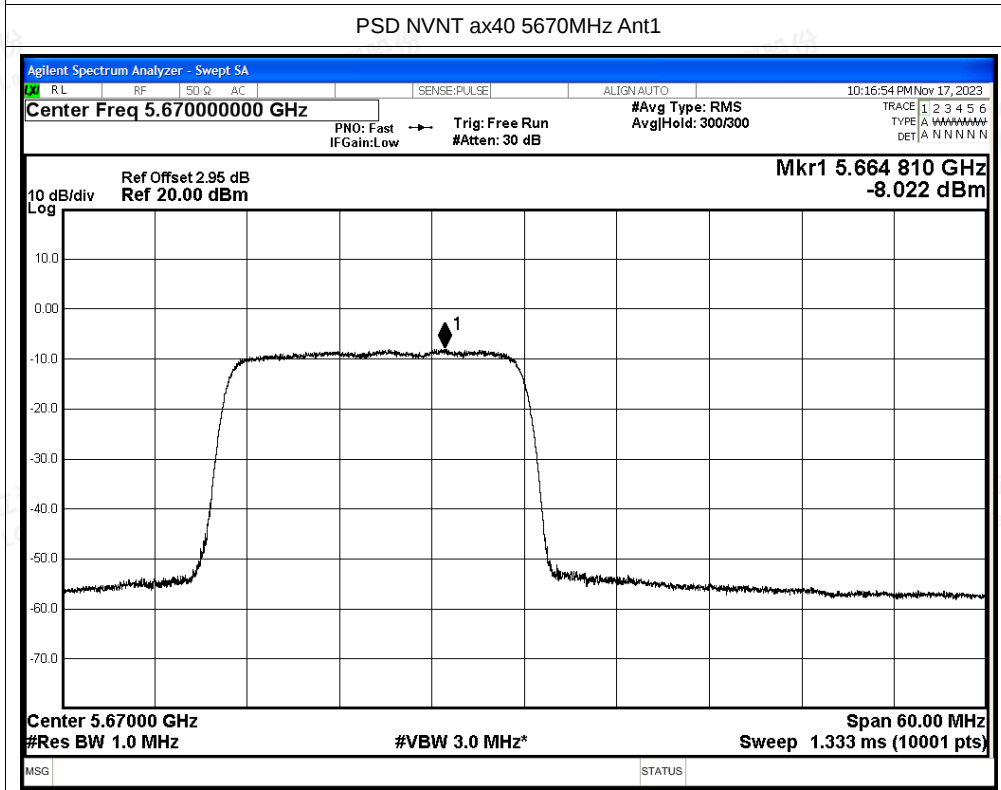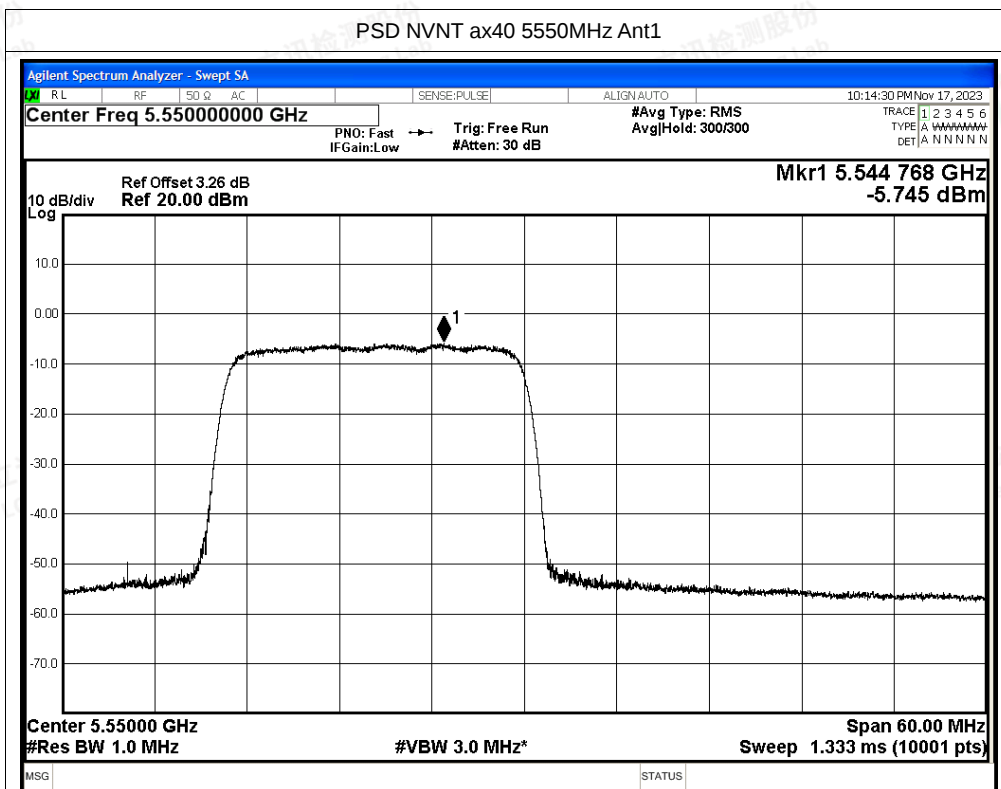


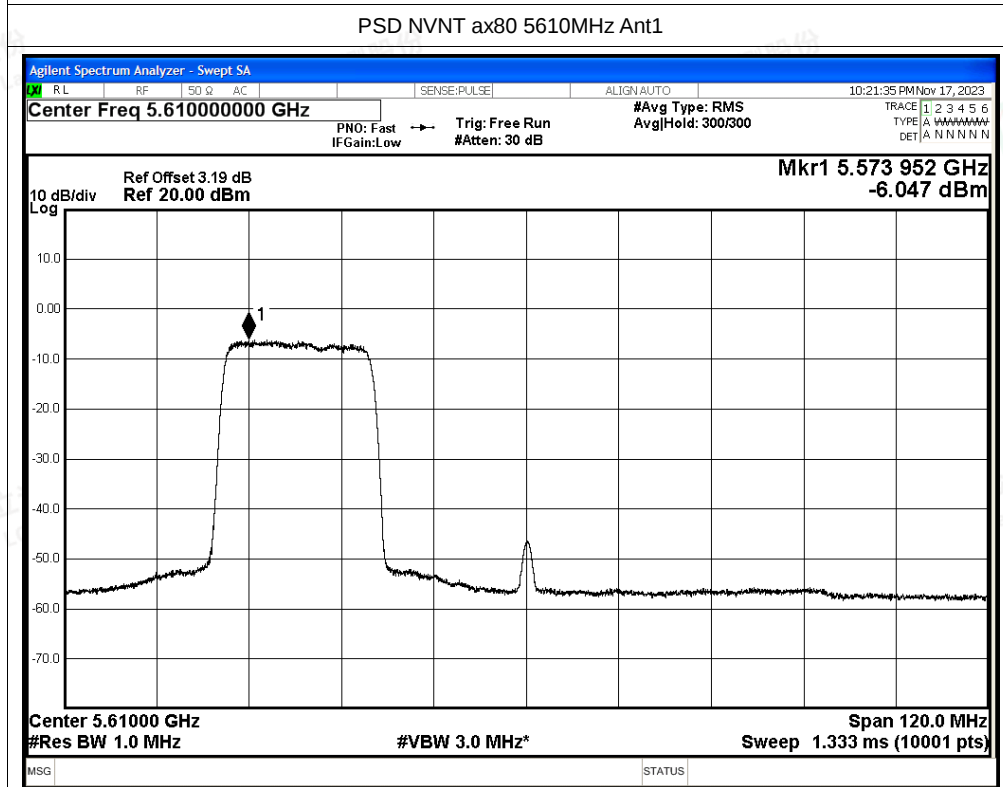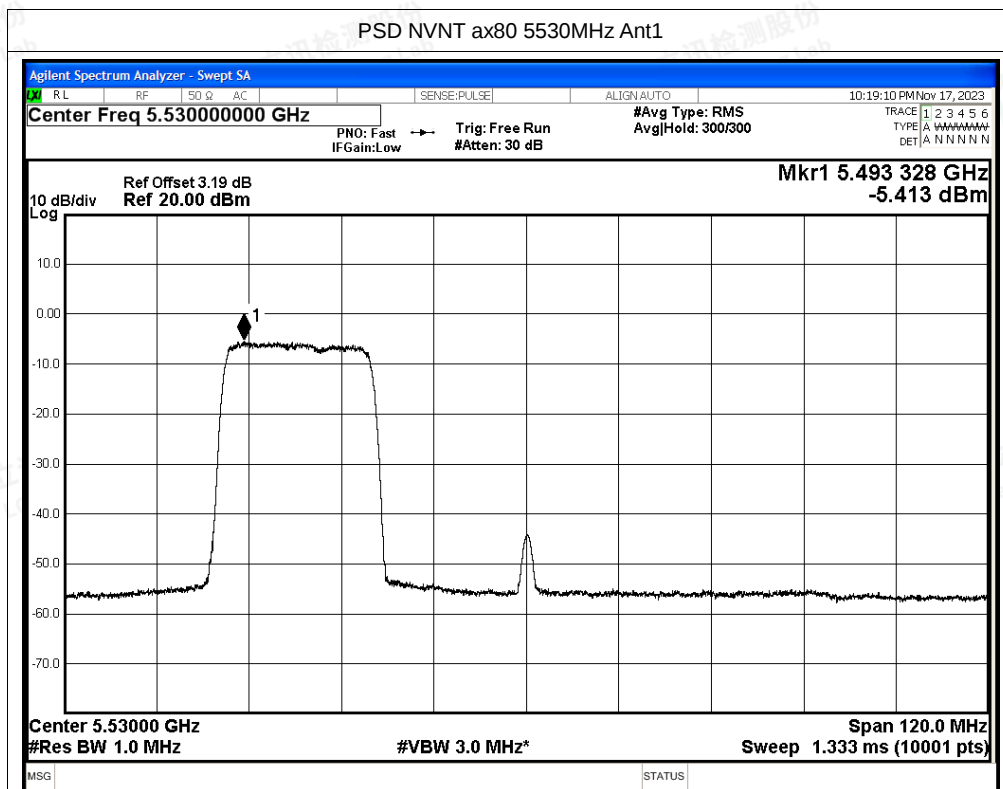






Test Graphs


PSD NVNT ax40 5510MHz Ant1

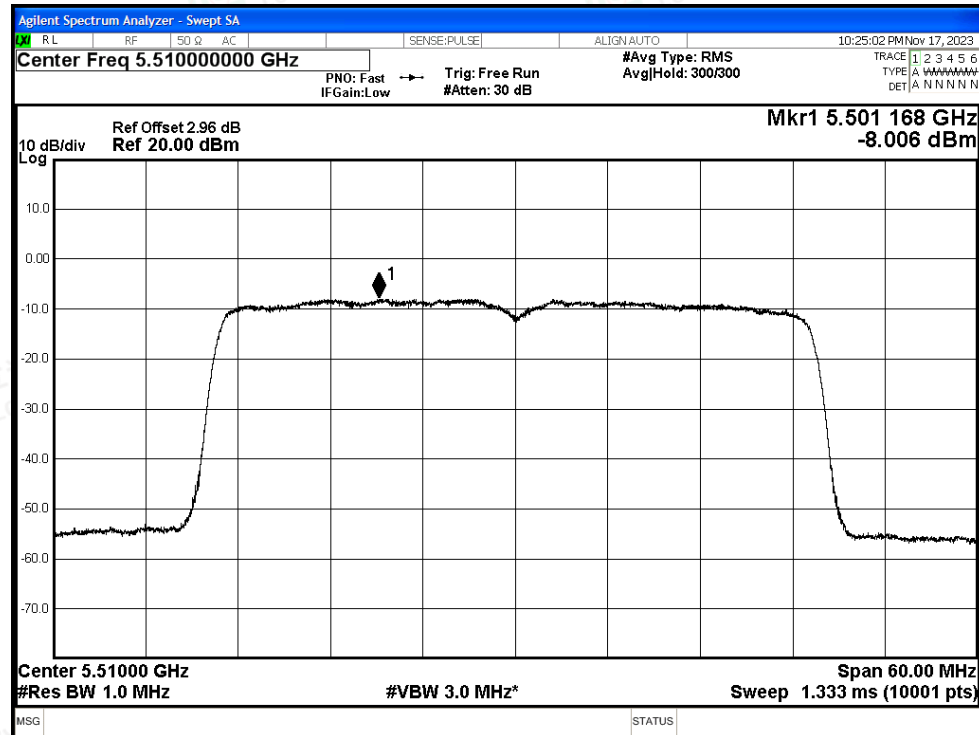

PSD NVNT ax40 5550MHz Ant1

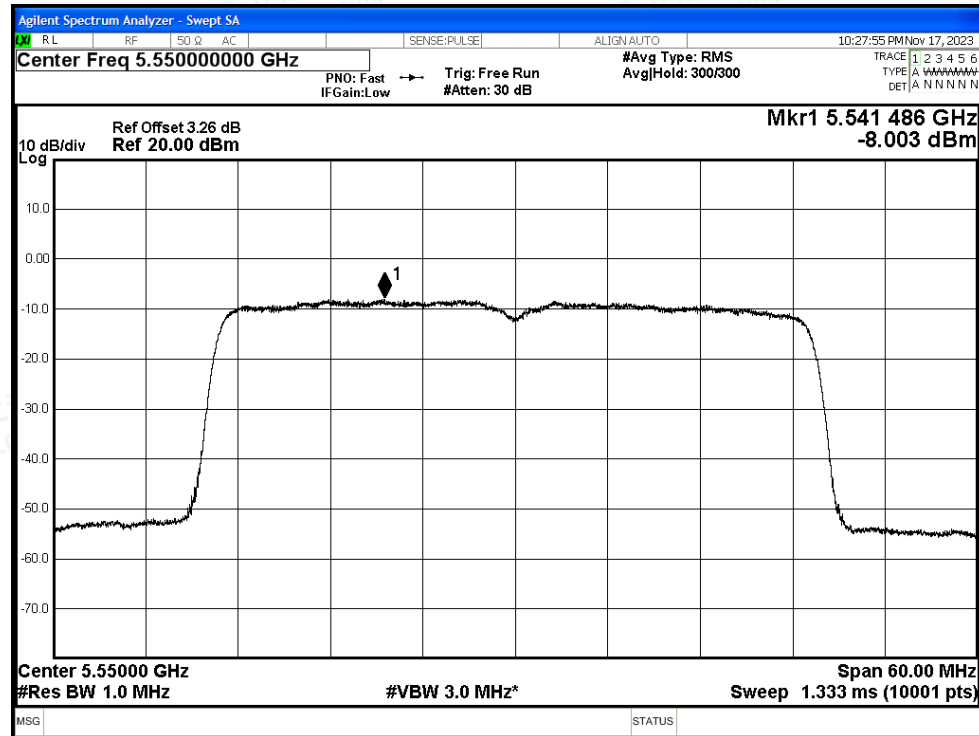

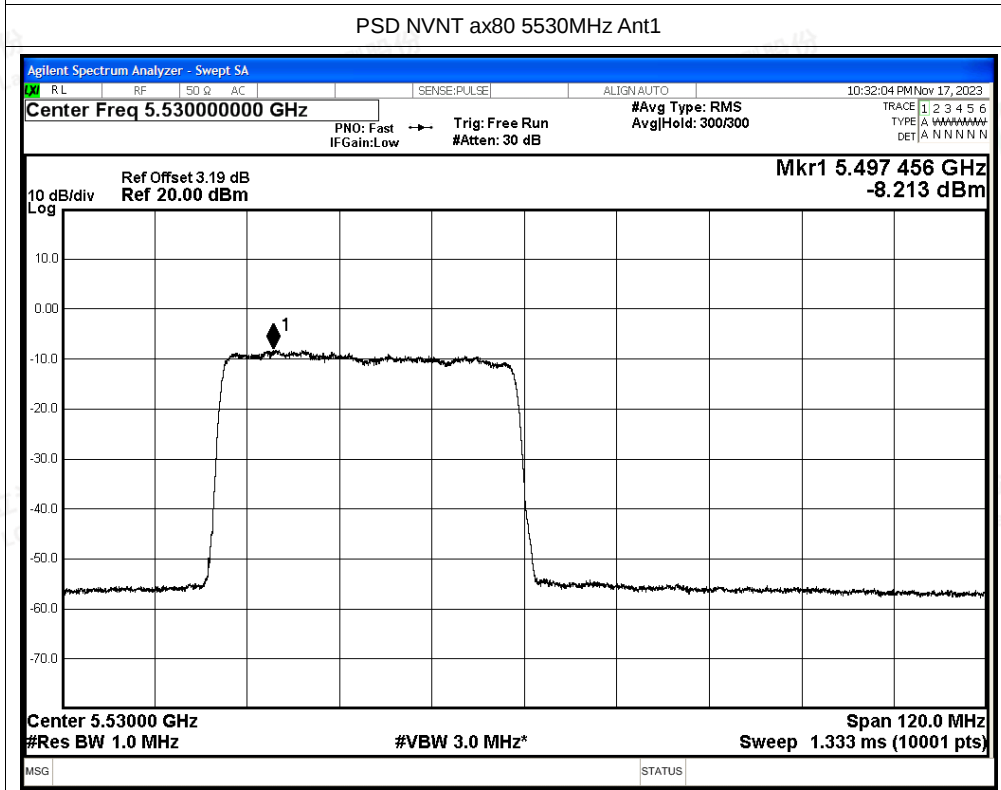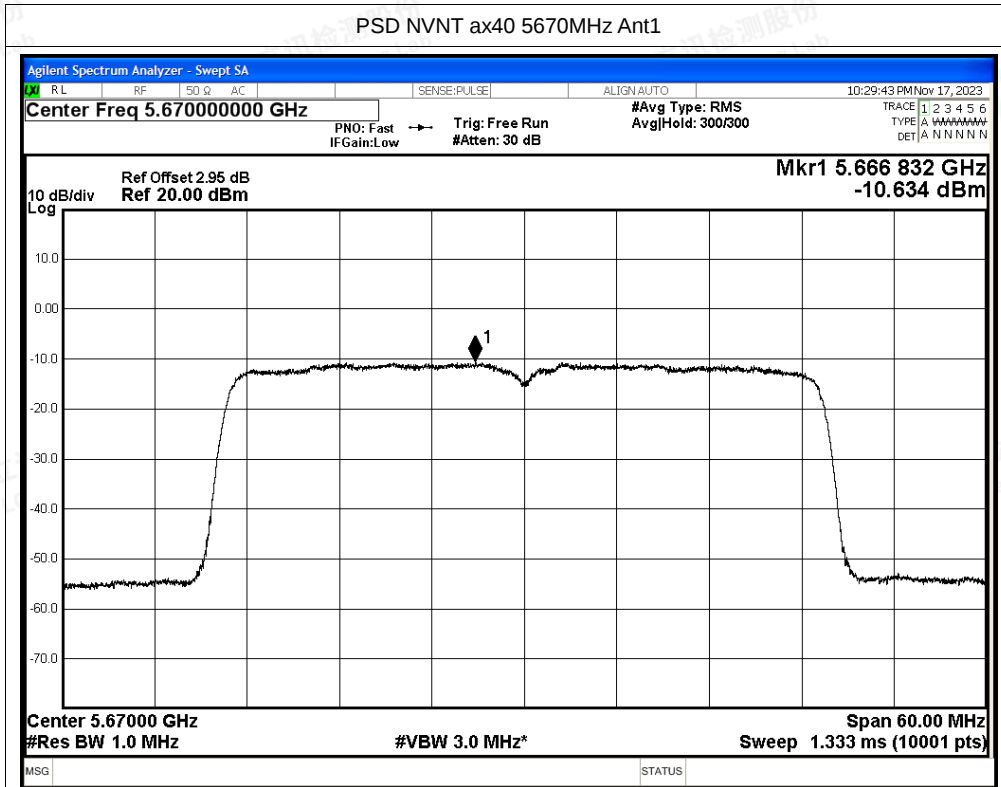


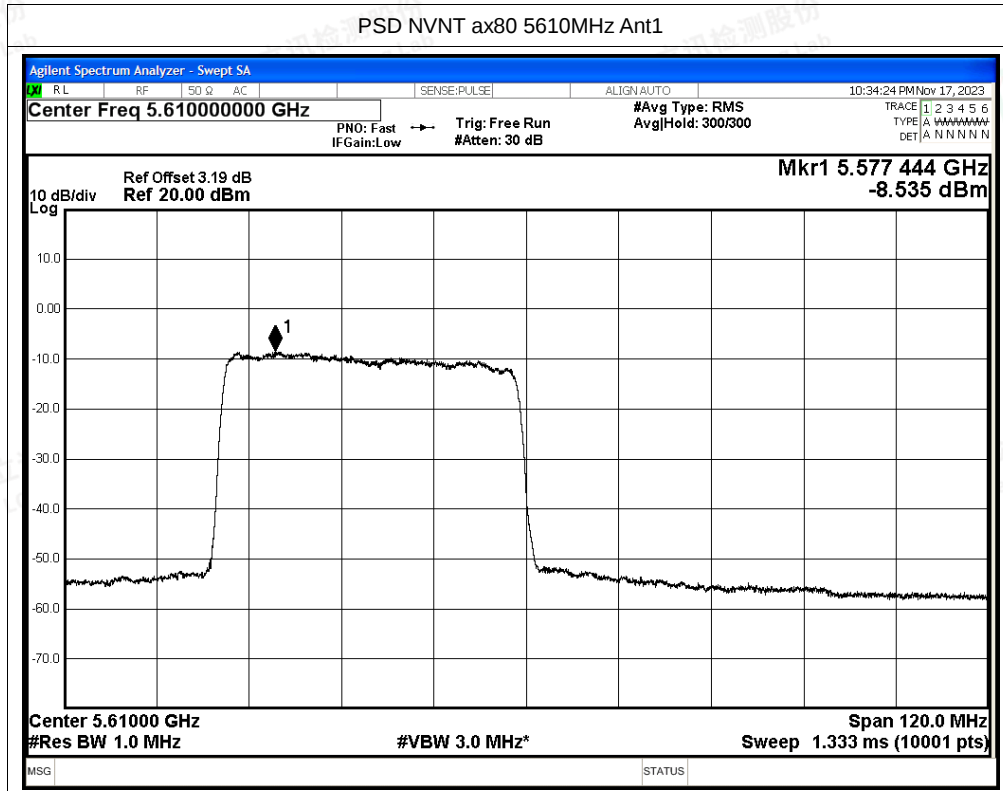




Test Graphs

PSD NVNT ax80 5530MHz Ant1

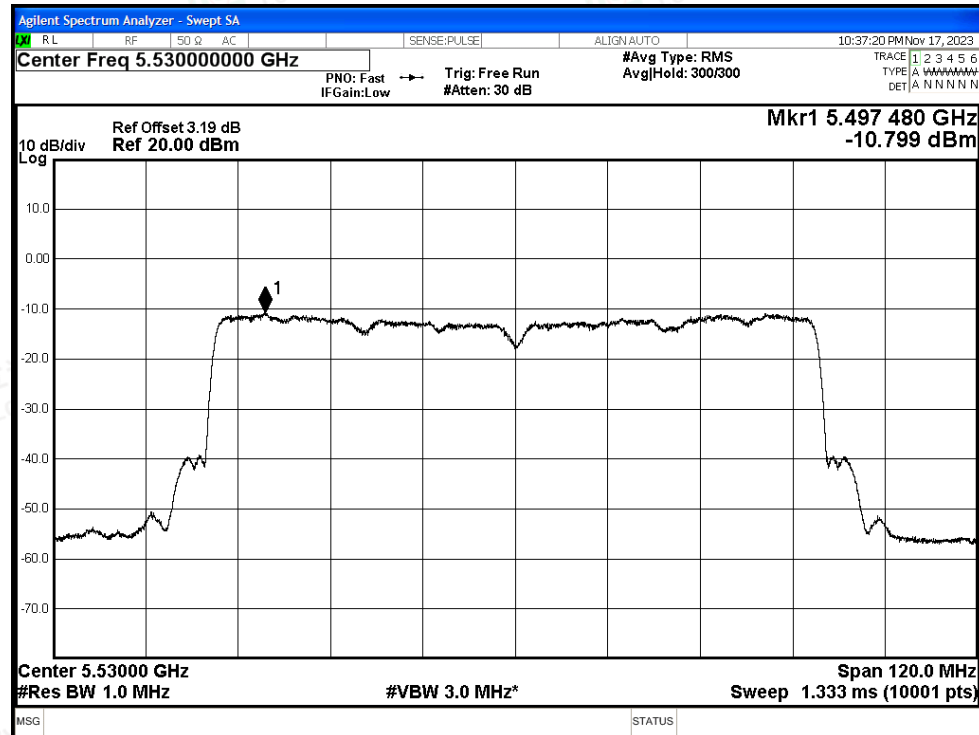

PSD NVNT ax80 5610MHz Ant1

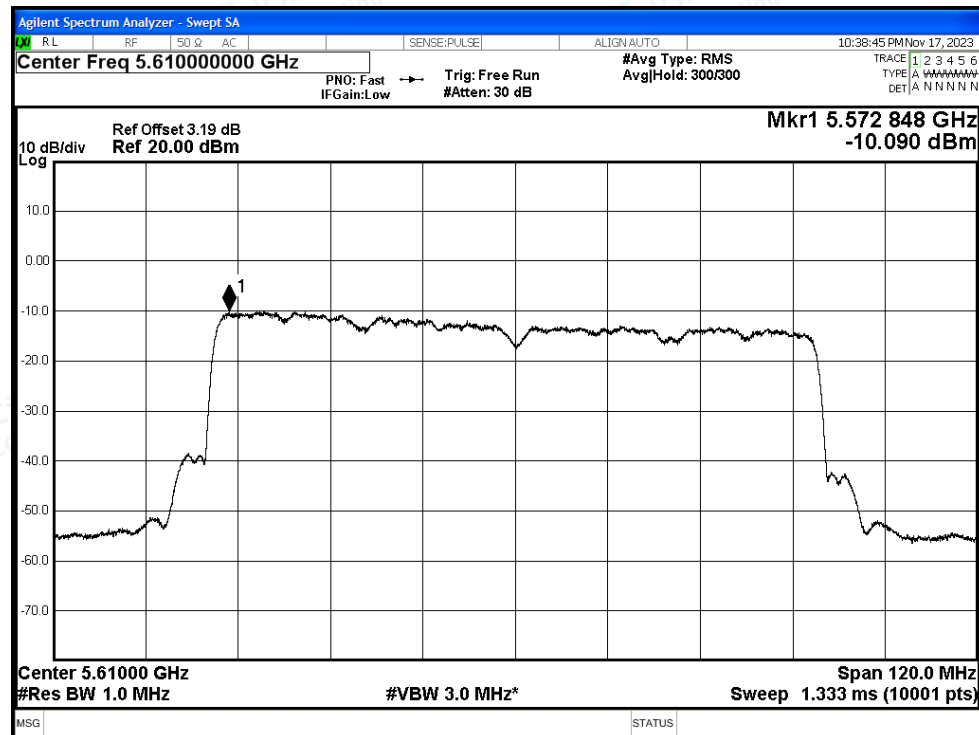



B.4 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	ac20	5500	Ant0	5500.04	40000	7.27	25	Pass
NVNT	ac20	5580	Ant0	5580.04	40000	7.17	25	Pass
NVNT	ac20	5700	Ant0	5700.04	40000	7.02	25	Pass
NVNT	ac40	5510	Ant0	5510.04	40000	7.26	25	Pass
NVNT	ac40	5550	Ant0	5550.04	40000	7.21	25	Pass
NVNT	ac40	5670	Ant0	5670.04	40000	7.05	25	Pass
NVNT	ac80	5530	Ant0	5530	0	0	25	Pass
NVNT	ac80	5610	Ant0	5610	0	0	25	Pass
NVNT	ax20	5500	Ant0	5500.04	40000	7.27	25	Pass
NVNT	ax20	5580	Ant0	5580.06	60000	10.75	25	Pass
NVNT	ax20	5700	Ant0	5700.04	40000	7.02	25	Pass
NVNT	ax40	5510	Ant0	5510.04	40000	7.26	25	Pass
NVNT	ax40	5550	Ant0	5550.04	40000	7.21	25	Pass
NVNT	ax40	5670	Ant0	5670.04	40000	7.05	25	Pass
NVNT	ax80	5530	Ant0	5530	0	0	25	Pass
NVNT	ax80	5610	Ant0	5610	0	0	25	Pass




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen,
518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Freq. Stability NVNT ac20 5500MHz Ant0

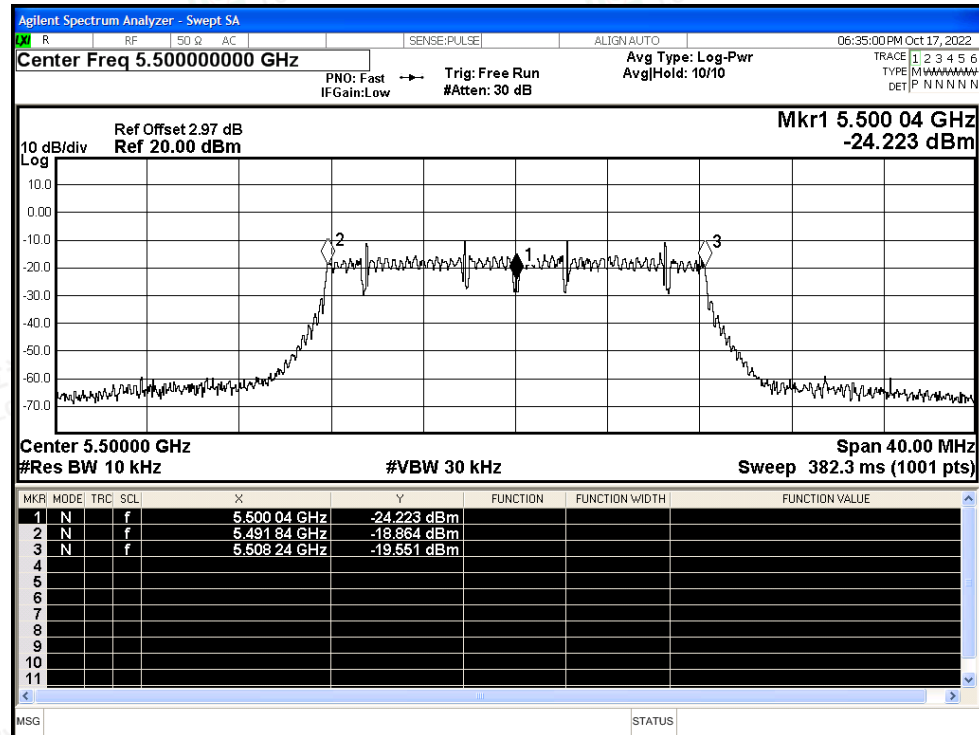

Freq. Stability NVNT ac20 5580MHz Ant0

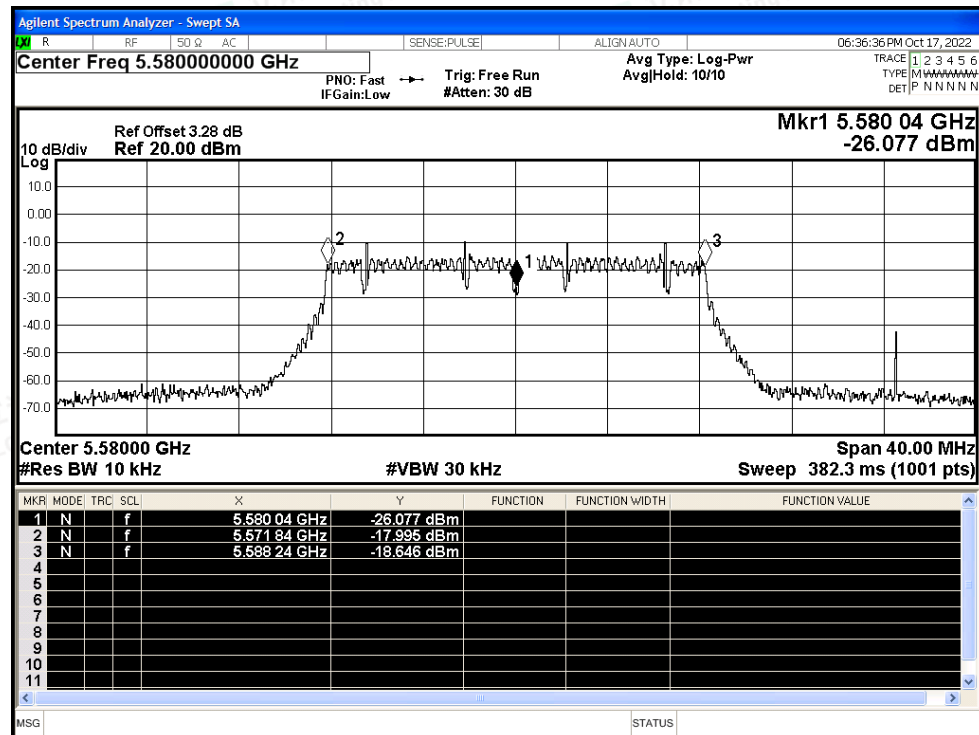

Shenzhen LCS Compliance Testing Laboratory Ltd.


Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China

Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com


Scan code to check authenticity



Freq. Stability NVNT ac20 5700MHz Ant0

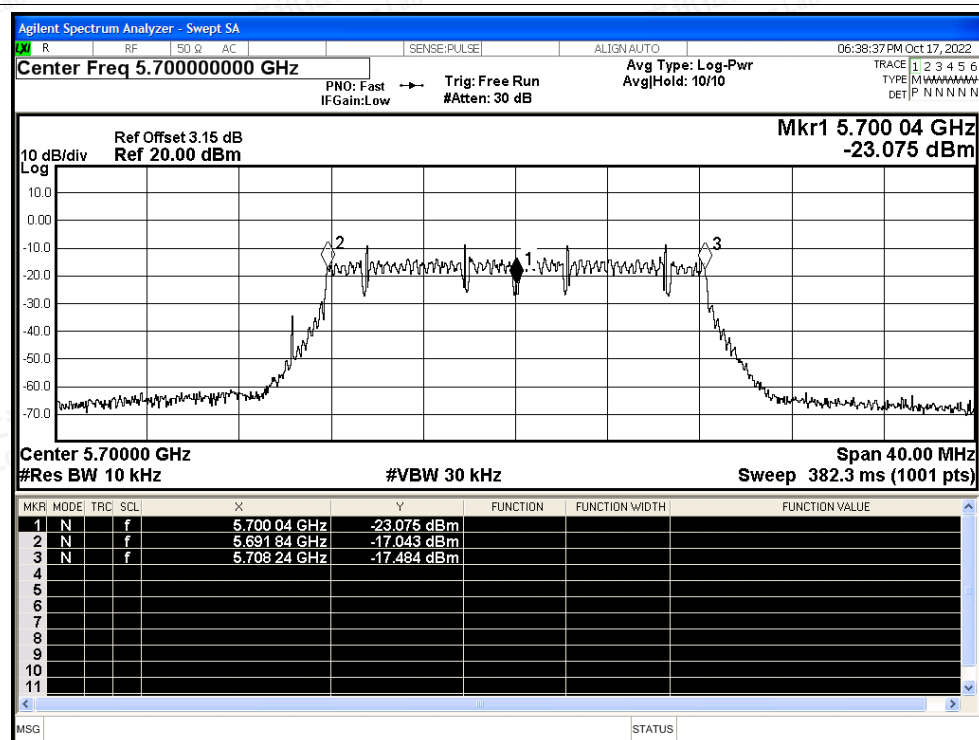


Freq. Stability NVNT ac40 5510MHz Ant0

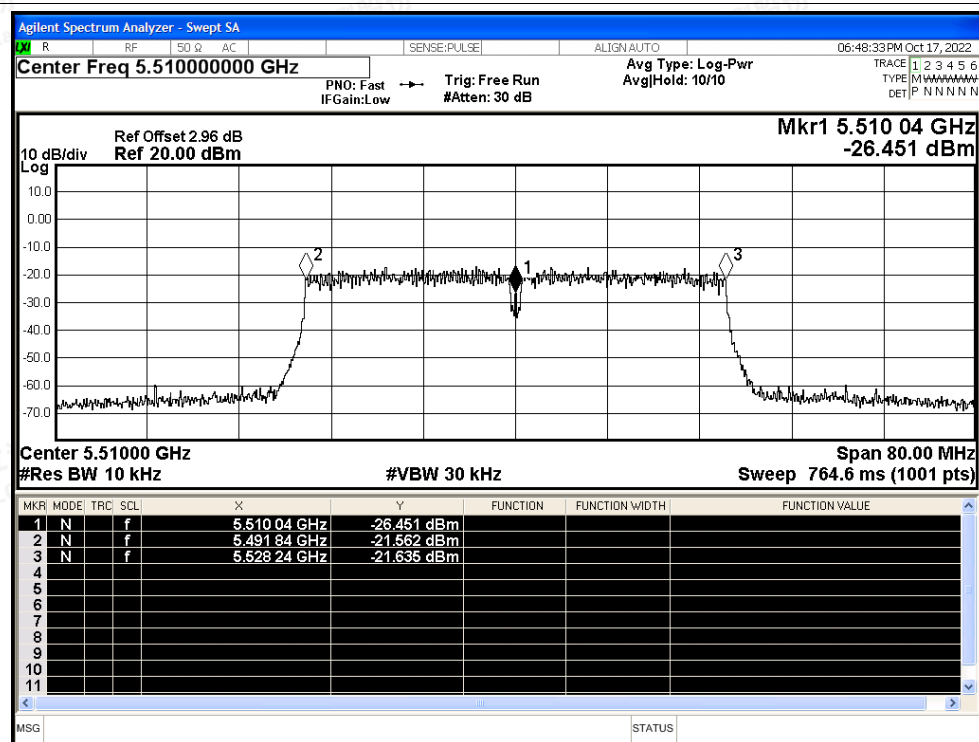




Freq. Stability NVNT ac40 5550MHz Ant0

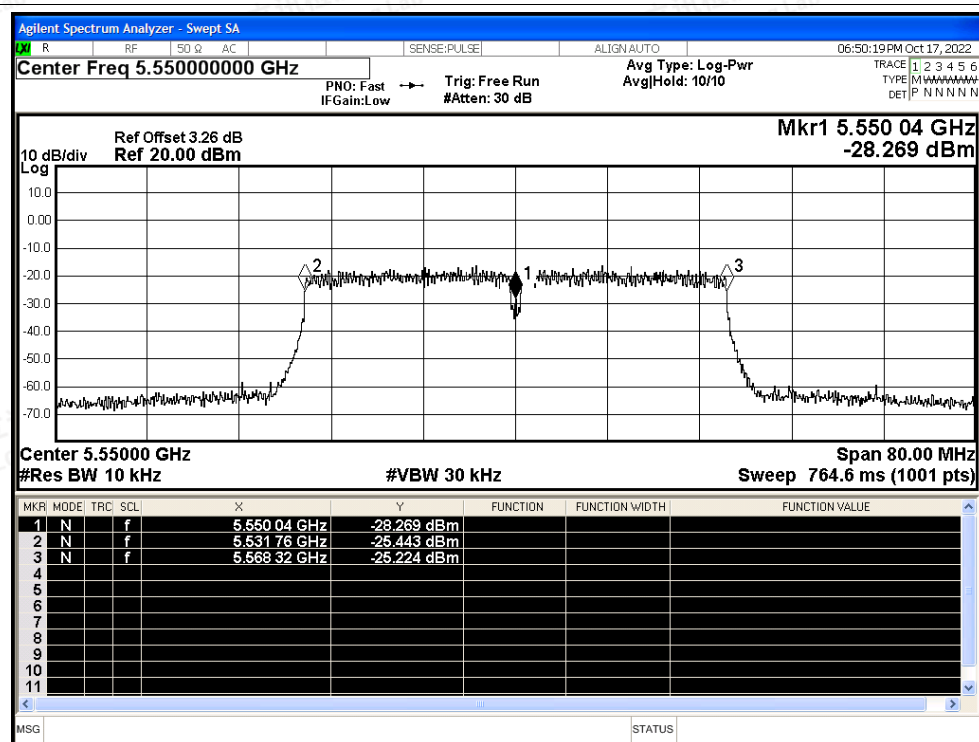


Freq. Stability NVNT ac40 5670MHz Ant0

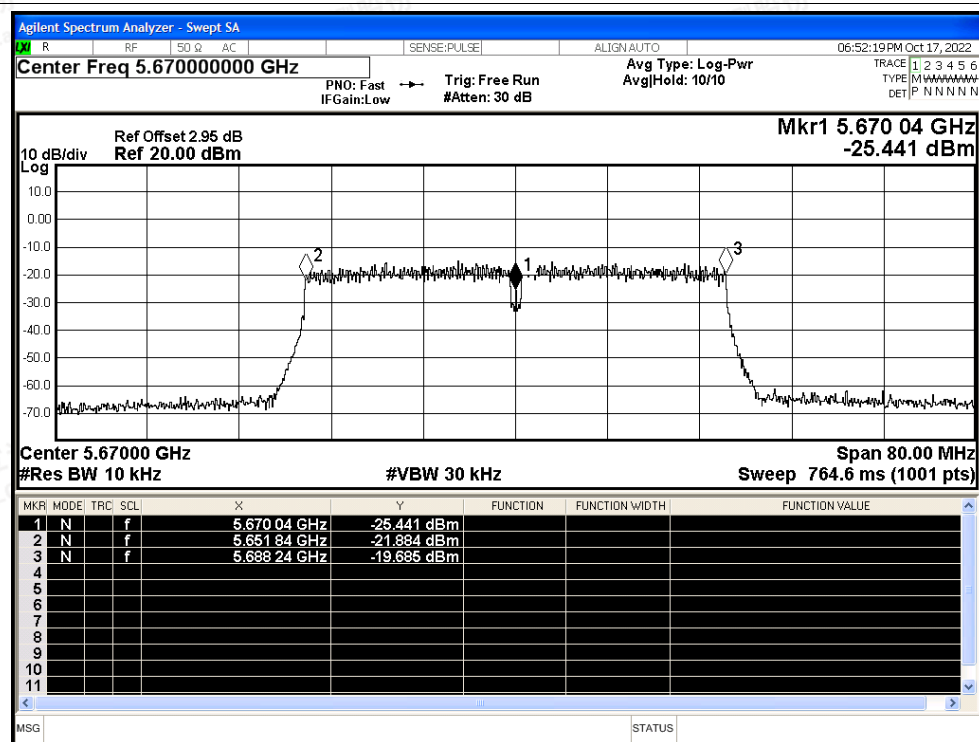




Freq. Stability NVNT ac80 5530MHz Ant0

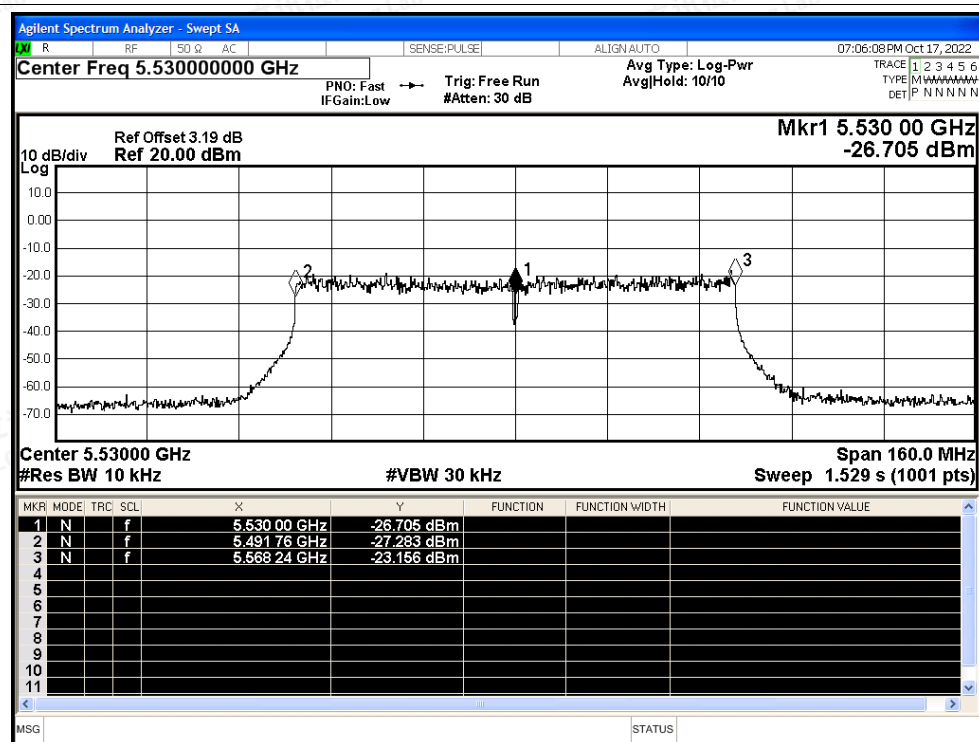


Freq. Stability NVNT ac80 5610MHz Ant0

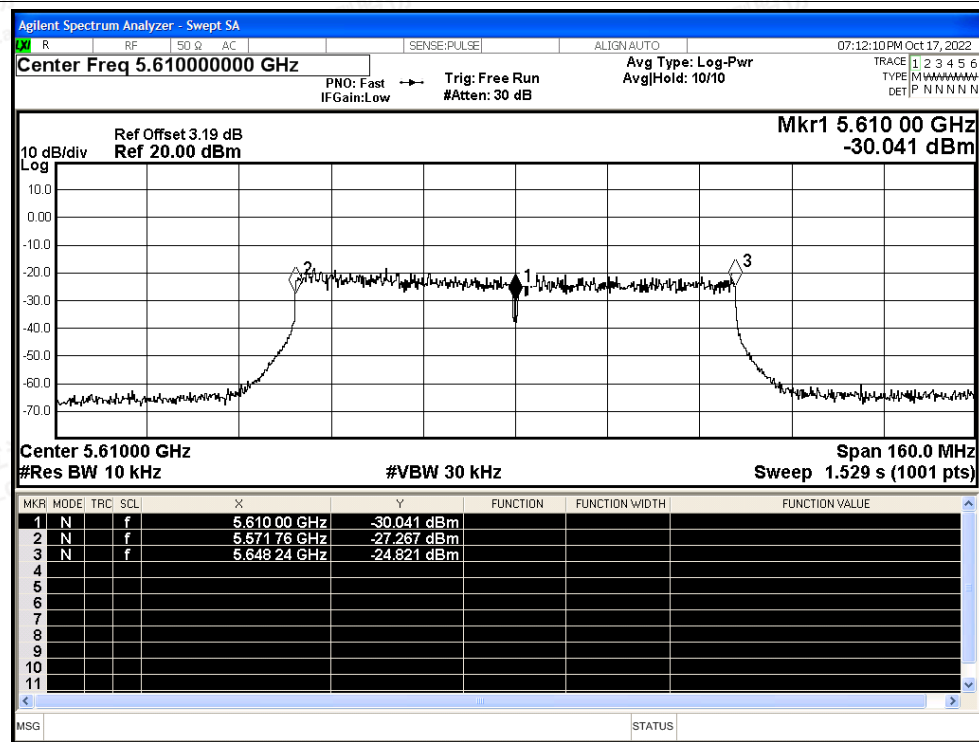




Freq. Stability NVNT ax20 5500MHz Ant0

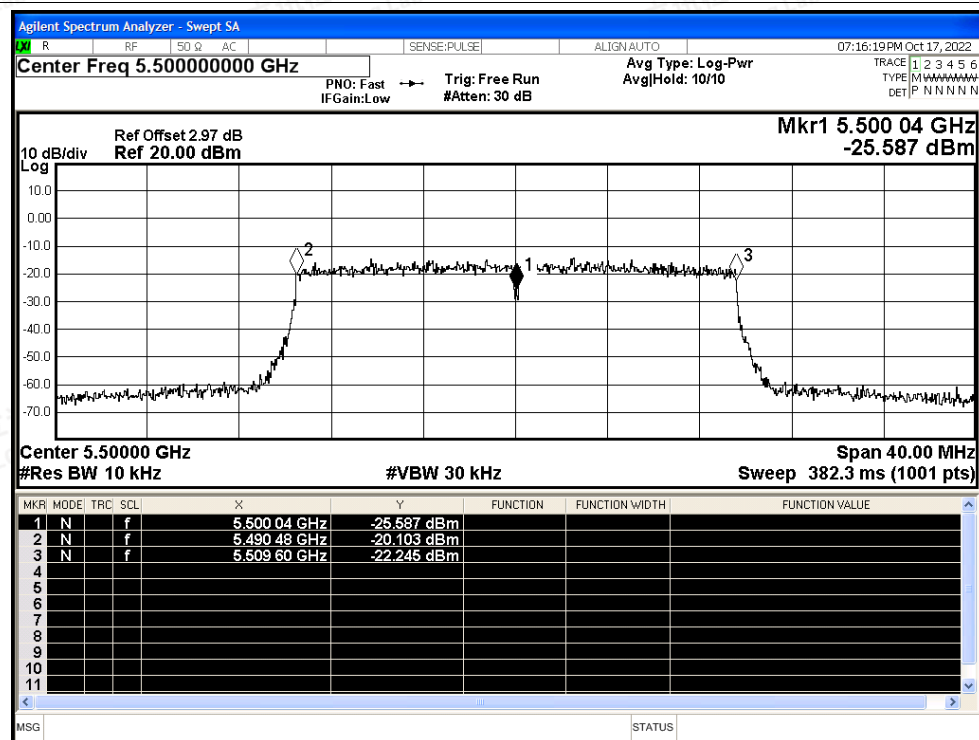


Freq. Stability NVNT ax20 5580MHz Ant0

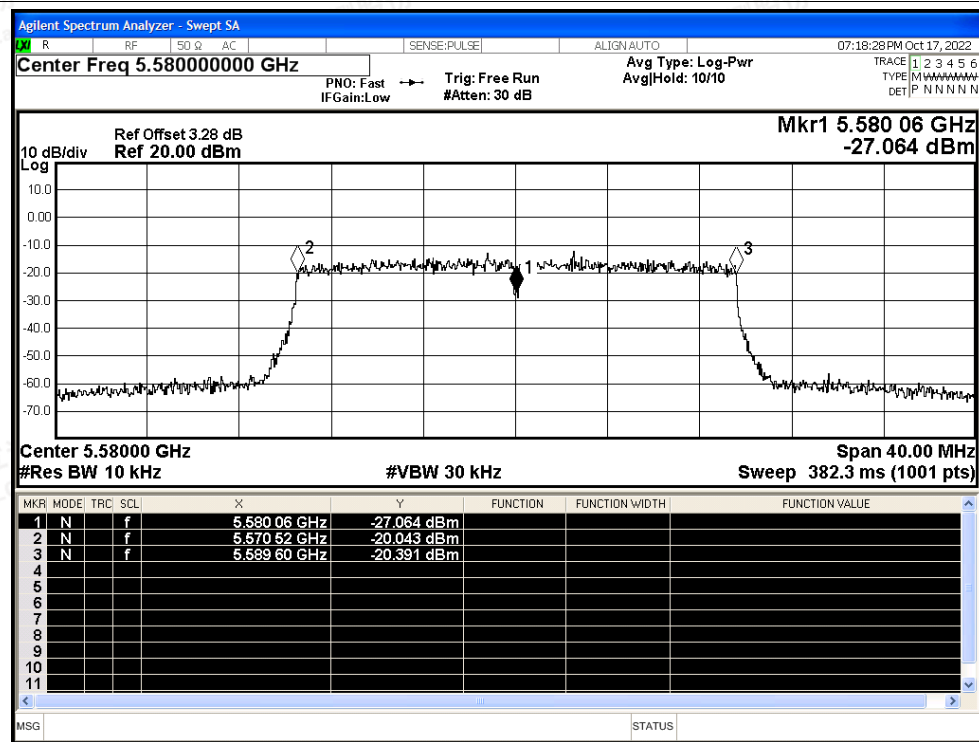




Freq. Stability NVNT ax20 5700MHz Ant0

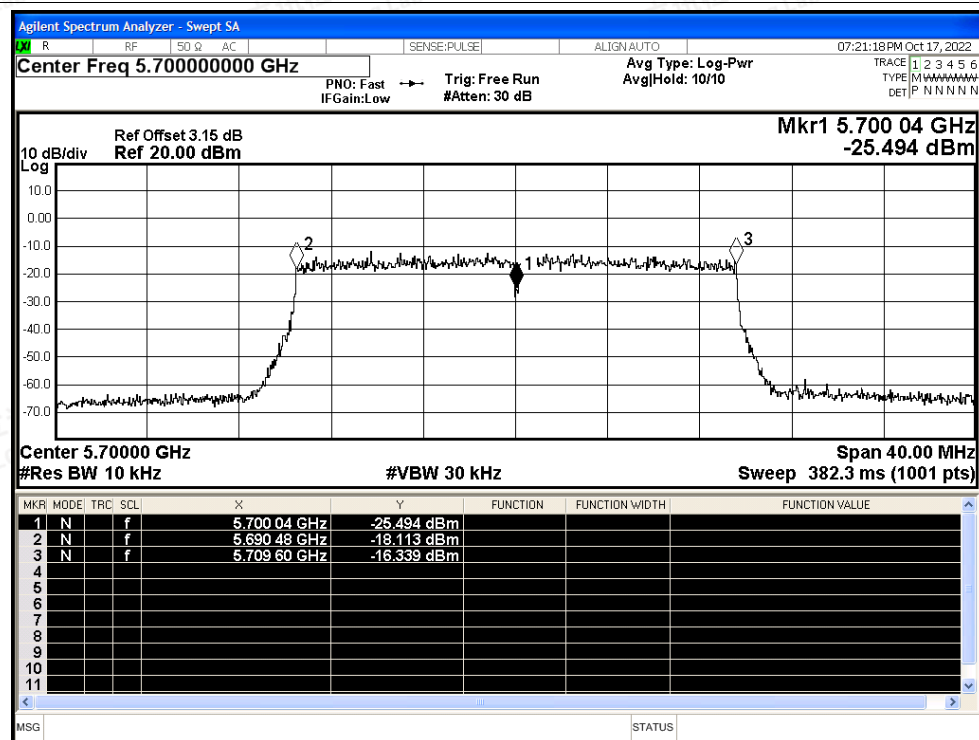


Freq. Stability NVNT ax40 5510MHz Ant0

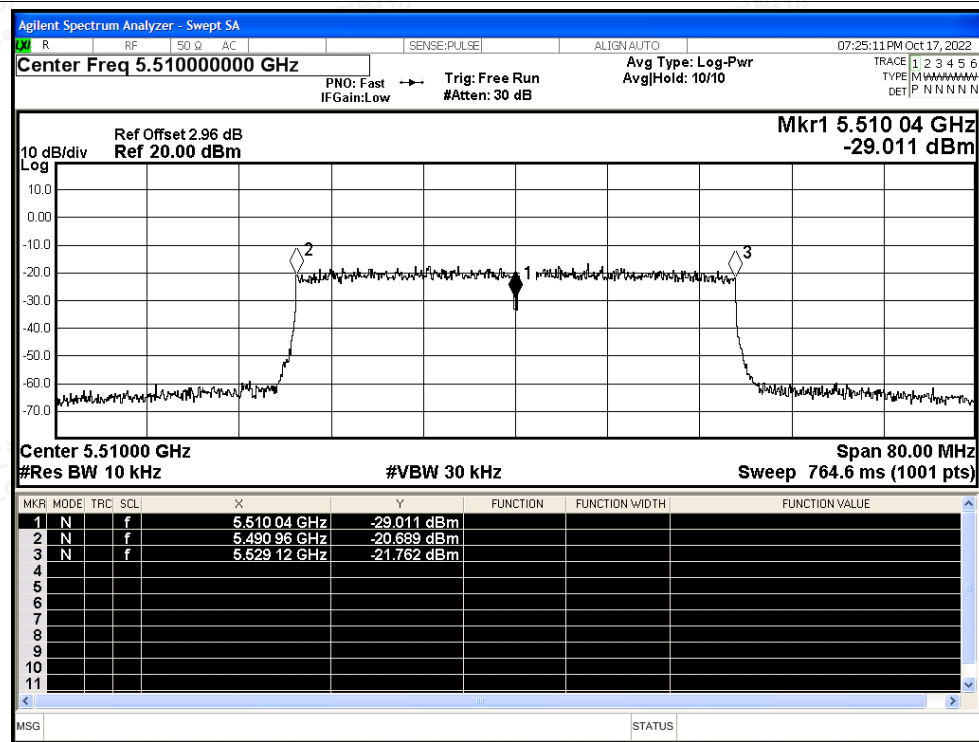




Freq. Stability NVNT ax40 5550MHz Ant0

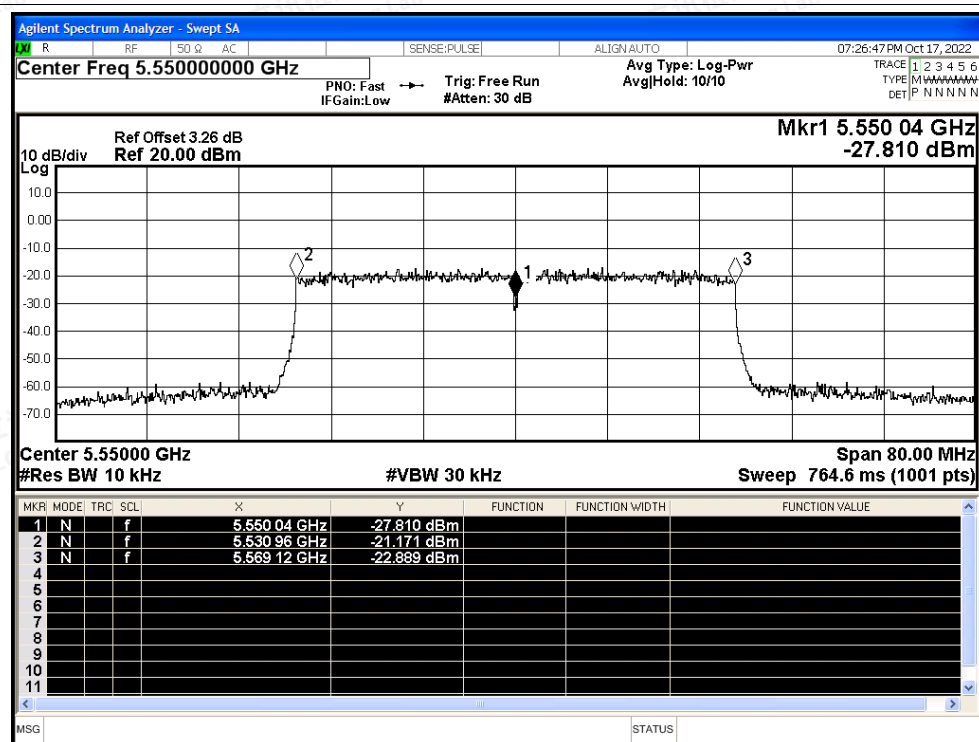


Freq. Stability NVNT ax40 5670MHz Ant0

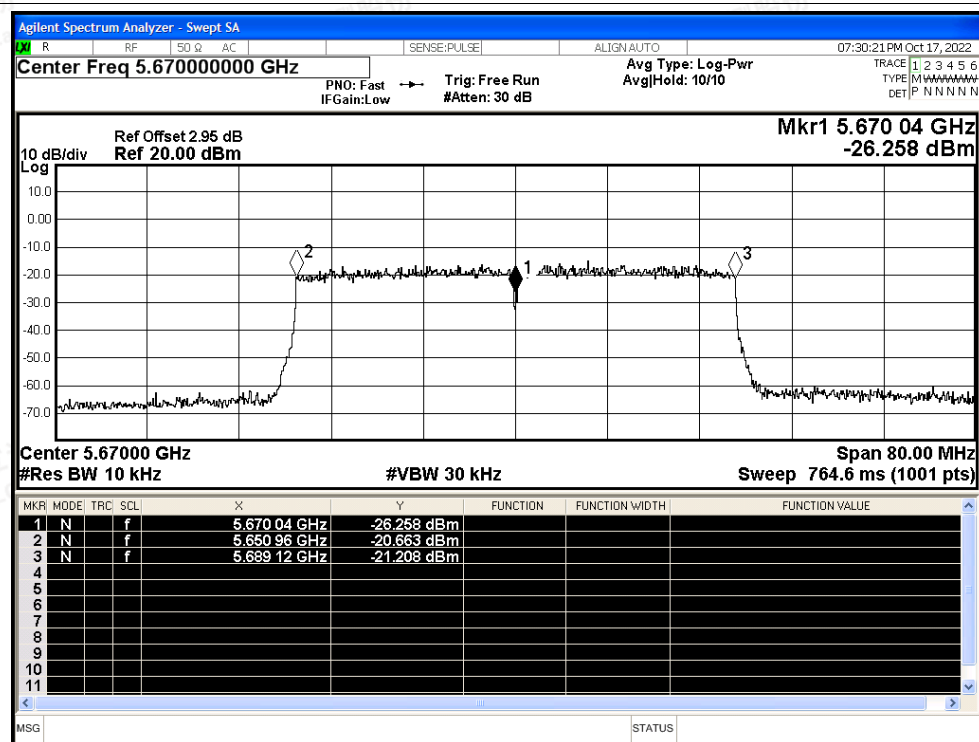




Freq. Stability NVNT ax80 5530MHz Ant0

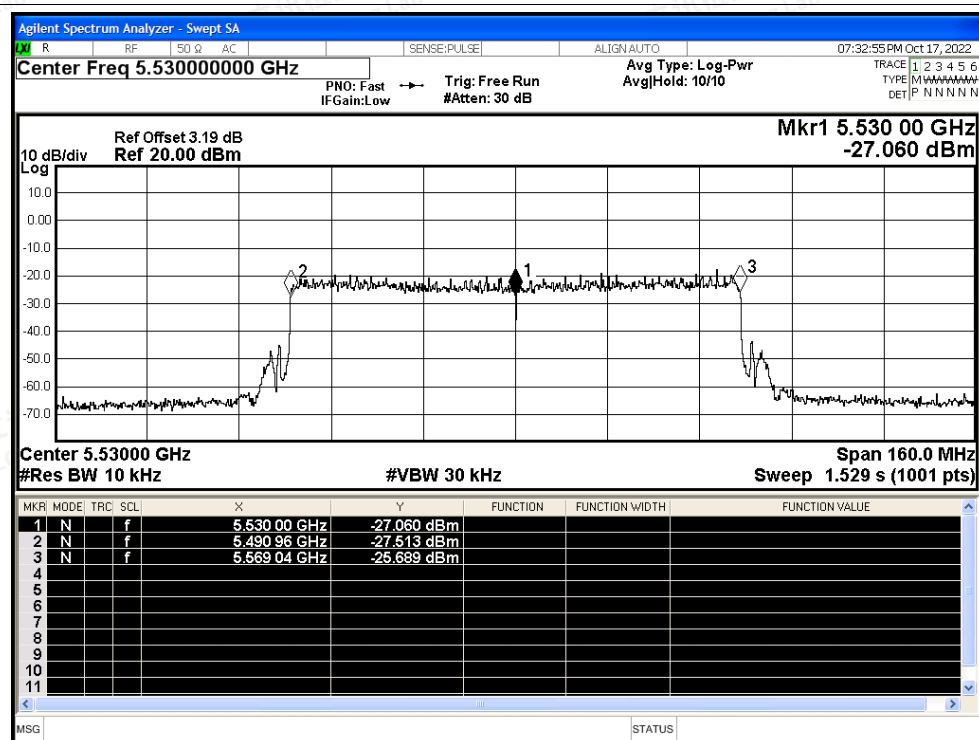

Freq. Stability NVNT ax80 5610MHz Ant0

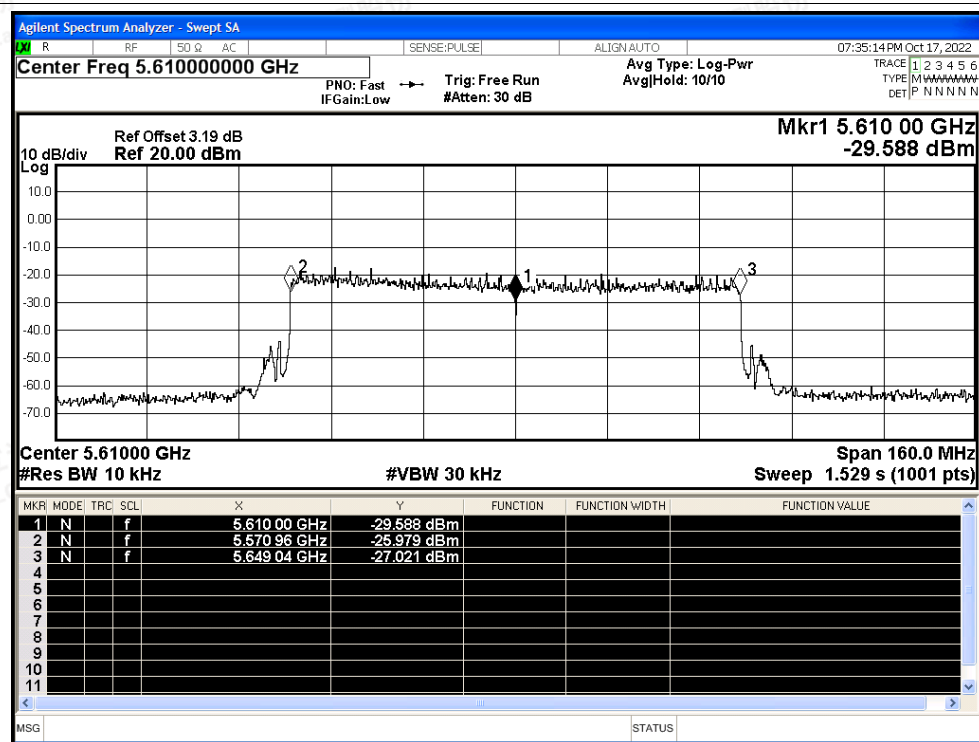



Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)
NVNT	ac20	5500	Ant1	5500.04	40000	7.27
NVNT	ac20	5580	Ant1	5580.04	40000	7.17
NVNT	ac20	5700	Ant1	5700.06	60000	10.53
NVNT	ac40	5510	Ant1	5510.04	40000	7.26
NVNT	ac40	5550	Ant1	5550.04	40000	7.21
NVNT	ac40	5670	Ant1	5670.08	80000	14.11
NVNT	ac80	5530	Ant1	5530	0	0
NVNT	ac80	5610	Ant1	5610	0	0
NVNT	ax20	5500	Ant1	5500.04	40000	7.27
NVNT	ax20	5580	Ant1	5580.04	40000	7.17
NVNT	ax20	5700	Ant1	5700.08	80000	14.04
NVNT	ax40	5510	Ant1	5510.04	40000	7.26
NVNT	ax40	5550	Ant1	5550.04	40000	7.21
NVNT	ax40	5670	Ant1	5670.04	40000	7.05
NVNT	ax80	5530	Ant1	5530	0	0
NVNT	ax80	5610	Ant1	5609.92	-80000	-14.26




Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity




Test Graphs

Freq. Stability NVNT ac20 5500MHz Ant1

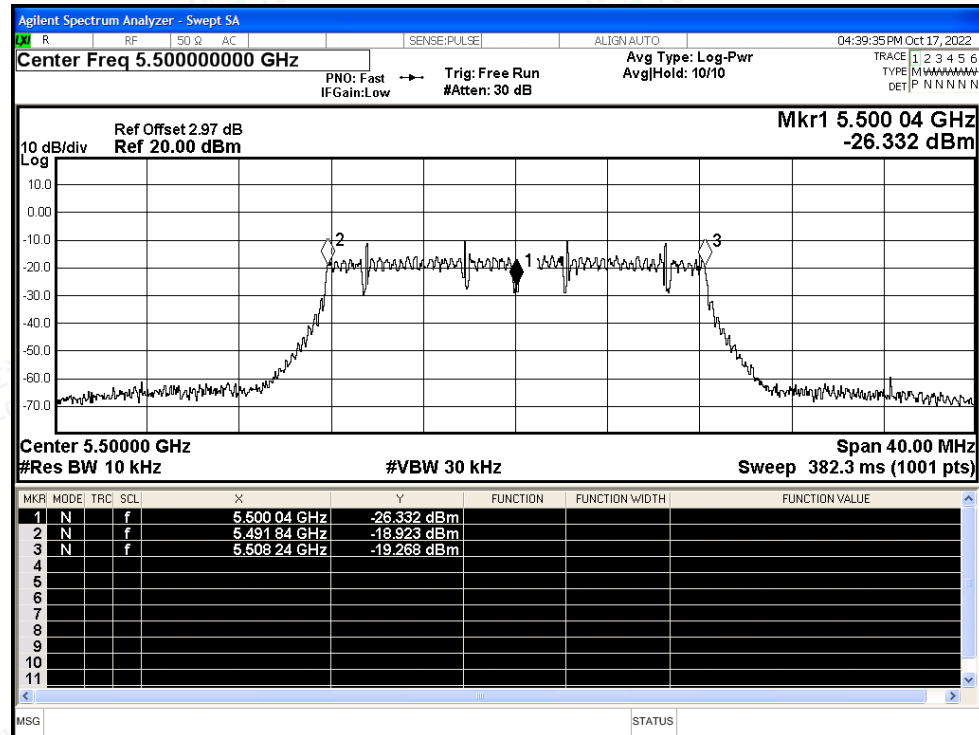


Freq. Stability NVNT ac20 5580MHz Ant1

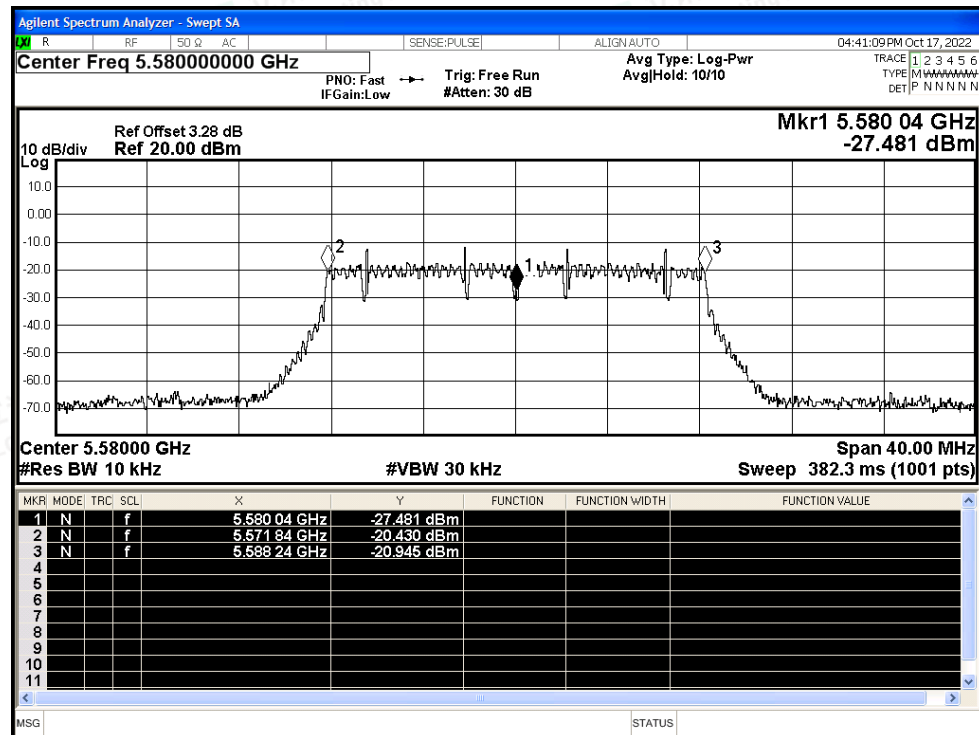


Shenzhen LCS Compliance Testing Laboratory Ltd.
Add: 101, 201 Bldg A & 301 Bldg C, Juji Industrial Park Yabianxueziwei, Shajing Street, Baoan District, Shenzhen, 518000, China
Tel: +(86) 0755-82591330 | E-mail: webmaster@lcs-cert.com | Web: www.lcs-cert.com
Scan code to check authenticity



Freq. Stability NVNT ac20 5700MHz Ant1

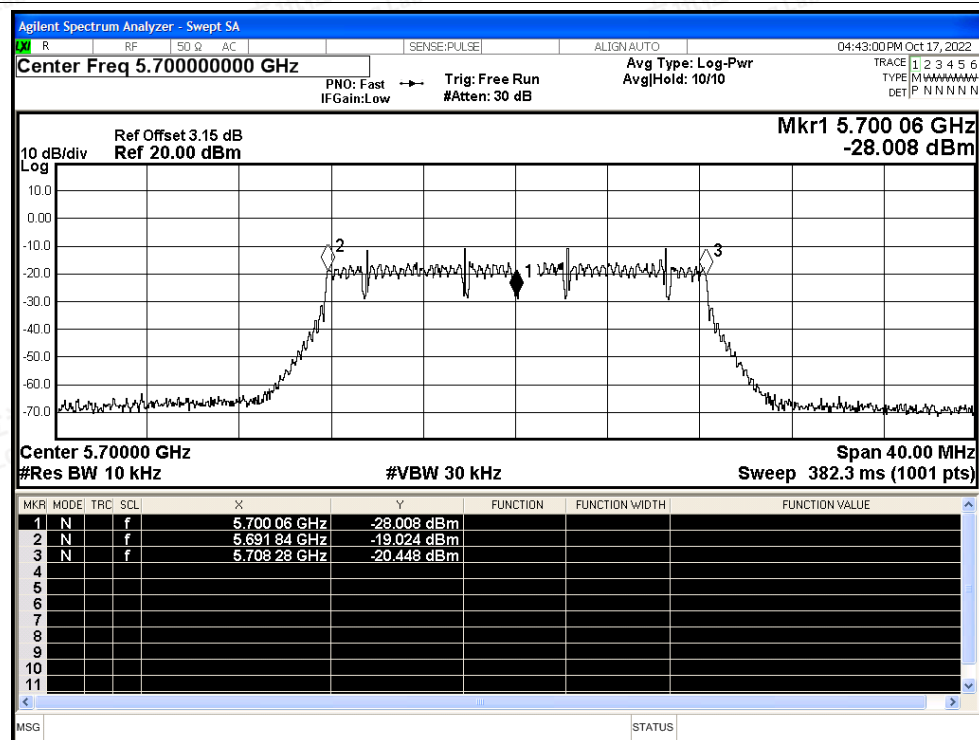


Freq. Stability NVNT ac40 5510MHz Ant1

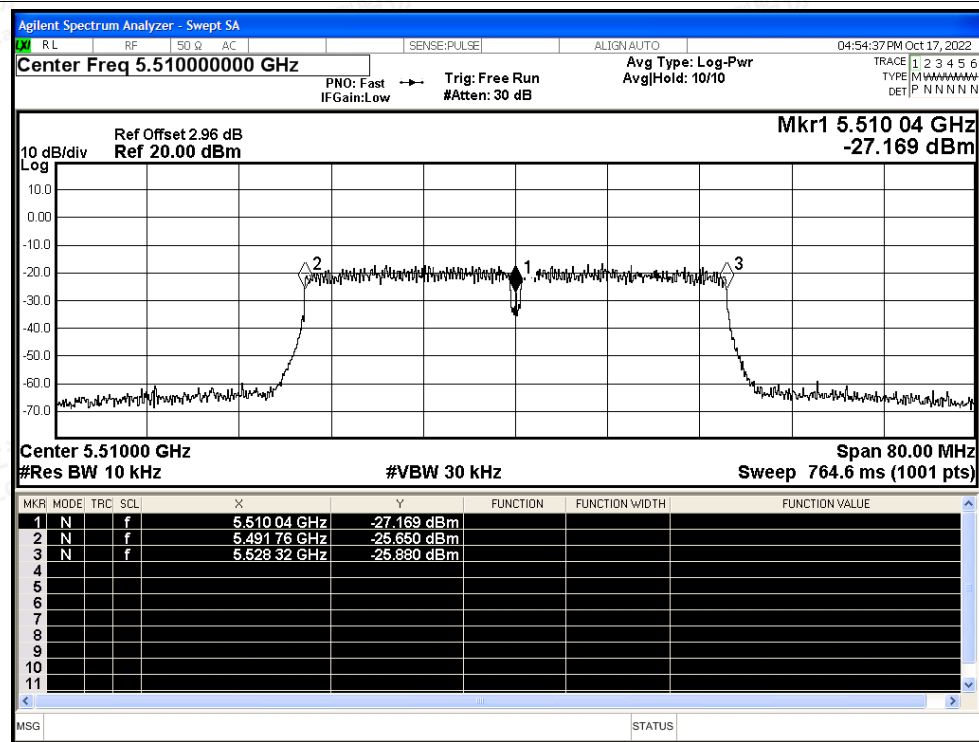




Freq. Stability NVNT ac40 5550MHz Ant1

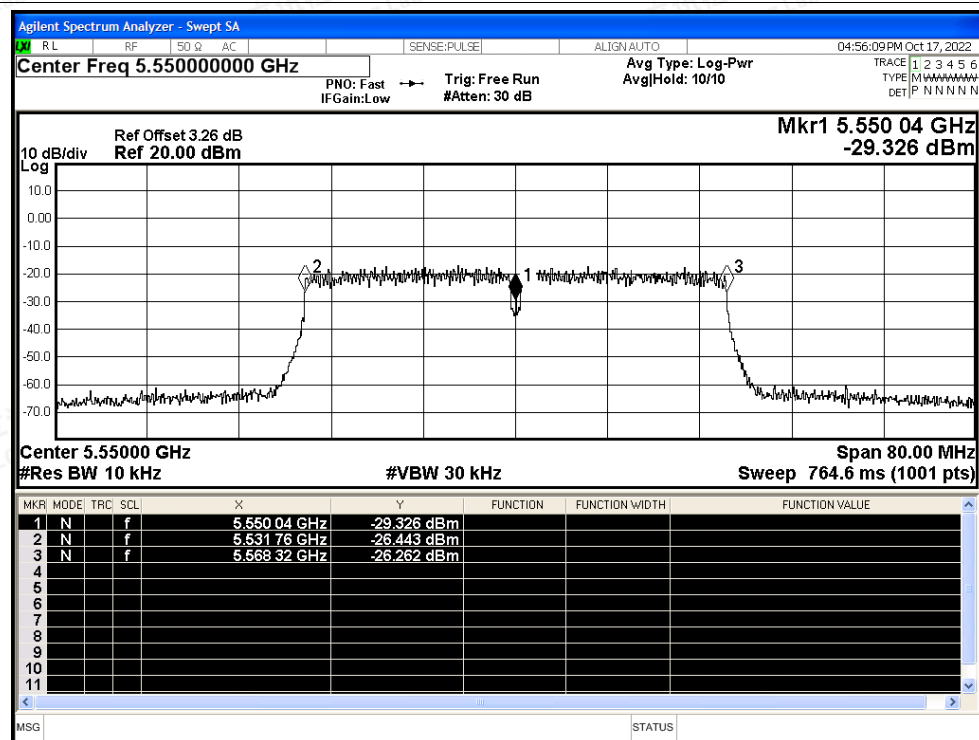


Freq. Stability NVNT ac40 5670MHz Ant1

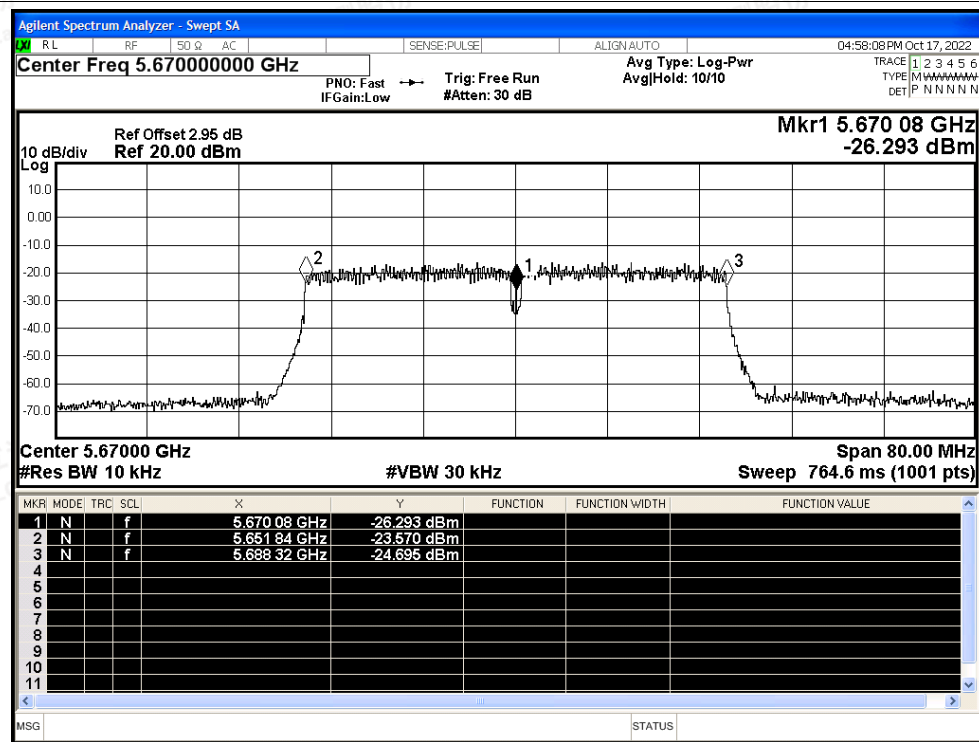




Freq. Stability NVNT ac80 5530MHz Ant1

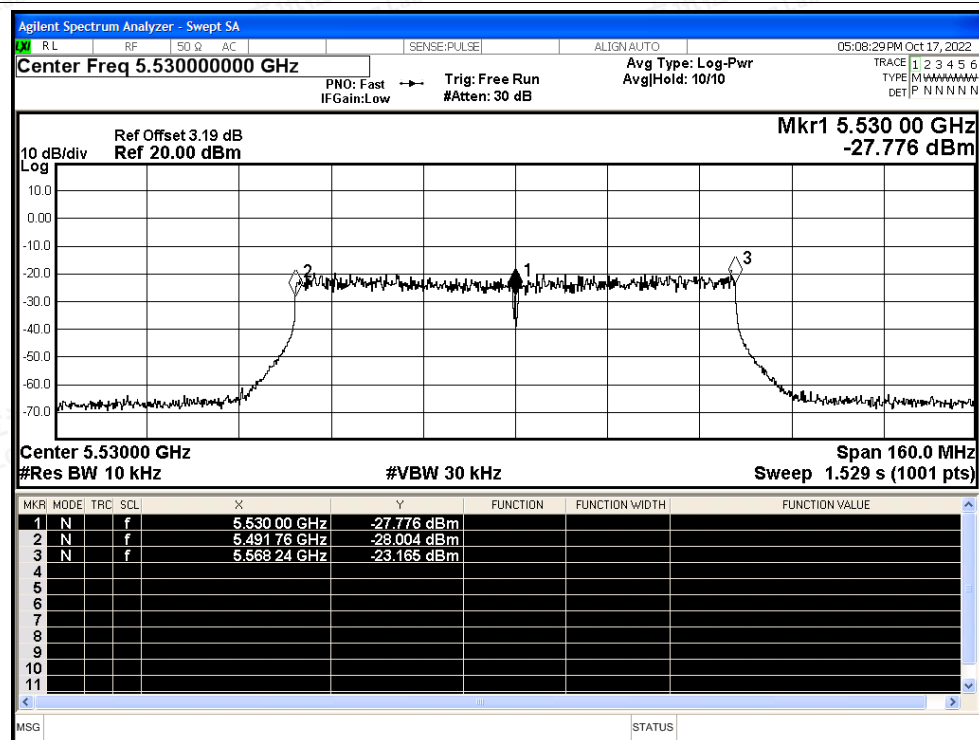


Freq. Stability NVNT ac80 5610MHz Ant1

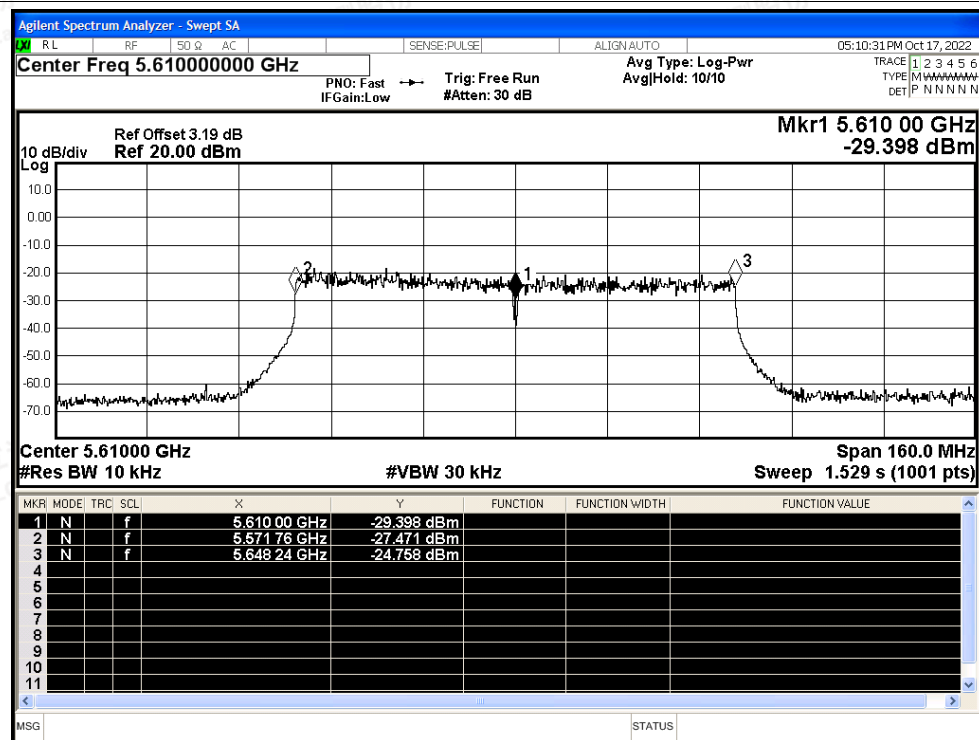




Freq. Stability NVNT ax20 5500MHz Ant1

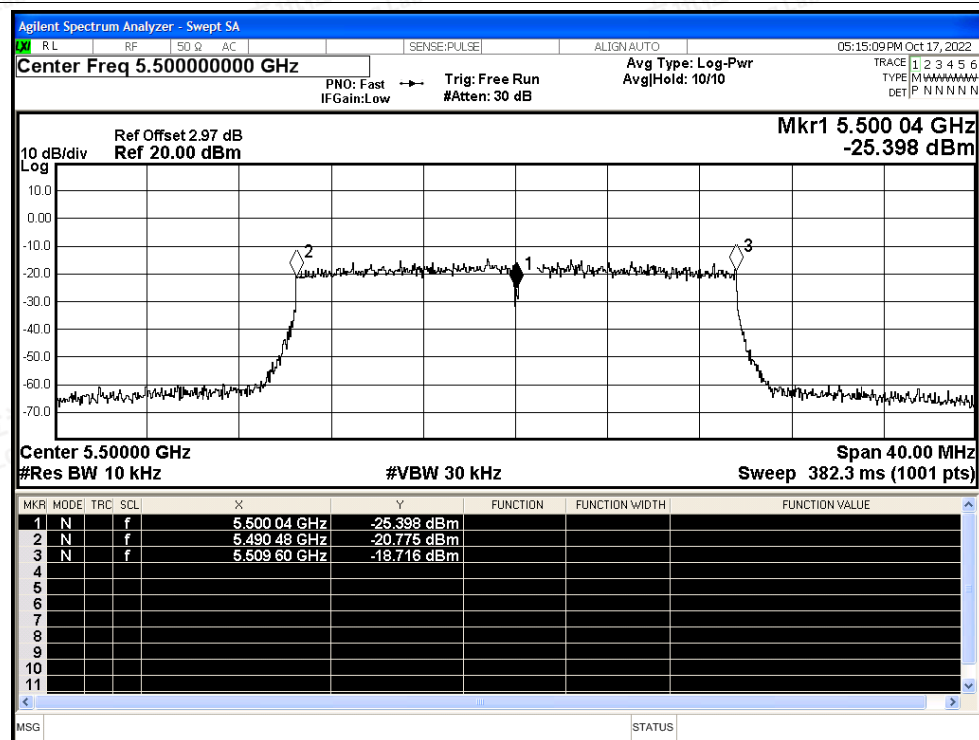


Freq. Stability NVNT ax20 5580MHz Ant1

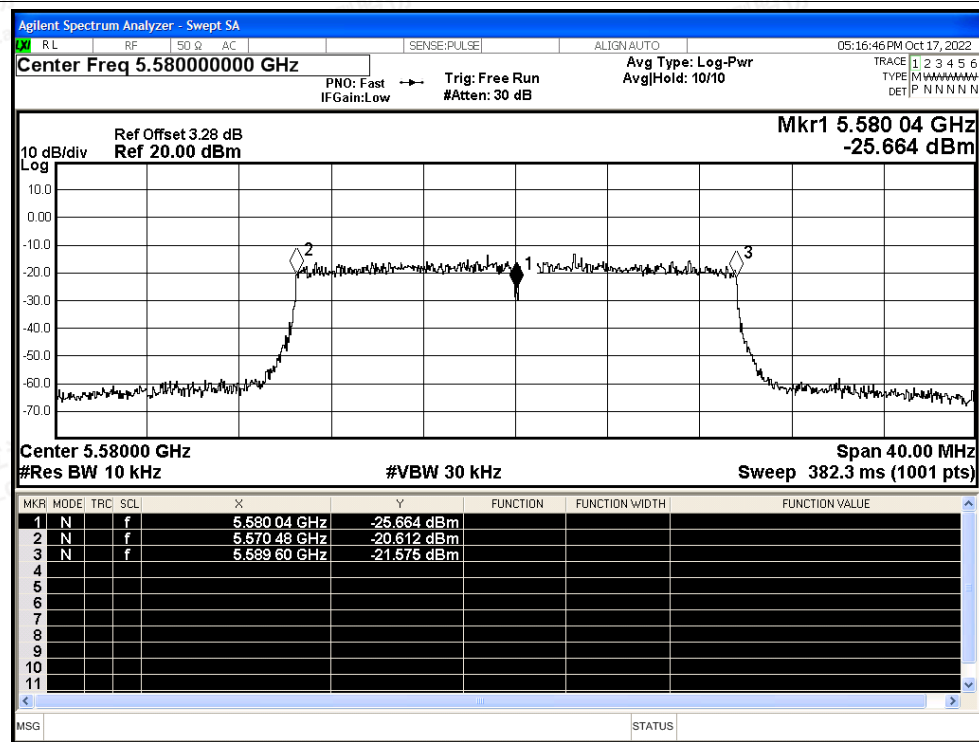




Freq. Stability NVNT ax20 5700MHz Ant1

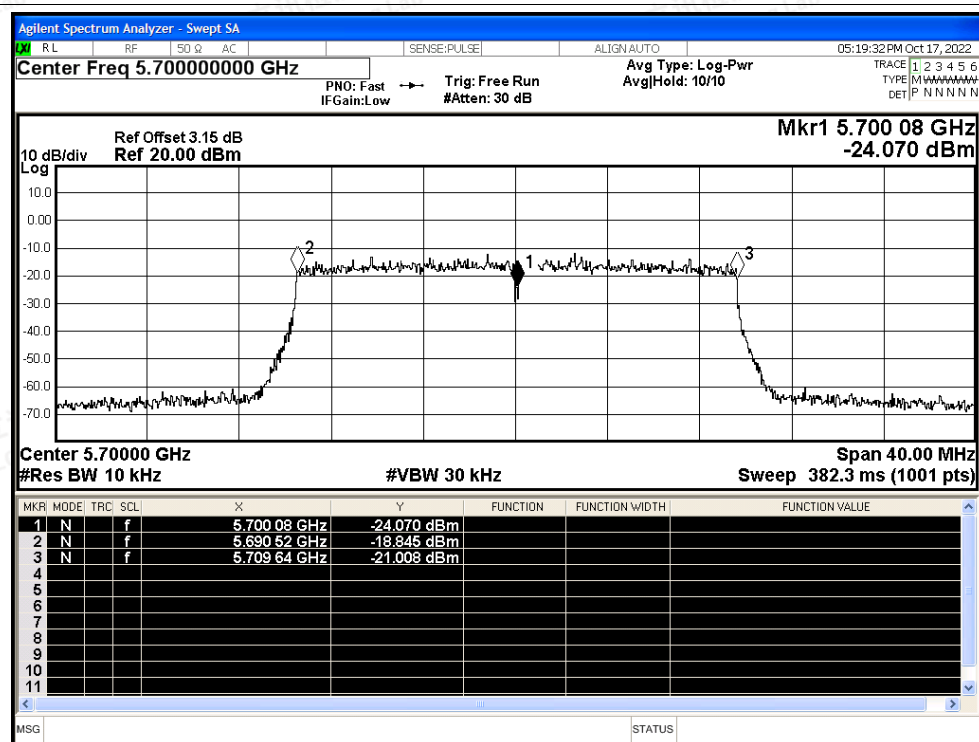


Freq. Stability NVNT ax40 5510MHz Ant1

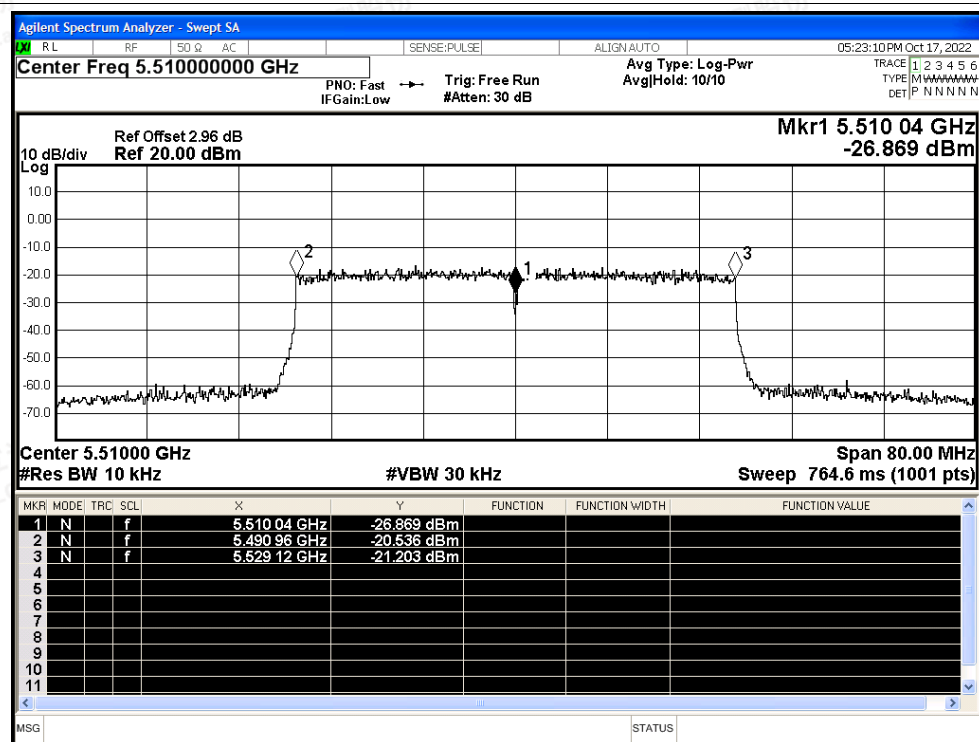




Freq. Stability NVNT ax40 5550MHz Ant1

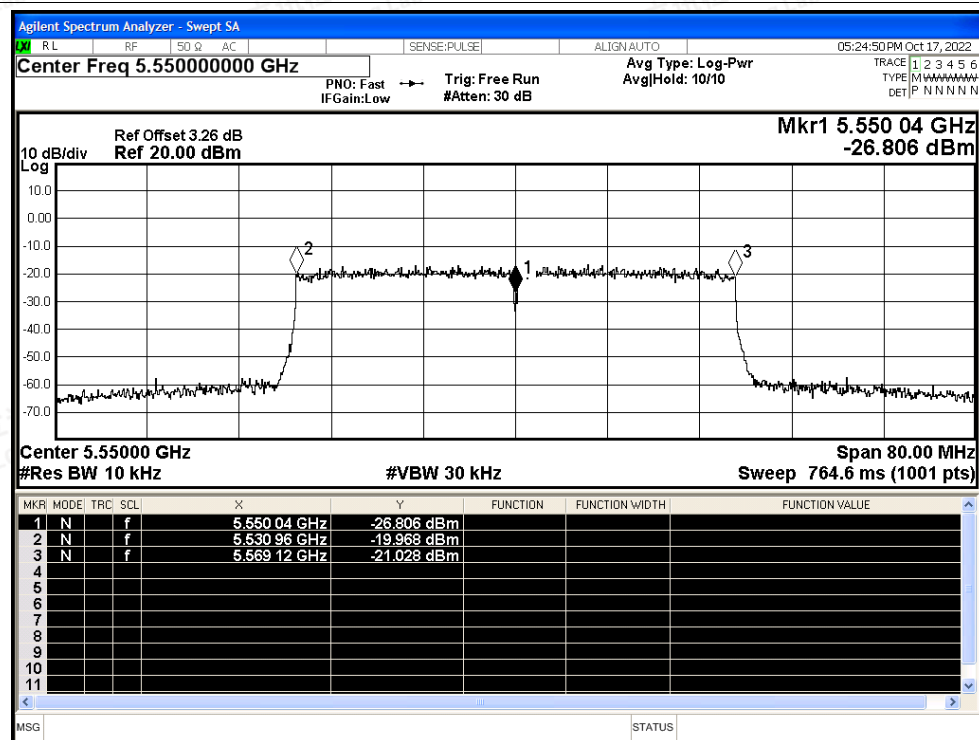


Freq. Stability NVNT ax40 5670MHz Ant1

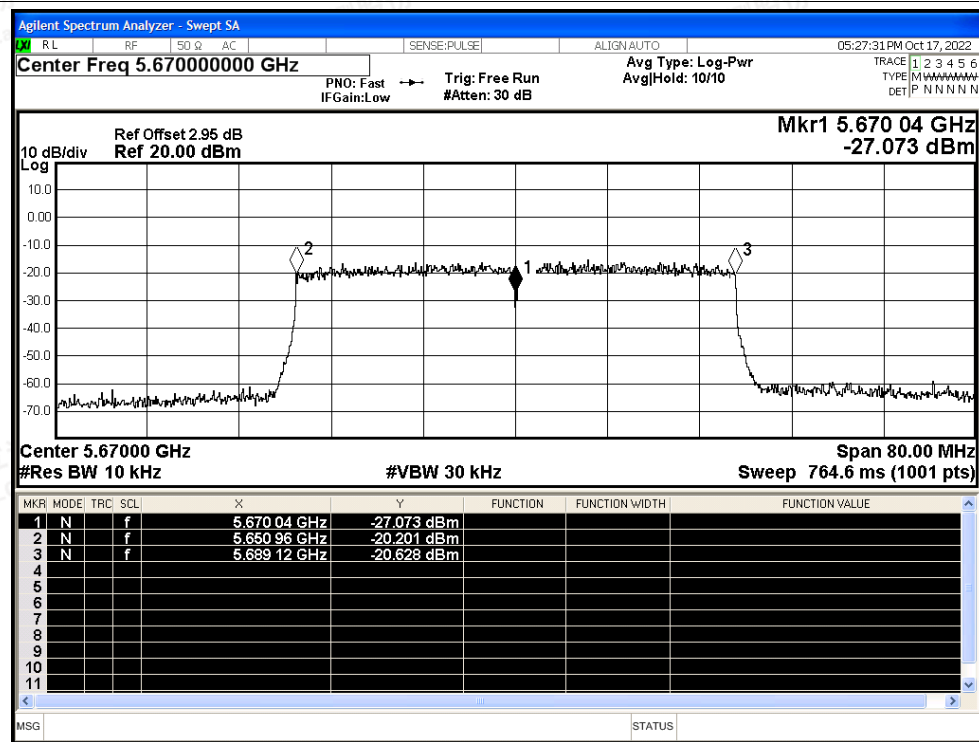



Freq. Stability NVNT ax80 5530MHz Ant1

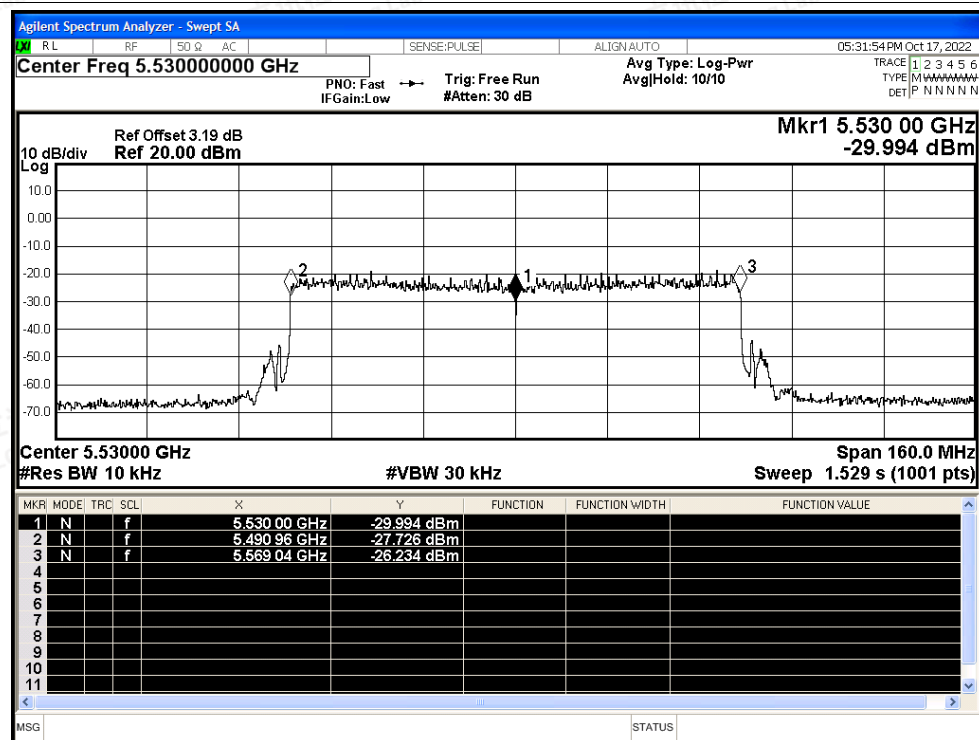

Freq. Stability NVNT ax80 5610MHz Ant1

