

1 Basic Information

1.1 Instruction

This phone is designed for GSM/GPRS mobile networks. On top of its basic functions, the G1 enables you to use name card style contacts, clock/alarm, calendar, calculator, games, audio player, camera, video player, FM radio as well as other features.

These functions are designed to convenience and enhance the user experience. Our company reserves the rights modifying the content in this Instruction without notice.

1.2 For your safety

In the circumstance of theft or lost property, contact your local service provider or sales outlet immediately.

After contact you must provide them with the IMEI number of your phone which is printed on the back of the device behind the battery. Make sure you make a record of your IMEI number for such an occasion.

Read the guidelines before using your phone. Failure to comply with these guidelines may be dangerous or illegal.

Note: The quality of your calling and connection depend on your local service provider and signal. We are not responsible for any personal physical damage or damage to property due to inappropriate use.

2. Apperance

2.1 Description of Keys











Name of key	Letters or functions
1key	„?!’”-@ : ; / _ 1
2key	ABCabc2
3key	DEFdef3
4key	GHIghi4
5key	JKLjkl5
6key	MNOmno6
7key	PQRSpqrs7
8key	TUVtuv8
9key	WXYZwxyz9
0key	0
*key	1 after inputting telephone number, if you want to input extension number, please press twice asterisk key, after the display screen shows “+”, please input your extension number. 2. .,-?!’”@ : # \$ / -
#key	In text editing interface, press “#” key to switch text the input method. 2. On the standby interface Press and






	hold "#" key to transfer the profile of General/Silent/Vibrate.
Scrolling Up Scrolling down Scrolling left Scrolling right	Move cursor up
	Move cursor down
	Move cursor left
	Move cursor right
Left soft key/ Right soft key	In the standby mode, press Left Soft key to access Main menu, Right Soft key to access Contacts.
Ok key	determining options
Dial key	dial telephone numbers and receive incoming calls
End	1 Return to idle screen 2. <i>End</i> calls or reject incoming calls.

2.2 Icon Description

Icon Description

In the main menu, you will see several icons shown on your status bar. The meanings of icons are explained below:

	The SIM1 card's signal strength of the cellular network at your current location.
	The SIM2 card's signal strength of the cellular network at your current location.
	The battery charge level.
	Contacts
	Message
	Call logs
	Settings
	Multimedia
	File manager
	Organizer

	Profiles
	Java
	extra
	Bluetooth
	STK

2.2.1 Contacts

You can use the Contacts feature to store business card information to your mobile phone.

2.2.2 Quick search

Enter the first letter(s) of your contacts to quickly search for their recorded information on your phone.

2.2.3 New

In the options, add a telephone number to your phone or SIM card.

2.2.4 Delete multiple

Choose this to delete phone numbers from your SIM card or phone storage. You may choose to mark all of the phone numbers then choose “OK” to delete multiple numbers or delete them one by one.

2.2.5 .Import/Export

Copy

Copy contacts from phone/SIM card to SIM card/phone.

Import contacts

Import contacts file from phone or memory card to Contacts.

Export contacts

Choose some phone numbers in contacts then export them to phone or memory card.

2.2.6 Others

Own number

To edit the name and the number of your SIM card.

Service number

Support the steps for reaching actual people to solve your problem.

Memory status

View the capacity of your SIM card and phone as well as the remaining space.

2.2.7 Groups

Create, view and edit groups and members of the groups with the remove or add operation. Your phone provides the following selections for your option:

Family/Friends/Business/Classmates

New group

Add a new group

Mass texting

Send SMS to multiple phone numbers that you select from Contacts.

3 Message

3.1 Write message

You can write new message by using this function. When you input the message to be sent, press the left soft key to send, to insert the templates, to add contact person information, to add, fix and to save. Within the write message menu you can write and edit text message up to 160 characters.

3.2 Inbox

After you receive an incoming text message the phone will store the message in the inbox folder of the SMS menu.

3.3 Outbox

When you fail to send a message the phone will store the messages in the outbox folder.

3.4 Sent box

When you successfully send a message the phone will store the message in the sent box folder for you to review.

3.5 Drafts

When you save a preliminary message to be revised and sent later the phone will store the message in the drafts folder.

3.6 Security inbox

You can move a message from inbox, outbox, drafts, sent box to security inbox. To enter the security inbox, you need to create and input a security inbox password.

3.7 Templates

Your phone offers you a list of templates that you can use to reply to messages. You can also use templates when writing new messages.

3.8 Broadcast message

Send or receive message to same area subscribers in Broadcast Message mode. You also can turn this function on/off here.

Receive mode: ON/OFF broadcasting function.

Language: Turn On/Off all languages.

Channel Setting: Set Broadcasting Message parameter.

3.9 Voice mail server

Line 1 number /Fax number/Data number

3.10 SMS Settings

SIM1 message center/SIM2 message center: to show your text message center.

Message validity period: 6 hours/24 hours/72 hours/1 week/maximum

Status report: You can request the network to send status reports on your text message(network service).A status report is indicated by in front of the message header. Save sent message: prompt user/save/don't save

Preferred storage: phone/SIM

3.11 Message capacity

To view the SMS memory of SIM card and phone.

4 Call logs

4.1 Missed calls

In Call logs menu, choose Missed calls and press “OK key” to view the records.

Your phone provides the option to Recent Contacts with the same.

4.2 Dialed number

In Call logs menu, choose Dialed number and press “OK key” to view the records.

Your phone provides the option to Recent Contacts with the same.

4.3 Received calls

In Call logs menu, choose Received calls and press “OK key” to view the records.

Your phone provides the option to Recent Contacts with the same.

4.4 Rejected calls

In Call logs menu, choose Rejected calls and press “OK key” to view the records.

4.5 Delete call

Your phone allows you to delete all of call logs.

4.6 Call timers

Your phone allows you to view the timers for calls made and received.

In Call logs menu, choose Call timers, press “OK key” to view the content.

 Last Call: List out the last call time of your conversation

 Received calls: Sum of total call time you have received.

 Dialed calls: Sum of total call time you have dialed.

 Reset All: Reset the time counter to zero.

5 Settings

5.1 Call Settings

Your phone provides the following selections for your option:

Dual-SIM: Standby mode/Reply by original SIM/Set SIM name

Call divert: call forwarding unconditional/call forwarding on busy/call forwarding on no reply/divert if unreachable/cancel all diverts

Call waiting: Activate/Deactivate/Query Status.

Call barring: All outgoing calls/All incoming calls/Incoming calls when roaming/ISD calling/Dial when INTL roaming/cancel all barring/change password

Hide ID: Hide ID/Display own ID/Display ID by network

Other: IP prefix/Call time reminder/Auto redial/Vibration when connected /Reply SMS after reject/Auto record voice call

5.2 Phone settings

Into the phone set up sub-menu, you can set the following:

Date and time: At the time and date menu, you can set the time, date.

Language setting: Includes languages type.

Shortcut settings: to define the shortcut functions.

Auto power on/off: In this menu, you can set the timer switch machine.

Restore factory settings: input password to restore factory settings.

5.3 Display

Wallpaper settings/Idle display settings/Contrast/keypad backlight/auto keypad lock

5.4 Security settings

Your phone provides the following selections for your option:

PIN: on/off/Modify PIN

Modify PIN2: to modify PIN2 number

Phone locked: on/off

Modify the cellphone password

Privacy: to choose the functions that you need to enter password when entering.

Lock screen by end-key: to lock screen by end-key.

Guardlock: status/change password

Fixed dialing: fixed dialing/Fixed dialing number

Black list: blacklist list/blacklist settings

5.5 Connections

Network selection: Auto select/Manual select

6 Multimedia

6.1 Camera

The camera lens is on the top of the phone, and the display of the phone works as a viewfinder. If there's not enough memory for camera, you need to free space for new photos by choosing to save photos in a memory card or deleting old and unwanted photos. The status of your camera setting will be displayed on the top of preview mode.

Image viewer	You can review pictures you have taken by pressing OK
DV mode	Switch to DV mode
Effect	Set photo color
Settings	Size: Set photo size Quality: Set photo quality Banding: to avoid flashing Shutter sound: activate/off Auto save: activate/off Storage: phone/memory card

6.2.DV

You can record the video clip through build-in camera. The status of your video recorder setting will be displayed on the top of preview mode. To start using Video recorder in Multimedia menu, select Video recorder and press "OK key" Press Options to personalize your camera setting.

6.3.Image

All images are located in either your phone storage or memory card. You may choose to view your images.

Your phone provides the following selections for your option:

Delete: Allows you to delete the pictures.

Mark: Mark/unmark the pictures.

Rename: Allows you to rename the file.

Slide play: to slide play the pictures.


Details: to view the details of the pictures.



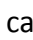
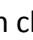
View: Allows you to view the pictures saved in the My stuff.

Forward: Allows you to forward your pictures as wallpaper, set as contact icon, send bluetooth.

6.4.Audio

Key Audio Play Function

Press  can play or pause MP3

Short press   can choose the previous and next MP3, long press   can fast back or fast forward.

Note: You can adjust this volume +/- through scrolling up/down key.

Music list: to list the musics of your phone and memory card.

Add: to saved play list/to new play list

Set as ringtone: set as incoming call ringtone/set as alarm ringtone

Shuffle: whether to shuffle play


Repeat: to set the play mode off/repeat all/repeat one



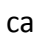
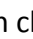
Settings: Equalizer/BT stereo output/BT stereo headset

Open review: to review MP3

6.5.Video

Key Video Play Function

Press  can play or pause video

Short press   can choose the previous and next MP3, long press   can fast back or fast forward.

Note: You can adjust this volume +/- through scrolling right/left key. Press 5key to adjust brightness.

Play: Allows you to play the video saved in the My stuff.

Local play list: list the video files of phone and memory card.

Shuffle: whether to shuffle play

Repeat: to set the play mode, off/repeat all/repeat one

Settings: Local video play mode/settings reset/help

Details: to view the details of a video file

6.6 FM radio

You can listen to Fm radio freely. Enter the radio interface, search the frequency. (87.5-108.)

Auto search and save/Channel list/save/Manual search/close/open speaker/background play

--Auto search and save: Search frequency available automatically.

Channel list: You can view all the broadcasting stations you saved.

--save: Save a channel to channel list.

--Manual search: Search the broadcasting station by manually inputting a frequency.

--close/open speaker: You can start up loudspeaker to make the sound louder.

--background play: you can do other operations while listening to the radio.

- Record: to record a channel.
- Timing record: to set the time of recording and the channel.
- Record file list: list the record file you have recorded.

7 File Manager

Your phone provides the following selections for your option:

New folder: Allow edit and create folder.

Delete: to delete a file.

Details: includes filename, date, time, location, sub-folder, and etc.

Rename: allow to rename the file.

Copy: copy a file to another path.

Search: input a file name to search the file.

Sort: to sort files by name, time, size or type.

Mark: mark or unmark files.

Memory status: phone memory capacity/memoryCard capacity/

Format phone memory/format memoryCard/rename memoryCard

8 Organizer

8.1 Alarm

To set a new alarm go to the alarm application. An alarm clock icon will be displayed when an alarm is active.

At the same time, three groups can be set up alarm clock.

8.2 Calendar

To view the calendar.

9 Profiles

Normal: Suitable for normal use.

Silent: Suitable for silent use.

Meeting: During the meeting, suitable for use.

Outdoor: Suitable for outdoor use

Indoor: Suitable for indoor use.

10 Java

10.1 Snake game

New game: Start to play the game.

High score: the record of high score.

Level: Easy/Normal/Hard.

Game help: Show the play rule for the game.

11 Extra

11.1 Calculator

This function enables you to add, subtract, multiply and divide.

The screen will initially display the number "0". Enter the first number to be calculated.

12 Bluetooth

Your phone provides the following selections for you to choose:

Bluetooth/Bluetooth visibility/Paired device/Transferring files/device name/Bluetooth file storage/help.

13 Torch Light Button

You can open the torch light by pressing the OK button for long time. And press the OK button to turn off.

14 Battery

Before using the device for the first time, make sure you charge the battery fully. Wrong battery replacements or third party batteries are not recommended as they can damage the phone and possibly explode.

Be sure to follow the instructions to deal with the finished battery.

15 Connect Network

15.1 SIM card

Make sure a SIM card is inserted before you use your phone. The SIM card should be provided to you by your service provider.

All network information is stored in SIM card such as contact information, phonebook, mp3/mp4, etc. For optimal use avoid touching the metal side of the SIM card and keep it away from magnets and electricity. If the SIM card is damaged the phone might not be able to complete all of its functions.

Warning: Before inserting or removing the SIM card, make sure that the phone is turned OFF and that the Phone is not connected to an external power source, as this could potentially damage the SIM card.

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television

reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is

connected.

—Consult the dealer or an experienced radio/TV technician for help.

SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.

Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC, Tests for each device are performed in positions and locations as required by the FCC.

For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5 mm from the body.

Non-compliance with the above restrictions may result in violation of RF exposure guidelines.