
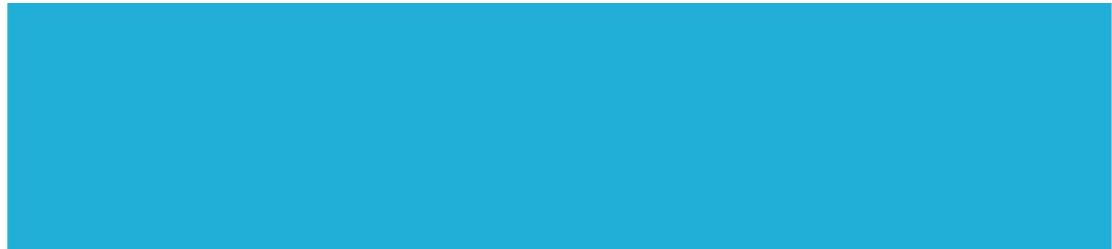


# LOOK TABLET

## Quick Start Guide

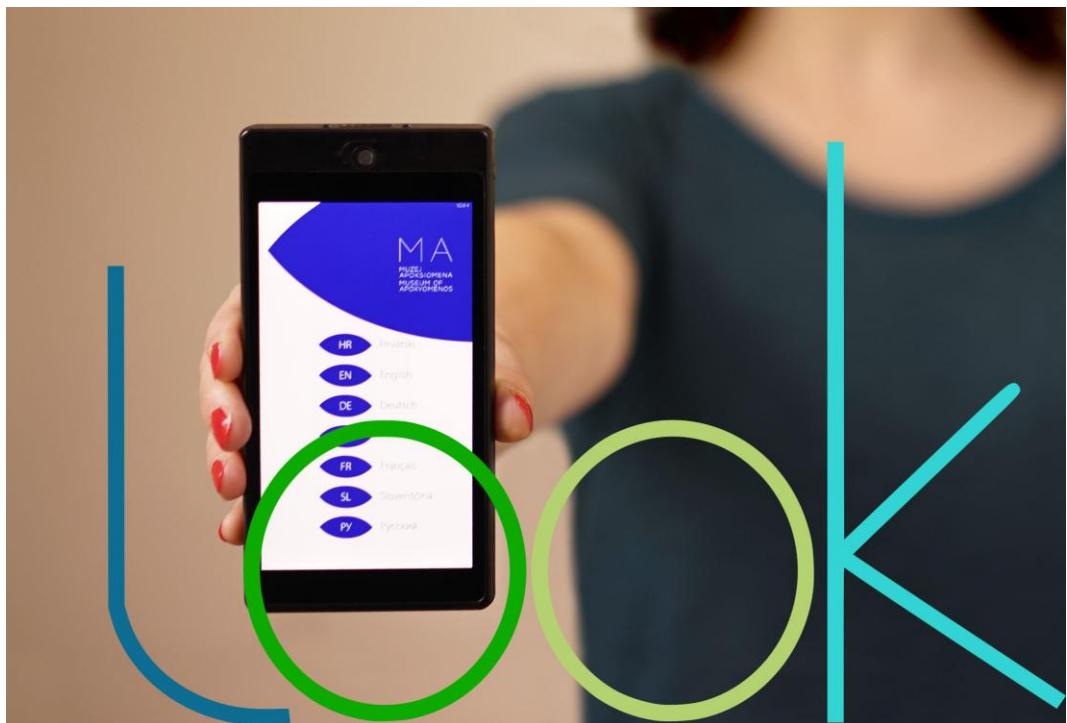

# Introduction

Thank you for your choosing LOOK Tablet.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.


## Read me first

- ◆ Please read this manual before operating the LOOK tablet, and keep it for future reference.
- ◆ The descriptions in this manual are based on the default settings.
- ◆ Images and screenshots used in this manual may differ from the actual product.
- ◆ Available features and additional services may vary by device, software or service provider.
- ◆ Our company is not liable for performance issues caused by third-party applications.

## Content

I.	Key Layout and Definitions .....	- 3 -
II.	Assembling .....	- 4 -
III.	Getting started .....	- 5 -
IV.	Entertainment .....	- 9 -
V.	Tools .....	- 10 -
VI.	Connectivity .....	- 12 -
VII.	Safety Precautions .....	
VIII.	Care & Maintenance .....	- 15 -
IX.	Warnings .....	- 16 -

## I. Key Layout and Definitions

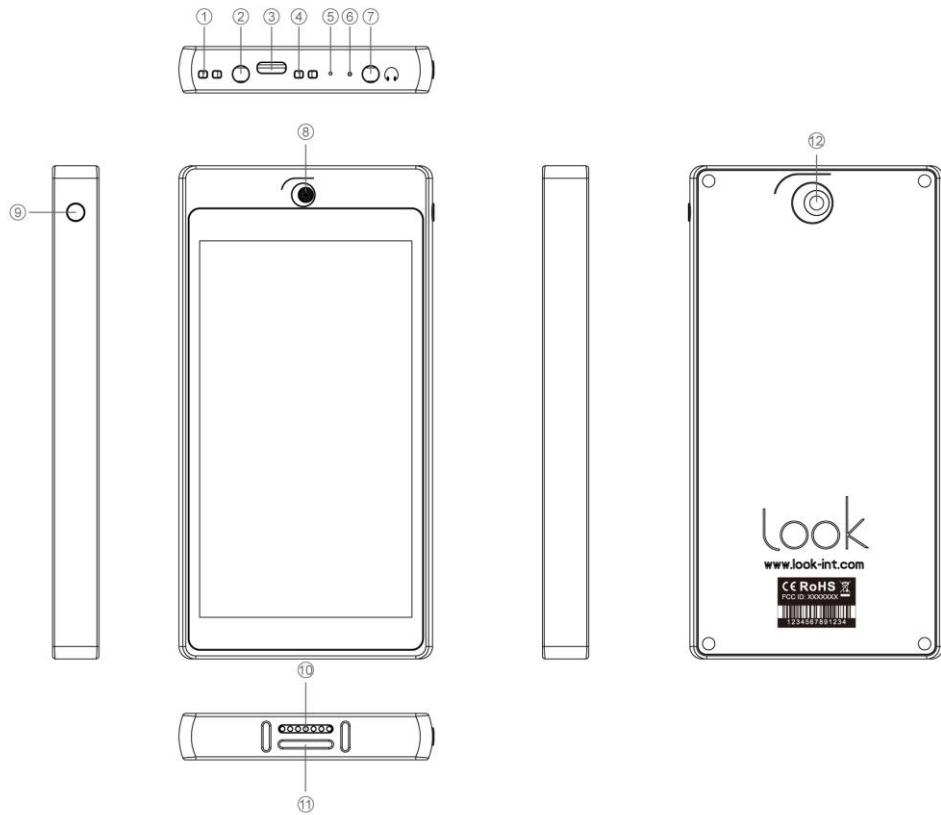

1. Lanyard	2. Headphone Jack
3. Type-c	4. Lanyard
5. Microphone	6. Charging Indicator
7. Headphone Jack with Mic Function	8. Speaker
9. Power Button	10. Pogo Pin
11. Fool-proof Design	12. Camera

## **II. Assembling**

### **Unpack**

Check your product box for the following items.

- LOOK tablet with tempered glass & TPU cover
- User manual & warranty card
- Adapter & USB C cable
- Lanyard

You can purchase additional accessories from Look Multimedia SPRL ([www.look-int.com](http://www.look-int.com)).

### **Battery charging**

Before using the device for the first time, you must charge the battery.

- 1 . You can charge the device using an USB C cable connected to a charger or a PC.  
Alternatively, you can charge it inside the PowerSwift modular 10-unit charging rack.
- 2 . Battery full icon is shown when finished if your device is off.

Warning : Use only original batteries and chargers. Unapproved chargers or cables can cause batteries to explode or damage your device.

### **Installation of the memory card (built-in)**

To store additional multimedia files, you need insert a memory card.

1. Open the back cover and insert a memory card with the gold contacts facing downwards.
2. Push the memory card into the slot.

Notice: Our company uses approved industry standards for memory cards, but some brands may not be fully compatible with your device.

### III. Getting started

#### Turn your device on, restart and power off

To turn on your device, press and hold the power key.

To restart your device, press and hold the power key, select “restart”.

To turn off your device, press and hold the power key, select “power off”.

#### Switch to flight mode

To use only your device's non-network services, switch to flight mode. Please follow the instructions below to turn on flight mode:

Tap Settings→Network & Internet→Airplane mode.

#### Home screen

The home screen has multiple panels. Scroll left or right to the panels on the home screen, you can view indicator icons, widgets, shortcuts to applications, and other items.

#### Task bar

The task bar is shown at the top of the screen. It displays commonly used option buttons, battery level indicator, current time and other indicator icons.

##### Indicator icons

Icon	Definition	Icon	Definition
	Open WiFi available		Flight mode activated
	WiFi connected		Battery power level
	BT connected		Connected to PC
	Uploading data		Alarm activated
	Downloading data		Location
	Auto-rotate		Don't disturb

## **Notification panel**

Pull down to open the top of the notification bar to show the 5 users commonly used shortcut switch, support click on the switch, and long press to enter the corresponding settings. If you continue to pull down the notification bar to display all the quick switch, fast switch in the lower right corner of page will display a "Edit" button, click to add / delete custom shortcut switch, or drag the sort.

Tap icon to activate or deactivate wireless connection features and other settings.

Wi-Fi : Activate or deactivate the Wi-Fi connection.

Auto-rotate screen : Activate or deactivate the auto rotation feature.

Brightness : Adjust the basic brightness level of the display to lighter or darker.

Notifications : Activate or deactivate the notification feature.

Settings : Access Settings application.

## **Auto rotation**

If you rotate the device while using some features, the interface will automatically rotate as well. To prevent the interface from rotating, open the notifications panel and select Auto-rotate screen, then scroll it to Off.

## **Lock & unlock the screen**

Slide to unlock the screen.

To lock the screen manually, press Power key.

## **Customize your device**

To customize your device according to your preferences, tap Settings from application list or notification panel.

## **Manage applications**

To manage the applications installed on your device, tap Settings→Apps.

1. To uninstall an application, select an item and tap UNINSTALL, tap OK to confirm.
2. To stop or change the settings of an application, select an item and tap the option you need.

## **Security**

You can protect your device and data by setting screen lock or encrypting the LOOK tablet.

### ◆ Set a screen lock

To set a screen lock, tap **Settings**→**Security**→ **Screen lock** from application list.

- **None** : Deactivate the screen lock.
- **Swipe** : Slide to unlock the screen.
- **Pattern** : Draw a pattern to unlock. Follow the instructions to draw your lock pattern. When prompted, draw the pattern to unlock the screen.
- **PIN** : Enter a numeric PIN to unlock. When prompted, enter the PIN to unlock the screen.
- **Password** : Enter a passcode to unlock. When prompted, enter the passcode to unlock the screen.

### ◆ Screen time-out

Select **Settings**→**Display**→**Sleep** from application list, you can set the time before the screen times out and goes into lock mode. (you have not entered any characters or made other selections).

## **Display size**

Android 8.1 will bring a new set of secondary functions, now you can not only adjust the font size, but also adjust the display size.

1. You can set it **Settings**→**Display**→**Display size**

## **Data saver**

Android 8.1 has a new traffic protection program that will count the traffic usage for each application.

1. You can set it **Settings**→**Data usage**→**Data saver**

## **Quick Switch**

1. You can switch applications by simply double clicking the "Recent" button

## **Reset Tablet**

You can reset system and desktop settings to their original values by the following steps:

1. Select Settings→Backup & reset from application list.
2. Tap Factory data reset.
3. Tap RESET TABLET.
4. Tap ERASE EVERYTHING.

The device resets to the factory default settings automatically.

Warning!!: Factory data reset will erase all data from your device, including your google account, system and application data and settings, and downloaded applications.

## IV. Entertainment

### Camera

With the camera function, you can capture photos and take videos.

#### ◆ Capture a photo

1. Open the application list and select Camera.
2. Before taking a picture, you need to know some settings.

Place two fingers on the screen and spread them apart or move fingers closer together to zoom in or zoom out.

Icon	Definition
	Settings
	Change to video mode.
	take photos
	Tap to switch between the front and rear camera lenses
	Smile Mode
	Change to panorama mode to take a landscape photo.

3. Aim the lens at the subject and tap  to take a photo. The photo is saved automatically to the folder DCIM.
4. Select the image viewer icon at the lower right to view the pictures.

#### ◆ Record a video

1. Open the application list and select Camera. Tap  to change to video mode.
2. Tap  to start recording. The length of the video recording is restricted by the available space on your storage.
3. Tap  to stop recording. The video is saved automatically to the folder DCIM.
4. After recording videos, select the image viewer icon at the lower right to view the recorded videos.

## V. Tools

### Calendar

With the Calendar feature, you can consult the calendar by day, week, or month, create events, and set an alarm to act as a reminder, if necessary.

To access the calendar, tap Calendar from application list.

1. To create an event, tap .
  - Fill in the fields, and set category, date, time & an alarm.
  - After you finish, select DONE.
2. You can view calendar in different views, Day, Week, Month and All.
3. To delete an entry, tap the event to open it, and then select  → OK.

### Alarm

From application list, tap Clock, and then select .

1. Tap  to add alarm.
  - Tap the numeric pad to set alarm time, and then select AM or PM, when you are finished, tap OK.
  - Tap the time to change alarm time.
2. Set alarm time, repeat cycle, and alarm ringtone, tap OK after finished.
3. Tap “cancel” to shut down the alarm, and tap “ring again”, then the alarm will stop ringing for a few minutes.
4. Untick the clock to stop using the clock.
5. Long taping the clock then it can be deleted.

### File Manager

Many features of the device, such as images, videos, documents, received attachments and downloaded files or applications, use memory to store data. With File manager, you can store and browse files and folders in your device, or edit, move, copy files; you can send files to compatible devices as well.

Note:

1. Some files formats are not supported depending on the software of the device.
2. Some files may not play properly depending on how they are encoded.

## Sound Recorder

With Recorder, you can record a voice memo. From application list, tap Recorder.

1. To record a voice memo, tap .
2. To pause the recording, tap .
3. To listen to a voice recording that you just recorded, tap .

## Calculator

With this feature, you can use the device as a calculator. The calculator provides the basic arithmetic functions. Tap the virtual numeric and calculation keys to perform a calculation.

## **VI. Connectivity**

### **USB Connection**

You can connect your device to a PC and use it as a removable disk, which allows you access the file directory.

1. If you want to transfer files from or to device, insert a memory card into the device.
2. With a USB C cable, connect your device to a PC.
3. Open the notification panel, Use USB to select Transfer files.
4. Open the folder to view files.
5. Copy files from the PC to the device memory or memory card.

### **Wi-Fi**

With Wi-Fi, you can connect to the internet or other network devices anywhere an access point or wireless hotspot is available.

◆ Activate the Wi-Fi feature

1. From application list, tap Settings.
2. In the field of WIRELESS & NETWORKS, turn on the Wi-Fi feature.

◆ Find and connect to Wi-Fi

1. Once the Wi-Fi feature is activated, the device automatically searches for available Wi-Fi connection.
2. Select a network.
3. Enter a password for the network (if necessary).
4. Select Connect.

## **Bluetooth**

With Bluetooth, you can share music, pictures, video, contacts with another phone. You can use Bluetooth headset phone or listening to music.

◆ Activate the Bluetooth feature

1.From application list, tap Settings.

2.turn on the Bluetooth feature.

◆ Scan and connect to other Bluetooth devices

1.Once the Bluetooth feature is activated, the device automatically searches for other Bluetooth devices.

2.Select a device and pair.

## VII. Safety Precautions

Read these simple guidelines before using your device. Not following them may be dangerous or illegal.

- ◆ Aircraft

Switch off in aircraft and follow any restrictions. Wireless devices can cause interference in aircraft.

- ◆ Vehicles

Never use your device while driving. Place it in a safe place.

Position your device within easy reach. Be able to access your device without removing your eyes from the road.

- ◆ Electronic devices

In some circumstances your device may cause interference with other devices.

- ◆ Potentially explosive environments

Switch off your device when in any area with a potentially explosive atmosphere, and obey all signs and instructions. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

- ◆ Pacemakers and other medical devices

Pacemaker manufacturers recommend that a minimum separation of 8 inches be maintained between a wireless device and a pacemaker to avoid potential interference with the pacemaker.

Operation of any radio transmitting equipment, including wireless phones may interfere with the functionality of inadequately protected medical devices. Consult a physician or the manufacturer of the medical device to determine if they are adequately shielded from external RF energy or if you have any questions.

Switch off your device in health care facilities when any regulations posted in these areas instruct you to do so.

- ◆ Operating environment

When connecting to other device, read its user guide for detailed safety instructions.

Do not connect incompatible products.

Do not place your device in the air bag deployment area.

Use the device only in its normal operating positions as explained in the product documentation.

Always switch off your device when its use is prohibited or when it may cause interference and danger.

- ◆ Areas with posted regulations

Switch off your device when any regulations posted in these areas instruct you to do so.

## **VIII. Care & Maintenance**

- ◆ Use only manufacturer-approved accessories. Use general accessories may shorten the life of your device or cause device to malfunction.
- ◆ Keep your device dry. Humidity and all types of liquids may damage device parts or electronic circuits.
- ◆ Do not use or store the device in dusty, dirty areas.
- ◆ Do not store the device in hot or cold areas.
- ◆ Do not store your device near magnetic fields.
- ◆ Do not store your device with such metal objects as coins, keys and necklace.
- ◆ Do not drop your device or cause impacts to your device.

## IX. Warnings

### ◆ FCC RF EXPOSURE INFORMATION:

#### ◆ WARNING!! Read this information before using your tablet

◆ In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

### ◆ BODY-WORN OPERATION:

- ◆ This device was tested for typical body-worn operations with the back/front of the phone kept 0.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 0.5cm must be maintained between the user's body and the back/front of the phone, including the antenna. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 0.5cm separation distance between the user's body and the back/front of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.
- ◆ For more information about RF exposure, please visit the FCC website at [www.fcc.gov](http://www.fcc.gov)
- ◆ Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:
- ◆ <ANSIC95.1> (1992) / <NCRP Report 86> (1986) / <ICNIRP> (1999)
- ◆ Those standards were based on comprehensive and periodic evaluations

of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

- ◆ Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

- ◆ **NORMAL POSITION:**

- ◆ Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

- ◆ **RF Exposure Information:**

- ◆ This product is compliance to FCC RF Exposure requirements and refers to FCC website <https://apps.fcc.gov/oetcf/eas/reports/GenericSearch.cfm> search for FCC ID: 2AVB4-LKTABLET to gain further information

- ◆ This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- ◆ (1) this device may not cause harmful interference, and
- ◆ (2) this device must accept any interference received, including interference that may cause undesired operation.

- ◆ NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.


- ◆ NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ◆ - Reorient or relocate the receiving antenna.
- ◆ - Increase the separation between the equipment and receiver.
- ◆ - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.



- ◆ -Consult the dealer or an experienced radio/TV technician for help
- ◆ Do not use the device with the environment which below minimum -10°C or over maximum 50°C, the device may not work.
- ◆ Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- ◆ Ad Hoc function is supported but not able to operate on non-US frequencies.

# The SwiftCharger

## Quick Start Guide

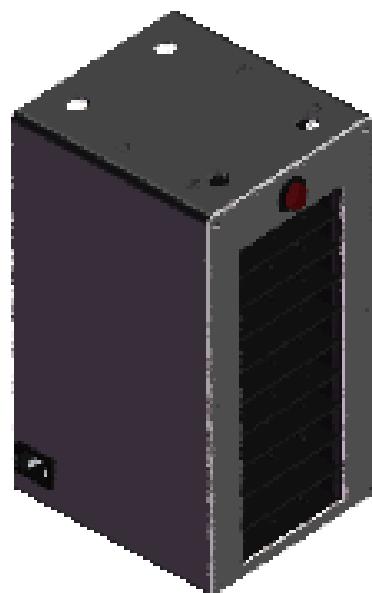

**Product image**

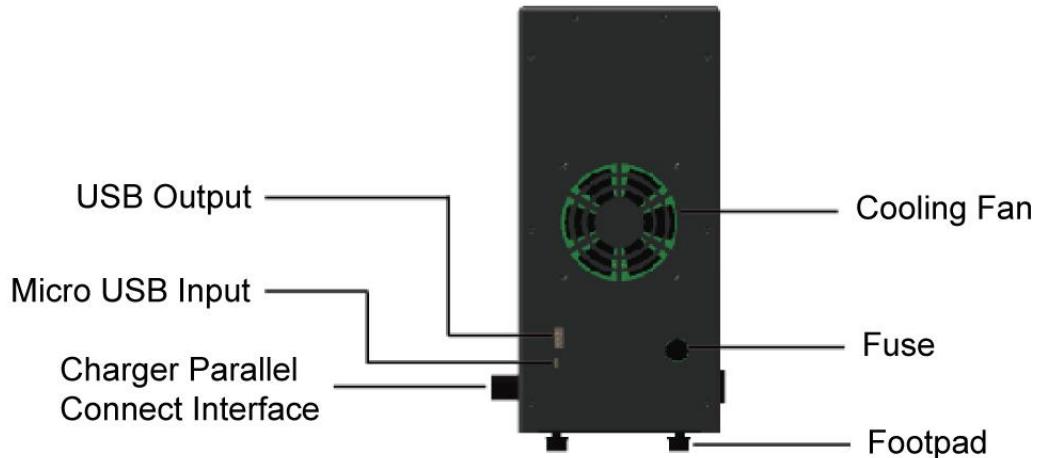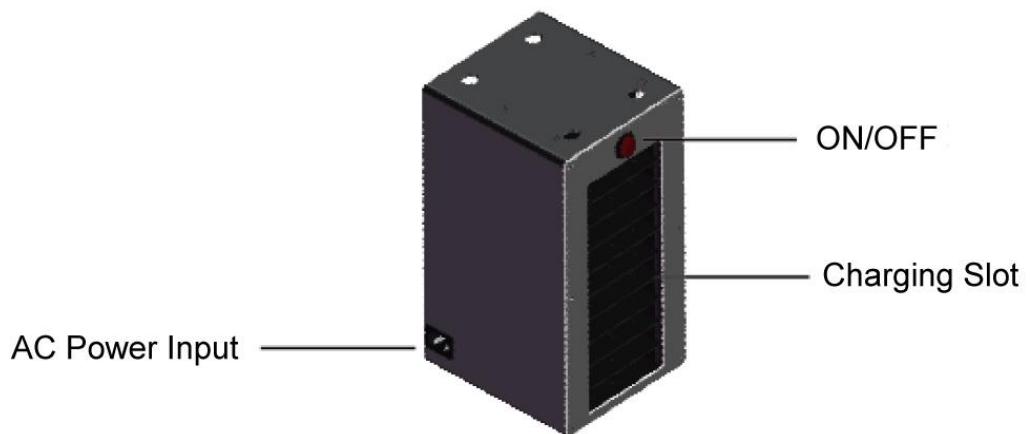

## Product Description

Size	L171.2 x W128.4 x H272mm
Weight	4.15KG
Input	AC 100-240V / 3A 50/60Hz
Output	DC 5V/2A *10 (20A in total)
Output power	100W
Material	Ferro-alloy
Accessories	Charger*1, Power cable*1, Fuse*3

## **How to use**

1. Take out the device from the package and place it vertically on the desktop or workbench. Connect the power cable with the device and a socket. Turn on the 'ON-OFF' button and red light on, the device is energized in working state. Charge the tablet by inserting into charging drawers.
2. Cooling fan will work automatically when working temperature reaches 55-60 degrees.
3. When the device is not used for a long time, please turn off switch and disconnect the plug to reduce energy consumption, to protect the device and to avoid electric shock and fire hazard caused by poor operation or other mistakes.

## **Attention**

1. Do not expose the device to high temperature and humid environment, such as fire, sunlight, liquid, and etc.
2. Do not pour liquid, powder and other impurities into the device.
3. Do not strike, drop, knock the device.
4. Install or disassemble under professional personnel.
5. Keep out of reach of Children