

User Guide

Model: 80-000

1 Quick Start Guide

1.1 Keys Function

Keys Function Description :

Power button	Short press to sleep/wake up, long press to startup and shutdown.
Volume + (up)	increase the volume
Volume - (down)	decrease the volume
HOME button (home) 	Click it in any interface will return to main interface.
Back button (back) 	click it in any interface will return to previous menu
Menu button 	This button will display in menu interface.
Setting button 	display recently browsed history

1.2 Startup and Shutdown

Startup

Long press **POWER key for three seconds**, you can enter into startup picture.

The system enters into screen lock status, please unlock it.

Shutdown

1. Long press POWER, it will popoup shutdown window.
2. Shutdown window contains mute mode, airplane mode, reboot mode and shutdown four options.
3. Click Shutdown is the last step.

1.3 Open and Close of the Screen

Screen will be closed on its own when no operation happens.

1. Screen will be closed on its own if no operation happens for some time to save battery power
2. When screen is open, press POWER key, the screen will be closed immediately.

Open the screen when it is closed.

If the screen is closed, short press POWER to open the screen. The screen will be locked open it, it will show the picture as below picture, left slide to unlock and enter into camera, right slide the unlock icon to unlock the screen.



Picture 1.1

1.4 Usage of Touch Screen

MID operating methods

There are below methods to view the main screen, menu and application procedure in your MID.

Click

When you want to use the screen keyboard typing or choose application in the main interface, you only need to touch it by your finger.

Press on

If you want to open some item(textbox or the link in the webpage), or shortcut and main procedure move, you can press on this item.

Quickly slide or slide

Quickly slide or slide indicates make quick vertical or horizontal movement by finger.

Pull


Before you pull, you need to hold the it with strength until you pull it into the position you want.

Rotate

For most pictures, you only need to rotate the MID sideways to change the screen direction from horizontal to vertical. For instance, when you are typing words, and watching movies.

1.5 Home Page

Main interface as below picture 3.2, long press the blank and it will popup windows to set wallpaper, folder, widgets, and shortcut.

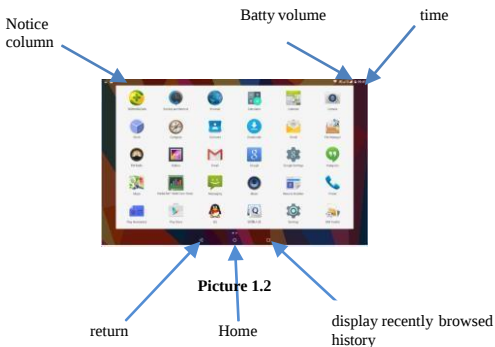

The extended home page

The home page can be extended beyond the wideness of screen to provide more space, which you can put new-added shortcuts and widgets. Click the blank space in home page then slide right or left to extend to the right or left of the screen. In the home page, there are two extended pictures, as Picture 1.3.



Picture 1.3

The shortcut icons management in desktop application.

Create folder icon in desktop

1. Drag the icons need to be put together on one icon(can also overlay several icons)as Picture 1.4.
2. Then click the overlayed icons, the applications can be folded, as Picture 1.5.

Click the unnamed folder in the black box, it will popup the hidden keyboard, the folder name can be renamed (this is similiar with Apple IOS system), the icons position can be changed through long press.



Picture 1.4



Picture 1.5

Remove the icons in desktop

1. Long press the icons need to be remove, then on the right above of the screen, it will appear  icons.
2. Drag the icon to the above of the remove icon, till the icon become red, then move your finger to delete the icon.

Change the wallpaper of desktop

1. In home page, long press any blank space in main screen, it will popup a window to change the wallpaper.
2. Click the gallery or wallpaper gallery to select the wallpaper.

1.6 Visit Application Procedures

Click  in right top of Picture 1.2, enter into main interface as Picture 1.6, choose the application procedure you want to visit.



Picture 1.6

Return to home page

1.7 USB Connection

MID storage configuration

Before transmitting documents, you have to conduct storage configuration for your MID:

1. Connect the MID and computer by USB cable, the reminder column will show the remind information.
2. Open the reminder board; please view the MID status and reminder to learn how to open the board.
3. In the reminder board, click the “USB Connected”, it will as below Picture 3.4, then click “open USB storage configuration”.
4. Now the USB is connected successfully.



Picture 1.7

Copy the document into memory card

1. Connect the MID to computer with USB cable.
2. As MID storage configuration, it is connected with computer successfully.
3. Open the “My computer” in your computer, check the items in “removable disc”.
4. Copy the documents you need into “removable disc”.
5. After copying finishes, click “shutdown the USB storage configuration” to uninstall.

Notice: When the MID is connected with USB cable, and you open the USB storage configuration, you can't view the memory card through the MID. Only after you detach the USB cable, you can view the memory card in the MID.

2 Basic Setting

2.1 Wireless and Internet

1. Connect Wi-Fi

- 1) In the main menu or interface, choose **setting** application procedure.
- 2) Click WLAN, open wifi, MID will automatically search the available Wifi wireless internet. As Picture 2.3
- 3) Choose the Wi-Fi internet you want to connect, if it has password, it will popup the password window, enter password, click connect.



Picture 2.1


2. Add Network

- 1) Click  icon in right top, as Picture 2.4



Picture 2.2

- 2) Input network SSID, the wireless network name, click save.
- 3) Click user name already saved, click connect to use network, as
Picture 2.5

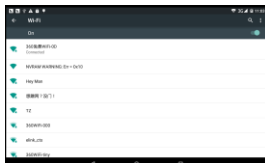

Picture 2.3

3. Network Notice

If you open Network Notice, when WIFI signal appears, the right bottom will remind you available WLAN network, as Picture 2.3

4. Keep WI-FI on during sleep..

1. Click  icon in right top of Picture 2.6, select **advanced**.
2. Click **Keep WI-FI on during sleep**, as Picture 2.7



Picture 2.4

2.2 Bluetooth

Bluetooth function operation

1. Click setting application in main menu interface
2. Click bluetooth and open it.
3. If somebody open bluetooth in your surroundings, click search device in right above, then MID will automatically search the bluetooth device nearby. As picture 2.8




Picture 2.5

4. Click the available Bluetooth device, it will popup request window, enter into related password, and match the device to connect.



5. After match successfully, choose the operation you want to, click to enter into Picture 2.9.

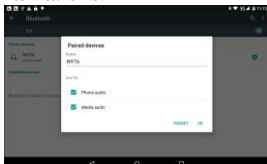

Picture 2.6

Bluetooth setting

5. Rename tablet

Click  icon in right top of Picture 2.6, as Picture 2.7, select rename tablet, you can rename it as you want



Picture 2.7

6. Display the file you received

Choose display the file you received in Picture 2.7, you can view download and upload files.

2.3 Data Usage

Check SIM card data usage, as Picture 2.8



Picture 2.8

Check WIFI data usage

Click  icon in right top of Picture 2.8 click **Data Usage**, as Picture 2.9




Picture 2.9

2.4 More

Portable WI-FI hotspots

1. Click setting application in main menu.
2. Click more when wifi is well connected, open network share and portable hotspot

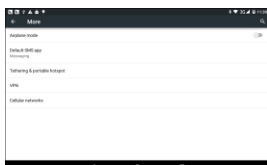

Picture 2.10



Picture 2.11

3. Click **keep WI-FI hotspots on**, choose open time.
4. Return to previous menu, open portable WLAN hotspots, click Set up WI-FI hotspots.



Picture 2.12

5. Set passwords you want to, password should be more than 8 numbers.


2.5 Sound & notification

1. Open settings, click contextual model, as Picture 2.19,



Picture 2.13

2. Click **standard** to enter into Picture 2.20

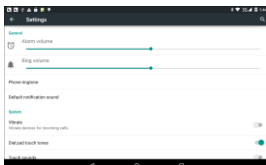

Picture 2.14

1. Vibrate

In picture 4.20, click **vibrate**, MID will vibrate when someone calls you.

2. Volume

click volume, you can set ringtone, notice, and alarm volume, as Picture 2.15




Picture 2.15

2.6 Display

2.6-1 Adjust the screen brightness

1. Click **Setting** application procedure.
2. Click **display**, choose brightness,
3. Drag the portlito to adjust the brightness volume.As Picture 2.16

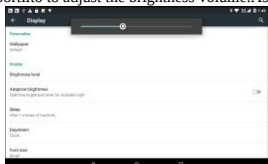

Picture 2.16

4. Click OK after brightness is adjusted.

2.6-2 Wallpapers

1. Click **setting** application.
2. Click **display**, click **wallpaper**.
3. You can choose different wallpapers as you like—live wallpapers---gallery(user defined)---wallpapers (system defect)---video wallpaper, as **Picture 2.17**



Picture 2.17

2.6-3 Auto rotation

System is defaulted as open auto rotation, when it is turned off, system won't rotate MID screen by G-sensor.

2.6-4 Sleep

4. Click setting application.
5. Click display.
6. Click sleep.
7. Set the sleep time as you want, as **Picture 2.18**



Picture 2.18

2.7-5 Font size

Click **font size** to adjust the font size, as **Picture 2.19**



Picture 2.19

2.7 Storage

Open setting function, click memory, click **preferred install location**, you can choose install new application to choose preferred install location.


Check SD card and MID storage space.

1. Enter into setting application.
2. Click storage, check storage space.

1. Internal storage

- (1) System storage

System storage is the space MID leave for system file, as Picture 2.20. it can't be viewed.

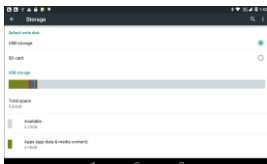

Picture 2.20

- (2) Internal storage

Internal storage is MID local NAND storage, as Picture 2.21, if you need to check the storage content, you can check it in main menu.



Picture 2.21

2. SD card

You can check storage space, SD card available space, unmount SD card and erase SD card, as Picture 2.22



Picture 2.22

Safely remove SD card

1. Click setting application.
2. Click memory.
3. Click uninstall SD card.
4. Now you can remove SD card safely.

Note: Removing SD card safely can protect SD card and increase its lifetime.

The tablet is attached to a treadmill and is not sold separately, it will affixed in treadmill!

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.