

60mm

80mm



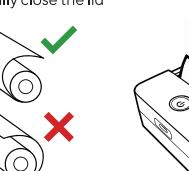
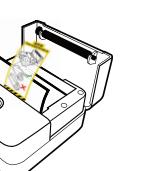
Getting Started

Scan QR code below to download the CorePrint App. No sign up required.

Please follow instructions below to correctly load paper rolls.

1. Look for the instruction tab on the paper roll
2. Place the paper roll as indicated on label
3. Carefully close the lid

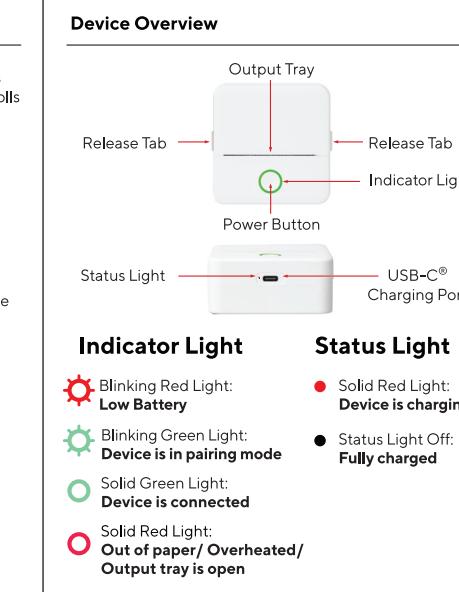
Download the free app and start printing instantly!

CTP500

In the Box

1 Thermal Printer
3 White Adhesive Rolls
2 White Non-Adhesive Rolls
Quick Start Guide
USB-C® Charging Cable
Warranty Card
Instruction Card

Device Overview



Indicator Light

- Blinking Red Light: Low Battery
- Blinking Green Light: Device is in pairing mode
- Solid Green Light: Device is connected
- Solid Red Light: Out of paper/ Overheated/ Output tray is open

Status Light

- Solid Red Light: Device is charging
- Solid Green Light: Status Light Off: Fully charged

Loading Printer Paper

Step 1: Gently lift up release tabs to open the printer
Step 2: Locate the instruction tab on paper roll and place as shown
Step 3: Pull 1" of the paper roll and place outside of the printer for optimal printing. Close the lid
Step 4: Once printing is complete, pull the paper away from you and tear at a 45° angle

Note: Do not touch the printer head. Please use a compressed air duster (sold separately) to gently remove dust particles and debris.

Pairing Your Printer via Bluetooth®

Fully charge before initial use and make sure to disconnect from other nearby paired devices

- Press and hold the Power button for 3 seconds to power on
- Download the free CorePrint app by searching for it on the App Store® or Google Play®. No sign up necessary
- From the home page tap "Auto Connect"
- Tap "Mini Printer"
- On the list of detected devices tap "pair" for "Mini Printer" and tap to connect

Important Safety Warning

- Avoid using or storing in the following locations. Damage to the printer may be caused.
 - Do not leave in an exposed area with direct sunlight or near heat-generating equipment
 - Do not leave in an area where temperature or humidity is extremely high or low or changes radically
 - Do not leave in an area exposed to water or liquid
 - Avoid entry of foreign objects or materials, as damage may be caused
 - When cleaning, do not use volatile liquid (thinner, benzine, etc) or cloth. Deterioration or discoloration may occur. Use a dry, soft cloth
 - Do not move the printer, place heavy impact on printer while in printing or sleep operation. Printer power may disconnect and user data may be lost
 - When charging your device, gently connect or disconnect charging cable to avoid damage
 - Important: Do not use damaged printing
 - Please mind the paper cutting teeth. This area is sharp and can cause harm if not careful
 - This device contains small parts and is not recommended for children under 3 years old
 - Adult supervision is recommended for kids under 13 years old. This equipment is not suitable for use in bedrooms or places where children are likely to get it
 - Disassembly of printer will cause damage and void warranty
 - If severe bulging occurs to battery, please discontinue use.

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Increase the separation between the equipment and receiver
- Reorient the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

This device has not been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Product Specifications

Battery Capacity: 1200mAh
Printing Type: Inkless Thermal
Print Color: Black
Bluetooth: Version 5.3
Image Quality: 200 DPI
Charging Input: USB-C®

Need Help?

Email us at support@dpaudiovideo.zendesk.com or call us at 1-833-909-CORE (1-833-909-2673). We are available Monday - Friday, 9am - 5pm PST, except major holidays.

For information on recycling, please visit <https://www.coreinnovationsinc.com/support>



FC FCC ID: 2AVRVCTP5001
▲ WARNING: Cancer and Reproductive Harm
www.P65Warnings.ca.gov