




1. Appearance and part names

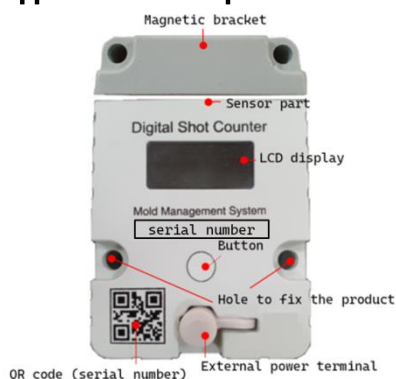

2. Size

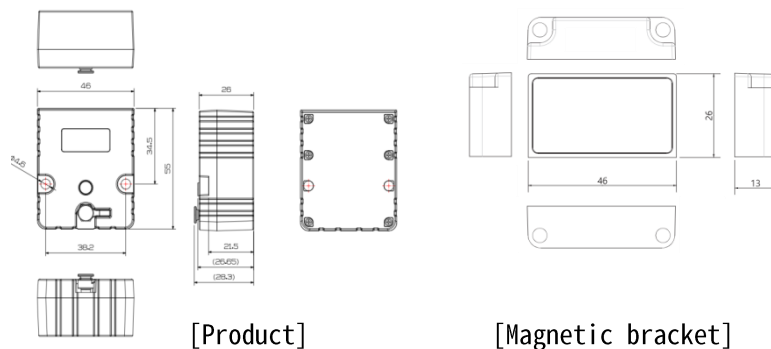

3. Composition of LCD display

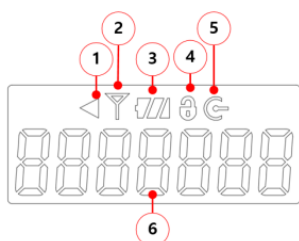

- ① Operation status
- ② Communication status (RF)
- ③ Battery status
- ④ Attached state
- ⑤ External power input
- ⑥ Cumulative shot and set value display

4. Product Information

① Features and functions


- ◆ 7-digit LCD and setting button
- ◆ Non-contact type shot count and integration (accumulation)
- ◆ Preset function (for replacement / installation)
- ◆ Improved ease of use with non-powered (replaceable battery) and wireless communication.
- ◆ Increased battery life by using external power.
- ◆ Secured data stability by applying low-power long-life and non-volatile memory.
- ◆ Attachment status check and temperature measurement function
- ◆ Acceleration measurement function

② Rating

Usable temperature	-25 ~ 80 °C	Warranty	2 years (based on date of manufacture)
Communication cycle (RF)	24 times/day	Battery life	about 4 ~ 5 years (Depends on site conditions and communication cycle.)
Cycle time range	0.2 ~ 300 sec (Press)	Size(mm)	55 x 46 x 26
	2 ~ 300 sec (Injection)		

※ Please note that the service life of the battery may be shortened due to frequent operation or replacement

③ sensor recognition (SHOT)

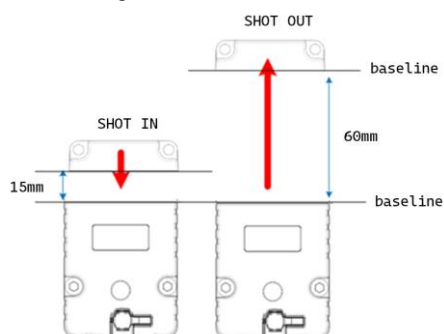

Sensor recognition	Size(mm)
SHOT IN	< 15
SHOT OUT	> 60

※ Carefully install the product and the magnet bracket as they will break when installed beyond the baseline.

④ LCD display

- The LCD display changes each time the button is pressed, and returns to the cumulative shot display mode within 30 seconds after the button is pressed.

No.	Display or setting	Display example	Initial value	Remark
1	Cumulative shots display	0123456	0	-
2	Preset setting	PRESET	-	-
3	ID display	1601001	1601XXX	
4	Setting mode	2 SETUP	-	-

※ When using for the first time, please press the button once.

(If not pressed, the LCD will not be displayed.)

※ Use the button only when setting.

⑤ Communication status – Received signal strength indication (RSSI)

◆ Display for 3 seconds during manual communication

(Manual communication: Press the button for 3 seconds in the cumulative shot display mode)

◆ Display status

When communication is successful, the LCD displays as follows.

-5 065

5. Trouble shooting

◆ Battery status

Battery indicator	Battery status and action
 	Normal
	Low voltage
 Blinking	Under voltage, product replacement

※ Depending on the operating environment, such as temperature, there may be a temporary change in status.

6. Precautions

- ① When installing or removing in a hot mold, it may cause burns, so work safely at the proper temperature.
- ② Replace the counter within 1 month if the battery indicator () is blinking.
- ③ Temporary communication failure may occur depending on the metal wall or the enclosed environment causing radio interference, in case of continuous communication failure, check and remove the obstacle.
- ④ Please note that damages due to non-standard environment, carelessness of the user, or arbitrary operation cannot be serviced.

Manufacturer:

Sales, product inquiries:



FCC Information to User

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution

Modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

FCC Compliance Information : This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.