




### INSTALLATION INSTRUCTIONS


Smart Voice Jump Rope  
Item No.: NT930

 Bluetooth® 5.0


#### Components included

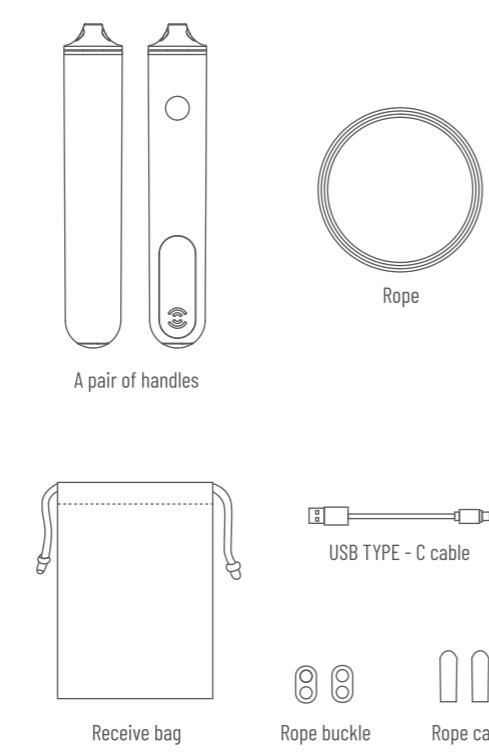

#### Learn About Smart Voice Jump Rope

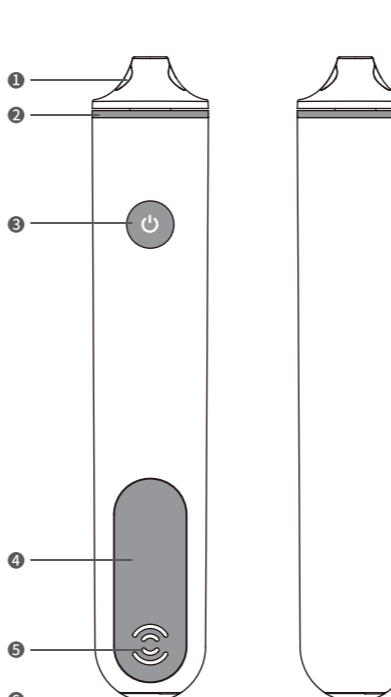

- ① **Buckle**  
Used to fix the rope
- ② **Ring Lamp**  
Jump rope count reach 100 times prompt function: Ring LED Flashing for 2 seconds
- ③ **Power ON&OFF / Sport mode switch**  
**Voice ON&OFF / Data reset button**
  1. Long press 2 second for Power ON / OFF (in power off state)
  2. Click button for sport mode switch (before sporting) Free jump - Count jump - Timed jump
  3. Click button for pause and continue in free jump mode (after sporting) Click button for end sporting in count and timed mode (after sporting)
  4. Double click button to voice function ON/OFF
  5. Data reset: In power off state, long press the button 2 sec and insert the charging cable for USB type-C than into reset mode for 5 sec, click button to data reset.
- ④ **LCD color display**  
Display for count the number, timer, calories, battery status and more information.
- ⑤ **Speaker**  
Voice speech for sport count
- ⑥ **USB charging port**  
Pull and open the cover at the end of handle, Connect to the power supply through the USB cable for charging, fully charged with 60 minutes. Battery life of continuous use is ≥20 hours, and standby time can reach 30 days

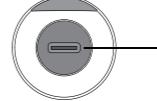 Charging from USB TYPE - C port  
Insert the USB cable to charge

#### Limitations on Warranty Disclaimers


These are no warranties which extend beyond the description on the face hereof. This warranty gives you specific legal rights, and you may also have other rights which may from state to state.



For assistance with assembly or installation, parts and customer service, please do not return to retailer-contact UCfitness CUSTOMER SERVICE at:

 Mail: [info@ucfitness.club](mailto:info@ucfitness.club)  
 [Http://www.ucfitness.club](http://www.ucfitness.club)  
[www.ucfitness.club](http://www.ucfitness.club)

#### Rope installation steps

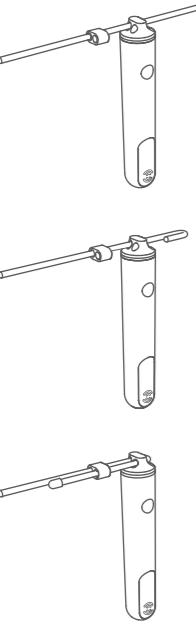

**Step 1**  
The rope first passes through the round hole of the buckle. then through the hole of the swivel head at the top of the handle.

**Step 2**  
After inserting the rope again into the second hole.

**Step 3**  
The rope passes through the other hole of the rope buckle. Put rope cap to finish.

#### Adjust the rope length

Adjust the length of the rope according to the height of the user, the specific method is as follows:

Stand up straight, step on the middle of the rope, hold the handles with both hands and straighten up, the height of the rope at the elbow is the right height for you.

Beginners can choose a longer length, about to the height of the chest. As the skipping ability improves, the rope is gradually shortened. After you adjust the length to fit, it is recommended to cut off the excess rope.



#### Install "UCfitness" APP

**For Apple iOS:**  
Use an iPhone4 or higher version mobile phone, update iOS to the latest version, Scan the QR code below or search for "UCfitness" in the APP store and download or update.

**For Android:**  
Use Android 6.0 and above mobile phones, magic UI2.0 or EMUI8.0 and above mobile phones, Scan the QR code below or search "UCfitness" in the APP store application market and download or update.

 For Apple iOS  
 For Android

#### Product Specification

Product Name: Smart Voice Jump Rope  
Model No.: NT930  
Product Dimension: 150 (L) x 27mm (max)  
Long Rope Dimension: 3000mm x Ø 4.5mm  
Product Netweight: 60g (Each handle)  
Input Voltage: DC5V == 2A (max)  
Battery Capacity: 200MAH  
Power Supply: Rechargeable lithium battery  
Working Power: 2W/MAX  
Working temperature: -20°C ~ 45°C  
Working Humidity: 5%~95%  
Storage temperature: -20°C ~ 70°C  
Storage Humidity: 5%~95%

#### Announcements

Do not place the device near high-temperature places or fires, such as ovens, stoves, candles, or other places that may generate high temperatures.

Do not allow children or pets to eat this product or its accessories to avoid injury to their bodies, otherwise it may cause damage to the equipment.

The applicable working temperature of the product is -20°C to 45°C, and the product and accessories should be stored in the range of -20°C to 70°C. Do not use the product in an environment where the temperature is too high or too low.

Please be careful not to use the product during the charging process to avoid damage to the plug.

Please do some warm-up exercises before exercise to help blood circulation.

Warm-up exercises can make the tendons more flexible and avoid injuries to joints, ligaments and muscles.

Choose turf, wood or plastic grounds. Don't jump on rough concrete, it will reduce the life of the rope.

Please wear soft and lightweight high-top sneakers when you are skipping rope to avoid ankle injury.

After exercise, you can do some stretching exercises on your feet, which can relieve muscle tension or soreness.

#### One Year Limited Warranty

UCfitness.club , warrants to the original retail purchaser, this product to be free of defects in material and workmanship for a period of up to one year from date of original purchase. Warranty applies only to the original purchaser of the product. Warranty is limited to consumer use and does not cover parts damaged due to normal wear, abnormal conditions, misuse, or accidents, and is limited to repair or replacement only. This limited warranty does not cover rope or batteries, or any part that may become defective due to mishandling. Warranty is effective only upon presentation of dated proof of purchase. Customers are responsible for all postage cost on returned merchandise. No shipping or handling charges will be reimbursed.

**FCC Statement:**  
This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1)This device may not cause harmful interference.  
(2)This device must accept any interference received, including interference that may cause undesired operation.

2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Move or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

[www.ucfitness.club](http://www.ucfitness.club)

Made in China

说明书尺寸:

说明书材质:70克双面铜版纸 (正反印刷)

圆形图标印刷颜色:Pantone silver 10077

文字颜色灰色(70K)

----- 折痕不印刷  
----- 裁剪处

1:1 单位:mm