


# User Manual STEP STATION WalkingPad® Treadmill



Model No : 480H-A

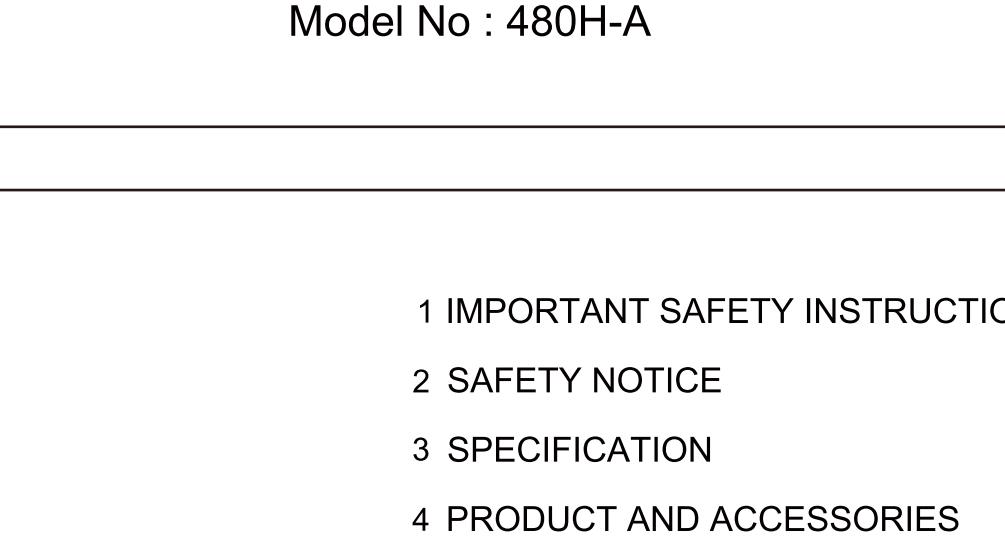

CE FC RoHS  
MADE IN CHINA

## 1 / IMPORTANT SAFETY INSTRUCTIONS

### DANGER - To reduce the risk of electric shock:

1. Always unplug the power cord from the electrical outlet immediately after using and before cleaning.

**WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:**

1. A treadmill should never be left unattended plugged in. Unplug from outlet when not in use and before putting on or taking off parts.

2. Do not operate under blanket or pillow. Excessive heat can occur and cause fire, electric shock, or injury to persons.

3. This treadmill is only to be used by adults. Do not allow children or pets to use.

4. Use this treadmill only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.

5. Never operate this treadmill if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Return the treadmill to a service center for examination and repair.

6. Do not carry this treadmill by supply cord or use cord as a handle.

7. Keep the cord away from heated surfaces.

8. Never operate the treadmill with the air openings blocked. Keep the air openings free of lint, hair, and the like.

9. Never drop or insert any object into any opening.

10. Do not use outdoors.

11. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

12. Caution - To reduce the risk of injury from moving parts - Unplug before servicing.

13. Warning - To reduce the risk of Electric shock - Use only 120V AC power.

14. Warning - Risk of personal injury - Keep children under the age of 13 away from walking treadmill.

15. To disconnect, turn all controls to the position, then remove plug from outlet.

16. Connect this treadmill to a properly outlet only. See grounding instructions.

17. This treadmill is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning

use of the treadmill by a person responsible for their safety. Keep children under the age of 13 away from this walking treadmill.

## 1 / IMPORTANT SAFETY INSTRUCTIONS

### 2 / SAFETY NOTICE

### 3 / SPECIFICATION

### 4 / PRODUCT AND ACCESSORIES

### 5 / PRODUCT INTRODUCTION

### 6 / BEFORE START AND STORAGE

### 7 / DISPLAY SCREEN

### 8 / OPERATION

### 9 / HOW TO USE

### 10 / TROUBLESHOOTING

### 11 / CARE AND MAINTENANCE

### 12 / ERROR CODE

### 13 / SUGGESTED STRETCHES