


用户操作手册


Version 1.0 CN

机翼可折叠

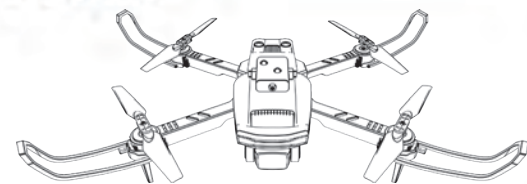

⚠ 请先安装保护罩以保护电机和防止误伤他人


避障

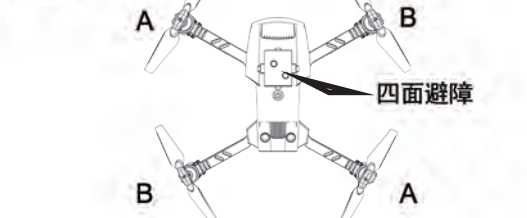


⚠ 请确保正确安装，安装错误将导致不能正常飞行

交口 张海 54*12cm S1折叠四轴中英文说明书 10000/3=3334页 正面版

遥控器功能说明

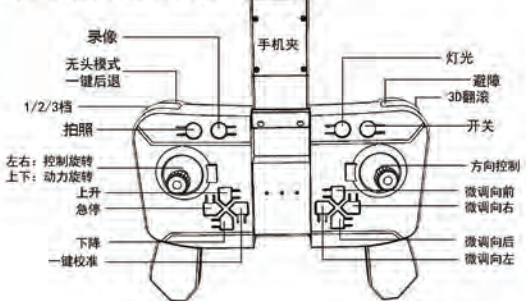

安装飞行器和遥控器电池

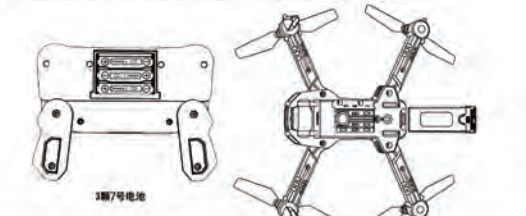

- 请不要将新旧电池混在一起使用
- 请不要将不同类型电池混在一起使用
- 当低压提示时请更换电池
- 长时间不玩请取出电池

飞行器锂电池充电

- 将电池从飞行器取出
- 将电池插入USB充电线
- 将USB充电线插入电脑的USB接口中USB充电线的红灯亮起，代表开始充电
- 充电时间大概为120分钟，充满后USB充电线的红灯会熄灭

提示：当电池充满后请及时将电池从USB充电线取出
红灯亮时：充电中状态
红灯灭时：充电满状态

定高功能介绍

使用左边摇杆上下推拉可以使飞行器上升或下降，当上升到一定高度或下降到一定高度时松摇杆，这时飞行器会保持在当前的高度。



提示：当飞行器停止时再次按动力按钮时飞行器只会启动电机，但不会离开地面
第二次按动力按钮时飞行器才会离开地面

起飞流程


- 确保飞行器上的电池已充满电
- 电池放入飞行器后按顶部的电源按键，蓝灯闪烁代表连接正常，将飞行器放置于水平地面，飞行器指示灯闪烁说明飞行器进入对码状态
- 将电池放入遥控器后按下电源按键，蓝灯闪烁表示进入对码状态
- 遥控器和无人机开关一开互相自动对码，如果飞行器上灯常亮表示对码完成
- 现在你可以推动动力遥控自由控制飞行器飞行。

飞行器方向操作



微调操作


如果飞行器在空中一直向某个方向漂移或自身在原地左右旋转，先按下遥控器上面的进入微调按钮，同时按方向摇杆对飞行器进行微调调整，使飞行器达到平衡状态。

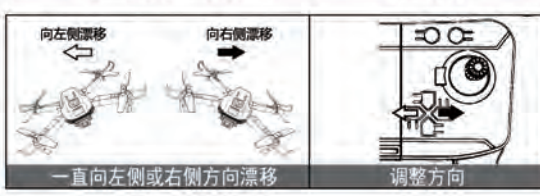

一键校准


当飞行器在空中出现一直往某个方向漂移或自身在原地旋转时可以使用一键校准功能对飞行器进行校准。将飞行器放置于水平面上，按下遥控器上面的一键校准，遥控器发出“滴”的一声同时，飞行器蓝灯闪烁，等待秒钟左右，飞行器蓝灯常亮，校准完成。

拍照录像

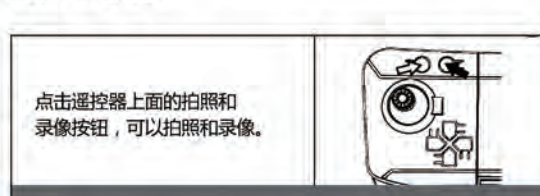

无头模式

当进入无头模式前，不管飞行器怎么旋转，遥控器只要推前进方向，飞行器都是向原先没旋转的前进方向飞行。

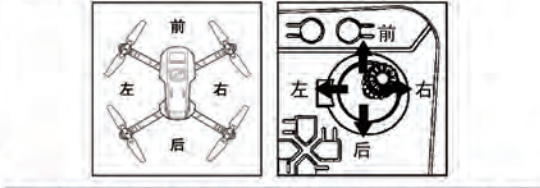

提示：进入无头模式前必须确定好前进的方向，离开机后飞行器处于地面上的方向

一键返航

启动一键返航后，飞行器会自动向操作者所在的位置往回飞。

- 按遥控器上的一键返航按钮
- 再次按遥控器上的一键返航按钮
 - 遥控器一下遥控器上的右摇杆

低压保护

飞行器在空中飞行时如果出现指示灯闪烁代表电量低，提示紧急降落操作，快速闪烁：电池电量低

提示：当出现低电量提示的时候是禁止做360度翻滚操作的

一键上升/一键下降

一键上升：将飞行器放置于水平地面上，按遥控器“一键上升”按钮，此时飞行器会自动上升到1.5米的高度。

一键下降：当飞行器停留在空中时，按遥控器左下角的一键下降按钮，此时飞行器会自动降落地面。


强制停止

对于固定版本，当动力臂向下拉到底最底时，飞行器并不会立即停止。如右图所示，按急停按钮保持2秒钟，这飞行器将会强制停止。

提示：在紧急情况下次此操作非常有用


User Manual

Folded wing

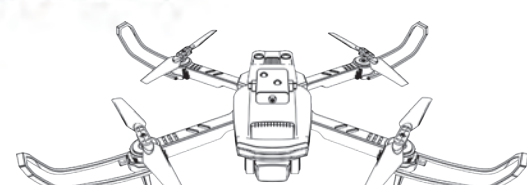


Please install the protector first to protect the motor and prevent injury to others

Avoidance

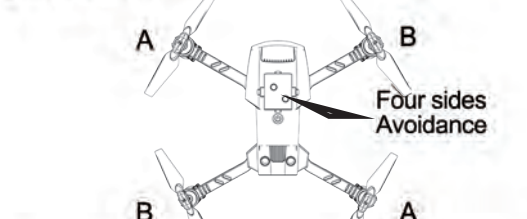


Please make sure that it is installed correctly, otherwise it will not be able to fly normally

Transmitter

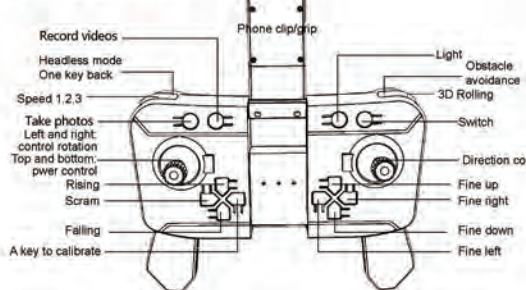

Install battery for aircraft and transmitter

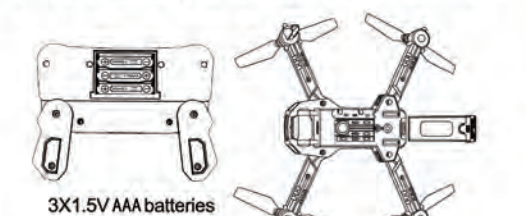

- Please do not mix old and new batteries together
- Please do not mix different types of batteries together
- Please replace the battery when the low voltage prompts
- Please remove the battery if not playing for a long time

Battery changing

- Remove the battery from the aircraft
- Insert the battery into the USB charging cable
- Insert the USB charging cable into the power of the computer USB interface. The red light indicates that the battery is charging.
- Battery charging time is about 120 minutes. Red light out when the battery is completed.

Tip: please remove the battery from the USB charging cable when the battery is charged completely
light on charging
light out Completely

Altitude hold function

After using the left joystick (Accelerator) to control the ascending/descending flight of the aircraft, free up the left joystick (Accelerator) and the aircraft will still hover at that height when the joystick is free.

Tip: the first push the left joystick up to start the motor, doesn't make the aircraft fly
the second push the left joystick up to let the aircraft rise

Ready to fly you aircraft


- Make sure the battery on the aircraft is fully charged.
- After the battery is installed in the aircraft, press the power button on the top. The blue light flashes to indicate that the connection is normal. Place the aircraft on a level ground. The aircraft prompt light flashes to indicate that the aircraft enters the code matching state.
- After the battery is loaded into the remote control, press the power button, and the blue light flashes to indicate that it enters the code matching state.
- The remote control and the UAV will automatically pair codes with each other as soon as the switch is turned on. If the light on the aircraft is always on, the code pairing is completed.
- Now you can push the power remote control to freely control the aircraft to fly.

Operating direction



Fine-tuning operation


If the aircraft keeps drifting in a certain direction in the air or rotates left/right in place, first press the enter fine-tuning button on the remote control, and simultaneously press the direction joystick to make fine adjustments to the aircraft, so that the aircraft reaches a stable state.

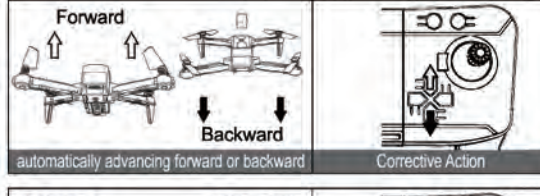

One-click calibration


When the aircraft appears to drift in a certain direction in the air or rotates left/right in place, you can use the one-click calibration function to calibrate the aircraft. Place the aircraft on a level surface, press the button on the remote controller to calibrate, the remote controller emits a "D" and the aircraft's blue light flashes, wait for about 3 seconds, the aircraft's blue light is always on, and the calibration is complete.

Take photos \ Record videos

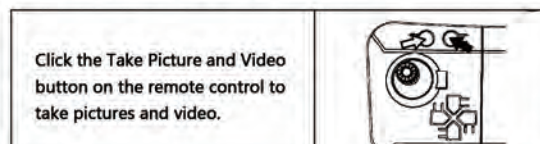

Headless function

No matter which direction the aircraft may rotate to, the flying direction direction will be as per the direction that the decoding is made.

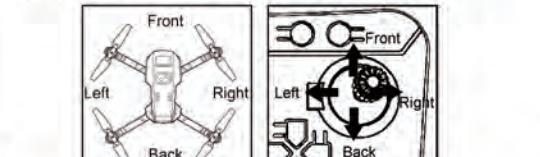

Tip: Before entering into the headless mode, please confirm the forward direction of the decoding

One-key Return

In this mode, the aircraft automatically returns to the location of the operator.

- Press the button for "One-key Return"
- Exit One-key Return:
- Press the button again for "One-key Return"
 - Simply pushing the Direction Lever toward either direction (forward or backward or to the left or to the right)

Low-voltage protection

All lights flashing indicates that the battery is low when the aircraft is flying in the sky.
Slow flashing: Battery low power

Tip: Aircraft can not be relied in the case of low power

One key to rise/down

One key to rise: When the aircraft is on the ground, press the button "One key to rise" on transmitter. At this time the aircraft will automatically rise to a height of 1.5 meters.

One key to down: When the aircraft stays in the air, press the descending button in the lower left corner of the remote control, and the aircraft will automatically descend to the ground at this time.

Forced stop

For fixed versions, the aircraft does not stop immediately when the power remote rod is pulled down to the lowest level. As shown in the figure on the right, press the emergency stop button for 2 seconds, and the aircraft will force it to stop.

Tip: this operation is very useful in emergency situations

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.