


ILIFE-X491

Robotic vacuum cleaner

User Manual

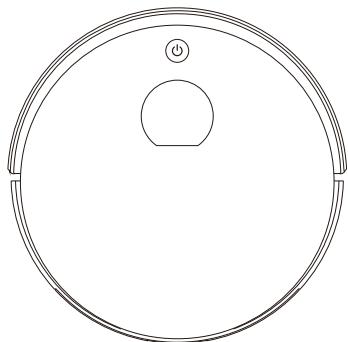

English

For more detailed information,
please visit: www.iliferobot.com | **ILIFE**

Dear Customer,

Thank you for purchasing the ILIFE X491 Robotic Vacuum Cleaner! You've joined the millions of people cleaning with robots - the smartest way to do it.

Please take a few moments to read through this manual and familiarize yourself with your robot to achieve the best performance. If you encounter any issues with your robot, feel free to contact our customer service or visit our website at www.iliferobot.com for further assistance. Stay connected with us on Facebook and Twitter to enjoy these exclusive benefits:

- Get tailored support for your specific robot, including answers to your questions, maintenance tips, video demonstrations, live chat, and more.
- Receive product updates and other valuable information, be among the first to discover new robots, exclusive discounts, and special promotions.

Connect with us now on
Facebook: <https://www.facebook.com/ilifeglobal>
Twitter: https://twitter.com/ilife_global

Enjoy comprehensive cleaning every day! Best regards,
ILIFE Innovation

ILIFE Customer Service



1-800-631-9676 (Toll free for North America)
Mon-Fri: 8:00 A.M. - 4:30 P.M. CST



service_us_ca@iliferobot.com

Table of Contents

Safety Instructions	3
Product Composition	5
List of accessories	5
Robot anatomy	6
2-in-1 dustbin and water tank	7
Charging dock	8
Remote control	8
Product specifications	10
Product Operating	11
Attentions	11
Quick guide	13
Select cleaning modes	16
Water tank operation	17
App Connection	19
Maintenance	23
Clean up dustbin and filters	23
Cleaning of water tank components	24
Clean up the side brushes	25
Check side wheels	25
Other spare parts	25
Troubleshooting	27
FCC Warning	28

Safety Instructions

Warnings


1. This robot should not be used by children under 8 or people with mentally challenged, unless they are under supervision. Do not let children sit on the robot or use it as a toy.
2. Attend to the robot promptly if an error occurs during cleaning. Before using the robot, remove all power cords and small objects on the floor. Roll up carpet tassels and make sure curtains and table cloth are not in contact with the floor.
3. If there are hanging steps or stairs, please test if the robot can detect them before use. If not, please set up barriers to avoid falling down, and make sure that the barriers cause no harm to people.
4. Follow the instructions in this user manual. Use factory authorized or recommended accessories only.
5. Make sure the voltage of the charging dock is compatible with the voltage of power supply.
6. Use the robot indoor and in a home environment only. Do not use it outdoor, or in commercial or industrial spaces.
7. Use factory authorized adaptor and charging dock only. Do not use non-rechargeable battery. Refer to "Product Specifications" section for details about battery standards.
8. Do not soak the robot in water and do not rinse the robot under the faucet.
9. Do not clean the robot with dripping wet cloth.
10. Do not use the robot on floors with ponding water.
11. Do not use the robot near fire or fragile objects.
12. Do not make the cloth, humans hair, finger, or other parts of the body close to the open or the running mechanism of the robot.
13. Do not use the robot on floors with stones or paper to avoid being stuck.
14. Do not use the robot in areas with any flammables, such as gasoline, toner and so on. Or use the robot to clean any burning objects, like cigarettes, ashes or matches, or anything that may cause a fire.
15. Do not use damaged charging dock.
16. Do not lift up the robot or the charging dock by the power cord, and keep the power cords away from heat and avoid it being trapped around doors, sharp edges or corners.

Safety Instructions

17. Damaged power cords must be repaired by manufacturer's repair service or certified technicians.
18. Install dustbin and filters properly before using the robot.
19. Do not use the robot in rooms where babies are sleeping.
20. Do not use damaged power cords or charging dock to recharge the robot.
Do not use the robot if it's damaged by falling down, or soaking in water.
21. Turn off the power switch if the robot will not be used for a long time.
22. Turn off the power switch before cleaning or maintaining the robot.
23. Unplug power cords from the charging dock before cleaning or maintaining the robot.
24. Remove battery before discarding the robot.
25. Robot and battery are to be disposed of according to local safety regulations.
26. Do not cremate the robot to avoid the explosion.
27. Follow the instructions in this user manual.
Manufacturer is not responsible for any damages caused by improper use.

Product Composition


List of accessories

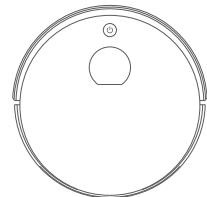

Main body



Charging dock

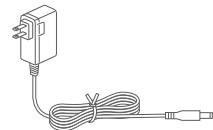

Power Adapter




Mopping support



Mop cloth



Remote Control

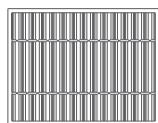

High performance filter



User manual





Extra side brush



AAA Battery X2

Product Composition


Robot anatomy

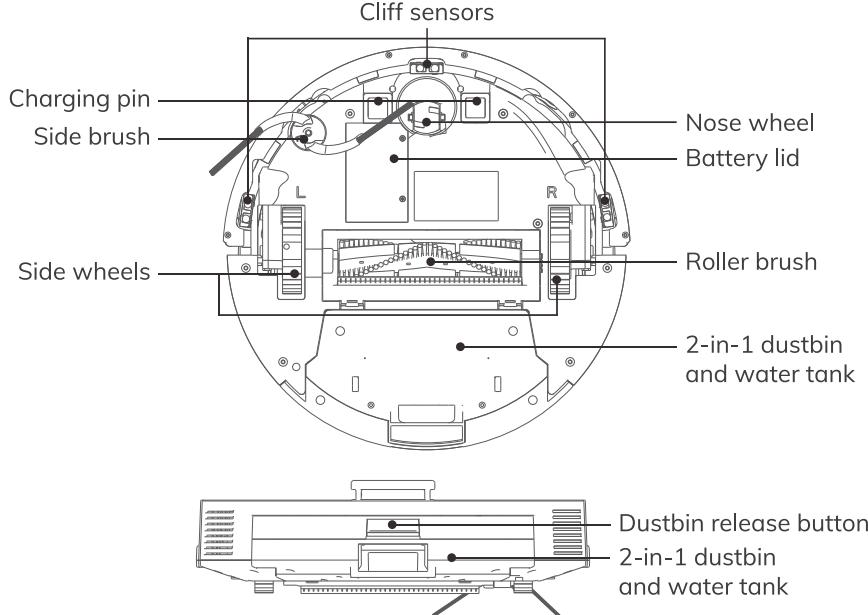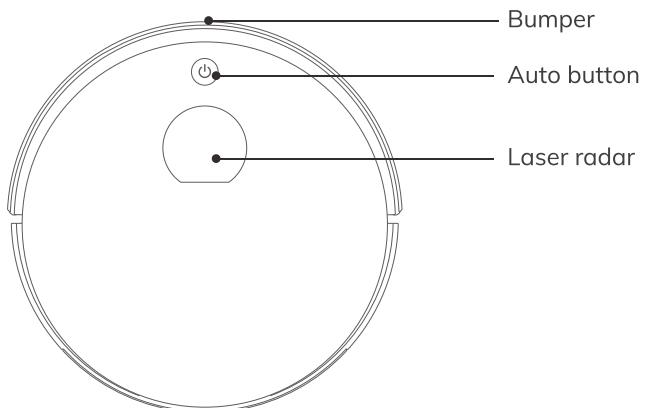

Product Composition

Button	Robot status	Operation	Functional description
Auto Button	Turn off	Press and hold for 2 seconds	Turn on the robot
	Turn on	Press the button once	Start/Stop cleaning
		Press the button twice	Enter recharge mode
		Press and hold for 3 seconds	Turn off the robot
Power indicator		Green	Electricity $\geq 12\%$
		Orange	Electricity $\leq 12\%$
		Red	Failure or abnormality

2-in-1 dustbin and water tank

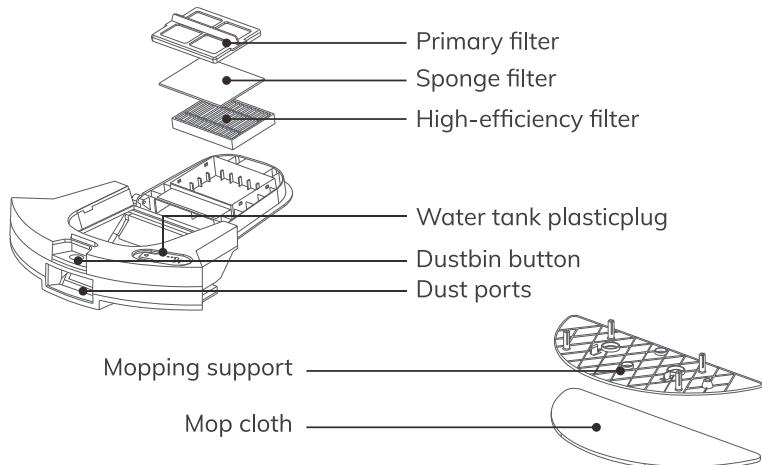


Note:


When the water tank is filled with water, the robot's ability to overcome obstacles and climb hills may be affected.

Product Composition

Charging dock

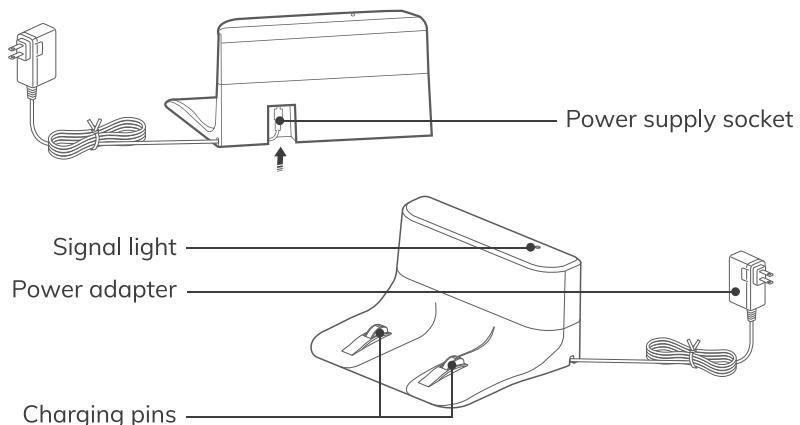

Remote control

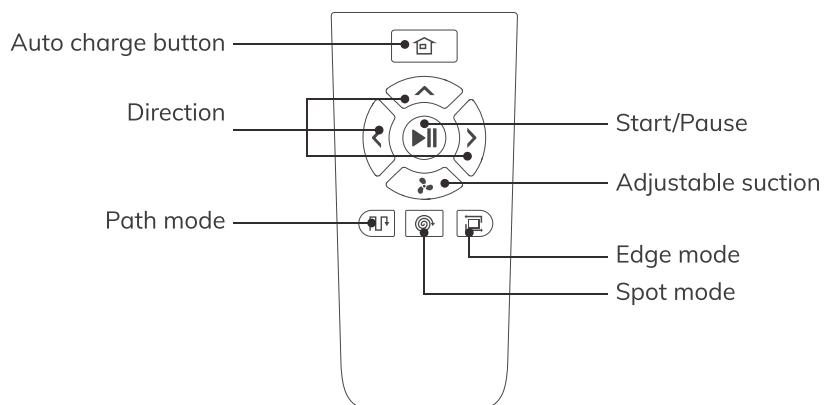

Product Composition

① Clean/Pause button

- Press the button to switch the robot from sleep mode to idle mode.
- Press the button when in idle mode to start cleaning.
- Press the button to pause the robot during its operation.

② Direction buttons

A. " ^ " Forward

Press the button to move the robot forward.

B. " ⚡ " Adjustable suction

Press the button to switch suction in working mode.

C. " < " Left

Press the button and the robot will turn left.

D. " > " Right

Press the button and the robot will turn right.



Note: " ^ " cannot be used during a cleaning cycle.

③ Auto charge button

Press the button and the robot will return to the charging dock for recharging.

④ Edge cleaning button

Press the button to start border cleaning.

⑤ Spot mode button

Press the button to start the spot cleaning.

⑥ Path mode

Press the button to start cleaning under path mode.

⑦ MAX mode

During the cleaning process, if there is a lot of dust, press this button to increase the suction power of the robot. Press it again to switch to the max suction power, press it again to switch to the mute mode suction, and press it again to switch back to auto mode suction.



Note:

Please install two AAA/R03 batteries before using the remote control.

Please take out the batteries if the remote control won't be used for a long time.

Product Composition

Product specifications

Item	Specification
Overall dimension	330x330x95mm
Net weight	2.7kg
Power	40W
Battery type	Li-ion
Charging type	Auto Charging / Manual Charging
Dustbin capacity	0.2L
Water tank capacity	0.2L
Cleaning modes	Auto, Spot, Edge, Daily Schedule
Charging time	<300mins
Cleaning time	≥100mins
Main body button type	Mechanical Button


**Note:**

The company reserves the right of final decision on the interpretation of these terms and conditions.


Product Operation

Attentions


The robot may skip over some areas due to the complexity of the home environment. To achieve the best result, we suggest using it as daily routine and clearing up the obstructions on the floor before starting the robot.

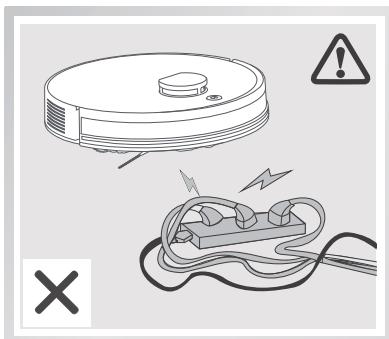

Please move away the power cords and other objects that may tangle the robot before cleaning.

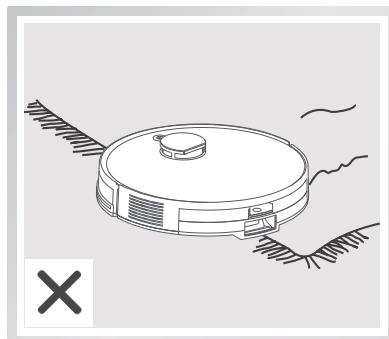


Please fold up the edges of the carpets before cleaning.

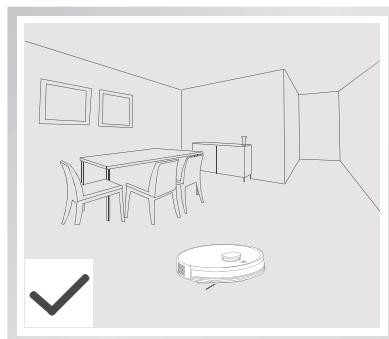


To avoid being stuck during cleaning, please arrange the furniture neatly.

Product Operation

Attentions

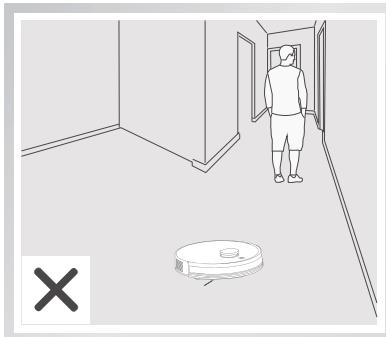

Please do not stand at somewhere with narrow space like the door sill or hallway in case of blocking the robot and skipping over some areas.

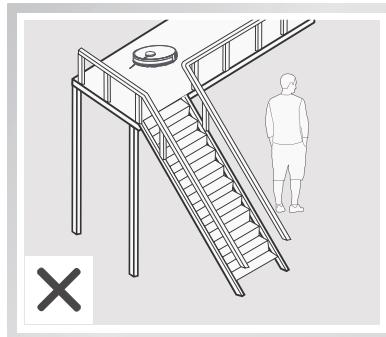


Please do not stand by downstairs when the robot is working upstairs in case of getting injured by any fallen objects.

Product Operation

Quick guide

1 Placement of charging dock


- Connect the adapter with the charging dock.
- Placement of the charging dock: place the charging dock against the wall horizontally and there must be no object on the left and right side within one meter and in the front within two meters. There must also be no reflective object such as a mirror around the dock.
- Connect the power.

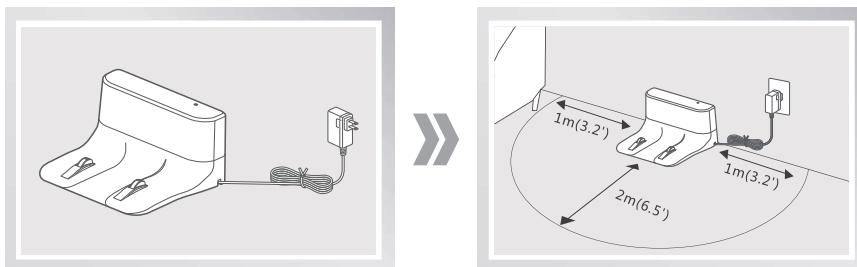

Reminder: When the charging dock is connected to the adapter, the signal light of the dock will light up.

2 Turn on the robot

- Press and hold the AUTO button for 2 seconds to turn on, and press and hold it for 3 seconds to turn off.

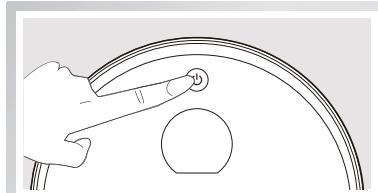


Note:

- After the robot finishes its work, please do not turn it off, and fully recharge it for the next run.
- If the robot pauses working for more than ten minutes, it will enter sleeping mode. If you need to wake up the robot again, you need to press the AUTO button once.

Product Operation

③ Robot charging

1. Please place the robot on the charging dock.
2. If the AUTO button is flashing in orange, the robot is charging. The button will change to green when it is fully charged. Then the light off and the device goes into sleep mode.
3. Charge for 6 hours for the first time.


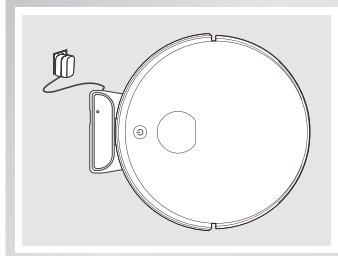


Reminder:

1. Please keep the charging pins clean in daily use to ensure a good connection.
2. Please leave the robot on the charging dock for daily use and make sure that the charging dock is connected to the power and the switch is on.
3. If you won't use the robot for a long time, please fully charge it, turn off the power and keep it in a well-ventilated dry place.

④ Start cleaning

After waking up the robot, you can press the AUTO button once, and the robot will start the automatic cleaning.

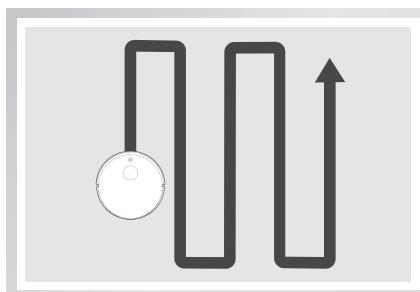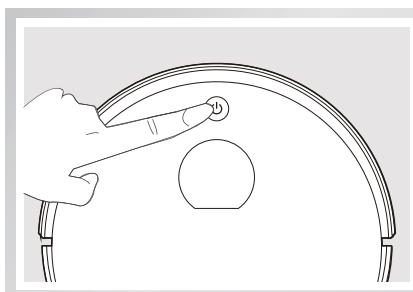


Product Operation

- * Before starting cleaning, you need to make sure the indicator light is flashing and the robot is in a wake-up state. If the robot is sleeping, please press the AUTO button once to wake up the robot.
- * If you want to choose other modes, please operate on the App.
- * The robot performs path planning autonomously during the working process. If it is manually moved or operated by the App (except pause), the robot will re-plan the path and may re-clean the cleaned area.
- * To ensure the working efficiency of the robot, please do not manipulate the robot. (If the machine is lifted, it will alarm and stop cleaning, and you need to press the AUTO button or operate the App to restart cleaning)

5 Pause

While the robot is running, you can pause by pressing the robot's AUTO button or the "pause" button in the App.

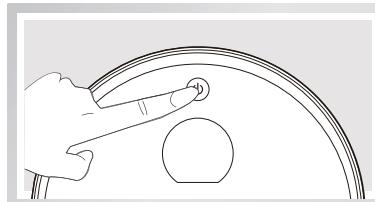


Reminder:

1. The Robot will automatically enter the Sleep Mode if no action is taken for 10 minutes. If you want to start the robot again, please press the AUTO button once to wake up the robot.
2. The robot will work out a new cleaning path, and will clean the areas again which have been cleaned before.

Note: After the sleeping robot in pause mode is woken up again, it needs to be restarted to start cleaning, and the robot will not resume the last unfinished cleaning.

6 Sleep mode

- The robot will automatically enter sleep mode if there is no action for 10 minutes.

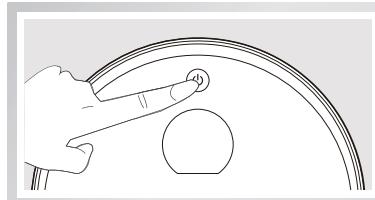


Product Operation

Select cleaning modes

This product can set a variety of cleaning modes through the App to adapt to different ground conditions and achieve deep cleaning.


① Auto charge

The robot can sense lower power during the cleaning process and automatically activate Self-charge Mode and search for the charging dock.

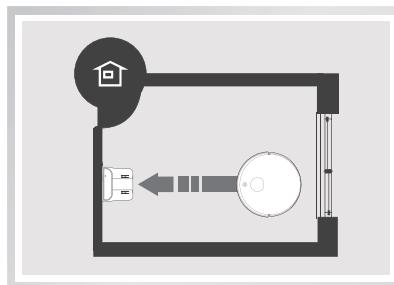


② Spot mode

This mode is suitable for the ground environment where garbage is more concentrated. In this mode, the robot can carry out concentrated cleaning in a "spiral" route in a designated area.

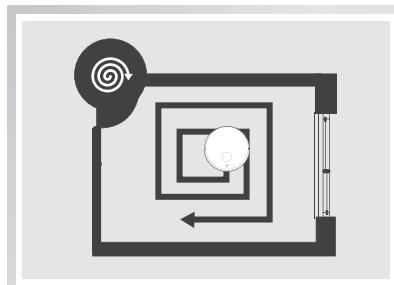

③ Edge Mode

This mode is mainly for cleaning indoor corners. In this mode, this robot can clean along the edge of fixed objects (such as walls).

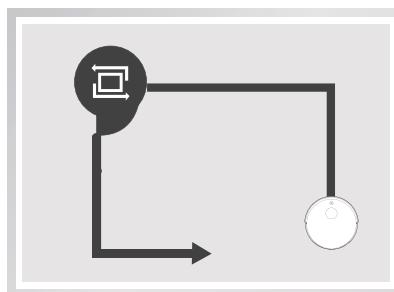

Product Operation

Water tank operation

The water tank with a mopping cloth is installed into the device. Please kindly add water to the water tank before mopping. It is recommended to vacuum the floor before mopping. For daily maintenance, please check out the tips on the corresponding chapter in this manual.




Note:

1. Please do not use water tank components on the carpet .
2. Please pay attention during the mopping mode, timely add water or clean the mopping pad. The water tank needs to be removed when adding water.
3. Be sure to remove the water tank components when charging.


① Remove the water tank components

Slide back to remove the water tank components.

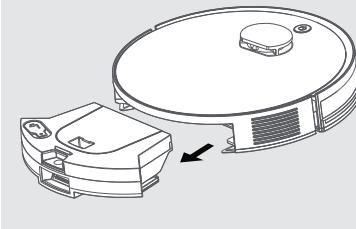

② Add water


Open the water injection cap and fill it with water. Tightly close the cap once finish water injecting.

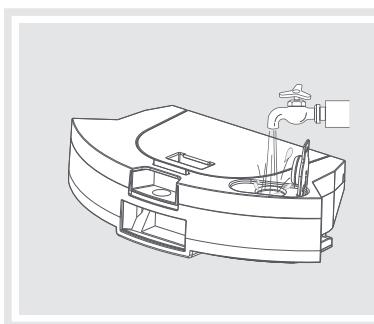

Product Operation


③ Place the mopping support

Paste a mopping support.

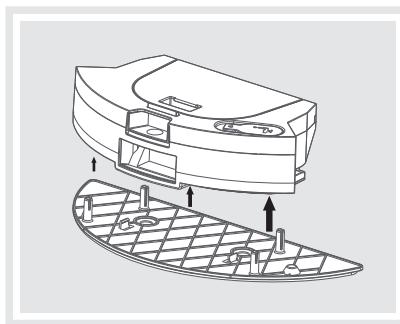

④ Install water tank components

Slide it forward, align it with the clip, and when you hear a "click" sound, it is installed in place, and then you can press the sweep button to automatically execute the corresponding mopping mode.

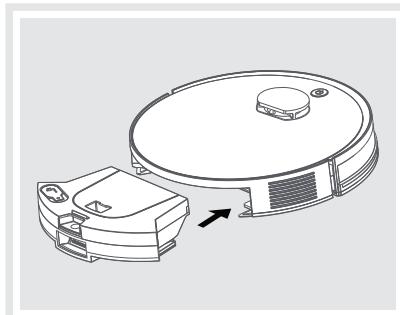


App Connection


1. Scan the QR code to install the App or search "ILIFE Clean" in the mobile App store to download the App.




2. Register and log into the App.

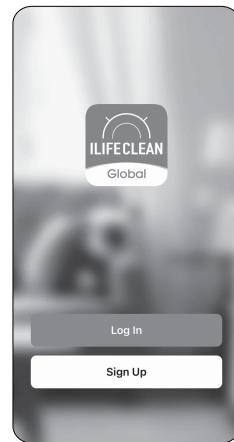

3. Firstly start the robot by clicking the AUTO button, press and hold the AUTO button for 5 seconds, and when you hear the voice prompt of "Start pairing the WiFi" and the WiFi indicator light flashes slowly, it means that the machine has entered the networking mode.

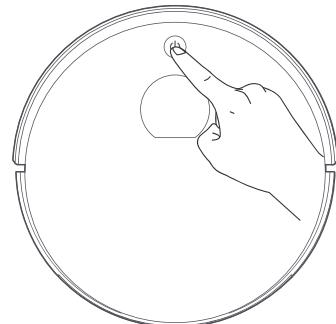

4. Click "Add a device" or "+" in the top right corner.

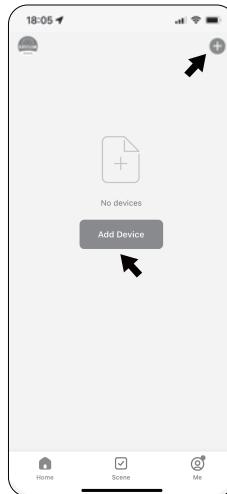


App Connection

5. Two methods available to add the device into the App.

Bluetooth ↲

Enable Bluetooth on Your Phone:

To connect via Bluetooth, please ensure that Bluetooth is enabled on your phone.

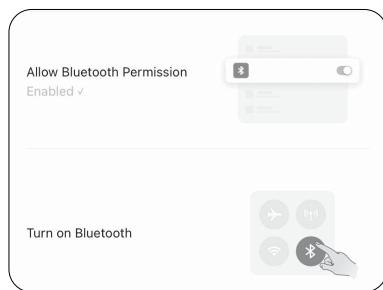


Pairing Process:

Go to setting in the phone and enable Bluetooth >

Back to App and the device will pop up on the top and click Add >

Select home 2.4GHz wifi and enter password > Download and finish.

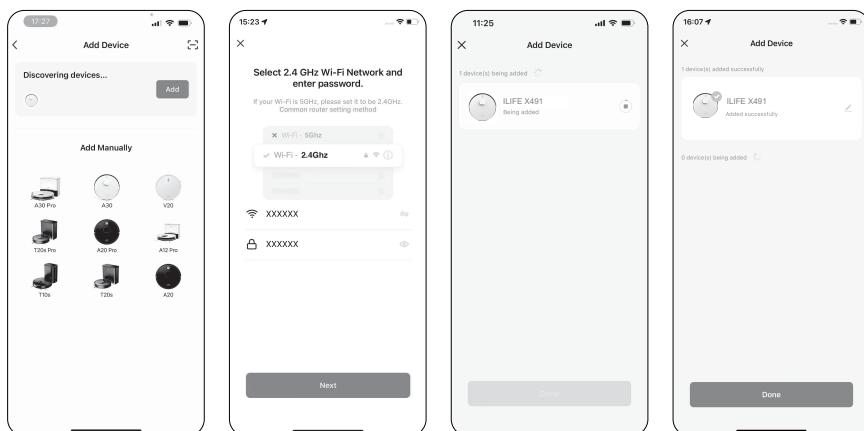


App Connection

AP Mode ↵

Select your device model.




Select a 2.4GHz Wi-Fi network and enter the password.

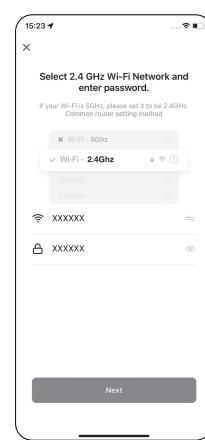

Go to phone's setting and select the robot's hotspot starting with "SmartLife", and after connecting successfully, return to the App.




Connecting device is processing. Please wait until finished.

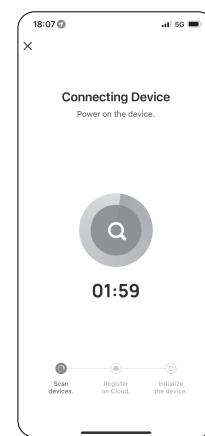

App Connection

Connect with Amazon Alexa or Google Assistant





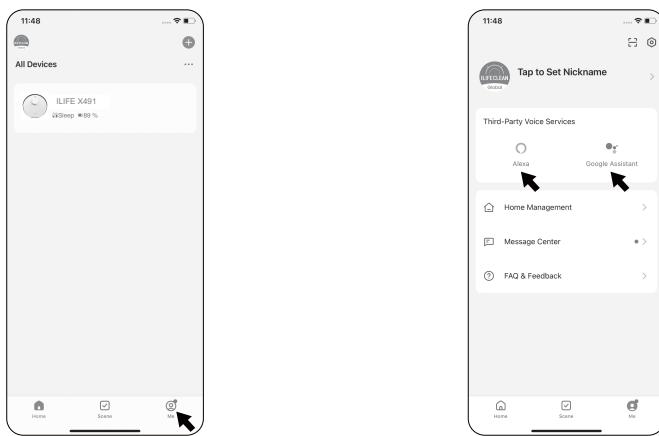


1. The robot vacuum cleaner connects to the App first. Click "Me" in the bottom right corner.
2. Click "Alexa" or "google Assistant" to enter the operation interface.

Maintenance

Clean up dustbin and filters

* Please turn off the robot before cleaning any spare parts, and remember to cut off the power.

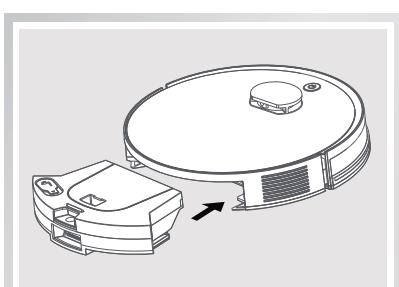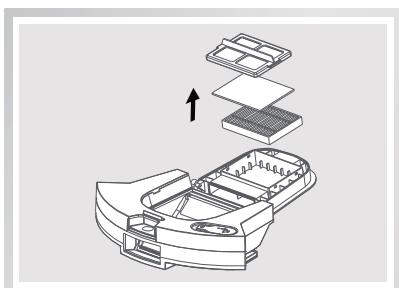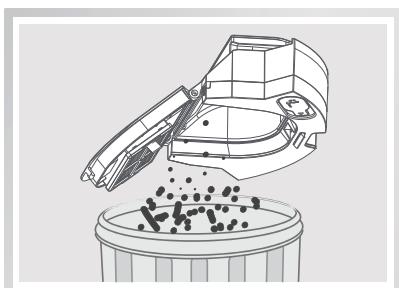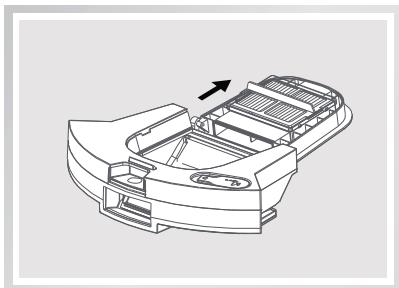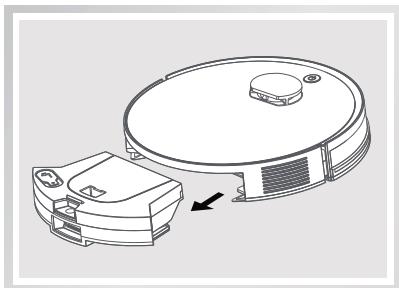


1. Take out the two-in-one water tank from the robot, open the upper cover of the garbage bin, pour out the garbage.
2. Take out the primary filter and high-performance filter, then slightly pat the garbage inside, clean it up, and then wipe the garbage bin clean, and install the trash can back to the robot.


Maintenance

Cleaning of water tank components

① Clean the mop cloth

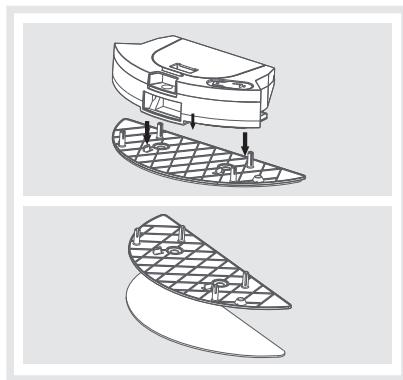


Remove: after mopping, please remove the water tank components and the mop cloth.

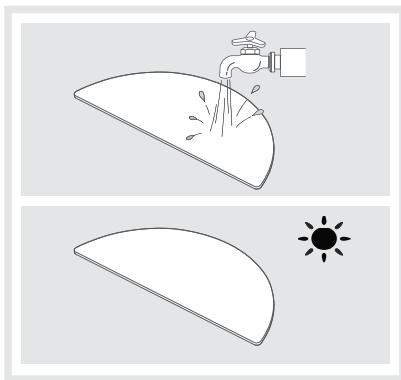


Maintenance: rinse and air dry the mop cloth.

② Clean the water tank

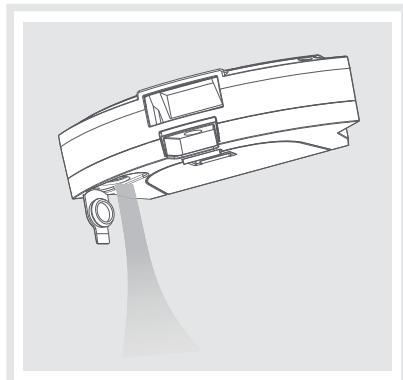

Remove: after mopping, remove the mop cloth and the components, drain the remaining water in the water tank.


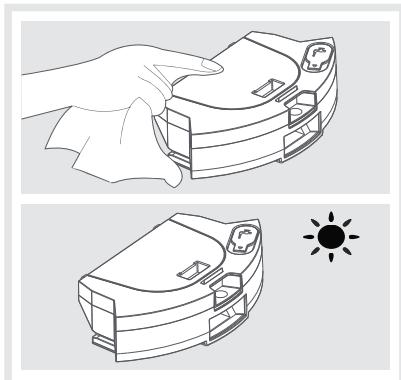


Maintenance: dry the water tank by hand and then air dry it.

Maintenance


Clean up the side brushes

Please turn off the robot first, remove the screws and then remove the side brush, clean off the hair and other foreign objects tangled in it and wipe it off with a clean cleaning cloth.

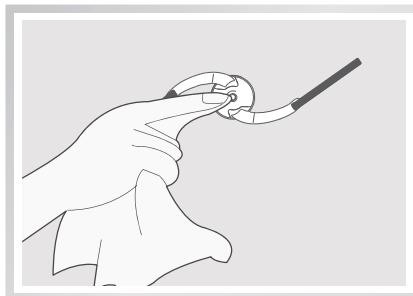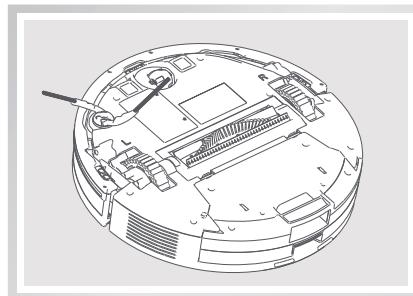


Check side wheels

When a buzzer sounds, turn off the power, and then clear any objects blocking the side wheels.


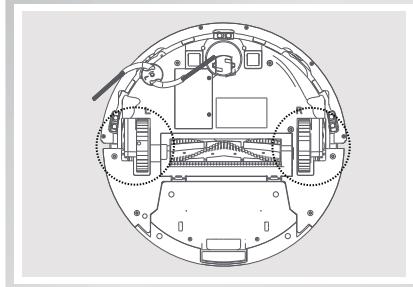


Other spare parts


Clean any hair and foreign objects tangled in the front wheel, and wipe it with a clean cleaning cloth.

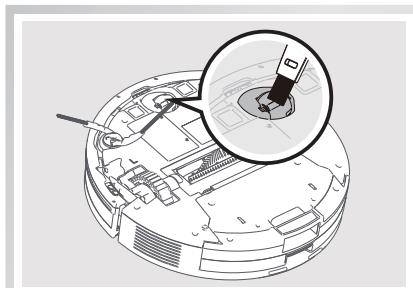

Maintenance

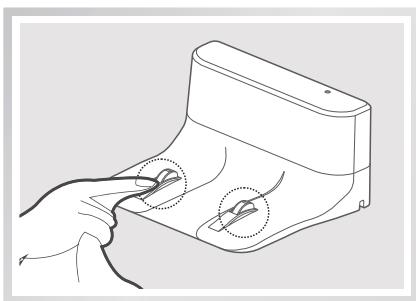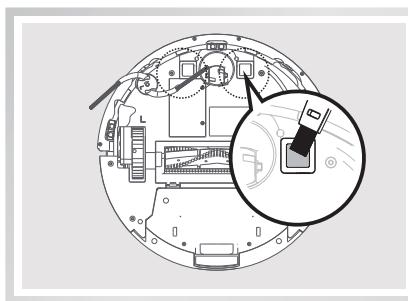

Regularly clean the charging pins on the robot and the charging dock with a dry cloth.

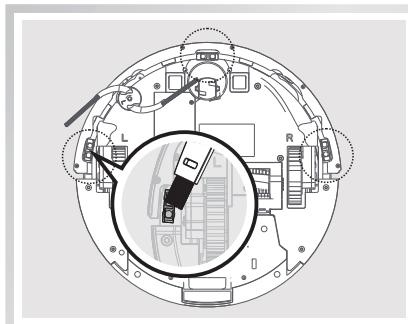

Periodically wipe the sensor with a dry cloth to keep it clean.

- * When the battery is in a deep discharge state or not used for a long time, its capacity will be reduced. In this case, we suggest you activate it again. Charge the robot on the charging dock for 3 minutes, and repeat this process 3 times, then fully recharge the robot for 5 to 6 hours.
- * The robot uses long-life cyclic batteries. It is not necessary to replace them frequently. Please contact our support team if needed.

Troubleshooting

Error Prompt	Solution
Error 1: Put the machine on the floor before starting	You may pick up the machine; or the machine is suspended; please move the machine to a flat ground and start it again.
Error 2: Please lay the machine flat on the ground and then start it	The machine tilts; please move the machine to a flat ground and then start it.
Error 3: Please check whether the front bumper is stuck	The edge or collision sensor is stuck; please push the bumper left and right to confirm that it is not stuck.
Error 4: Low battery; please charge	Put the main unit on the charging base for charging.
Error 5: The machine is trapped	Please move the machine to an open ground and then start it.
Error 6: Please check whether the wheel is stuck	The main wheel is stuck or entangled; please check the main wheel and remove the foreign matters.
Error 7: Please check whether the rolling brush is stuck	The rolling brush is entangled or stuck; please check the rolling brush and remove the foreign matters.
Error 8: Please check whether the side brush is stuck	The side brush is entangled or stuck; please check the side brush and remove the foreign matters.

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.