

During the warranty period, the following situations are not covered by the warranty

- Improper use leading to human damage
- Damage due to improper transportation after sale
- Damage caused by failure to use the original accessories of the company as required
- Any selfmodified, disassembled and repaired product
- Replacement of wear parts
- Any natural wear

V. common problems

1. After the receiving switch is turned on, the blisters backlight will flash, which is a working signal indicating that it is in the receiving state, which is a normal phenomenon;
2. The laser line flashes to prove that the machine is not in the setting range, please adjust the level through the legs;
3. The laser line appears blurred. Please wipe the outer glass with a clean cotton cloth.

VI. Safety precautions

1. Because of Laser radiation should not look directly at the laser beam;
2. Class 2 laser crystal, harmless to human body;
3. Strictly forbidden to heavy press or vibrate;
4. The product shall be placed in the warehouse with ventilation, drying, heat-insulated and fireproofing, and it is strictly prohibited to contact with corrosive materials;
5. Loading, unloading and use of products shall be handled gently, and shall not be thrown or dropped;
6. Quality inspection certificate and packing list are attached in the packing box.

VII. Daily maintenance and attentions

1. Daily maintenance

- 1) Please store the machine in a dry, ventilated, constant temperature and dust-free place;
- 2) please wipe the shell glass frequently to ensure the light transmission;
- 3) when not in use for a long time, please release the locking switch for half an hour regularly to ensure that the bearing swings flexibly.

2. Attentions

- 1) non professionals, do not disassemble the machine;
- 2) please avoid severe vibration, collision and falling of the machine;
- 3) please pay attention to lock the locking switch after use;
- 4) do not leave the battery in the machine to avoid leakage of battery liquid;
- 5) do not look directly at the laser line. It should be used with protective glasses;
- 6) do not wipe the instrument with organic solvent.

Certificate

Name: _____ Examiner: _____
 Model: _____ Date: _____
 No: _____

- ★ User save copy (please save this part properly)
- Warranty Card The user must present a copy of the card and an official invoice at the time of warranty to confirm your warranty, service.

User name :

Mr./Ms.: _____ Age: _____
 Name of the work unit:
 Occupation: Student Worker Woodworking Metalworking
 Concreterworking Renovation Hardware Hydropower Engineering
 Others
 Address: _____ Province _____ City _____ Road / Street _____ No.
 Zip code: _____ Tel.: _____ Fax: _____
 Mobile phone: _____ Product number: _____
 Date of purchase: _____ Invoice receipt number: _____
 Purchase company name: _____
 Purchaser's address: _____
 Purchaser's phone: _____
 Purchaser's seal: _____

Please note that the conditions listed on the back are not guaranteed.

● Receipt (please fill it in and send back)

To ensure that you can enjoy the above warranty service, please fill in all forms and send the "receipt" back to our company within 7 days, which will take effect on the date of receiving the receipt!

User name :


Mr./Ms.: _____ Age: _____
 Name of the work unit:
 Occupation: Student Worker Woodworking Metalworking
 Concreterworking Renovation Hardware Hydropower Engineering
 Others
 Address: _____ Province _____ City _____ Road / Street _____ No.
 Zip code: _____ Tel.: _____ Fax: _____
 Mobile phone: _____ Product number: _____
 Date of purchase: _____ Invoice receipt number: _____
 Purchase company name: _____
 Purchaser's address: _____
 Purchaser's phone: _____
 Purchaser's seal: _____

LASER LEVEL METER

3D ground and wall sticker



User manual

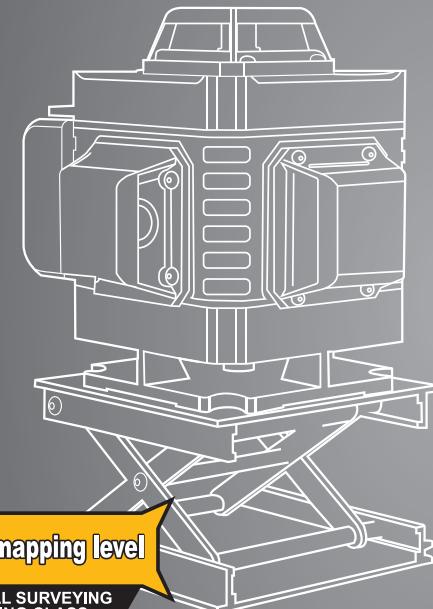

Professional mapping level

PROFESSIONAL SURVEYING
AND MAPPING CLASS

Instrument specifications

Laser ray	360° X 3 12 lines (30)
	360° X 4 16 lines (40)
Laser ray	Wavelength 650nm, red light
	Wavelength 515nm, blue light
	Wavelength 532nm, green light

Horizontal / vertical accuracy: $\pm 0.2\text{mm} / 10\text{m}$ Automatic leveling range: ± 3


Waterproof grade: IP-54

Working range: about 25m in diameter

Working time: about 5 hours

Green light working temperature: -5°C~ 50°C

Blue light working temperature: -20°C~ 50°C

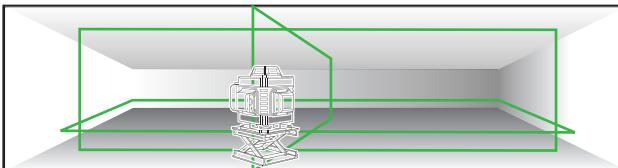Red light working temperature: -20°C~ 50°C
(requires a personalized custom)激光示意图
Laser schematic3D全方位贴地贴墙仪
3D omnidirectional ground and wall sticker

Safety Precautions

1. Because of Laser radiation should not look directly at the laser beam;
2. Class 2 laser crystal, harmless to human body;
3. Forbidden to heavy press or vibrate;
4. The instrument is not allowed to use near fire or explosive, and is strictly prohibited to contact with corrosive materials; and fireproofing, and is strictly prohibited to contact with corrosive materials;
5. Laser instrument and its accessories and products shall be handled gently, and shall not be thrown or dropped;

Daily maintenance and attentions

1. Please store the machine in a dry, ventilated, constant temperature and dust-free place;
2. Please clean the glass monthly to ensure the light transmission;
3. When not in use for a long time, please release the locking switch for half an hour regularly and ensure that the bearing swings flexibly.
2. Attention:
- 1) check whether the horizontal line and vertical line are accurate before each use, otherwise the construction loss caused by inaccurate laser line has nothing to do with our company;
- 2) not allowed to use in the sun or in the rain;
- 3) please avoid severe vibration, collision and falling of the machine;
- 4) please pay attention to lock the locking switch after use;
- 5) do not wipe the instrument with organic solvent.

Functions and features

1. The machine is inclined for 3° and automatically leveled;
2. Alarm function beyond the safe range;
3. The built-in gyroscope and gyroscope system ensures fast leveling time;
4. 360° rotatable base, and equipped with fine adjustment mechanism, can make the machine quickly find the target;
5. It can be used to input to adjust the working height of the machine.


Instructions

- 1) Place the instrument on the tripod, T-type wall mounting bracket or lifting platform as needed;
- 2) Push the main power switch forward to the ONposition and the machine starts to work. The horizontal window automatically opens and produces four horizontal laser rays;
- 3) Touch H key on the touch panel to control horizontal opening and closing;
- 4) Touch the V key on the touch panel once, open a vertical window with one click (tick), repeat again, the second vertical window opens, and the third touch closes two vertical windows;
- 5) Long touch the  key for more than 3 seconds, and a click(tick) will be heard, and turning on the diagonal function. At this time, you can adjust it to the angle you want without alarm or flashing. Touch this key again for more than 3 seconds, with one click (tick) to release this Cfunction, the instrument works normally.

Note: The positive and negative terminals of the battery are properly installed. Please remove the battery if it is not used for a long time. Please charge for more than 10 hours when you use it for the first time. Please turn off the main switch after use.



Please use the charger that matches the machine to charge.

Please use this machine in the environment where this machine is described.

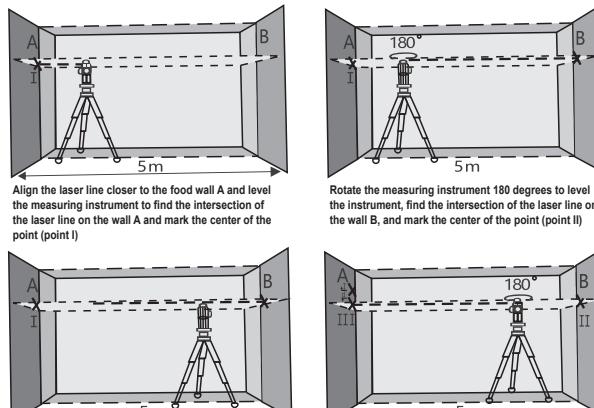

You can use the following formula to calculate the maximum allowable deviation, d_{max} , $d_{max} = \text{twice the wall spacing} \times 0.2 \text{ mm} / \text{m}$
Example: If the wall spacing is 5 meters, then the maximum allowable deviation $d_{max} = 2 \times 5 \text{ meters} \times 0.2 \text{ mm} / \text{m} = 2 \text{ mm}$. Therefore, the distance between the marks should not exceed 2 mm.

Product diagram

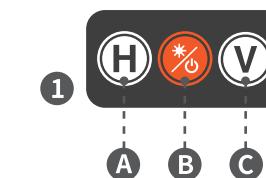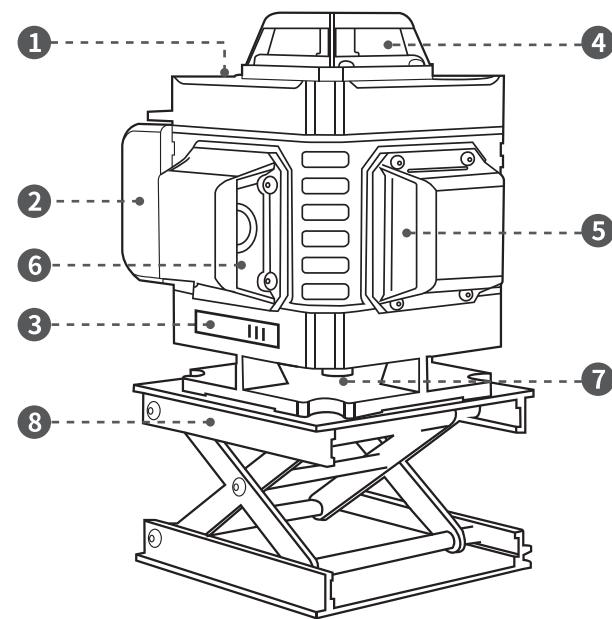

1	control panel	8	vertical lifting platform
2	battery	A	horizontal line switch
3	switch	B	OUTDOOR slash switch
4	360° horizontal line 1	C	vertical line switch
5	360° vertical line 1		
6	360° vertical line 2		
7	360° horizontal line 2		

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 0cm between the radiator and your body.