

INSTRUCTIONS

Thank you for using our company's toy products. In order to have a better understanding of this product, please read the following instructions before use, which will bring you a different operating experience.

注意 NOTE

This product is suitable for children 6 years old and above. After assembled / charged by adults, play with children again.


Please Use This Product Under The Supervision Of An Adult.

Warning: please do not disassemble or modify the product without authorization, any changes may cause the product to not work properly.


SPECIAL WARNING:

The output voltage used by the charging plug should be 5V. Please do not use the quick-charging plug and quick-charging cable, so as to avoid the condition that the too quick current output during charging causes overheated battery charging and results in dangerous matters such as product burnout.

产品配置 Product Configuration

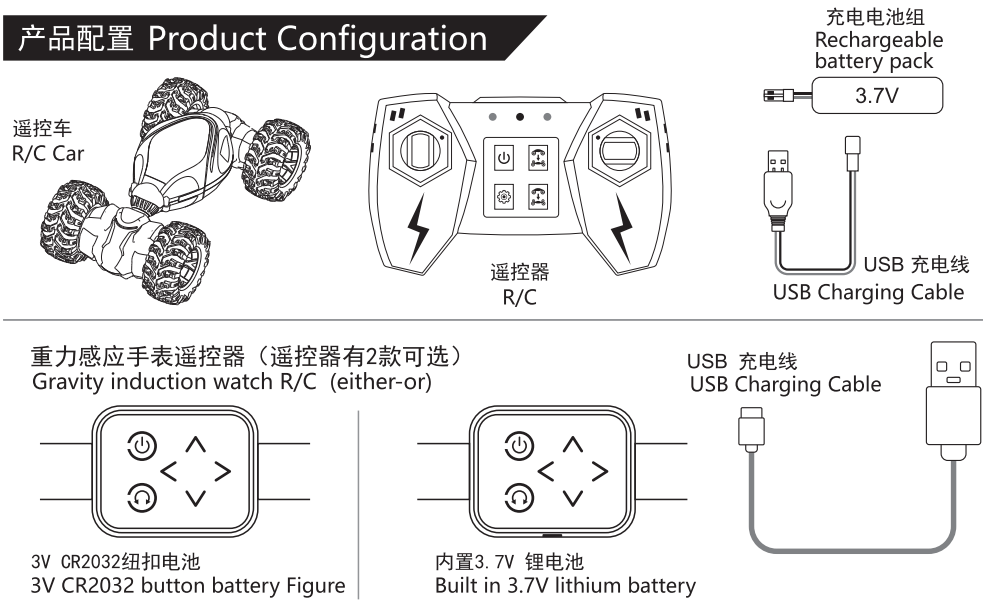

车身电池安装 Car Battery Installation

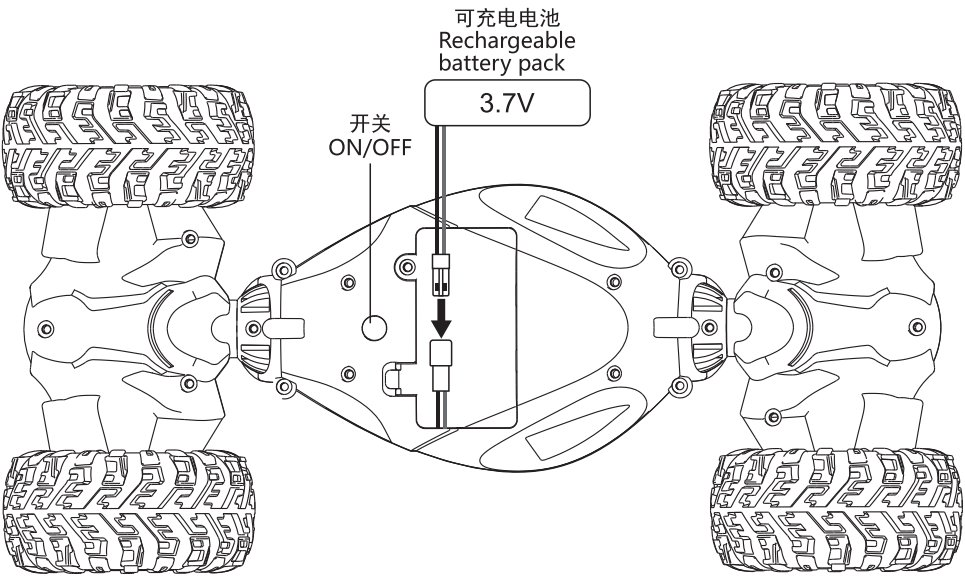


电池安装

打开电池盖，把 3.7V 可充电电池连接车底电源插口，并盖上电池盖。

Battery installation


Open the body battery cover, Connect the rechargeable battery pack to the power socket, Close the battery cover.

电池充电方式 Battery Charging Mode

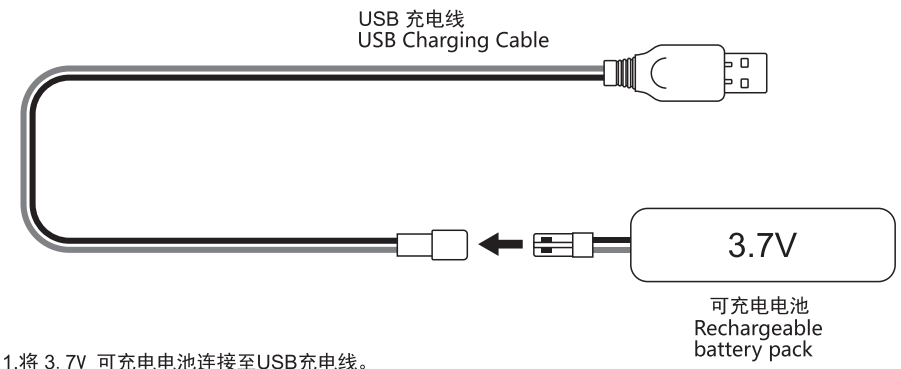


- 1.将 3.7V 可充电电池连接至USB充电线。
- 2.将USB充电线的另一端插入USB充电端口。
1. Connect the Rechargeable battery pack to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

R/C Function introduction and battery installation

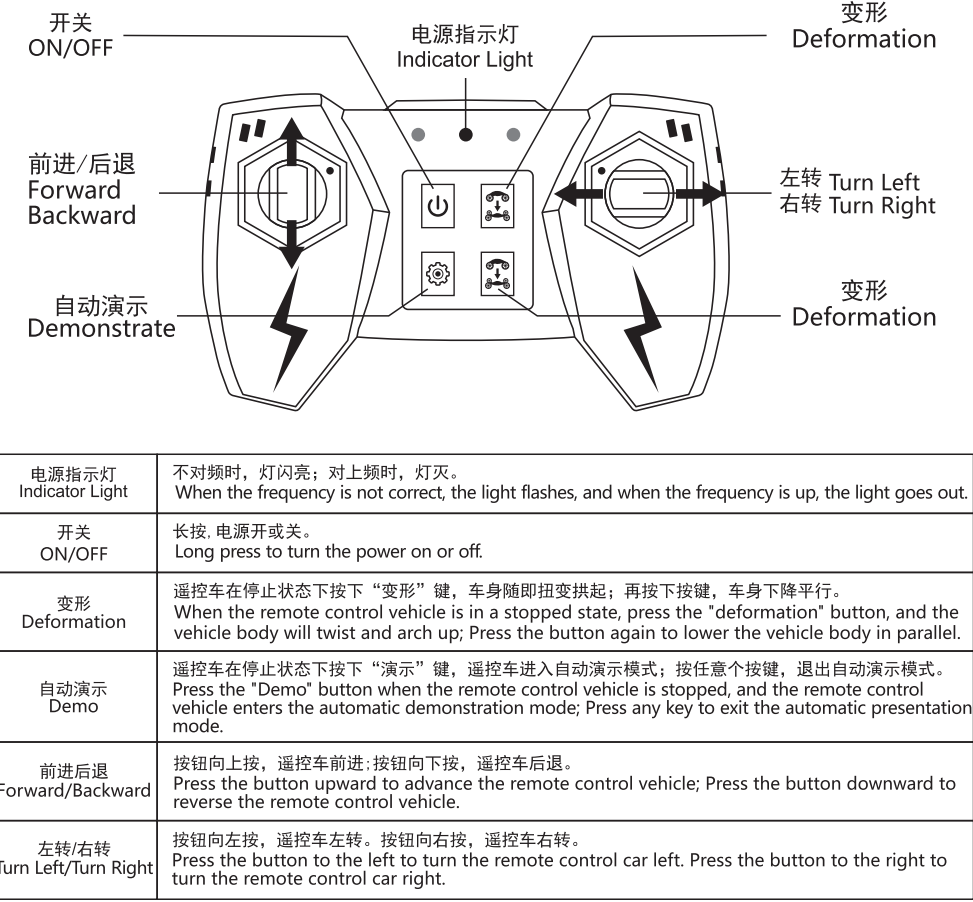


注意：遥控器与车的有效控制距离约为40米。不对频或对频时没操作，1分钟后休眠，如需操作，重置遥控器车和车的电源开关。
Note: The effective control distance between the remote control and the vehicle is approximately 40 meters. If the remote control is out of frequency or does not operate during frequency synchronization, it will hibernate after 1 minute. If operation is necessary, restart the remote control and the vehicle's power switch.

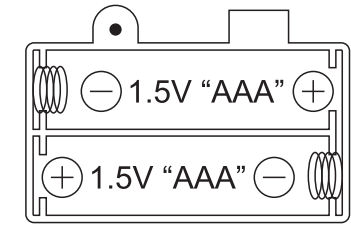

Battery installation

Open the body battery cover and install 2x1.5V'AAA' non-rechargeable batteries in the right polarity direction and cover the battery cover.


Function introduction of remote controller of gravity induction Watch

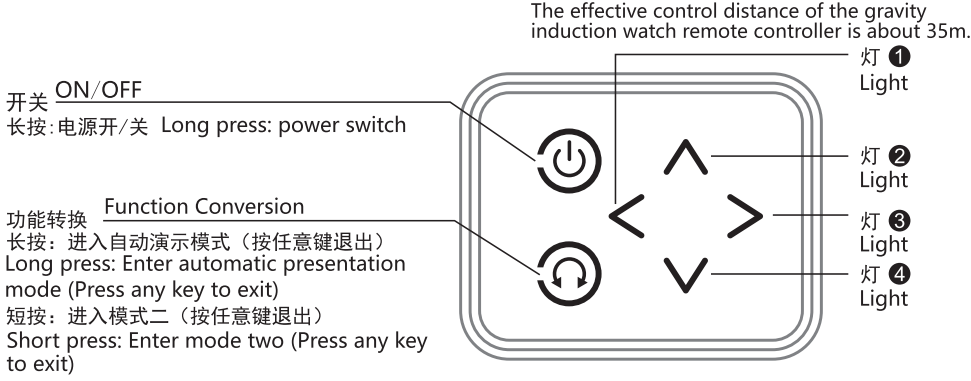

Gravity sensing watch remote control battery description


1. Gravity Induction remote controls (Operate as shown below)
2. Gravity Induction remote controls (Operate as shown below)
1. 内置3.7V 锂电池
2. 外置3V CR2032纽扣电池
1. Built in 3.7V lithium battery
2. 3V CR2032 button battery

BUILT-IN BATTERY CHARGING

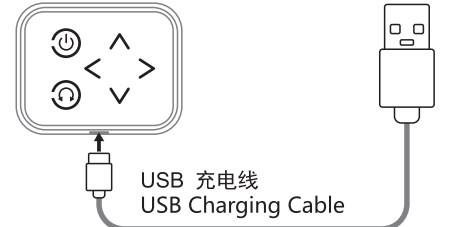


1. Connect the Gravity Induction R/C to the USB charging cable
2. Plug the other end of the USB charging cable into the USB port for charging

INSTALL THE BATTERY

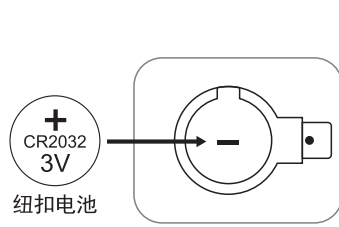

Open the battery cover, Install 3V CR2032 button battery, Close the battery cover.

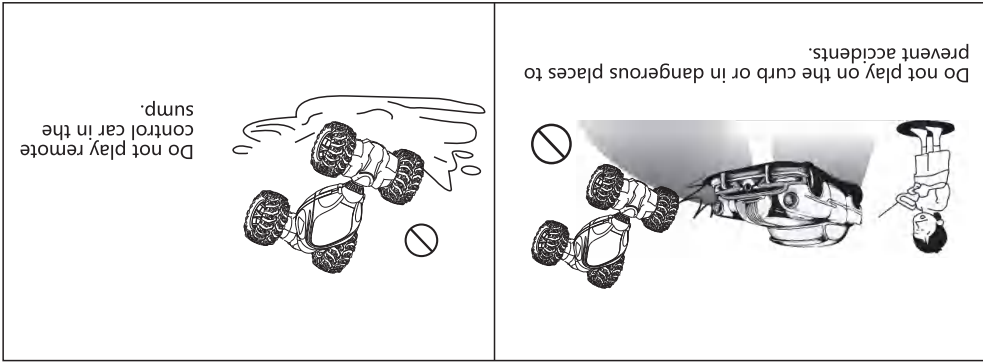


温馨提示 TIPS

1. Can not close to the fire, avoid direct sunlight, high temperature and humidity or long-term in the car, to avoid short circuit, fire.
2. Do not play with the car and remote control battery removal and the remote control car remote control back into the color box packaging, to avoid damage or deformation during transport or storage.
3. Remote control car with a damp cloth to gently wipe.

保养事项 Maintenance Matters

Battery chargers that use this toy must be regularly checked to prevent damage to the wires and other components and, if damaged, must be repaired for damage.







指示说明 Instructions

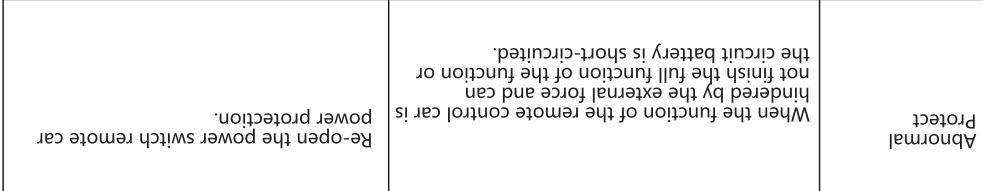

故障现象	故障原因	处理方法
Vehicle is Out Of Control	1. There is not enough power in left remote control battery or rechargeable battery pack. 2. There may be sources of interference near the site.	1. Replace the battery inside the remote control battery or rechargeable battery pack. 2. Change the venue.
Vehicle Can Not Drive	1. The remote control is not connected or the car does not load the remote control car switch is not turned on. 2. The controller of the car does not load the remote control car correctly.	1. Turn on the control car and connect the remote control car correctly. 2. Change the battery pack.
故障原因	故障原因	处理方法

一般故障处理 General Trouble Shooting

- * Before playing please charge the new battery pack.
- * The output voltage used by the charging plug should be 5V.
- * Rechargeable batteries can only be charged under adult supervision.
- * During charging, the light of the USB charging cable head is on red. When the light goes out, it indicates that the lithium battery is fully charged. The charging time is 3-4 hours.
- * Take out and put in the battery according to the mark on the toy battery room.
- * Non-rechargeable batteries cannot be charged.
- * Use only the same or identical battery as recommended.
- * Do not mix new old and new batteries or different types of batteries.
- * Batteries should be placed in the correct polarity.
- * Remove the exhausted battery from the toy.
- * Power terminals should not be short-circuited.
- * The charger must be checked regularly for damage to its wires, plugs, housings and other components. If damage is found, stop using the charger until it is repaired.

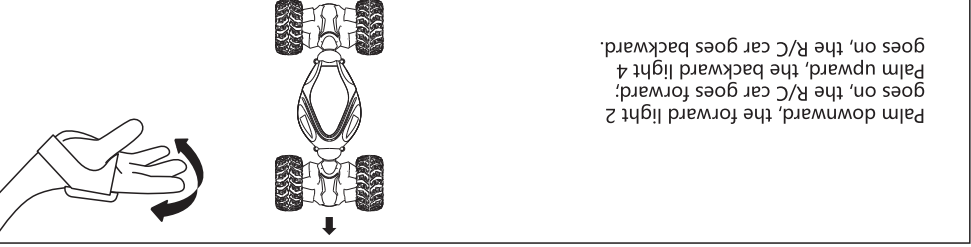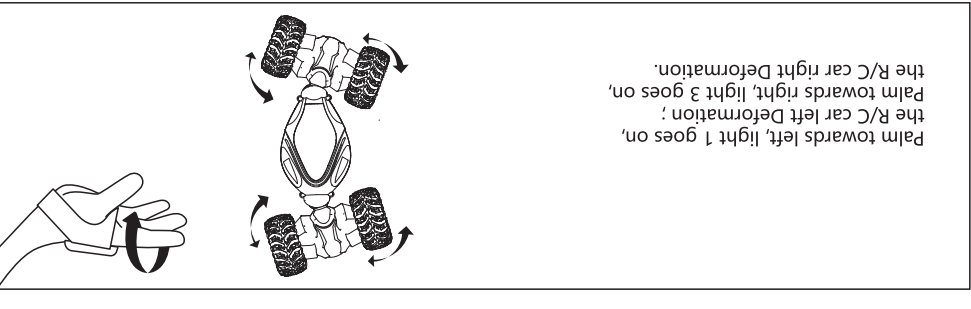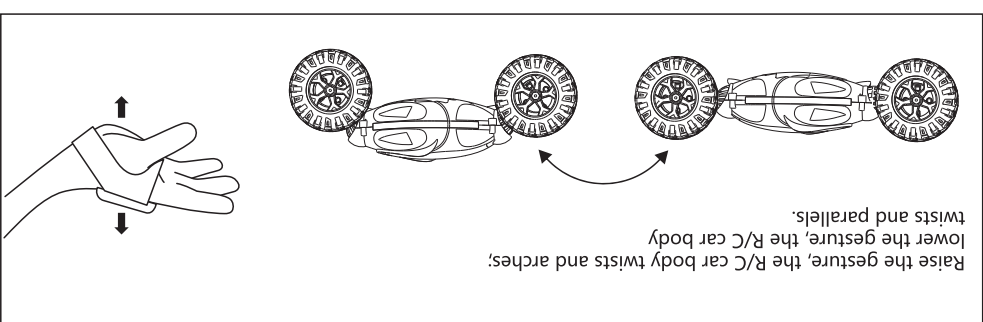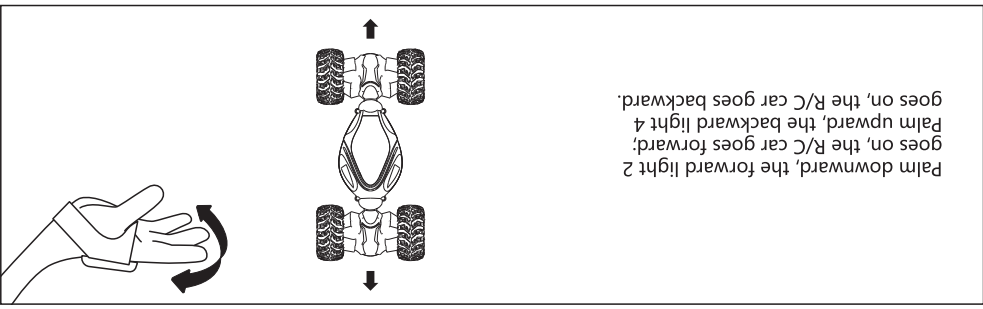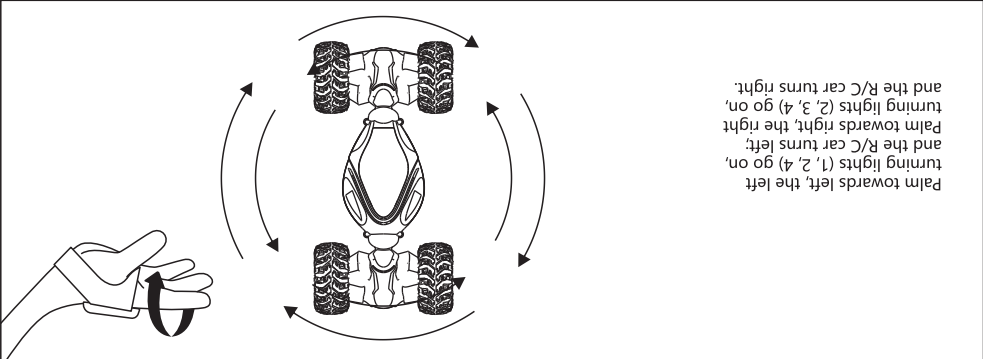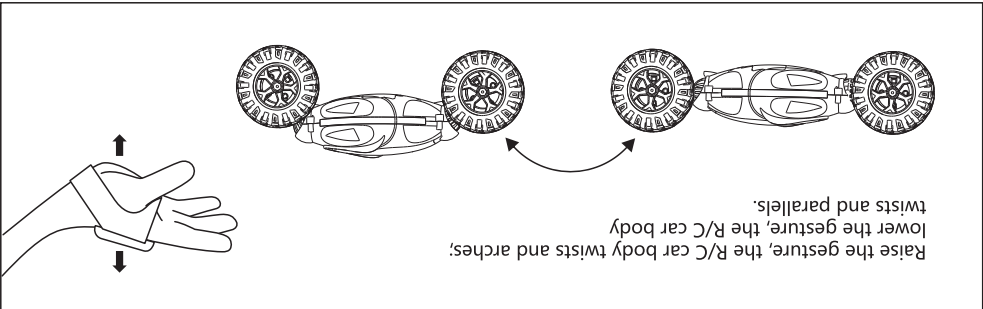

模式一 MODEL 1 Gravity induction watch R/C Operating instructions

1. Long press the power switch of the gravity remote controller to start the frequency alignment. When the frequency alignment succeeds, the light 2 and light 3 of the remote controller go on in case of no operation, the sleep mode starts one minute later.
2. When the frequency alignment fails, the power light of the remote controller and the light of the automobile body flash continuously. When the frequency alignment fails, please repeat the above operations.
3. No operation after frequency alignment. After 1 minute, the remote control car and remote control enter sleep mode, and the frequency alignment connection needs to be reconnected.

模式二 MODEL 2 Gravity induction watch R/C frequency alignment

1. First, turn on the power switch of the automobile body. The light of the automobile body flashes. Then, turn on the power switch of the remote controls, and start frequency alignment. When the frequency alignment succeeds, the light of the automobile body goes on.
2. When the frequency alignment fails, the power light of the remote controller and the light of the automobile body flash continuously. When the frequency alignment fails, please repeat the above operations.
3. No operation after frequency alignment. After 1 minute, the remote control car and remote control enter sleep mode, and the frequency alignment connection needs to be reconnected.

Handle Remote Control frequency alignment

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.