

H04 User Manual


Sleep Sound Machine & Alarm Clock



18-month Warranty
After-sales mailbox:
acedeckshop@outlook.com

Please read these instructions carefully before use
and retain for future reference.

Version 1.0

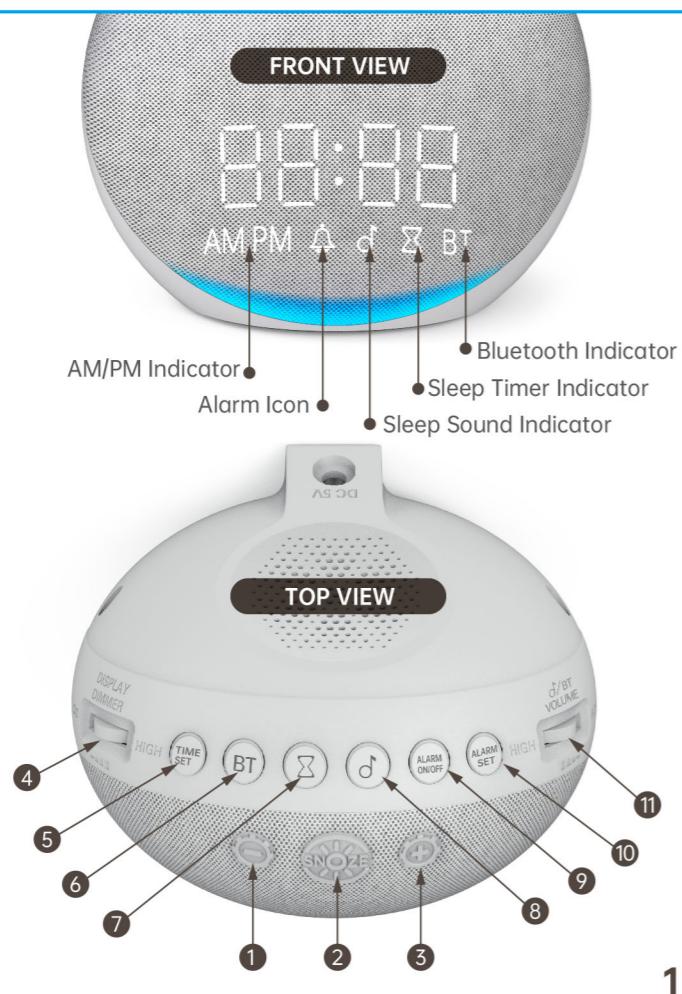


ALARM ON/OFF

Press "  " to switch the alarm on or off. The alarm icon will appear when the alarm is on.




ALARM SETTING


1. Press "  " first time to enter ALARM HOUR setting, the HOUR digits will flash on the display.
Press "  " or "  " to advance to the correct hour (hold for rapid setting). **HOUR Flash**

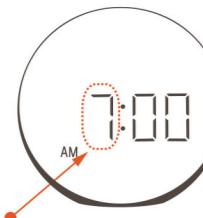

2. Press "  " second time to confirm and enter ALARM MINUTE setting, the ALARM MINUTE digits will flash on the display. Press "  " or "  " button to advance to the correct minute (hold for rapid setting). **MINUTE Flash**

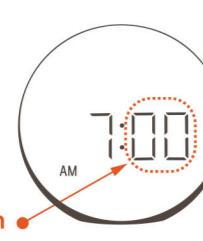

3. Press "  " third time to confirm and enter ALARM SOUND setting, the alarm sound options will flash and the alarm sound will ring. Press "  " or "  " to choose one of seven built-in alarm sounds (01=Birds Chirping; 02=Piano; 03=Flute; 04=Forest; 05=Wave; 06=Beep; 07=Buzzer)

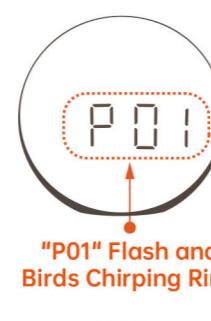

4. Press "  " fourth time to confirm and enter ALARM VOLUME setting, the alarm volume options will flash. Press "  " or "  " to adjust alarm volume with 01-32 level. The default alarm volume is 16 levels.



SNOOZE/TURN OFF ALARM DAILY

1. When the alarm goes off, press "  " button to snooze for a while, the alarm will go off again 9 minutes later.
2. To cancel the snooze at any time or to TURN OFF this day alarm while it is sounding, press "  ". The alarm will go off again at the same time the next day.
3. If not stop the alarm, it will last 15 mins before going silent.

6

SLEEP SOUND SETTING

1. Press "  " to turn on/off sleep sound.
2. When the sleep sound is on, press "  " or "  " to choose the sleep sounds (01-25).
3. Slide the "  " knob on the right side of the clock to adjust the volume.

Track List			
S01	Lullaby1	S14	Yoga
S02	Birds Chirping	S15	Meditation
S03	Ocean Wave 1	S16	Ocean Wave 2
S04	Shush	S17	Campfire
S05	Heartbeat	S18	Rain 2
S06	Rain 1	S19	White Noise
S07	Thunderstorm	S20	Pink Noise
S08	Brook	S21	Brown Noise
S09	Cricket Chirping	S22	Blue Noise
S10	Train	S23	Fan 1
S11	Forest	S24	Fan 2
S12	Wind	S25	Fan 3
S13	Lullaby 2		

NIGHT LIGHT SETTING


1. In normal time display mode, press "  " to turn on the night light.
2. Press "  " repeatedly to choose among 9 different night color options. 9 colors change as shown in the following sequence: RGB, orange, yellow, red, green, indigo, blue, purple, loop color.

GETTING STARTED

1. Plug the adapter into a standard household outlet, you will see 12:00 AM on the display and the clock is ready to be set.



2. Please remove the battery tab before use.

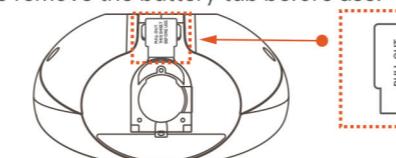

NOTICE:


1. If the display is "blank" after plugging in, please check whether the DISPLAY DIMMER on the left is at the HIGH Position.
2. Under the battery power, the display will go blank and preset alarm will not go off.

BLUETOOTH CONNECTION SETTING

1. Press "  " button to turn on Bluetooth. Press and hold "  " for 2 seconds to turn off Bluetooth. When Bluetooth is ON, the "BT" icon will flash on the display.



TIME SETTING

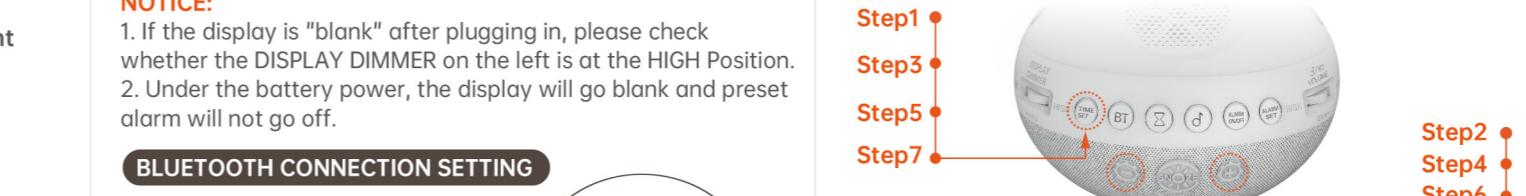

The time setting steps as follows:

Step 1: Press "  " first time to enter HOUR setting, the HOUR digits will flash on the display.
Step 2: Press "  " or "  " to advance to the correct hour (hold for rapid setting).

3

NOTICE:

1. The clock will exit automatically from the time setting mode if no action is taken within 8 seconds.

2. When using the 12-hour time format, the AM icon will be appeared for 12:00 midnight through 11:59am, and the PM icon will be appeared for 12:00 noon through 11:59pm.
3. 24-hour time format does not display AM or PM.

BRIGHTNESS CONTROL

There are 0-100% brightness levels for LED Display. Slide the DISPLAY DIMMER knob on the left side of the clock to adjust the display brightness (HIGH: 100%, LOW: 0%).

BATTERY MEMORY FUNCTION


The unit comes with a CR2032 back-up battery installed to provide continuous alarm operation and clock settings in the event of a temporary power failure.

1. Make sure the AC adapter is connected, or you will lose your time and alarm settings during battery replacement.



2. Use a Phillips screwdriver to open the battery compartment door.

3. Remove the exhausted battery from the compartment and insert 1 CR-2032 battery, checking that the battery polarity(+) is installed correctly. Replace the compartment door. Do not overtighten.

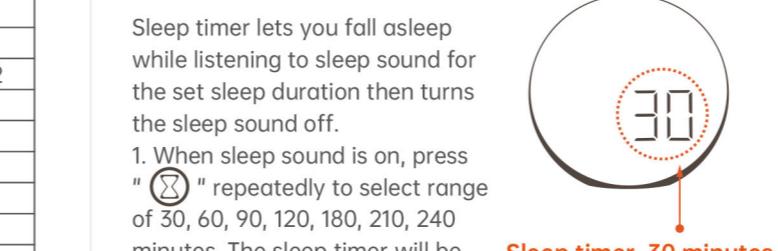

SPECIFICATIONS

Power Input: DC 5V/2.0A
Power: AC, 100-240V (50/60Hz)
Speaker Output: 5 Watt RMS

TROUBLESHOOTING

1. How Do I Fix Bluetooth Connection Issues?

- Confirm it's not paired with other devices.
- Forget all Bluetooth pairing records on your device.

9

- Unplug and remove the battery to reset, set again after power cycle.

- Disable and enable Bluetooth on your device.

- Try to connect the speaker to another device.

- Get customer support for help.

2. Alarm doesn't go off at the set time?

- Check if the alarm is set to AM or PM time;
- Check if the alarm is turn on (alarm icon display on the screen)

- Get customer support for help.

3. Display doesn't light up?

- Check if the power connection is loosed or not;
- Change another working outlet to try again;
- Slide the DISPLAY DIMMER knob to HIGH position in case the display is too dark to see.

- Get customer support for help.

4. How to turn off alarm daily?

- When the alarm goes off, pressing the "  " will turn the alarm off until the next scheduled time.

- Get customer support for help.

5. How to turn off the alarm completely?

- In the normal time display, you can turn the alarm off completely by pressing the "  ". The alarm icon will disappear when the alarm is disabled.

- Get customer support for help.

WARRANTY & SUPPORT

Any reason unsatisfied, feel free to contact us at:

acedeckshop@outlook.com

Acedeck customer service is always open for you.

10

11

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction