



User Manual

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Thank you for purchasing our massage chair.

This massage chair features an ergonomic design to provide multi-part massages targeting the back, waist, hips, legs, arms, and more. It offers a variety of massage techniques, including shiatsu, kneading, tapping, knocking, rolling, heating, and air squeezing.

Please read this manual carefully before using the chair, and pay special attention to the safety precautions to ensure proper operation and use.

Keep this user manual in a safe place for future reference.

Table of Contents

1. Safety Information	01
2. Product Structure and Specifications	04
3. Remote Control Instructions	05
4. Massage Procedure Instructions	06
5. Installation Steps/Methods.....	08
6. Daily Maintenance and Troubleshooting	09
7. Warranty and Support	11

Safety Information

Please read all instructions carefully before using this product. To reduce the risk of fire, burns, electric shock, or injury, follow these guidelines:

1. When the machine is not in use, ensure the electrical plug is removed from the socket promptly.
2. To avoid fire, electric shock, or injury caused by overheating, do not place the product under covers such as pillows or blankets.
3. If the product is being used near children or individuals with physical, mental, or cognitive disabilities, ensure adult supervision.
4. Use this product only as described in the manual. Do not use any attachments not recommended by the manufacturer.
5. Do not use the product if the power cord or plug is damaged, if the operation is abnormal, if it has been dropped or damaged, or if it has come into contact with water. Return the product to the service center for inspection and repair.
6. Do not pull the power cord to move the product or use it as a handle.
7. Keep the power cord away from heated surfaces.
8. Do not operate the product if the air outlets are obstructed. Keep the outlets free from dust, lint, and hair.
9. Do not insert or drop objects into any openings of the product.
10. Do not use this product outdoors.
11. Do not operate the product in places where aerosol products are being used or where oxygen is being administered.
12. When finished, turn off all controls and unplug the power cord from the socket.
13. Supervise children to ensure they do not use the massage chair as a toy to avoid accidents.

Warnings

- Do not use the massager in excessively humid or dusty environments to avoid electric shock or machine failure.
- Do not use the massager at room temperatures above 40°C (104°F).
- Do not place the massager near an electric heater, stove, or in direct sunlight.
- The massager is designed for personal use and is not suitable for any commercial purposes.
- The massager is intended for indoor use only.
- If the massager is used in a low-temperature environment, do not suddenly raise the temperature. Gradually adjust the temperature to the normal range before use.
- If the massager is moved from a very cold storage area to a warm environment, water vapor may accumulate in the machine parts, potentially affecting normal operation and causing machine failure.
- To ensure safe and proper use, please read the operation manual carefully before using the massager.
- Do not use the massager if its cover is damaged.
- To avoid reducing the massage effect or causing injury, do not use the massager in conjunction with other electric appliances such as electric blankets.
- Do not use the massager within one hour after eating to prevent any adverse effects. Additionally, do not use this product when your hands or other parts of your body are wet.
- Do not insert anything or any flammable objects into the massager. This can lead to electric shock, malfunction, or fire. Do not cover the massager during use to prevent overheating or fire.
- If you experience any discomfort during the massage, stop immediately.
- This product is not intended for self-diagnosis or treatment. If diagnosis or treatment is needed, it should be handled by professional medical personnel.
- If you are taking medication or have medical conditions, consult your doctor before using the massager. If you feel unwell or are pregnant, do not use this product.
- If you are pregnant or menstruating, consult your doctor first and follow their advice.
- It is recommended to use the massager for 15-30 minutes at a time. Before using it again, ensure the massager has been unplugged and has rested for at least 10 minutes. Continuous use for extended periods may activate the overheating protection device, causing automatic power failure.
- People who are not sensitive to heat on surfaces of appliances should be cautious when using the massager.
- Avoid using the massager after consuming alcohol or at inappropriate times.
- Do not massage the head, elbows, knees, chest, or abdomen directly.



- If liquid is accidentally spilled or poured on the massager, unplug it immediately. Do not plug in or unplug the power cord with wet hands.
- Do not use the massager if the power cord is damaged. This may cause electric shock or machine failure.
- If any of the following conditions occur, turn off the massager immediately, unplug it, and contact our company:
 - ◆ Water is accidentally splashed on the massager, which may cause electric shock.
 - ◆ The cloth cover of the massager is damaged, exposing internal parts.
 - ◆ If you experience abnormal or severe pain during the massage, stop immediately and seek medical advice.
 - ◆ If you notice any malfunction or abnormal condition during use, stop using it immediately.
 - ◆ In case of a power outage, be cautious to avoid injury when power is restored. Take extra care during thunderstorms.

Product Structure and Specifications

Product Name	Massage Chair
Product Voltage	110V
Product Power	100W
Frequency	60Hz



Remote Control Instructions

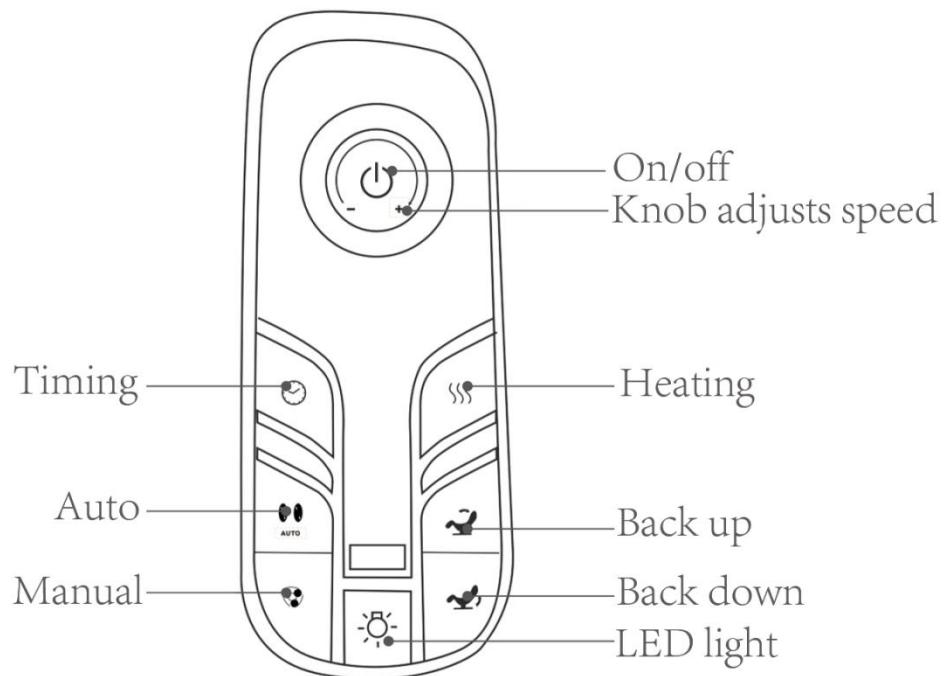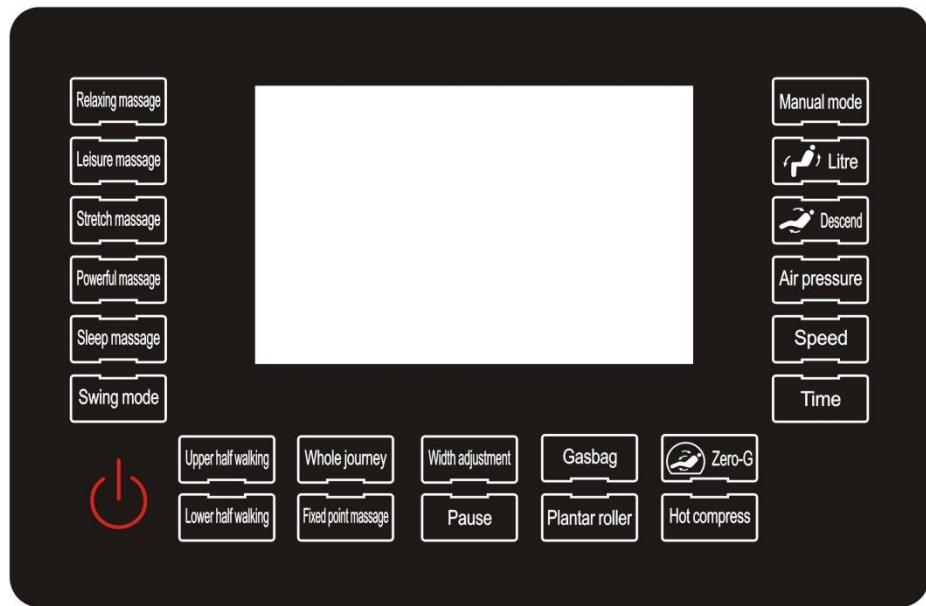

Massage Procedure Instructions

Getting Started

After turning on the machine, the backrest will recline for 10 seconds to enter relaxation massage mode.

Massage Modes

- **Relaxing Massage:** Activates the relaxing massage automatic mode.
 - **Functions:** All valves open, roller activated.
- **Leisure Massage:** Activates the leisure massage automatic mode.
 - **Functions:** All valves open, roller activated.
- **Stretch Massage:** Activates the stretch massage automatic mode.
 - **Functions:** All valves open, roller activated.
- **Powerful Massage:** Activates the powerful massage automatic mode.
 - **Functions:** All valves open, roller activated, maximum force applied.
- **Sleep Massage:** Activates the sleep massage automatic mode.
- **Swing Mode:** Chair swings back and forth 5 times with 5-minute intervals.
 - **Note:** In zero gravity mode, swinging is replaced by zero gravity.

Targeted Massages


- **Upper Half Walking:** Activates massage for the upper half of the back. Movement adjusts back and forth in the upper half of the track, adjustable in manual mode.
- **Lower Half Walking:** Activates massage for the lower half of the back. Movement adjusts back and forth in the lower half of the track, adjustable in manual mode.
- **Whole Journey:** Activates full back massage. Movement adjusts back and forth along the entire track, adjustable in manual mode.
- **Fixed-point Massage:** Keeps the massage at a specific point.

Adjustments and Controls

- **Width Adjustment:** Adjusts the width of the massage movements. Three settings available, adjustable in manual mode (hammering, acupressure, tapping).
- **Pause:** Pauses the current massage session. Press once to switch to manual mode with all functions off, press again to resume automatic mode 1 with all functions on.
- **Airbags:** Controls the airbag function.
 - **First Press:** All airbags on.
 - **Second Press:** Arms and hips on, legs off.
 - **Third Press:** Arms and hips off, legs on.
 - **Fourth Press:** All airbags off.
 - **Adjustable in manual mode.**
- **Plantar Roller:** Controls the foot roller and adjusts speed.
 - **First Press:** Roller at speed one.
 - **Second Press:** Roller at speed two.
 - **Third Press:** Roller at speed three.
 - **Fourth Press:** Roller off.
 - **Adjustable in automatic and manual modes.**

- **Zero-G:** Activates zero gravity mode, adjustable in manual mode.
 - **Note:** Activating this in swing mode will switch to zero gravity.
- **Heat:** Activates heat function.
- **Timer:** Adds 5 minutes to the session time, up to 30 minutes. Resets to 5 minutes after 30 minutes.
- **Speed:** Adjusts the speed of the massage movements. Three settings available, adjustable in manual mode (not adjustable in acupressure mode).
- **Air Pressure:** Adjusts the airbag pressure. Three settings available, adjustable in manual mode (at least one airbag must be on).

Installation Steps/Methods

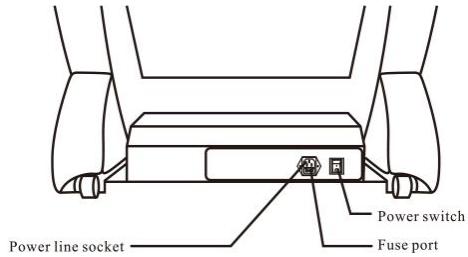

1. Power cord installation location



2. How to move the massage chair

- ❖ Stand on the top of the massage chair backrest and press down hard, lifting the lower leg off the ground.
- ❖ Tilt the backrest 40° to facilitate free movement of the massage chair indoors.
- ❖ Do not press down too hard to prevent the chair from tipping over completely and causing damage to the massage chair body.
- ❖ Do not move the massage chair when someone is sitting on it.
- ❖ Moving the massage chair may damage the floor, so it is recommended to place a mat under the product.

Attention:

1. Check and confirm that the power cord is not being pressed under the massage chair.
2. Ensure that the ground line is properly connected.
3. Before inserting the plug, make sure all operation buttons, including the power switch, are turned off.