


适用于14岁以上

Y-SERIES® (四轴飞行器) 遥控器使用说明书

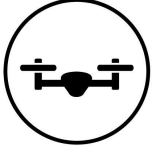


安全警告

- 本产品只适合14岁以上的人群使用
- 本产品必须在成人直接监护下使用
- 本产品含有细小零件请勿吞食以免发生窒息危险
- 请与高速旋转的螺旋桨保持安全距离, 以免发生绞伤
- 请用原厂配置的充电器充电
- 电机为发热部位请勿触摸, 以免发生烫伤
- 禁止在以机场为跑道中心为圆心, 半径5000米的区域类使用此模型
- 在国家有关部门发布无线电管制命令期间、区域类, 应要求停止使用此模型
- 锂电池的使用有一定的风险, 可能对人身及财产造成重大损失, 使用者应当承担相关责任。制造商和经销商不对电池的使用 (充电放电和储存等) 进行控制以及不对人身及财产造成的损失承担责任。

*请在使用前仔细阅读说明书并妥善保管以便日后参考。

认识你的遥控器

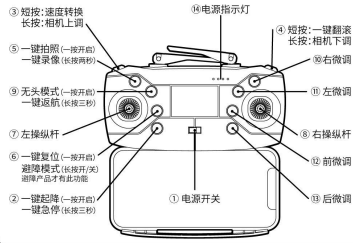

遥控器及飞行器电池安装方法

- 将遥控器装入3粒1.5A“AA”电池, 装上电池盖。
- 将电池插头和飞行器电源插头对接, 装进电池仓。
- 充电将电池插头对准充电线插头, 充电为60-120分钟。

遥控器与无人机电对频



-1-

②一键起降/一键急停(只有定高版本才有此功能)


- 对好码后按下一键起降按键, 飞行器自动起飞。
- 飞行中, 按下一键起降按键, 飞行器自动缓慢降落。
- 在飞行过程中意外坠落或者遇到危险情况需要紧急停止时, 长按三秒, 飞行器立刻停止工作。

③速度转换/相机上调(长按三秒)

- 飞行器配备了三个飞行速度档, 一键按下遥控器左上角的“速度转换”按键调节飞行速度。(飞行器默认设置为低速档)
- 长按三秒, 相机往上调(每上调一次都要长按一下)

④一键翻滚/相机下调(长按三秒)

- 当飞行器飞到3米以上高度后就可以进行翻滚动作了。按遥控器上的翻滚按键, 并将右操纵杆向一个方向移动, 可实现往此方向的翻滚动作。
- 长按三秒, 相机往下调(每下调一次都要长按一下)



⑤一键拍照/一键录像


- 拍照: 拍照键按一下, 飞行器指示灯闪烁一下拍照成功。
- 录像: 拍照键长按2秒, 录像飞行器指示灯闪烁两下进入录像模式, 在长按2秒取消录像。

-2-

⑥一键复位/长按避障

- 在飞行过程中因撞击或跌落出现偏飞时, 请控制飞行器返回至水平面上, 按下一键复位按键听到“滴”声, 进行陀螺仪校准, 再重新起飞。
- 飞行器稳定后, 长按三秒启动避障, 滴一声, 飞行器闪光灯即启动避障模式。关闭避障模式, 同样长按, 滴一声, 关闭成功。
- (避障模式为激光点识别障碍物功能)

基本飞行

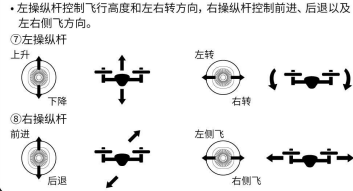

微调功能

- 当飞行器空中飞行偏向时, 偏向左边就按“右微调键”一下一下按到不偏即可。相同飞行器偏向后面, 就按“前微调键”校正即可。



-3-

⑨无头模式/一键返航

- 【一键开启无头模式】
- 把无人机放在遥控器正前方, 无人机的机头方向朝前, 对频后水平校准起飞, 飞行过程中按下无头模式按键, 遥控器一直滴、滴、滴, 表示无人机进入无头模式。此时无人机的前后指示灯慢闪, 若要退出无头模式, 再按下无头模式按键, 遥控器滴一声, 则退出无头模式。
- 【长按三秒开启返航模式】
- 请确保操作者从始至终都面对同一个方向, 与飞行器起飞时的方向一致。
- 长按三秒返航按键, 左控制杆控制飞行高度(右控制杆不用操作, 否则会退出返航模式), 飞行器会根据对频时的方向自动前后返回。当飞行器返回到安全可视范围后, 右操纵杆往前推取消。




遇到问题不用慌(故障指引)

问题	原因	处理方法
遥控器失灵	风力太大	把飞行器电池按正确方向连接
	遥控器电量不足	切勿在有风的情况下飞行, 有风会对飞行器造成阻碍, 或会妨碍你的控制飞行。
飞行器不能升高	放置转动速度太慢	更换遥控器电池
	飞行器未完成充电	动力操纵杆向上推
飞行器很快跌落	过快的回拉动力操纵杆	给飞行器完全充电
	缓慢的回拉动力操纵杆	缓慢的回拉动力操纵杆让飞行器慢慢着陆
失控	超出有效遥控距离	确保遥控器离在100米内, WIFI 操控在 40-50 米内

-4-

Suitable for over 14 years old

Y-SERIES® (Quadcopter) Remote Control Manual

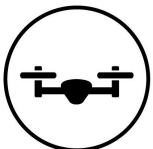


Safety Warning

- This product is only suitable for people over 14 years old.
- This product must be used under direct adult supervision.
- This product contains small parts. Do not swallow it to avoid suffocation.
- Please keep a safe distance from the propeller rotating at high speed to avoid scalding.
- Please use the original charger to charge.
- Do not touch the motor as a hot part to avoid burns.
- It is forbidden to use this model in the area with the airport as the center of the runway and a radius of 5000 meters.
- During the release of radio control orders by relevant national authorities, regional categories, and the use of this model should be stopped as required.
- The use of lithium batteries has certain risks, which may cause significant losses to people and property, and users shall bear relevant responsibilities. Manufacturers and distributors do not control the use of batteries (charging, discharging, storage, etc.) and are not liable for damage to their personal and property.

*Please read the instructions carefully before use and keep them for future reference.


Know Your Remote

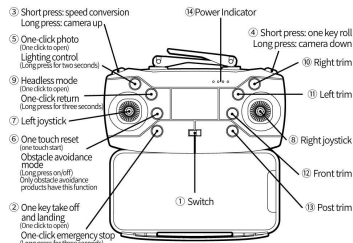

Remote control and aircraft battery installation method

- Put the remote control into 3 1.5A "AA" batteries and install the battery cover.
- The battery power plug connector and the aircraft docking, put into the battery.
- The rechargeable battery charging cord plug align charging 60-120 minutes.

Remote Control And Drone Frequency



-1-

② One-Key Landing/One-Key Emergency Stop


- After correcting the code, press a button to take off and land, the aircraft will take off automatically.
- During flight, press one button to take off and land, the aircraft will land slowly.
- When an accidental fall or an emergency stop is encountered during a flight, hold down for three seconds and the aircraft will stop working immediately.

③ Speed Conversion/Camera Up(Long press for three seconds)

- The aircraft is equipped with three flight speed gears. Press the "Speed Conversion" button in the upper left corner of the remote control to adjust the flight speed with one key. (The aircraft is set to low gear by default)
- LPRESS and hold for three seconds to turn the camera up (press and hold each time you turn it up)

④ One Key To Roll/Camera Down(Long press for three seconds)

- When the aircraft reaches a height of more than 3 meters, it can roll over. Press the scroll button on the remote control and move the right joystick in one direction to achieve scrolling in this direction.
- Press and hold for three seconds to adjust the camera down (press and hold for each adjustment)



⑤ One-Key Photo/One-Key Video

- Take a photo: Press the camera button once, the aircraft indicator flashes once and the photo is taken successfully.
- Video recording: Press and hold the photographing key for 2 seconds, the video aircraft indicator flashes twice to enter the video recording mode, and press and hold for 2 seconds to cancel the video recording.


-2-

⑥ One-Key Reset/Long press to avoid obstacles

- In the event of deflection due to impact or fall during flight, please control the aircraft to return to the horizontal surface, press the one-key reset button to hear a beep, perform gyroscope calibration, and then take off again.
- After the aircraft is stable, long press it for three seconds to start obstacle avoidance, and the aircraft flashes the light to start obstacle avoidance mode. Turn off the obstacle avoidance mode. Press and hold for a long time and click once to turn it off successfully. (Obstacle avoidance mode is the function of laser spot identification of obstacles)

Basic Flight

- The left joystick controls the flying height and the left-right turning direction, and the right joystick controls the forward, backward and left-right flying directions.

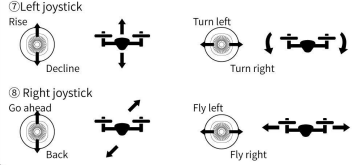

Fine Adjustment Function


- When the aircraft flying bias toward the left to press "right to fine-tune key" to the press about what can not be biased. If the same aircraft is tilted to the back, just press the "Front fine-tuning key" to correct it.



-3-

⑨ Headless Mode / One-Key Return

- Turn on headless mode with one click
- Place the UAV right in front of the remote control, with the nose of the UAV facing forward, and calibrate the takeoff horizontally after frequency calibration. Press the headless mode button during flight, and the remote control will drip, drip, and drip all the time, indicating that the UAV enters the headless mode. At this time, the front and rear indicator lights of the UAV will flash slowly. If you want to exit the headless mode, press the headless mode button again, and the remote control will drip to exit the headless mode. Please ensure that the operator faces the same direction from beginning to end, which is the same as the direction when the aircraft takes off.
- Press and hold for three seconds to turn on the home mode.
- Press and hold the return button for three seconds, and the left control lever controls the flight height (the right control lever does not need to be operated, otherwise it will exit the return mode), and the aircraft will automatically retreat and return according to the direction coordinate during frequency matching. When the aircraft returns to the safe visual range, push the right joystick forward to cancel.



Don't Panic If You Encounter Problems(Fault Guide)

Problem	The reason	Approach
Remote control fails	Aircraft battery is not connected	Connect the aircraft battery in the correct direction
	Too much wind	Do not fly in windy conditions. Windy winds may limit the aircraft or prevent you from flying.
The aircraft cannot be raised	The power of the remote control is insufficient	Replace the remote control battery
	Rotor speed is too slow	Power joystick push up
The aircraft fell quickly	The aircraft is not fully charged	Fully charge the aircraft
	Pull the power joystick back too quickly	Slowly pull back the power joystick to let the aircraft land slowly
Out of control	The effective r emote control distance is exceeded	Make sure the remote control distance is within 100 meters and WIFI control is within 40-50 meters

-4-

FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

RF Exposure Information

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.