



Quick Installation Guide

WS3000  
AX3000 Gigabit Wi-Fi 6 Router



https://app.iiwus.com/

If your internet source is an Ethernet cable coming from the wall directly instead of a DSL/Cable/Satellite modem, connect the Ethernet cable to the router's WAN port and skip steps 1, 2 ,3.

610600xxx


5 Connect your computer to the router (Wired or Wireless).

Wired


Turn off the Wi-Fi on your computer and connect it to router's LAN port via an Ethernet cable.

Wireless


Connect your device to the router's Wi-Fi using the SSID (network name) and Password printed on the bottom of the router.

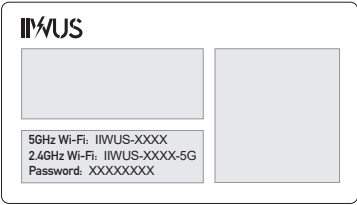

3 Turn on the modem and then wait about 2 minutes for it to restart.

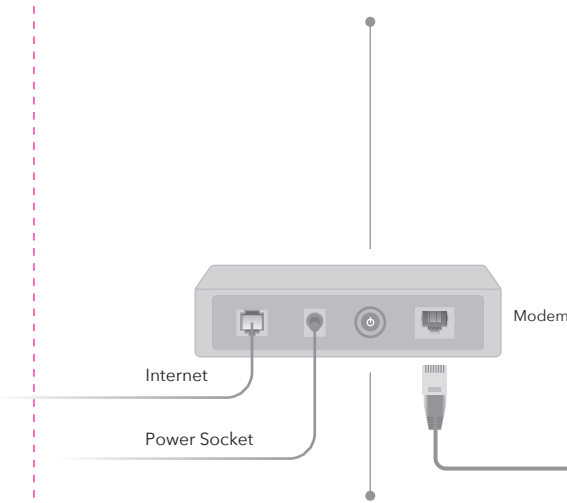

1 Turn off the modem and remove the battery if it has one.

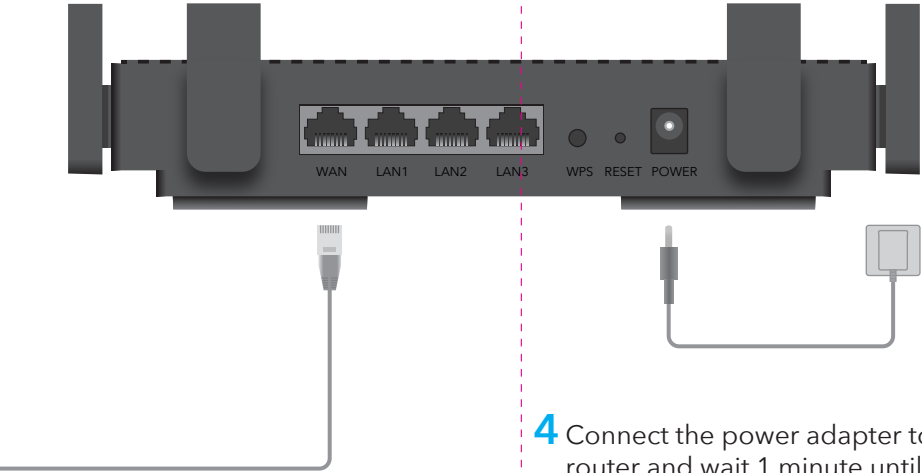


2 Connect router's WAN Port to DSL/Cable Modem/Ethernet.

4 Connect the power adapter to the router and wait 1 minute until the system LED changes from flashing to solid on (red or blue) , which means the system startup is completed.

6 Launch a web browser, and enter <http://iiwus.net/> or <http://192.168.10.1/> in the address bar. Create an administrator password to log in.



7 The window below will pop up, please follow the step-by-step instructions to set up the internet connection.

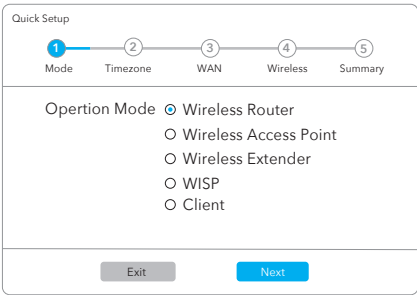

Enjoy the internet!

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement  
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules. This equipment must be installed and operated in accordance with provided instructions and the antenna(s) used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter. End-users and installers must be provided with antenna installation instructions and consider removing the no-collocation statement.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and  
(2) this device must accept any interference received, including interference that may cause undesired operation.

Caution!  
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Exposure  
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment and it also complies with Part 15 of the FCC RF Rules.

LED and Button

| Name   | Status   | Indication                                                                    |
|--------|----------|-------------------------------------------------------------------------------|
|        | OFF      | Not powered on                                                                |
|        | Flashing | System start-up process                                                       |
|        | ON       | System startup complete                                                       |
|        | OFF      | Not connected to the Internet                                                 |
|        | ON       | Connected to the Internet                                                     |
|        | OFF      | No connection at WAN port                                                     |
|        | ON       | WAN port has connection                                                       |
|        | OFF      | LAN port is not connected                                                     |
|        | ON       | LAN port is connected                                                         |
|        | Off      | 2.4GHz Wi-Fi off                                                              |
|        | Flashing | WPS in process                                                                |
|        | ON       | 2.4GHz Wi-Fi On                                                               |
|        | Off      | 5GHz Wi-Fi off                                                                |
|        | Flashing | WPS in progress                                                               |
|        | ON       | 5GHz Wi-Fi On                                                                 |
| Button | WPS      | Press and hold 1 second to enable the WPS function.                           |
|        | Reset    | Press and hold 2 seconds to reset the router to its factory default settings. |



Guía de Instalación Rápida



https://app.iivus.com/

Si su fuente de Internet es un cable Ethernet que viene directamente de la pared en lugar de un módem DSL/cable/satélite, conecte el cable Ethernet al puerto WAN del enrutador y omita los pasos 1, 2 y 3.


5 Conecte su computadora al enrutador (con cable o inalámbrico).

Cableado


Apague el Wi-Fi de su computadora y conéctelo al puerto LAN del enrutador mediante un cable Ethernet.

Inalámbrico


Conecte su dispositivo al Wi-Fi del enrutador usando el SSID (nombre de red) y la contraseña impresos en la parte inferior del enrutador.

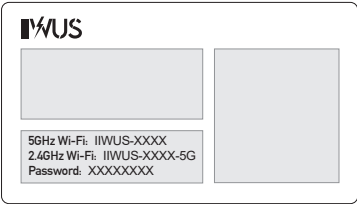

3 Encienda el módem y luego espere unos 2 minutos para que se reinicie.

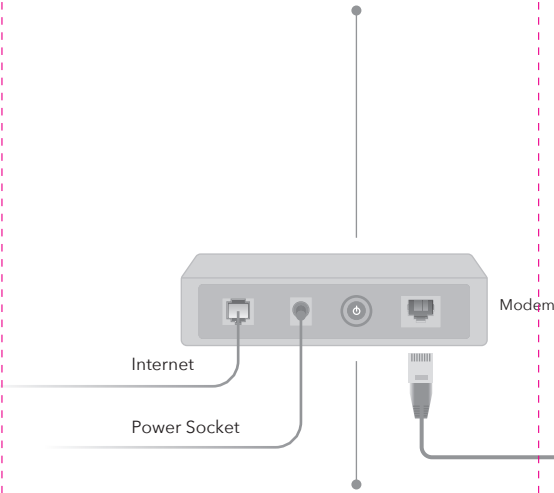

1 Apague el módem y retire la batería si la tiene.

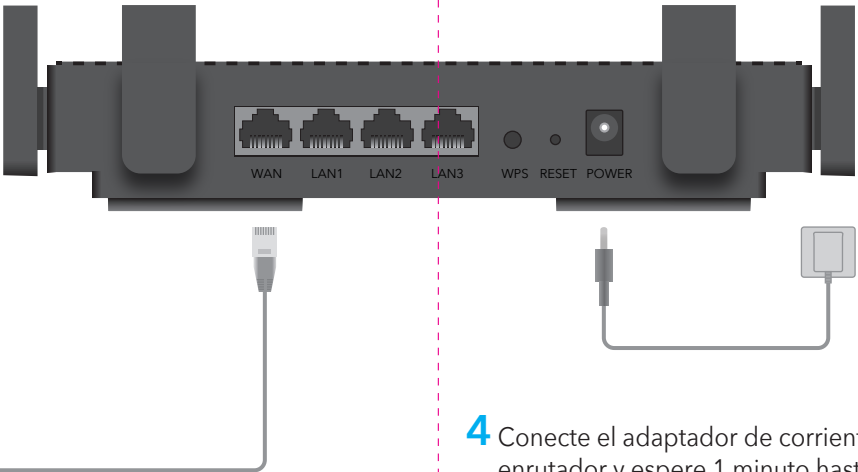


2 Conecte el puerto WAN del enrutador a DSL/módem por cable/Ethernet.

4 Conecte el adaptador de corriente al enrutador y espere 1 minuto hasta que el LED del sistema cambie de parpadear a fijo (rojo o azul), lo que significa que se completa el inicio del sistema.

6 Abra un navegador web e ingrese <http://iivus.net/> o <http://192.168.10.1/> en la barra de direcciones. Cree una contraseña de administrador para iniciar sesión.



7 Aparecerá la siguiente ventana; siga las instrucciones paso a paso para configurar la conexión a Internet.

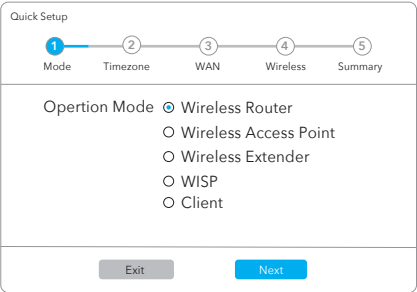

¡Disfruta de Internet!



This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada’s licence-exempt RSS(s). Operation is subject to the following two conditions:  
(1) This device may not cause interference.  
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L’ é metteur/r é cepteur exempt de licence contenu dans le pr é sent appareil est conforme aux CNR d’ Innovation, Sciences et D é veloppement é conomique Canada applicables aux appareils radio exempts de licence. L’ exploitation est autoris é e aux deux conditions suivantes :  
1) L’ appareil ne doit pas produire de brouillage;  
2) L’ appareil doit accepter tout brouillage radio é lectrique subi, m é me si le brouillage est susceptible d’ en compromettre le fonctionnement.

The device meets the exemption from the routine evaluation limits of RSS 102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.  
Le dispositif rencontre l’ exemption des limites courantes d’ é valuation dans de RSS 102 et la conformit é à l’ exposition de RSS-102 rf, utilisateurs peut obtenir l’ information canadienne sur l’ exposition et la conformit é de rf.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.  
Cet é metteur ne doit pas é tre Co-plac é ou ne fonctionnant en m é me temps qu’ aucune autre antenne ou é metteur. Cet é quipement devrait é tre install é et actionn é avec une distance minimum de 20 centim é tres entre le radiateur et votre corps.

The device for operation in the band 5150 – 5250 MHz is only for indoor use to reduce the potential for harmful interference to co-channel mobile satellite systems.  
Les dispositifs fonctionnant dans la bande 5150-5250 MHz sont r é serv é s uniquement pour une utilisation à l’ int é rieur afin de r é duire les risques de brouillage pr é judiciable aux syst è mes de satellites mobiles utilisant les m é mes canaux.

LED y Botón

| Name   | Status    | Indication                                                                                                         |
|--------|-----------|--------------------------------------------------------------------------------------------------------------------|
|        | APAGADO   | No encendido                                                                                                       |
|        | Brillante | Proceso de inicio del sistema                                                                                      |
|        | EN        | Inicio del sistema completo                                                                                        |
|        | APAGADO   | No conectado a Internet                                                                                            |
|        | EN        | Conectado a Internet                                                                                               |
|        | APAGADO   | No hay conexión en el puerto WAN                                                                                   |
|        | EN        | El puerto WAN tiene conexión                                                                                       |
|        | APAGADO   | El puerto LAN no está conectado                                                                                    |
|        | EN        | El puerto LAN está conectado                                                                                       |
|        | Apagado   | Wi-Fi de 2,4 GHz desactivado                                                                                       |
|        | Brillante | WPS en proceso                                                                                                     |
|        | EN        | Wi-Fi de 2,4 GHz activado                                                                                          |
|        | Apagado   | Wi-Fi de 5 GHz desactivado                                                                                         |
|        | Brillante | WPS en progreso                                                                                                    |
|        | EN        | Wi-Fi de 5 GHz activado                                                                                            |
| Button | WPS       | Mantenga presionado durante 1 segundo para habilitar la función WPS.                                               |
|        | Reset     | Mantenga presionado durante 2 segundos para restablecer el enrutador a su configuración predeterminada de fábrica. |

