



OpenWay Riva

500W ERT Module Installation Guide

Includes pit and remote-mount variants

Copyright © 2024 Itron Inc. All rights reserved.

Confidentiality notice

Confidential information of Itron Inc., provided under nondisclosure obligations. The information contained herein is proprietary and confidential and is being provided subject to the condition that (i) it be held in confidence except to the extent required otherwise by law and (ii) it will be used only for the purposes described herein. Any third party that is given access to this information shall be similarly bound in writing.

Trademark notice

Itron® and the Itron logo, ERT, OpenWay, and Riva are registered trademarks of Itron Inc. in the United States and/or other countries and regions. ChoiceConnect and Temetra are trademarks of Itron Inc. in the United States and other countries and regions.

All other product names and logos in this documentation are used for identification purposes only and may be trademarks or registered trademarks of their respective companies.

For more information about Itron trademarks, go to [Itron's Trademarks and Brands](#).

Contact us

For more information about Itron or Itron products, go to:

Email: support@itron.com

Itron Customer Center: customer.itron.com

Products and documentation: products.itron.com

Itron Technical Support North America: 1-877-487-6602

For regional technical support, go to www.itron.com and select your country and language.

For suggestions, questions, or other feedback concerning Itron product documentation, contact us at: ItronDocumentation@itron.com.

Contents

New in this document	6
1 Introduction	7
Pit modules versus remote-mount modules	7
Description	9
About this document	10
Related documents	10
2 Installation overview and prerequisites	11
Installation prerequisites	11
Pit module variant	12
Remote-mount module variant	14
3 Initializing and connecting	15
On encoder-type registers	15
Determining your meter type	15
About the Remote Disconnect Valve	15
Installing the Inline port	16
Pit module reto-fitting	17
Extending the cable	20
Remote-mount module connections	20
4 Installing the pit module	24
Important: read before installing	24
Installing through-the-lid	25
Through-the-lid mounting instructions	26
Installing the through-the-lid remote antenna	27
Mounting on a rod	30
Rod-mounting instructions	30
Mounting to a pit wall	33
Wall mounting instructions	34
5 Installing the remote module	37
Installing the module cable strain relief	37
Installing the backplate	38
Mounting on a flat surface	40

Flat surface mounting instructions	41
Mounting to a pipe	42
Pipe mounting instructions	43
Mounting on the adapter plate	44
Adapter plate mounting positions	44
6 Installing compatible components	46
Installing the Remote Disconnect Valve	46
For pit modules	46
For remote modules	48
Installing the Itron Cable Armor	49
Installing the Leak Sensor	50
7 Programming and verifying	52
Verifying operation	52
8 Using gel-cap connections to complete wiring connections	55
A Best practices	58
Pit modules	58
Remote modules	58
B Troubleshooting	60
Unable to read or program	60
Register and 500W ERT Module readings do not match	60
Register reading is not reported	62
Cut Cable or Previous Cut Detected is indicated	62
Cut Detected is indicated	63
Installing with commercial vaults	63
Leak Sensor not detected	63
C Events and alarms	65
D Important safety and compliance information	73
USA, FCC Part 15 spectrum compliance	73
USA, FCC Class B-Part 15	73
Modifications and repairs	73
Canada, ISED spectrum compliance	74
RF exposure (FCC/ISED)	74

Australia, ACMA spectrum compliance 74

New Zealand, RCM spectrum compliance 75

Lithium battery safety 75

Disconnecting power 75

Electromagnetic compatibility 75

Electrostatic discharge 75

Do not drop 76

New in this document

Table 1 Revision history

Revision	Date	Description
REV 010	August 20, 2024	■ This document was previously titled the <i>OpenWay Riva 500W ERT Module Pit Installation Guide</i>. It now includes what was previously titled the <i>OpenWay Riva 500W ERT Module Remote Installation Guide</i> (part number 815-0005-00). ■ Added part numbers for OpenWay Riva 500W ERT Module variants to Description on page 9.
REV 009	December 14, 2022	Removed erroneous row in Description on page 9 .
REV 008	November 9, 2022	■ Updated New Zealand, RCM spectrum compliance on page 75 ■ This document was previously called <i>500W ERT Module Pit Installation Guide</i>, and has been split into two documents – <i>Gen™ 5 500W ERT Module Pit Installation Guide</i> (part number: LDI-0344) – <i>OpenWay Riva 500W ERT Module Pit Installation Guide</i> (this document)

1

Introduction

The OpenWay Riva 500W ERT Modules are radio-frequency (RF) water modules featuring IPv6 open standards. The modules are designed to be read under Itron's multipurpose OpenWay Riva network mode or by legacy ChoiceConnect handheld, mobile and fixed network readers.



Figure 1 OpenWay Riva 500W ERT Module (pit variant on left, remote variant on right)

In OpenWay Riva network mode, the 500W ERT Modules offer firmware download, sub-hourly interval data, and extended data storage. In mobile mode, the 500W ERT Modules operate identically to the 100W+ Module and can be read by legacy ChoiceConnect handheld readers, mobile collection, and Itron's new Mobile Radio network readers. The 500W ERT Module continues Itron's tradition of reliability, accuracy, and long battery life while supporting the industry's standards for security.

Note: The OpenWay Riva 500W ERT Module was formally known as the OpenWay Riva Water Module. The UI associated with this device may reflect the former name.

Pit modules versus remote-mount modules

The 500W ERT Module comes in two variants: pit and remote mount. Which variant you use depends on the environment in which it is being installed.

Pit modules, as indicated by the name, are installed in the ground (read: pit). They are IP68 rated, which means they can endure short periods of water submersion and still operate as expected. They can be installed through a radio frequency (RF) friendly lid, on a pole or rod, and on a pit wall.

Pit-lid mounting is not intended for applications involving vehicular traffic. Use the remote antenna kit in incidental traffic areas (such as residential environments). The 500W ERT Module for pit installation works with cable lengths up to 300 feet. Use an Itron-approved extension cable.



Important! Pit installations are required to be installed in a RF-friendly pit lid. Endpoints that are not properly installed may be subject to negative performance.

The image below depicts the pit variant of the 500W ERT Module.



Remote modules are IP65 rated and designed with the possibility of UV exposure in mind. Remote modules can be installed indoors or outdoors, on a wall, or on a pole. The following image depicts a remote-mount 500W ERT Module.



Each variant has their own set of installation methods associated with them, which are described further in [Installation overview and prerequisites on page 11](#).

Description

Table 2 describes the location compliance and part numbers for pit variants of the 500W ERT Module.

Table 2 Location compliance and part number (for 500W ERT Module pit variants)

Description	Location compliance	Itron part number
500W ERT Module, four battery, register, remote antenna, and telemetry port	USA/Canada, Australia, Tonga	ERW-1601-001
500W ERT Module, four battery, register, and telemetry port	USA/Canada, Australia, New Zealand	ERW-1601-004
500W ERT Module, two battery, register, remote antenna, and telemetry ports	USA/Canada, Australia	ERW-1601-008
500W ERT Module, two battery, register, and three telemetry ports Note: Remote antenna is not approved for New Zealand.	USA/Canada, Australia, New Zealand	ERW-1601-009
500W ERT Module, four battery, register, remote antenna, and telemetry port	USA/Canada, Australia	ERW-1650-001
500W ERT Module, four battery, register, and telemetry port Note: Remote antenna is not approved for New Zealand.	USA/Canada, Australia, New Zealand	ERW-1650-004
500W ERT Module, two battery, and three telemetry ports	USA/Canada, Australia	ERW-1650-008
500W ERT Module, two battery, register, and telemetry port Note: Remote antenna is not approved for New Zealand.	USA/Canada, Australia, New Zealand	ERW-1650-009

Table 3 describes the location compliance and part numbers for remote variants of the 500W ERT Module.

Table 3 Location compliance and part number (for 500W ERT Module remote variants)

Description	Location compliance	Itron part number
500W ERT Module for remote installation, four battery, register and telemetry 10-inch flying lead	USA/Canada, Australia, Tonga	ERW-1601-002
500W ERT Module for remote installation, four battery, register and telemetry 10-inch flying lead	USA/Canada, Australia	ERW-1650-002

Table 3 Location compliance and part number (for 500W ERT Module remote variants) (continued)

Description	Location compliance	Itron part number
500W ERT Module for remote installation, two battery, register, and 10-inch flying telemetry lead	USA/Canada, Australia	ERW-1650-010

About this document

This document describes the requirements and procedures for initializing and installing both the 500W ERT Module in pit and remote environments. Readers can also find troubleshooting procedures and best practices for 500W ERT Module installation.

Related documents

The listed documents may also be of use to you. These documents, as well as other product documentation, can be accessed at <https://customer.itron.com/products>.

- *500 Modules Ordering Guide*
- *FC300 Getting Started Guide*
- [FDM Tools Mobile Application Online Help](#)
- *Field Deployment Manager (FDM) Tools Configuration Guide*
- *Field Deployment Manager Mobile Application Guide*
- [Field Tools Online Help](#)
- *Itron Mobile Radio Quick Reference Guide*
- *Itron Mobile Radio User Guide*
- *mlogonline Network Leak Monitoring System User Guide*
- *OpenWay Collection Manager Device Interface Guide*
- *OpenWay Riva 500W ERT Module Specification Sheet*
- *OpenWay Riva Leak Sensor Installation Guide*
- *OpenWay Riva 500W ERT Module Technical Reference Guide*
- *Water Meter and Telemetry Module Compatibility List*

2

Installation overview and prerequisites

Installing a 500W ERT Module involves several steps, which vary in number depending on whether you are installing via Itron's Zero Touch Deployment (ZTD) method. When installed with the ZTD method (also known as the auto-detect feature), the 500W ERT Module automatically senses which encoder-type register it is connected to. This also means that the user does not need to program the 500W ERT Module, which reduces the chances of programming mistakes and speeds up the installation process.

1. Connect and initialize the 500W ERT Module to the water meter register.
2. Install/mount the 500W ERT Module. This process varies based on the module variant and location. The utility is responsible for identifying which method is best for the environment in which they are installing their 500W ERT Module.
 - For pit installations, you can mount:
 - Through a plastic or composite (RF-friendly) pit lid.
 - On a 1/2" outside-diameter rod.
 - To a pit wall.
 - For remote installations, you can mount:
 - To a flat surface.
 - To a pipe.
3. Install accessories as needed.
4. (If using a pulse meter or Neptune 8 dial-encoded meter) Program the 500W ERT Module using an Itron-approved meter-reading application.
5. Verify operation using an Itron-approved meter-reading application (discussed further in [Installation prerequisites on page 11](#)).

When choosing installation locations, prioritize the area with the closest proximity to the intended reading device and with the least amount of obstructions.

Installation prerequisites

To ensure a successful installation, you must first identify and assemble some required tools. The materials required for your installation vary based on the module variant you are installing and where you are installing it.

All 500W ERT Module installations require the following:

- One of the following meter-reader application and device combinations:
 - **Field Tools** software on a user-supplied smartphone, laptop, or tablet running one of the following operating systems:
 - iOS® 14 – 16.5.1.
 - Android® 11.0 – 13.
 - Windows® 10 or 11.

For Field Tools programming instructions, see the [Field Tools for North American Gas and Water ERTs and Meters Help](#).

- **Field Deployment Manager (FDM) version 4.0** or later running on either:
 - A FC300SR handheld computer.
 - A supported Itron Mobile Radio (IMR) connected to a user-supplied computer or Bluetooth® device. Supported IMRs include:
 - IMR2.
 - IMR – Field Tools version (IMR-FT).

For FDM programming instructions, see the [FDM Tools Mobile Application Online Help](#).

- Security material. 500W ERT Modules operating with security, security materials (signed authorizations, secure commands, keys, and so on) must be passed along from the FDM Tools server to your Field Tools or FDM Tools mobile application during the sync process.

Your mobile device running FDM Tools or Field Tools must have an internet connection to request commands. If you aren't sure that you will be able to connect to the internet while out in the field, be sure to request all necessary commands before going out in the field.

- If using Field Tools: See the [Request commands](#) section in the *Field Tools for North American Gas and Water ERTS and Meters* documentation.
- If using FDM: See the [Retrieving Secure Commands from the FDM Server](#) section in the *FDM Tools Mobile Application* documentation.

Pit module variant

The 500W ERT Module can be installed via one of the methods described below. Take note of the requirements for your chosen mounting method.

Through-the-lid installation

The 500W ERT Module can be mounted in lids with hole sizes 1-3/4 inches to 2 inches big. Installation requires a:

- Through-the-lid mounting kit (part number CFG-1601-001), which includes:
 - Through-the-lid retainer clip.
 - Retainer clip collar.
- User-supplied RF-friendly pit lid with a pre-drilled hole.



Important! Pit installations are required to be installed in a RF-friendly pit lid. Endpoints that are not properly installed may be subject to negative performance.

Rod-mount installations

The 500W ERT Module can mount on a 1/2 inch outside-diameter rod. Installation requires a:

- Rod-mount adapter (part number CFG-1601-002).
- Remote antenna kit (CFG-0900-003).

Users must also supply a:

- 1/2-inch outside-diameter rod (you may use either a square or round rod).

Note: For mounting rods available from Itron, see the *500W Module Ordering Guide*.

- Hammer.
- Tape measure.
- Rod cutting tool.

Wall mount installations

The 500W ERT Module can mount to a wall or other flat vertical surface. Installation requires a:

- Rod-mount adapter (part number CFG-1601-002).
- Remote antenna kit (CFG-0900-003).

Users must also supply a:

- Screw driver/electric drill.
- Screw.

Wire termination

In the occasional event that an installation requires a splice kit to retrofit the pit module to an existing meter in the field you may need wire termination tools, including:

- E-9E 3M[®] gel port crimping tool (or other 3M-approved crimping tool).
- Itron splice kit (part number OEM-0034-002).

Remote-mount module variant

All remote-mounting installation methods require:

- A remote mount kit (part number CFG-1300-003), which includes:
 - An adapter plate.
 - Remote mount screws.
 - Mounting screws.
 - Cable ties.
 - Tamper seals.
- A #2 Phillips screwdriver (user supplied).
- Tools for cable strain relief installation (user supplied), including:
 - Side cutter pliers.
 - Gel-port crimping tool.
 - Cable tie gun.
 - Torx T-15 screwdriver.
- Wire termination tools, including:
 - E-9R 3M[®] gel port crimping tool (or other 3M-approved crimping tool).
 - Itron splice kit (part number OEM-0034-002).

The 500W ERT Module can be installed via one of the methods described below. Take note of the requirements for your chosen mounting method.

Flat surface installation

The 500W ERT Module can mount to a wall or other flat vertical surface. Installation requires a:

- Drill (electric) and drill bit.
- Nut driver or a similar tool.
- *(Optional)* Level.

Mounting to a pipe installation

The 500W ERT Module can mount on a pipe vertically, diagonally, or horizontally. Installation requires one of the following pipe mount kits:

- Pipe mount kit for pipe diameters between 1-5/16" to 2 1/4" (part number CFG-0217-504).
- Pipe mount kit for pipe diameters between 3/4" to 1-3/4" (part number CFG-0217-503).
- Pipe mount kit for pipe diameters up to 4" (part number CFG-0217-501).

3

Initializing and connecting

This chapter provides the instructions to initialize and connect the 500W ERT Module to the meter or register. Remote 500W ERT Modules must be connected to the register or meter before they can be installed.

For normal activation, connect the 500W ERT Module to the water meter register. The module polls for a register every hour and automatically activates after it detects a register.

To obtain a meter reading sooner than the top of the next hour, use one of devices listed in [Installation prerequisites on page 11](#) to perform a **Check Endpoint** (if using FDM Tools) or **Check** (if using Field Tools).

On encoder-type registers

The 500W ERT Module's auto-sensing technology eliminates the need to initialize the module at the time of installation. The module automatically detects the connected register type. Register consumption values are automatically updated at the top of each hour.

When started, the 500W ERT Module automatically:

- Detects the connected register type at the top of the hour, exits factory ship mode, and enters run mode.
- Detects a telemetry device such as an Itron Leak Sensor or a Remote Shutoff Valve.

Determining your meter type

To identify your meter type and whether its compatible, refer to the *Water Meter and Telemetry Module Compatibility List*. All documentation can be found on <https://customer.itron.com/products>.

About the Remote Disconnect Valve

The Smart Earth Technologies (SET) or Aquana Remote Disconnect Valve is used in conjunction with 500W ERT Module installations to control water service interruptions without the need to remove the water meter. Because it is remote controlled, the Remote Disconnect Valve provides water utilities with a non-intrusive means of managing customer disconnects and reconnects that traditionally required on-site visits.

You can install the Remote Disconnect Valve at the same time as the 500W ERT Module or later in its lifetime. For more information, see [Installing the Remote Disconnect Valve on page 46](#).

Installing the Inline port

Note: This procedure applies only to pit modules. If you are installing a remote-mount module, skip to [Remote-mount module connections on page 20](#).

The Itron's Inline port (ILC) system incorporates O-ring sealed twist-lock ports to ensure a water-tight attachment. New 500W ERT Modules can be ordered with the ILC system attached. This section describes attaching the ILC if adding it after purchase.

500W ERT Modules have two ILC ports: one for registers and one for telemetry devices. Itron advises customers to use meters with Itron's ILC cable. If you are installing on a meter without the ILC cable, go to [Pit module retro-fitting on page 17](#) and follow the wiring instructions to splice the ILC cable. When the cable is spliced, return to this section to follow the procedure below.

1. Remove the port protector.
2. Remove the protective dust cap from the register port and, if they installing a telemetry device at the same time as a meter, the environmental cap from the telemetry port.
3. Verify that the port ends are clean and dry before assembly.

If any of the following conditions occur, do not install the modules.

- Any of the three pins are damaged or missing.
 - The O-ring is missing.
 - The meter or telemetry device cable is cut or nicked.
4. Remove the protective cap from the register or accessory cable.
 5. Connect the register cable to the 500W ERT Module port.
 - Align the ports.
 - Push until snug.
 - Twist the register cable's black coupling nut to align the two tabs.
 6. Install the tamper seal.
 - Align the top half of the tamper seal with the tamper seal holes on the register port and guide it through.
 - Push together the male and female ends of the tamper seal until you feel them click

together.



For future meter or servicing, break the security seal by pulling the seal apart.



7. Shield ports with protective environmental caps. Do not leave an exposed port in the field.

The original protective port caps can be reused if kept clean and dry. Install a new security seal after servicing either device. To order replacement security seals, see the *500W Modules Ordering Guide*. Environmental caps employ multiple seals to protect the port from the environment. Environmental cap design allows utilities to install the 500W ERT Module and, at a future date, install a Leak Sensor or Remote Disconnect Valve (for more information about the Remote Disconnect Valve, see [Installing the Remote Disconnect Valve on page 46](#)).

Pit module retro-fitting

Retro-fitting a 500W ERT Module that doesn't use an Itron ILC cable to an existing meter in the field requires the user to splice an ILC (In-line Connector) cable to a water meter. Connect the ILC cable to a compatible water meter using the wiring diagrams below:

- [Table 4](#) for encoder-type registers
- [Table 5](#) for pulser-type registers

If necessary, a five-foot flying lead cable can be purchased separately. Note that wiring is only used if the customer needs to splice to an existing meter.



Caution: Itron recommends 500W ERT Module connections be completed using this wiring with the inline port. In rare instances, if a spliced connection is made, the Itron splice kit must be used (Itron part number OEM-0034-002). For more information, see [Using gel-cap connections to complete wiring connections on page 55](#).

Table 4 Encoder-type meter register connections to pit module wires

Register manufacturer	500W ERT Module red wire (data) to:	500W ERT Module black wire (power/clock) to:	500W ERT Module white wire (ground) to:
■ Badger ADE – E Series – HR E LCD – HR E Mechanical	Green	Red	Black
■ Badger M5000 Mag Meter	Green: Out 4+	Red: Input +	Black: Input - and Out 4-
■ Diehl Hydrus	Green - Nicor Red - Itron	Red - Nicor Black - Itron	Black - Nicor White - Itron
■ Elster AMCO SM 700 (Severn Trent), Q200 (Sensus Protocol)	Green	Red	Black
■ Elster AMCO InVision – AquaMaster III – AquaMaster – Scancoder	Red	Green	Black
■ Elster AMCO Mag Meter – evoQ4 – (Sensus Protocol)	Red	White	Black
■ Itron (Actaris) Cyble Coder	Green	Red	Black
■ Kamstrup flowIQ2100	Green	Red	Black
■ MasterMeter AccuLinx – Octave	Green	Red	Black

Table 4 Encoder-type meter register connections to pit module wires (continued)

Register manufacturer	500W ERT Module red wire (data) to:	500W ERT Module black wire (power/clock) to:	500W ERT Module white wire (ground) to:
■ McCrometer	Data port/green	Clock/red	Gnd port/black
■ Metron Farnier OER	Green	Red	Black
■ Mueller (Hersey) Translator, SSR	Green	Red	Black
■ Neptune ProRead, ProRead Auto-Detect – ARB-V – E-Coder	Red	Black	Green
■ Performance ETR	Green	Red	Black
■ RG3 Tomahawk	Green	Red	Black
■ Sensus ECR – ICE – iPERL – OMNI – SRII	Green	Red	Black
■ Siemens Mag Meter – Mag8000-7ME6810 – Mag8000CT-7ME6820	92	91	93
■ Zenner (Hendey) ETR	Green	Red	Black

Table 5 Pulser-type meter register connections to pit module wires

Register manufacturer	500W ERT Module red wire to:	500W ERT Module black wire to:	500W ERT Module white wire to:
■ Badger RTR (3-wire)	Red	Black	Green
■ Badger RTR (2-wire)	Red	Black	No connection
■ Badger M5000 Mag Meter	Red: Out 1+	Black: Out 1-	White: Out 1+
■ Cadillac Meter CMAG/EMAG Magnetic Flow	DO1/DO2	COM	DO1/DO2
■ Elster Digital	Black	Green	Red

Table 5 Pulsar-type meter register connections to pit module wires (continued)

Register manufacturer	500W ERT Module red wire to:	500W ERT Module black wire to:	500W ERT Module white wire to:
■ Elster V100T	Black	Red	Blue
■ Itron (Actaris) ■ Flostar (2-wire) ■ Cyble Sensor	Either wire	Remaining wire must be connected to both 500W ERT Module wires	Remaining wire must be connected to both 500W ERT Module wires
■ Krohne IFC	Terminal B	Terminal H	Terminal B
■ RG3 Tomahawk	Green	Black	Green
■ Sensus PMM	Red	Black	Bare

Extending the cable

When in a deeper than average pit, Itron recommends ordering the 25-foot inline port extension cable assembly (CFG-0151-404) to extend the 500W ERT Module's cable. The use of this cable allows for good RF performance even when in a deep pit.

Remote-mount module connections

Connect the wires from the 500W ERT Module to the register's port cable according to:

- [Table 6](#) for encoder-type registers
- [Table 7](#) for pulser-type registers

Direct wire to the meter register using the register's internal wires. You can also employ Itron-approved cabling in lengths up to 300 feet.

Note: Itron recommends 19-26 gauge, pre-bonded or solid conductor wire with a maximum diameter of .082 inches (individual wire insulation). The use of unbonded wire may produce an unreliable connection when using gel caps for joining wires.

Table 6 Encoder-type meter register connections to remote-mount module wires

Register manufacturer	500W ERT Module brown wire (data) to:	500W ERT Module gray wire (power/clock) to:	500W ERT Module yellow wire (ground) to:
■ Badger – ADE E Series – HR E LCD – HR E Mechanical	Green	Red	Black
■ Badger – M5000 Mag Meter	Green: Out 4+	Red: Input +	Black Input - and Out 4 -

Table 6 Encoder-type meter register connections to remote-mount module wires (continued)

Register manufacturer	500W ERT Module brown wire (data) to:	500W ERT Module gray wire (power/clock) to:	500W ERT Module yellow wire (ground) to:
■ Elster AMCO – AquaMaster – AquaMaster III – Invision – Scancoder	Red	Green	Black
■ Diehl – Hydrus	Green - Nicor Red - Itron	White - Nicor Black - Itron	Brown - Nicor White - Itron
■ Diehl – Hydrus		Black	White
■ Elster AMCO – evoQ4 (Sensus Protocol) – Q200 (Sensus protocol) – SM 700 (Severn Trent)	Green	Red	Black
■ Elster – AMCO evoQ4 Mag	Red	White	Black
■ Itron (Actaris) – Cyble Coder	Green	Red	Black
■ Kamstrup – flowIQ2100	Green	Red	Black
■ MasterMeter – Acculinx Octave	Green	Red	Black
■ McCrometer	Green/data port	Red/clock port	Black/GND port
■ Metron Farnier – OER	Green	Red	Black
■ Mueller (Hersey) – Translator SSR	Green	Red	Black
■ Neptune – E-Coder ARB-V – ProRead – ProRead Auto-Detect	Red	Black	Green

Table 6 Encoder-type meter register connections to remote-mount module wires (continued)

Register manufacturer	500W ERT Module brown wire (data) to:	500W ERT Module gray wire (power/clock) to:	500W ERT Module yellow wire (ground) to:
■ Performance – ETR	Green	Red	Black
■ RG3 – Tomahawk	Green	Red	Black
■ Sensus – ECR – ICE – iPERL – OMNI – SR11	Green	Red	Black
■ Siemens Mag Meter – Mag8000-7ME6810 – Mag8000CT-7ME6820	92	91	93
■ Zenner (Hendey) – ETR	Green	Red	Black

Table 7 Pulser-type meter register connections to remote-mount module wires

Register manufacturer	500W ERT Module brown wire to:	500W ERT Module gray wire to:	500W ERT Module yellow wire to:
■ Badger RTR (3-wire)	Red	Black	Green
■ Badger RTR (2-wire)	Red	Black	No connection*
■ Badger M5000 Mag Meter	Red: Out 1+	Black: Out 1-	White: Out 1+
■ Cadillac Meter CMAG/EMAG ■ Magnetic Flow	DO1/DO2	COM	COM
■ Elster Digital	Black	Green	Red
■ Elster V100T	Red & blacks	Blue	Yellow

Table 7 Pulser-type meter register connections to remote-mount module wires (continued)

Register manufacturer	500W ERT Module brown wire to:	500W ERT Module gray wire to:	500W ERT Module yellow wire to:
■ Itron (Actaris) ■ Flostar (2-wire) ■ Cyble Sensor	Either wire	Remaining wire must be connected to both gray and yellow 500W ERT Module wires	Remaining wire must be connected to both gray and yellow 500W ERT Module wires
■ Krohne IFC	Terminal B	Terminal H	Terminal B
■ RG3 Tomahawk	Green	Black	Green
■ Sensus PMM	Red	Black	Bare

*Itron recommends terminating unconnected wires with a gel-cap port to protect the bare wire end. See [Using gel-cap connections to complete wiring connections on page 55](#) for more information.


4

Installing the pit module

This section describes the Itron-approved pit installation methods for the 500W ERT Module and its necessary and optional accessories. Install the 500W ERT Module adhering to the guidelines set forth and with one of the methods described in this chapter.

Important: read before installing

- Pit installations are required to be installed in a RF-friendly pit lid. Endpoints that are not properly installed may be subject to negative performance.
- The 500W ERT Modules are temperature rated from -30°C to +60°C. Do not install the 500W ERT Module in locations that may exceed the temperature rating.
- The 500W ERT Module is shipped with a protective cover over the ports. The protective cover must be fully engaged over the ports until the module is installed to protect the module's ports from damage.

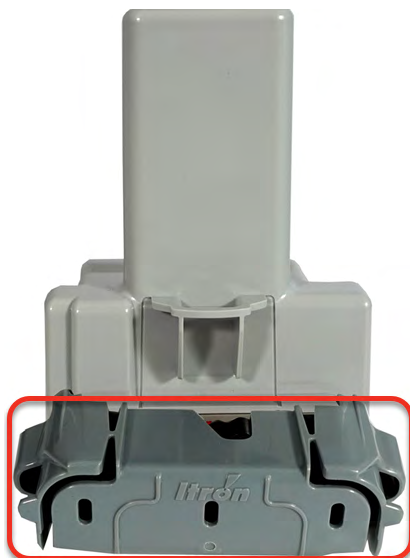

- While Itron modules are designed to withstand a drop, dropping the module may damage the device and void the warranty.
- The 500W ERT Module works accurately with cable lengths up to 300 feet. Use an Itron-approved extension cable.
- Pit module positioning other than upright will negatively affect radio performance.

- Internal circuit board components are sensitive to electrostatic discharge. Be careful not to touch any part of the meter body, register housing, or module prior to discharging any static buildup on your person. To discharge yourself, touch a grounded metal object such as the metal water pipe or an earth-grounded metal structure.

Installing through-the-lid

This section provides instructions to mount the 500W ERT Module in a plastic or composite pit lid of 1/2-inch to 2.5-inch thickness with a drilled, round 1-3/4-inch, 1-7/8-inch, or 2-inch hole.



Figure 2 Through-the-lid installation required components

The following procedure assumes you have:


- The components described in [Installation prerequisites on page 11](#) and [Through-the-lid installation on page 12](#)
 - The figure above depicts:
 - Pit lid with a pre-drilled hole (1).
 - Through-the-lid retainer clip (2).
 - Retainer clip collar (3).
- Completed the procedures outlined in [Initializing and connecting on page 15](#)
- Read through [Important: read before installing on page 24](#)

Through-the-lid mounting instructions

1. Insert the retainer clip into the pit lid hole with the convex surface on the top of the pit lid.



2. From the bottom side of the lid, screw on the threaded retainer clip collar until the beveled top rests against the pit lid.

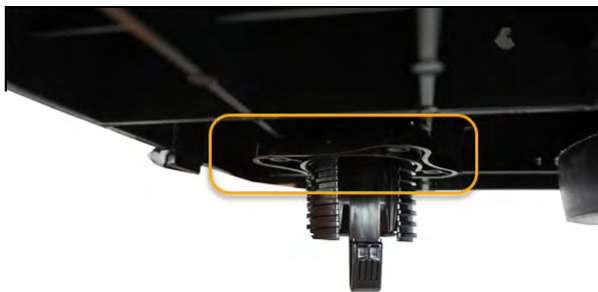

Note: Ensure that the beveled edge of the clip collar is toward the top of the pit lid.


3. Align and insert the retainer clip tab (1) into the retainer clip receptacle (2) on the 500W ERT Module housing.



4. Verify that the clip locks into place and the retainer clip collar is hand-tightened against the pit lid.



Caution: Carefully align the 500W ERT Module through lid assembly. If the assembly is improperly aligned, the pit lid may not close.

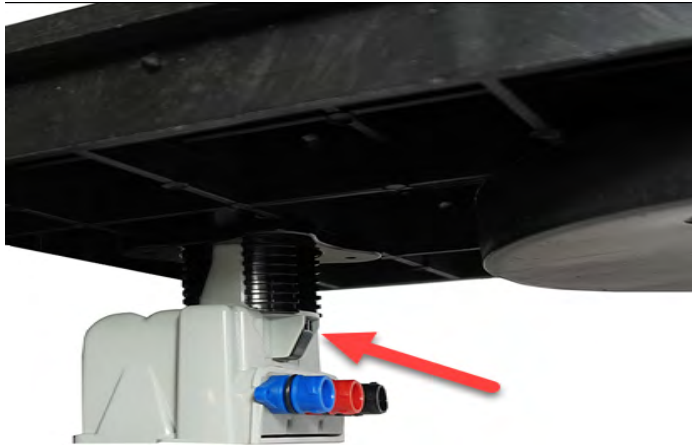

Pit lid mounting installation is complete.


Installing the through-the-lid remote antenna

This section provides antenna mounting and connection instructions for 500W ERT Modules installed through a pit lid.



Caution: Remove cable or twist ties from the antenna cable to prevent damage to the pit module or antenna.

1. Thread the remote antenna port and cable through the pit lid hole. Verify that the antenna's convex surface is on the top of the pit lid. (These instructions show a simulated pit lid material.)

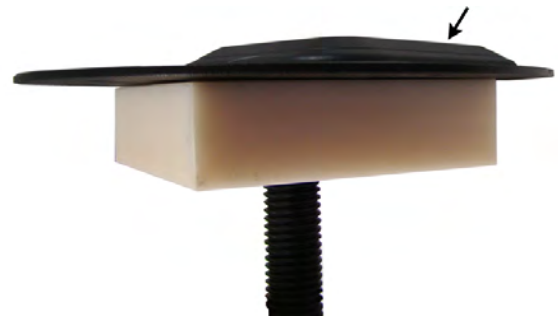

2. Insert the antenna port through the rectangular opening in the threaded collar.



3. Turn the threaded collar until it is tight against bottom of the pit lid.



4. Align the antenna's port pins with the middle red port on the 500W ERT Module.
5. Push in the antenna port to complete the connection.



Remote antenna installation is complete.

About the through-the-lid remote antenna

This device has been designed and approved per FCC and ISED rules to operate with the antennas listed below. Antennas not included in this list are strictly prohibited for use with this device.

The required antenna impedance is 50 ohms. To reduce potential radio interference to other users, the antenna type and its gain should be chosen so that the equivalent isotropically radiated power (EIRP) is not more than that permitted for successful communication. The optional 900 MHz remote mount antenna provides increased RF range coverage for the listed mobile applications where the meters are located deep in pit boxes.

Table 8 describes the through-the-lid remote antenna specifications.

Table 8 Through-the-lid remote antenna specifications

Specification	Value
Part number	CFG-0900-003
Gain	4 dBi
Horizontal beamwidth	Omni-directional
Impedance	50 ohms
Termination	Proprietary

Innovation, Science and Economic Development Canada (ISED) Conformity

The radio transmitter has been approved by Innovation, Science and Economic Development Canada (ISED) to operate with the antenna types listed above with the maximum permissible gain and required antenna impedance for each antenna type indicated. Antenna types not included in this list, having a gain greater than the maximum gain indicated for that type, are strictly prohibited for use with this device.

Le présent émetteur radio a été approuvé par Industrie Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal et l'impédance requise pour chaque type d'antenne. Les types d'antenne non inclus dans cette liste, ou dont le gain est supérieur au gain maximal indiqué, sont strictement interdits pour l'exploitation de l'émetteur.

Metal lids on 500W ERT Module pit boxes require a through-lid solution for optimal pit module radio performance. The remote antenna is designed to fit in a pit lid hole with a diameter of 3/4-inch and lid thicknesses from 1/4-inch to 1-3/4-inch.

Mounting on a rod

500W ERT Modules can mount below the pit lid on a 1/2-inch outside-diameter rod. The customer can supply the rod, or purchase one from Itron. For more information, see the *500W Module Ordering Guide*.



Caution: Consider the following when installing the 500W ERT Module on a rod mount:

- The rod installation area must be free from other pipes, wires, or facilities that may be damaged by driving a rod into the ground.
- You must follow local codes when using the rod mount installation method.
- Failure to use a 1/2-inch rod and follow instructions may result in an unreliable installation.
- Pit module positioning other than upright will negatively affect radio performance.

The following procedure assumes you have:

- The components described in [Installation prerequisites on page 11](#) and [Rod-mount installations on page 13](#)
- Completed the procedures outlined in [Initializing and connecting on page 15](#)
- Read through [Important: read before installing on page 24](#)

Rod-mounting instructions

1. Remove the pit lid.
2. Inspect the area to make sure there are no buried cables, pipes, or other obstructions.
3. Measure the pit box depth from the top of the lip (where the lid will rest) to the bottom of the pit. Be sure to measure the depth at the point where you will drive the rod into the ground.
4. Add 12 inches to the pit box depth measurement taken in step 2. The resulting total represents the minimum length of rod needed.


Soil types and moisture conditions may require longer rod lengths to ensure that the 500W ERT Module is well supported and remains vertical.

5. Without touching the meter body or adjacent pipes, position the rod as close to the center of the pit as possible.
6. Drive the rod into the ground. Ensure that the rod remains vertical.



Note: The rod shown has an end cap to protect the rod while driving it into the ground.

7. Drive the rod into the ground so the top of the rod is approximately 3-1/2 inches below the bottom of the pit lid.

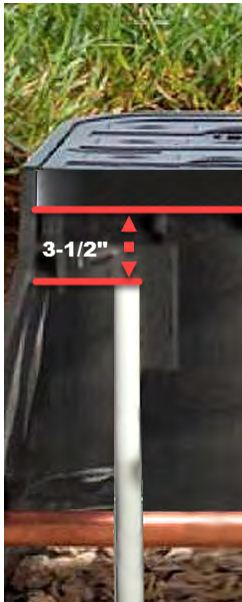

- If you cannot drive the rod in enough to equal the necessary spacing, cut the remaining rod length to the proper height using an abrasive cut-off tool.



Caution: Cutting fiberglass creates dust particles. Practice proper safety precautions when using cut-off tools to prevent exposure to fiberglass dust particles.

- If the rod is the correct depth but remains loose in the soil, replace the rod with a longer

version.

- The top of the rod must be 3-1/2 inches below the bottom of the lid.

8. Insert the rod/wall mounting bracket tab (1) into the module tab receptacle (2).



9. Place the module on the rod.
10. Completely insert the rod into the 500W ERT Module's rod mount hole. Do not force the 500W ERT Module onto the rod.

If the 500W ERT Module does not slide freely on the rod, remove the 500W ERT Module and examine the 500W ERT Module rod hole and rod for burrs or obstructions.

11. You may secure the 500W ERT Module to the rod with a self-drilling screw through the hole in the top of the 500W ERT Module's rod mount cavity.



12. Connect the register (black port, 1) and optional telemetry device (blue port, 2) into the appropriate connection.



13. Turn the port locking ring to secure the connection.



Caution: Turn only the locking ring. Turning the entire port could damage the port pins.

14. Installation is complete when the 500W ERT Module is perpendicular to the underside of the lid. The 500W ERT Module must not contact the pit structure or lid.



Caution: Verify that the pit lid does not touch the 500W ERT Module when the lid is replaced. There must be a one- to two-inch space between the top of the 500W ERT Module and the bottom of the pit lid. If the 500W ERT Module is installed too high or too low, or is touching any of the surrounding surfaces, adjust the installation as necessary.



Mounting to a pit wall

The 500W ERT Module can mount to a wall or other flat vertical surface.



Caution: Observe the following guidelines for mounting the 500W ERT Module using the wall mount procedure:

- Any module positioning other than upright will negatively affect radio performance.
- Locate the 500W ERT Module as high as possible in the pit box .
- Connect the 500W ERT Module to the register or meter. If a splice is required to connect the register or meter, you must use the Itron splice kit (OEM-0034-002).
- Maintain a distance of one to two inches from the bottom of the pit box lid.
- The 500W ERT Module works accurately with Itron-approved cable type and lengths up to 300 feet.

The following procedure assumes you have:

- The components described in [Installation prerequisites on page 11](#) and [Mounting to a pit wall on page 33](#)
- Completed the procedures outlined in [Initializing and connecting on page 15](#)
- Read through [Important: read before installing on page 24](#)

Wall mounting instructions

1. Select a flat, vertical mounting surface in the pit box.
2. Insert the rod/wall mounting bracket tab (1) into the module tab receptacle (2).



3. Position the 500W ERT Module vertically so the top of the 500W ERT Module is between one to two inches below the bottom of the lid.
4. Mark the location of the top mounting hole.



5. Drill a pilot hole in the pit box wall. Follow the screw manufacturer's recommendation for the pilot hole size.
6. For concrete-type pit boxes, it may be necessary to use a screw anchor. Choose an anchor appropriate for a #10 pan head screw.



Do not over-tighten the mounting screws. Over-tightening the mounting screws may break the 500W ERT Module mounting tabs.

7. Start a screw into the pilot hole. Using the top hole of the 500W ERT Module, set the 500W ERT Module over the screw head and slide it down so the screw is now at the top of the notch. Carefully tighten the screw until snug. Over-tightening the mounting screw could damage the 500W ERT Module housing.

If the mounting location requires a screw anchor, mark the location of the bottom anchor and remove the 500W ERT Module. Drill the required mounting hole, insert the anchor, and re-attach the 500W ERT Module.

8. Holding the 500W ERT Module in the upright position, drill the second pilot hole. Use the bottom mounting hole as a template.



Any module position other than upright will negatively affect radio performance.

9. Screw the bottom screw into the pilot hole until snug. Do not over-tighten the mounting screw.

Wall mounting the 500W ERT Module is complete.

5

Installing the remote module

This section describes the remote installation process for the 500W ERT Module and its necessary and optional accessories. Read this chapter in the order it is provided, as certain procedures must be completed ahead of remote 500W ERT Module installation.

Installing the module cable strain relief

After you complete the 500W ERT Module to register connections (described in [Remote-mount module connections on page 20](#)), install a cable tie to the meter cable just below the exposed colored lead wires on the cable insulation. The cable tie provides a cable strain relief to reduce the risk of destructive tension on the lead wires.

Note: Required tools for this procedure are outlined in [Remote-mount module variant on page 14](#).


1. Wrap the cable tie around the meter register or telemetry device cable.



2. Insert the pointed end of the cable tie into the receptacle end of the cable tie with the ribbed edge facing in.
3. Pull the pointed end of the cable tie until the cable tie is hand-tightened.
4. Insert the excess cable tie into the cable tie gun. Pull the cable gun trigger to tighten and clip the excess cable tie. The cable tie gun shown in the illustration is equipped with a red dial that allows the user to set the cable tightening pressure of the cable gun.



5. If your cable tie gun is equipped with a dial to set the tightening pressure, set the pressure to ensure that the cable tie is secure on the lead wire. After installation, the cable tie must not move on the register or secondary lead wire.
6. If your cable tie gun does not have a clipping feature, remove the cable tie from the cable tie gun. Using a side-cutter pliers, clip the excess cable tie.

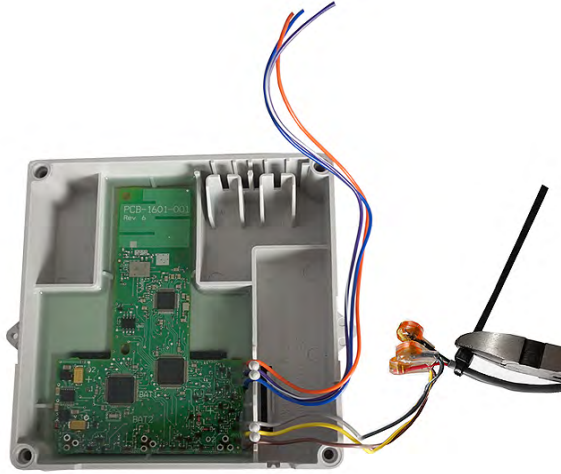

7. Place the cable connection into the 500W ERT Module housing with the cable ties to the inside.



Installing the backplate

After the connections are made to the register and optional telemetry device, attach the 500W ERT Module's backplate.

Mount the remote-mount module after the backplate is attached.

1. Route the register cable and telemetry device cable through the dual-port backplate. Ensure that the cable strain reliefs are inside the module housing and backplate assembly.



2. Route the register cable through the bottom backplate cable cutout and telemetry device cable through the top backplate cable cutout.



3. Align the remote-mount module backplate with the mounting screw holes. Verify that the Itron logo is not upside down.
4. Insert a backplate mounting screw in one corner and tighten the screw two or three turns. Insert the remaining three screws and tighten each a few turns.



5. Completely tighten all screws evenly in an alternating fashion.



Mounting on a flat surface

The 500W ERT Module can mount to a wall or other flat vertical surface.

The following procedure assumes you have:

- The components described in [Installation prerequisites on page 11](#), [Remote-mount module variant on page 14](#), and [Flat surface installation on page 14](#)
- Completed the procedures outlined in:
 - [Initializing and connecting on page 15](#)
 - [Installing the module cable strain relief on page 37](#)
 - [Installing the backplate on page 38](#)

Flat surface mounting instructions

1. Connect the 500W ERT Module to the register as described in [Remote-mount module connections on page 20](#).
2. Select an installation location.




Important! The arrow on the 500W ERT Module must point up when installation is complete. Take this into consideration when choosing your installation location. Install the 500W ERT Module as high off the ground as possible.

3. Using the back plate template, drill three pilot holes into the wall or other surface.
Make sure the two bottom holes are level.
4. Screw a mounting screw for the lug slot into the surface, leaving approximately 1/8 inch of the screw protruding. The lug slot should slide over the screw with a tight fit.



5. Slide the 500W ERT Module lug slot onto the mounting screw, pushing the 500W ERT Module upward until the screw head is all the way into the slot.

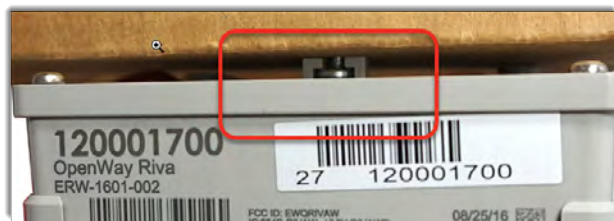

6. Screw the 500W ERT Module to the wall using the remaining two mounting screws.



7. Insert a tamper seal over each mounting screw and drive into place with a nut driver or a similar tool.



Note: A tamper seal is fully seated when the top of the tamper seal is approximately 1/16 inch below the top of the screw recess.

8. Secure any excess cable using the provided cable ties.

The arrow on the 500W ERT Module must point up when installation is complete.

Mounting to a pipe

The 500W ERT Module can mount on a pipe vertically, diagonally, or horizontally using a pipe mount kit (see [Mounting to a pipe installation on page 14](#)) and remote mount kit (part number CFG-1300-003).



Caution: A vertical mounting position is important to maximize RF performance. Mount the 500W ERT Module with the module's label arrow pointing up. *The module's arrow must always point up.* The module's tilt tamper functionality is designed to operate with the module installed vertically.

The following procedure assumes you have:

- The components described in [Installation prerequisites on page 11](#), [Remote-mount module variant on page 14](#), and [Mounting to a pipe installation on page 14](#)
- Completed the procedures outlined in:
 - [Initializing and connecting on page 15](#)
 - [Installing the module cable strain relief on page 37](#)
 - [Installing the backplate on page 38](#)

Pipe mounting instructions

1. Remove the pipe bracket and band clamp from the pipe mount kit (Itron part number CFG-0005-003). Pipe brackets may be black or gray. These instructions show a black pipe bracket.



2. Loosen the band clamp screw until the end of the band releases.



3. Push the end of the clamp's band through the holes in the pipe bracket.



4. Place the band clamp around the pipe. The band loosely wraps around the pipe.

5. Push the end of the band through the band clamp screw assembly. Turn the band clamp's screw assembly to fit into the pipe bracket opening. Tighten the clamp screw until the band clamp is secure on the pipe.

Mounting on the adapter plate

1. Locate the two one-inch 500W ERT Module mounting screws in the pipe mount kit.
2. Slide the 500W ERT Module back cover onto the adapter, pushing up to secure the lug adapter in the lug slot.




3. Install the two one-inch 500W ERT Module mounting screws.




4. Tighten the screws to 9 to 12 inch-pounds of torque.

Adapter plate mounting positions



The installation procedure in [Mounting on the adapter plate on page 44](#) describes how to mount the adapter plate on a vertical pipe. The following pictures show the adapter plate on 45-degree angle and horizontal pipes. Regardless of the angle of the pipe, the adapter plate mounting lug (1) must always be at the top. If the pipe is at a 45-degree angle up to the right, install the adapter plate with the mounting screws (2) as shown.

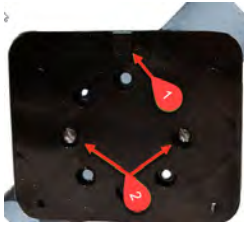

If the pipe is at a 45-degrees angle up to the left, install the adapter plate as shown.

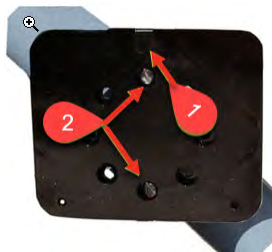

If the pipe is horizontal, install the adapter plate as shown.

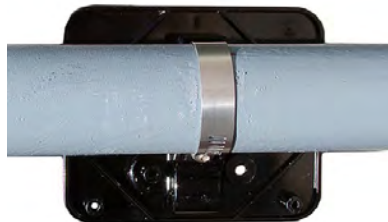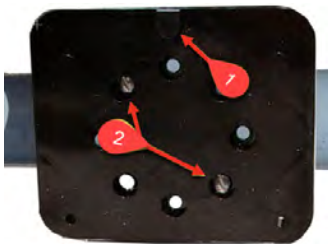

6

Installing compatible components

This chapter provides the installation procedures for 500W ERT Module accessories, including:

- [Installing the Remote Disconnect Valve on page 46](#)
- [Installing the Itron Cable Armor on page 49](#)
- [Installing the Leak Sensor on page 50](#)
- [Installing the through-the-lid remote antenna on page 27](#) (for pit modules only)

Installing the Remote Disconnect Valve

The Smart Earth Technologies (SET) or Aquana Remote Disconnect Valve is used in conjunction with 500W ERT Module installations to control water service interruptions without the need to remove the water meter. Because it is remote controlled, the Remote Disconnect Valve provides water utilities with a non-intrusive means of managing customer disconnects and reconnects that traditionally required on-site visits.

The 500W ERT Module automatically detects the presence of connected water disconnect devices within 22.5 minutes and begins reading disconnect valve data. To immediately detect the water disconnect valve and begin reading data, perform a **Check Endpoint** (if using FDM) or **Check** (if using Field Tools).

The 500W ERT Module supports the following valve states:

- **Connected.** The water flow is open and flowing at 100% configured capacity.
- **Disconnected.** The water flow is shut off with no water flowing. The Remote Disconnect Valve provides the ability to remotely open (reconnect) the valve.
- **Restricted.** The water is restricted and flowing at the configured installation flow.

Note: Remote water disconnect operation requires a 500W ERT Module with enhanced security enabled.

Remote Disconnect Valves have the option to ship from the supplier with the Itron Inline port attached. See the manufacturer's installation instructions for the procedure to mount the disconnect valve.

For pit modules

The 500W ERT Module disconnect valve ships from the supplier with the Itron cable installed. See the manufacturer's installation instructions for the procedure to mount the disconnect valve in the pipe close to the 500W ERT Module.

1. Remove the protective plastic cover from the module's port ports.



2. Remove the environmental cap from the 500W ERT Module's (blue) telemetry port.
3. Verify that the ports are clean and dry.
4. Align the disconnect valve connector with the 500W ERT Module's blue telemetry port.



5. Push the valve's inline port into the 500W ERT Module's telemetry port (blue).



6. Rotate the port locking ring until the security holes align.




7. Install an Itron security seal through the aligned security holes.



For remote modules

Connect the 500W ERT Module wires to the Remote Disconnect Valve wires following the connections shown in the table below. The Remote Disconnect Valve connects to the 500W ERT Module's orange, white/purple, and blue wires.

500W ERT Module wire color	Remote Disconnect Valve wire color
Orange	Red
White/purple	Black
Blue	Green

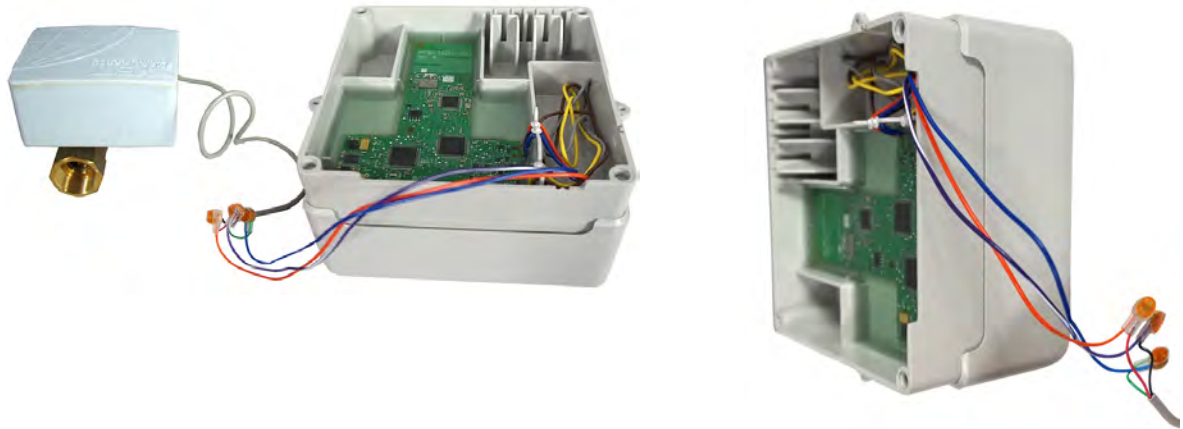

Installing the Ltron Cable Armor

The Ltron cable armor provides a layer of protection for the module's cable jacket. Ltron cable armor is available in five-foot sections.

Note: You can purchase the Ltron cable armor pre-added. If the Ltron cable armor has not been pre-added, use the following procedure to add it correctly.

This section describes the procedure for installing Ltron cable armor in a field installation.



Warning! Use caution when you are installing the cable armor.

- Ltron cable armor is stainless steel and may have sharp edges.
- Perform a **Check ERT** function (with FDM Endpoint Tools) after you reprogram the 500W ERT Module to verify communication with the meter register.

1. Without disconnecting the 500W ERT Module from the meter's register, remove the 500W ERT Module from its installation to allow yourself room to install the cable armor.
2. Cut a two- to three-inch strip of electrical tape.



3. Wrap the entire piece of electrical tape around the 500W ERT Module cable near the 500W ERT Module.



4. Beginning over the installed electrical tape, twist the Itron cable armor onto the 500W ERT Module cable using a right-handed twist.



Warning! You must twist—not wrap—the cable armor onto the 500W ERT Module cable. Wrapping the cable armor can cause the stainless steel jacket to warp.

You must begin twisting the cable armor over portion of the cable protected by the electrical tape. If you do twist the cable armor onto the 500W ERT Module cable on the unprotected portion of the 500W ERT Module cable, you could damage the module's cable. A cut cable could cause a 500W ERT Module or register communication failure.

5. Continue to twist the cable armor onto the 500W ERT Module cable until the cable armor covers the entire cable.



6. Remove any leftover materials from the customer premises. Discard or recycle leftover materials.

Installing the Leak Sensor

The Leak Sensor analyzes water flow sound patterns to detect water leaks. Leak sensor analysis data is uploaded to an online portal. Systems with optional Leak Sensor devices access leak information through their utility-specific, secure portal.

Installation of the Leak Sensor with a 500W ERT Module requires the Leak Sensor with an inline port (Itron part number LDS-1601-001). The Leak Sensor connects to the telemetry

port on the 500W ERT Module, is automatically detected by Field Tools or FDM, and displays in Field Tools or FDM as **Peripheral Device** within the Check Endpoint table. Additionally, the state of the device — **Operational** or **Connected** — and related firmware and hardware versions displays.

For the installation instructions, see the *Itron Leak Sensor Installation Guide*.

If the Leak Sensor five-foot cable is not long enough to reach the 500W ERT Module, an extension cable is available from Itron (CFG-0151-404). The maximum cable length between the Leak Sensor and the 500W ERT Module should not exceed 30 feet.



Caution: If the 500W ERT Module is installed to enable communications for the Leak Sensor but a register is not connected, replace the register port's cap with the environmental cap removed from the blue telemetry port to protect the register port.

7

Programming and verifying

If you installed your 500W ERT Module using the ZTD method, skip to [Verifying operation on page 52](#).

500W ERT Modules used with meters that have a pulse output or Neptune meters that have an eight-dial output require programming before they can record meter data with accuracy. When you program a 500W ERT Module, you provide it with essential information about the meter, like the meter's configuration and current reading. This information synchronizes the 500W ERT Module with the meter and gives it a base from which to calculate future reads.

When programming the 500W ERT Module:

- Do not program configuration changes to the 500W ERT Module until it is connected to the water meter register.
- Keep a minimum of 12 inches between the 500W ERT Module and programming device while programming configuration changes are completed.
- Do not place the programming device antenna directly on the 500W ERT Module.

The requirements and procedures for programming vary between meter-reading applications. Refer to the respective meter-reading application's documentation for specific instructions:

- For FDM, see the [FDM Tools Mobile Application Online Help](#).
- For Field Tools, see the [Field Tools for North American Gas and Water ERTs and Meters Help](#).

To identify whether the 500W ERT Module is in network or mobile mode, issue an **Auto detect** command.



Important! Make sure you have the ability to request commands (if using Field Tools) or retrieve secure commands (if using FDM), described in [Installation prerequisites on page 11](#).

After programming, the 500W ERT Module enters the selected operating mode and begins to bubble up specified messages at the chosen rate.


Verifying operation


Ittron strongly recommends performing a **Check Endpoint** (if using FDM) or **Check** (if using Field Tools) to verify that the 500W ERT Module is operating correctly after installation. Performing a **Check Endpoint/Check**:

- Initiates an immediate connection to the network and a register read.
- Verifies communication with the Leak Sensor or Remote Disconnect Valve (if installed).
- Generates an immediate request for a read from an encoded register or returns the current accumulated reading from a pulser register.
- Checks for and indicates event or alarm flags.

Performing a **Check Endpoint/Check** does not immediately indicate that the 500W ERT Module is connected to the network and receiving information. Wait 24-72 hours after initial installation to check for 500W ERT Module performance.

Use one of the meter-reading applications and devices described in [Installation prerequisites on page 11](#) to verify that the 500W ERT Module is correctly recording consumption data. Make sure you have the ability to request commands (if using Field Tools) or retrieve secure commands (if using FDM), also described in [Installation prerequisites on page 11](#).

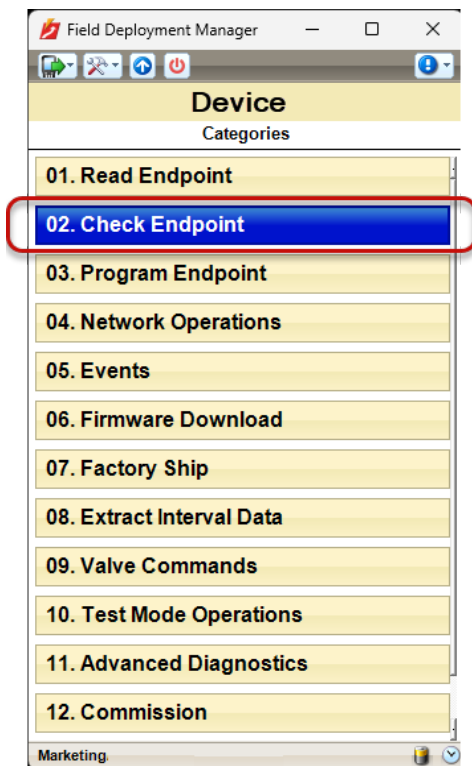

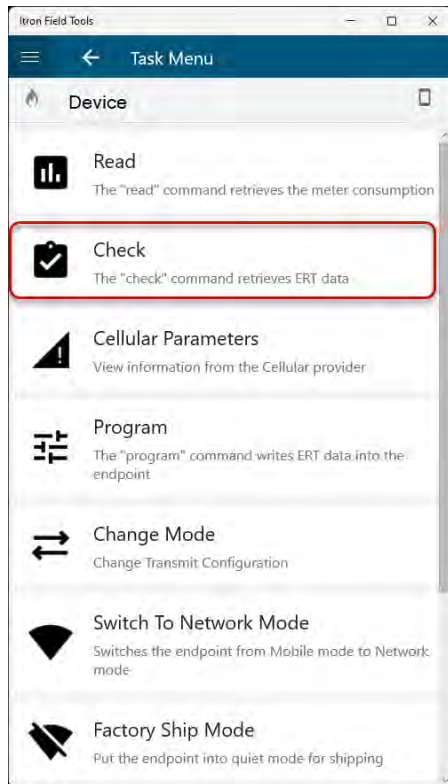

8

Using gel-cap connections to complete wiring connections



Important! All unused wires on 500W ERT Modules must be terminated. Wire terminations must be properly sealed with a non-conductive gel material to prevent water intrusion and possible environmental or electrical issues.

This section provides the instructions to complete remote-mount module to meter wiring connections.


1. Push two wires as far as possible into the port.



Caution: Do not strip insulation from the ends of the wires before inserting them into the port.



2. Place the port and wires into the jaws of the crimping tool. Ensure the wires remain fully inserted in the port.

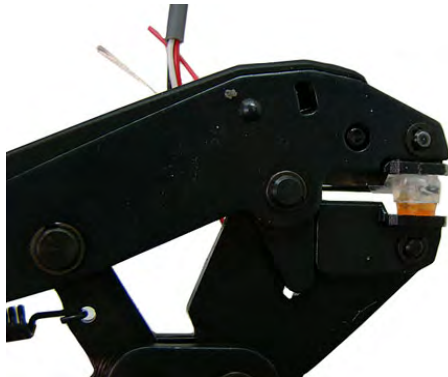


Note: The E-9E gel connector crimping tool is not pictured here.

3. Squeeze the handles to crimp the port. Apply pressure until the cap is fully seated (at least three seconds).



The port is properly crimped when the top of the moveable yellow center (1) is flush with the top of the port body (2).

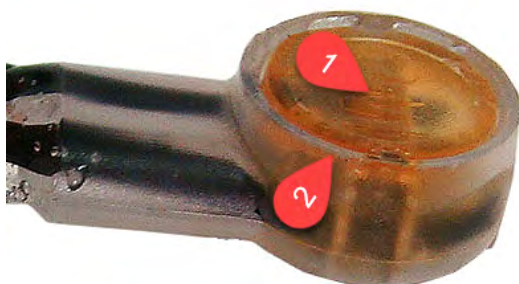

Warning! Crimping the port forces some sealant out of port. The sealant protects the inside of the port against insects, moisture, and other contaminants. The sealant may cause minor eye and skin irritation. Avoid eye contact. Avoid prolonged or repeated skin contact. Contact Itron Support for Safety Data Sheets (SDS).



4. After the 500W ERT Module to register or meter wire connections are completed, arrange the ports in a single file.



5. Insert the ports and wires into the splice tube until the ports and wires are completely immersed in the non-conductive gel material.



6. Separate the cable wires to the sides and close the splice tube cover.



7. Remove any leftover materials from the customer premises.

A

Best practices

Ensure 500W ERT Modules are installed in accordance with the requirements stated in the respective installation manual.

The 500W ERT Module should always be in a vertical upright position.

Pit modules

Table 9 Installation best practices

Do install	Do not install
With an RF-friendly (plastic) lid	With a metal or iron lid
The pit cover and through-the-lid antenna at or above grade level	The pit cover and through-the-lid antenna below grade level
With enough slack in the endpoint wire so that in the case that the pit lid is lifted, the wire does not disconnect	The endpoint wire with little to no slack
The through-the-lid antenna straight up	The through-the-lid antenna at an angle or upside down

Additionally:

- Ensure that the pit lid is free of debris or other obstructing material, such as grass and mulch and that the 500W ERT Module does not have a cut cable or is submerged in water. The 500W ERT Module cannot be heard if it is under water.
- In the through-the-lid installations, verify that the retainer clip is locked into place and the retainer clip collar is hand-tightened against the pit lid.
- For 500W ERT Module in hard-to-read locations, install a remote antenna in a location where the signal can be picked up.

Remote modules

When choosing installation locations, prioritize the area with the closest proximity to the intended reading device and with the least amount of obstructions.

When performing an indoor remote installation, make sure that the 500W ERT Module is installed at or above grade level, and is not near dense trees or shrubs that could obstruct the endpoint. Do not put anything on top of the 500W ERT Module. When installed in basements, try to mount the unit as high as possible, preferably on the upper-floor joist near a window.

When performing an outdoor remote installation, prioritize mounting the 500W ERT Module on an outside wall (or as close as possible). Install it vertically (so that the 500W ERT Module points up) and as high as possible without compromising the meter cable.

B

Troubleshooting

This section describes common errors that arise during installation and guidelines for what to do. See the following sections for checking performance and common errors:

- [Unable to read or program on page 60](#)
- [Register and 500W ERT Module readings do not match on page 60](#)
- [Register reading is not reported on page 62](#)
- [Cut Cable or Previous Cut Detected is indicated on page 62](#)
- [Cut Detected is indicated on page 63](#)
- [Leak Sensor not detected on page 63](#)

Unable to read or program


- If using an IMR, make sure the rounded side of the radio is facing the endpoint.
- If using an FC300, make sure you are holding it vertically (in relationship to the ground) and not pointed at the endpoint.
- Verify the correct endpoint ID was entered in reading device.
- Issue an **Auto Detect** command to verify that the 500W ERT Module is in the expected mode (mobile or network mode).
- Move closer to the 500W ERT Module.
- Make sure the 500W ERT Module is mounted correctly and not under water. If it is under water, change installation method to implement a through-the-lid mount. See [Installing through-the-lid on page 25](#).
- Make sure the 500W ERT Module is in an upright position.
- Determine if the installed 500W ERT Module is working properly by temporarily substituting a known good unit.

Register and 500W ERT Module readings do not match

- Verify that the cable is connected and not damaged or pinched.
- Gel ports may not be crimped properly. Review [Using gel-cap connections to complete wiring connections on page 55](#).

- Verify the 500W ERT Module is wired correctly. Review [Initializing and connecting on page 15](#) or the Pulser-type meter register connections tables in either [Pit module retrofitting on page 17](#) or [Remote-mount module connections on page 20](#).
- Perform a **Check Endpoint** (if using FDM) or **Check** (if using Field Tools) to check that the 500W ERT Module was programmed correctly (that is, if it's an encoder-type meter, make sure it's attached to an encoder meter, not a pulser meter, and vice versa). See [Verifying operation on page 52](#).
- Perform a Ready Any operation using either FDM or Field Tools, and filter for the endpoint ID in question. If the Read Any does not "hear" the 500W ERT Module, this can indicate a problem with the module.

Note: FDM Tools cannot perform a Read Any command on 500W ERT Modules when the module is in network mode.

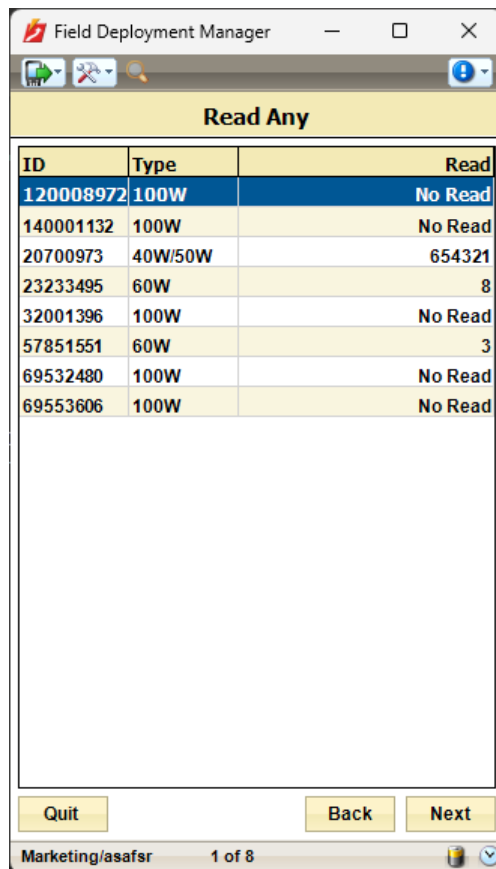

- Verify that the 500W ERT Module is attached to a compatible meter. See the *Water Meter and Telemetry Module Compatibility Matrix*.
- Determine if the installed 500W ERT Module is working properly by temporarily substituting a known good unit.
- Check for physical damage.

Register reading is not reported

Often, a No Read error is indicated if the endpoint is not wired correctly.

- For remote-installed 500W ERT Modules, check that the gel ports are properly crimped. Review [Using gel-cap connections to complete wiring connections on page 55](#).
- Verify that the 500W ERT Module is attached to a compatible meter. See the *Water Meter and Telemetry Module Compatibility Matrix*.
- Perform a **Check Endpoint** (if using FDM) or **Check** (if using Field Tools) to check that the 500W ERT Module was programmed correctly (that is, if it's an encoder-type meter, make sure it's attached to an encoder meter, not a pulser meter, and vice versa). See [Verifying operation on page 52](#).
- Determine if the installed 500W ERT Module is working properly by substituting with a known good unit.
- For encoder-type endpoints and registers, an **Invalid Read** error is reported if there is improper register/endpoint communications or if the register is trying to transfer unacceptable data.
- Check for physical damage.

Cut Cable or Previous Cut Detected is indicated



Important! When using FDM Tools, the term **Cut Cable** is used. When using Field Tools, the term **Cut Detected** is used.

If you have an encoder-type register, **Cut Cable** or **Previous Cut Detected** indicates that at some point in the last 40 days, the 500W ERT Module was not communicating with the encoded-meter register.

If you have a pulser-type register, **Cut Cable** or **Previous Cut Detected** indicates that at some point in the last 40 days, the 500W ERT Module was not recording pulses.

- Verify that the cable is connected and not damaged or pinched.
- Check that the gel ports are properly crimped. Review [Using gel-cap connections to complete wiring connections on page 55](#).
- Ensure the reading on the 500W ERT Module and meter match. If pulses are missed, the reading will be incorrect.
- Verify the 500W ERT Module is wired correctly. Review [Initializing and connecting on page 15](#) or the Pulser-type meter register connections tables in either [Pit module retrofitting on page 17](#) or [Remote-mount module connections on page 20](#).
- Verify that the 500W ERT Module and meter register are correctly matched. See the *Water Meter and Telemetry Module Compatibility Matrix*.

- Determine if the installed endpoint is working properly by substituting with a known good unit.
- Check for physical damage.

Cut Detected is indicated

Cut detected indicates that the endpoint has not been communicating with the meter register for at least a 24-hour period.

- Verify that the 500W ERT Module and meter register are correctly matched. See the *Water Meter and Telemetry Module Compatibility Matrix*.
- Verify the cable is connected and not damaged or pinched.
- Check that the gel ports are properly crimped. Review [Using gel-cap connections to complete wiring connections on page 55](#).
- Verify the 500W ERT Module is wired correctly. Review [Initializing and connecting on page 15](#) or the Pulser-type meter register connections tables in either [Pit module retro-fitting on page 17](#) or [Remote-mount module connections on page 20](#).
- Check for physical damage.

Installing with commercial vaults

Installing the 500W ERT Module with a commercial vault (that is, placing the 500W ERT Module outside the vault) is not typical, but may be required in a specific context that does not support typical installation. For example:

- You can drill a hole in the side of the vault and:
 - run a conduit to a wall-mounted remote 500W ERT Module
 - run a conduit to a 4x4 post on which a remote-mount 500W ERT Module is mounted.

When installing with a commercial vault, Itron recommends you keep the following in mind:

- Use a remote-mount 500W ERT Module, as they are UV rated.
- The distance between the meter and 500W ERT Module should not exceed 300 feet.
- There distance between the 500W ERT Module and an Itron Leak Sensor should not exceed 30 feet.

Leak Sensor not detected

- Verify the cable is connected and not cut or pinched.
- (*Remote-mount installations only*) Verify the 500W ERT Module is wired correctly. Review [Initializing and connecting on page 15](#) or the Pulser-type meter register connections tables in either [Pit module retro-fitting on page 17](#) or [Remote-mount module connections on page 20](#).

20.

- *(Remote-mount installations only)* Check that the gel ports are properly crimped. Review [Using gel-cap connections to complete wiring connections on page 55](#).
- Check for physical damage.
- Attach a known good leak sensor. If you do not detect the known good sensor, replace the 500W ERT Module.

C

Events and alarms

The following table describes events and alarms for the 500W ERT Modules. These events and alarms are supported only when the device is in network mode.

Event ID	Event name	Event description
1	Inter Digit	Corrupt digit in the encoded register reading.
2	Register Error	No Communication with Register.
3	Invalid Read	Register is not sending a valid read.
6	Endpoint - Low Battery	500W ERT Module has a low battery warning. 10% battery life remaining. Is an alarm by default.
7	Consumer Leak detected	500W ERT Module has detected continuous flow over a set period of time. Is an alarm by default. Qualifies as an active event.
8	Consumer Leak end	500W ERT Module has detected the end of continuous flow after having reported a leak.
9	Reverse Flow detected	500W ERT Module has detected reverse flow. Qualifies as an active event.
10	Reverse Flow end	500W ERT Module has detected the end of reverse flow after having reported reverse flow.
11	Leak Sensor Ok	500W ERT Module detects a leak sensor attached and it is working properly (triggered when state was previously unknown or previously not working properly).
12	Leak Sensor No Comms	500W ERT Module detects a leak sensor is attached but it not working properly.
13	Leak Sensor Detached	500W ERT Module does not detect a Leak Sensor attached after having previously having one attached.
14	Valve OK	500W ERT Module detects a disconnect valve attached and it is working properly (triggered when state was previously unknown or previously not working properly).
15	Valve No Comms	500W ERT Module detects a disconnect valve is attached but it not working properly.
17	Pulse Mismatch	The 500W ERT Module has detected an internal pulse mismatch.
18	Cut Cable detected	Physical Cut Cable detected by the 500W ERT Module. Qualifies as an active event.

Event ID	Event name	Event description
19	Cut Cable end	Physical Cut Cable no longer detected by the 500W ERT Module.
28	Encoder Micro Reset	Device has detected that the Encoder Micro has reset unexpectedly.
500	Critical error (internal)	Catch-all for critical internal error not covered in other events.
501	Right Sizing started	Client has requested Right Sizing operation in 500W ERT Module. Note: Right sizing operations are not supported when the device is operating in Network mode. However, if the device is operating in Mobile (100S) mode and right sizing is started this event will be logged in the COSEM event log.
502	Right Sizing completed	Right Sizing operation is complete. Note: Right sizing operations are not supported when the device is operating in Network mode. However, if the device is operating in Mobile (100S) mode and right sizing is started this event will be logged in the COSEM event log.
503	Right Sizing cancelled	Right Sizing operation was cancelled by client. Note: Right sizing operations are not supported when the device is operating in Network mode. However, if the device is operating in Mobile (100S) mode and right sizing is started this event will be logged in the COSEM event log.
504	Flash Error	A flash error has been detected.
505	Meter Quiet Mode Exit	Occurs when the 500W ERT Module first gets pulses, or detects consumption and wakes from Meter Quiet Mode (not Factory Ship Mode).
506	Entering network mode	The device has been changed to Network mode.
507	Set Battery Params	Any change to the BatteryUseParameters structure will result in this event.
508	Set Meter Right Sizing Params	Meter right sizing parameters have been changed. Note: Right sizing operations are not supported when the device is operating in Network mode. However, if the device is operating in Mobile (100S) mode and right sizing is started this event will be logged in the COSEM event log.
509	Key Update	Key has been updated in the device.
510	Device Not Communicating	Application has not received any incoming data which indicates the device may not be communicating on the network.

Event ID	Event name	Event description
511	Load Profile Cleared	Load Profile object has been cleared. The specific causes of this event are: ■ Transitioning from 100S (Run, Factory, Quiet) to IoT mode, or from IoT to 100S mode. ■ Setting Interval size to a new value (IoT mode only) ■ Setting count rate, initial index, PCOMP, Rollover, EncoderDrv500W ERT Module type (100S or COSEM) to a new value.
512	Manual Time Sync	Time has been changed manually.
513	--DEPRECATED--	Time change is greater than warning level threshold at initial detection.
515	Time Sync – over threshold detected	Time change is greater than warning level threshold. Qualifies as an active event.
516	Time Sync – over threshold end	Time change is greater than warning level threshold back below threshold.
517	Entering 100S Mode	The device has been changed from Network mode to 100S Mode.
531	EFC State Changed	The EFCState (0.128.96.9.50.255) current_state (attribute 2) has changed.
1000	Meter - Register Removal	Badger Extended Alarm: Bit 0 = register removal.
1001	Meter - Temperature Alarm	Badger Extended Alarm: Bit 1 = temperature alarm.
1002	Meter - End of meter life	Badger Extended Alarm: Bit 2 = end of life alarm.
1003	Meter - Zero Consumption Detected	Badger Extended Alarm: Bit 3 = no usage alarm.
1004	Meter - Reverse Flow Meter	Badger Extended Alarm: Bit 4 = reverse flow alarm.
1005	Meter - Leak Meter Alarm	Badger Extended Alarm: Bit 5 = leak alarm. Is an alarm by default.
1006	Meter - Encoder Programming	Badger Extended Alarm: Bit 6 = program alarm.
1007	Meter - Tamper	Badger Extended Alarm: Bit 7 = tamper.

Event ID	Event name	Event description
1500	Meter - Active Reverse Flow	Kamstrup Extended Alarm Byte1: Bit 0 = Active reverse flow.
1501	Meter - Historic Reverse Flow	Kamstrup Extended Alarm Byte1: Bit 1 = Historic Reverse (Active info-code within the last 30 days, no matter how long the info-code was active).
1502	Meter - Active Empty Pipe	Kamstrup Extended Alarm Byte1: Bit 2 = Active Dry (meter is in a current empty pipe state). Is an alarm by default.
1503	Meter - Historic Empty Pipe	Kamstrup Extended Alarm Byte1: Bit 3 = Historic Dry (Active info-code within the last 30 days, no matter how long the infocode was active).
1504	Meter - Active Burst	Kamstrup Extended Alarm Byte1: Bit 4 = Active burst (meter is currently in a high flow state outside of the meter parameters). Is an alarm by default.
1505	Meter - Historic Burst	Kamstrup Extended Alarm Byte1: Bit 5 = Historic Burst (Active info-code within the last 30 days, no matter how long the infocode was active).
1506	Meter - Encoder Programming	Kamstrup Extended Alarm Byte1: Bit 6 = Encoder setup has been changed one or more times since production.
1507	Meter - Active Leak Alarm	Kamstrup Extended Alarm Byte2: Bit 0 = The meter is in an active leak state. Is an alarm by default.
1508	Meter - Historic Leak Alarm	Kamstrup Extended Alarm Byte2: Bit 1 = Historic Leak (Active info-code within the last 30 days, no matter how long the infocode was active).
1509	Meter - Low Temperature Alarm	Kamstrup Extended Alarm: Minimum meter temperature detected. Trigger on <36F indication from Kamstrup meter.
1510	Meter - High Temperature Alarm	Kamstrup Extended Alarm: Maximum meter temperature detected. Trigger on >125F indication from Kamstrup meter.
1511	End of meter life	Kamstrup Extended Alarm: The meter is near the end of its expected life.
1512	Register Removal	Kamstrup Extended Alarm: The meter register has been tampered with or removed.
1513	Meter - Zero Consumption Detected	Kamstrup Extended Alarm: The meter has detected no usage.
1514	Low Pressure Alarm	Kamstrup Extended Alarm: The meter has detected minimum pressure.

Event ID	Event name	Event description
1515	High Pressure Alarm	Kamstrup Extended Alarm: The meter has detected maximum pressure.
1600	Meter - Backflow	Intelis Water Meter Extended Alarm bit 9: The meter has detected backflow consumption. For the International meter this is cleared at midnight each day if the condition is no longer present. For the NAM meter this is cleared after an “alarm duration” time which is 1 day minimum.
1601	Meter - Empty Pipe	Intelis Water Meter Extended Alarm bit 6: The meter has detected that the pipe is empty. For the International meter this is cleared at midnight each day if the condition is no longer present. For the NAM meter this is cleared after an “alarm duration” time which is 1 day minimum. Is an alarm by default.
1602	Meter - Meter Reversed	Intelis Water Meter Extended Alarm bit 2: The meter has detected that it has been installed in a reverse orientation. For the International meter this is cleared at midnight each day if the condition is no longer present. For the NAM meter this is cleared after an “alarm duration” time which is 1 day minimum.
1603	Meter – Low Battery	Intelis Water Meter Extended Alarm bit 5: The meter has detected that its battery is low (NAM Meter remaining life time < 6 months, International Meter remaining life time < 12 months).
1604	Meter - Leakage	Intelis Water Meter Extended Alarm bit 8: The meter has detected a leak. For the International meter this is set if the average flow rate during each of the previous 24 hours (midnight to midnight) was above the leakage flow rate threshold; it is cleared if the average flow rate during any of the previous 24 hours (midnight to midnight) was below the leakage flow rate threshold. For the NAM meter this is set if the average flow rate during each of the hours over a configurable number of days was above the leakage flow rate threshold; it is cleared as soon as the average flow rate for an hour goes below the leakage flow rate. Is an alarm by default.
1605	Meter - Burst Flow / Broken Pipe	Intelis Water Meter Extended Alarm bit 4: The meter has detected a burst flow which indicates the pipe is likely broken. For both the International and the NAM meter this is cleared immediately as soon as the condition is no longer present. Is an alarm by default.
1606	Cover Open / Real Time Removal	Intelis Water Meter Extended Alarm: The meter has detected that the cover is currently open. Is an alarm by default.
1607	Meter - Tamper Alarm	Intelis Water Meter Extended Alarm bit 11: The meter has detected that the cover was opened so the meter may have been tampered with. For the International meter this is never cleared. For the NAM meter this is cleared after an “alarm duration” time which is 1 day minimum.

Event ID	Event name	Event description
1608	Meter - Temperature Alarm	Intelis Water Meter Extended Alarm bit 0 OR bit 1: The meter has detected that the temperature has gone outside the meter's temperature range (either high or low). For the International meter this is cleared at midnight each day if the condition is no longer present. For the NAM meter this is cleared after an "alarm duration" time which is 1 day minimum.
3000	Device Reconfigured	The HES configuration has changed in the device.
3001	Event Log Cleared	The Itron Event Log has been reset.
3002	DST Periods Exhausted	The DST Calendar has reached its end - new DST calendar should be downloaded. This event should be logged when the daylight_savings_start date in the last element of the transitions array in the DaylightSavingsTransitions object is reached. Not supported in Gen5 devices.
3003	Configuration Downloaded	A new HES configuration has been downloaded.
3004	System Reboot	Watchdog error - reboot.
3005	System Restart	Planned restart of 500W ERT Module.
3006	Improper Installation Detected	500W ERT Module could not adopt configuration information.
3007	Disconnect Completed	Disconnect was received and has completed.
3008	Disconnect Failed	Disconnect was received but failed to execute. Event detail will contain the verbose_result attribute of the DisconnectControl object.
3011	Connect Completed	Reconnect was received and has completed. Event detail will contain the verbose_result attribute of the DisconnectControl object.
3012	Connect Failed	Reconnect was received but failed to execute. Event detail will contain the verbose_result attribute of the DisconnectControl object.
3013	Flow Restriction Setting Changed	Restrict / service limit was received and has completed. Event detail will contain the verbose_result attribute of the DisconnectControl object.
3014	Flow Restriction Setting Failed	Restrict / service limit was received but failed to execute. Event detail will contain the verbose_result attribute of the DisconnectControl object.
3015	Authentication Failed	Application level security failure - authentication.

Event ID	Event name	Event description
3016	Access Control Failed	Application level security failure - access control.
3017	Key Rollover	Key rollover command received.
3018	Key Signing	Application level security failure - c500W ERT Moduleificate.
3019	Takeover Package Accepted	A Takeover Package was presented and accepted by the 500W ERT Module.
3020	Takeover Package Rejected	A Takeover Package was presented, but rejected by the 500W ERT Module.
3021	Replay Attack Detected	Application level security failure - Replay.
3022	RMA Signed Authorization Received	A Signed Authorization with issued-to "Itron-RMA" has been received.
3039	DHCP Address Index Changed	A change has been made to one of the DHCP address indexes. (OBIS 0.128.96.1.10.255 or 0.128.96.1.11.255).
10000	PCOMP Changed	Metrology parameter (PCOMP) changed.
10001	Count Rate Changed	Metrology parameter (Count Rate) changed.
10002	Rollover Count Changed	Metrology parameter (Rollover Count) changed.
10003	Count Sample Debounce Changed	Metrology parameter (Count Sample Configuration – debounce parameters) changed.
10004	Encoder Driver Type Changed	Metrology parameter (Encoder Driver Type) changed.
10005	Prescaler changed	Metrology parameter (Prescaler) changed.
10006	Initial Index	Metrology parameter (Initial Index) changed.
10007	Image transfer initiated (enabled)	Self-descriptive.
10008	Image transfer canceled (disabled)	Self-descriptive.

Event ID	Event name	Event description
10009	Image transfer cancel failed	Self-descriptive.
10010	Image verification initiated	Self-descriptive.
10011	Image verification successful	Self-descriptive.
10012	Image verification failed	Self-descriptive.
10013	Image activation initiated	Self-descriptive.
10014	Image activation successful	Self-descriptive.
10015	Image activation failed	Self-descriptive.
10019	Load Profile Interval Changed	A change has been made to the CompressedLoadProfile object (OBIS A.128.100.0.1.255) capture_period (attribute 7).
10020	Count Sample Width Changed	Metrology parameter (Count Sample Configuration – sample width parameters) changed.
10021	Count Sample Rate Changed	Metrology parameter (Count Sample Configuration – sample width parameters) changed.



Important safety and compliance information

This section provides important information for your safety and product compliance.

USA, FCC Part 15 spectrum compliance

This device complies with Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference that may cause undesirable operation.

This device must be installed to provide a separation distance of at least 20 centimeters (7.9 inches) from all persons to be compliant with regulatory RF exposure.

USA, FCC Class B-Part 15

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio or TV technician for help.

Modifications and repairs

To ensure system performance, this device and antenna shall not be changed or modified without the express approval of Itron. Per FCC/ISED rules, unapproved modifications or

operation beyond or in conflict with these instructions for use could void the user's authority to operate the equipment.



Warning! This unit cannot be modified and is not repairable. Attempts to modify or repair this module will void the warranty.

Canada, ISED spectrum compliance

Compliance statement Canada	Déclaration de Conformité
This device complies with Innovation, Science and Economic Development Canada (ISED) license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, (2) this device must accept any interference, including interference that may cause undesired operation of the device. Under Innovation, Science and Economic Development Canada (ISED) regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.	Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Conformément à la réglementation d'Industrie Canada, le présent émetteur radio peut fonctionner avec une antenne d'un type et d'un gain maximal (ou inférieur) approuvé pour l'émetteur par Industrie Canada. Dans le but de réduire les risques de brouillage radioélectrique à l'intention des autres utilisateurs, il faut choisir le type d'antenne et son gain de sorte que la puissance isotrope rayonnée équivalente (p.i.r.e.) ne dépasse pas l'intensité nécessaire à l'établissement d'une communication satisfaisante.

RF exposure (FCC/ISED)

This equipment complies with radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter

Cet équipement est conforme aux limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20 cm entre le radiateur et votre corps. Cet émetteur ne doit pas être co-localisées ou opérant en conjonction avec tout autre antenne ou transmetteur.

Australia, ACMA spectrum compliance

When this device is sold and shipped to Australia, it is configured and labeled accordingly to be compliant with ACMA Standards for the Radio, EMC and RF Exposure. This includes standard AS/NZS 4268 RF spectrum for frequency, power out, emissions, and so on.

New Zealand, RCM spectrum compliance

Note: (For remote 500W ERT Modules only) The Remote 500W ERT Module is not approved for use in New Zealand.

When the pit 500W ERT Module is sold and shipped to New Zealand, it is configured and labeled accordingly to be compliant with RCM Standards for the Radio, EMC and RF Exposure. This includes AS/NZS 4268 RF spectrum standard and RCM Radiocommunications Regulations (General User Radio Licence for Short Range Devices) for frequency and power out.

Note: (For pit 500W ERT Modules only) The Remote Antenna Kit (CFG-0900-003), 500W Remote Modules, Leak Sensor (LDS-1601-001 and LDS-1601-002), OpenWay Riva network mode, and legacy ChoiceConnect modes are not approved for New Zealand.

Lithium battery safety



Warning! Follow these procedures to avoid injury to yourself or others.

- The lithium battery may cause a fire or chemical burn if it is not disposed of properly.
- Do not recharge, disassemble, heat above 212°Fahrenheit (100°C Celsius), crush, expose to water, or incinerate the lithium battery. Fire, explosion, and severe burn hazard.
- The battery used in this device may present a risk of fire or chemical burn if mistreated.
- Keep the lithium battery away from children.

Disconnecting power



Warning! Qualified technician: during service, disconnect power to prevent ignition of flammable or combustible atmospheres.

Electromagnetic compatibility



Caution: Use only approved accessories with this equipment. Unapproved modifications or operation beyond or in conflict with these instructions for use may void authorization by the authorities to operate the equipment.

Electrostatic discharge



Caution: Internal circuit components can be sensitive to electrostatic discharge. Before installation, discharge electrostatic buildup by touching a metal pipe or other earth-grounded metal object prior to touching the meter body, register housing, or Itron device.

Do not drop



Caution: While Itron modules are designed to withstand a drop, dropping the module may damage the device and void the warranty.