



**MOTOROLA**

EN UK

# MOTOROLA DEFY™ MINI

LIFE.  POWERED.



# CONGRATULATIONS

## MOTOROLA DEFY™ MINI

Your MOTOROLA DEFY™ MINI helps you seamlessly manage your "Office" and "Outdoor" lifestyles.

- **Lifeproof:** Your phone is water-resistant, dustproof and it has a scratch-resistant screen, because accidents happen.
- **Dashboard:** Easy access to all your favourite Outdoor apps, like **Camera**, **Compass** and a pedometer. For details, see "**DASHBOARD**" on page 12.
- **MotoSwitch:** MotoSwitch is a dynamic interface that gives you seamless access to content that is relevant to you. For details, see "**MOTOSWITCH**" on page 13.
- **Extended battery life:** So you have longer to use your phone outdoors.

**Note:** Certain apps and features may not be available in all countries.

**Caution:** Before assembling, charging or using your phone for the first time, please read the important safety, regulatory and legal information provided with your product.

**SAR**

This product meets the applicable limit for exposure to radio waves (known as SAR) of 2.0 W/kg (ICNIRP). The limits and guidelines

include a substantial safety margin designed to assure the safety of all persons, regardless of age and health. The highest SAR values measured for this device are listed in the regulatory information packaged with your product.

**Note:** When using the product while worn on your body, either use an approved accessory, such as a holster, or maintain a distance of 2.5 cm (1 inch) from the body to ensure compliance with SAR requirements. Note that the product may be transmitting even if you are not making a phone call.

## WANT MORE?

More help, more accessories, more free stuff. We're here to help.

- **Updates:** Phone updates, PC software, user guides, online help and more at [www.motorola.com/mydefymini](http://www.motorola.com/mydefymini).
- **Accessories:** Find more for your phone at [www.motorola.com/products](http://www.motorola.com/products).
- **Social:** The latest news, tips & tricks, videos and so much more—join us on:



**YouTube™** [www.youtube.com/motorola](http://www.youtube.com/motorola)




**Facebook™** [www.facebook.com/motorola](http://www.facebook.com/motorola)



**Twitter** [www.twitter.com/motomobile](http://www.twitter.com/motomobile)

# YOUR PHONE

*the important keys & connectors*

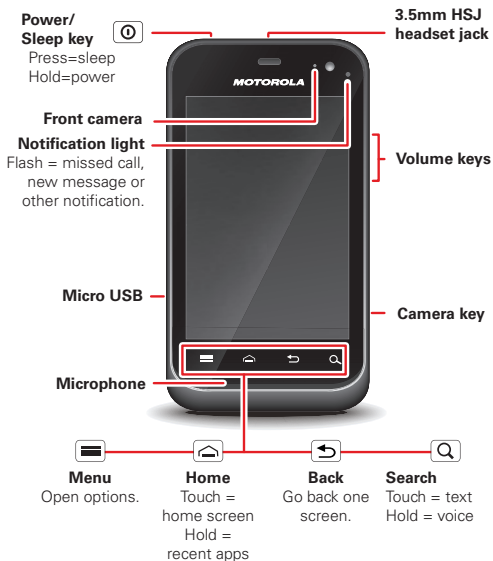



**Note:** To help protect your phone, always make sure that the battery cover and any connector covers are closed and secure.

# CONTENTS

|                                                  |           |
|--------------------------------------------------|-----------|
| <b>LET'S GO</b>                                  | <b>6</b>  |
| <b>HOME SCREEN &amp; APPS</b>                    | <b>10</b> |
| <b>PERSONALISE</b>                               | <b>17</b> |
| <b>CALLS</b>                                     | <b>18</b> |
| <b>CONTACTS</b>                                  | <b>21</b> |
| <b>MESSAGING</b>                                 | <b>23</b> |
| <b>TEXT ENTRY</b>                                | <b>26</b> |
| <b>SCHEDULE</b>                                  | <b>28</b> |
| <b>WEB</b>                                       | <b>30</b> |
| <b>LOCATION</b>                                  | <b>32</b> |
| <b>PHOTOS &amp; VIDEOS</b>                       | <b>33</b> |
| <b>MUSIC</b>                                     | <b>35</b> |
| <b>MEDIA</b>                                     | <b>40</b> |
| <b>BLUETOOTH™, WI-FI &amp; CABLE CONNECTIONS</b> | <b>41</b> |
| <b>SECURITY</b>                                  | <b>44</b> |
| <b>TROUBLESHOOTING</b>                           | <b>45</b> |
| <b>SAFETY, REGULATORY &amp; LEGAL</b>            | <b>46</b> |

# LET'S GO

*let's get you up and running*

## ASSEMBLE & CHARGE

1 Cover off



2 SIM in



SIM



microSIM



microSIM  
+ Adapter

3 microSD in (may already be inserted)



4 Battery in



5 Cover on



6 Charge up



6 Let's go

**Caution:** Please read "**BATTERY USE & SAFETY**" on page 46.

## SET UP & GO

**Note:** This phone supports apps and services that use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

When you turn on your new phone, you can create or enter a Google™ account so that you can download apps, use Gmail™ and much more:

- 1 Press and hold Power  to turn on your phone.
- 2 Touch the Android™ image to begin setup.
- 3 Touch a button to **Create** a Google account, **Sign in** with one you have or **Skip**.



You can log into your account from a computer at [accounts.google.com](https://accounts.google.com).

- 4 When your phone confirms the account, it shows account sync options.
  - To change whether your phone shows the Google account's contacts, Gmail™ and calendar, touch the Google account name.
  - To add another account, touch **Add account**. For details, see "**EMAIL**" on page 23.
  - To exit setup, touch Home .

If your phone cannot connect, touch Menu  > **Wi-Fi settings** to change mobile network settings.

## RUGGED

Your MOTOROLA **DEFY™ MINI** stands up to water, dust and life. Now your investment is safe and protected from life's little challenges, like that sudden rain shower and other everyday mishaps.

Of course, your phone isn't indestructible, so to avoid damage from natural elements, such as water, sand and dust intrusion, always make sure that the battery door cover and connector covers are closed and secure.

If your phone gets wet and/or dirty:

- Wipe with a soft cloth and shake to remove excess water from the entire phone, especially the display screen, speaker and microphone ports.
- Allow your phone to air-dry for at least 1 hour before using it again.
- Always make sure you clean all dirt and debris from the battery door cover/seals and connector covers.

**Note:** Your phone is not designed to float or work underwater.

## SLEEP & WAKE UP

Your screen sleeps when you hold it to your ear during a call or when it is inactive. To change the sleep delay, touch Menu > **Settings** > **Display** > **Screen timeout**.



**Power/  
Sleep key**  
Press=sleep  
or wake up  
Hold=power

## KEYS

Use your phone's keys to navigate and open options at any time.

Press the volume keys to change the ring volume (on the home screen), or the earpiece volume (during a call).

From any screen, press the Camera key on the right side of the phone to open the camera.

Touch Home  to return to the home screen. Touch and hold Home  to see your recent apps.



**Volume  
keys**

**Camera  
key**

# HOME SCREEN & APPS

*a few essentials*

## QUICK START: HOME SCREEN

You'll see the home screen when you turn on the phone or touch Home  from a menu:



- To open shortcuts or widgets, **touch** them. Touch Home  to return to the home screen.

When you open shortcuts or widgets, touch Menu  for options.

- To move or delete shortcuts or widgets, **touch and hold** them until you feel a vibration, then drag it to another spot, another panel or  at the top.  
In lists like **Contacts**, touch and hold list items for options.
- To add shortcuts, widgets or wallpaper, touch and hold an empty spot until you see the menu. You can also add a folder to organise your shortcuts.
- To show more panels, **drag** or **flick** right or left. Touch Home  to show panel thumbnails.


In lists like **Contacts**, drag or flick to scroll.

To change your ringtone, display brightness and more, touch Menu  > **Settings** > **Sound** or **Display**. For details, see "**PERSONALISE**" on page 17.

**Tip:** From the home screen, touch Menu  > **Profiles** to design different home screens for **Work**, **Home** or **Weekend**. Your changes are stored in each profile.

## DASHBOARD

You can access the outdoor apps on your phone with the dashboard, just touch  > **Dashboard** .

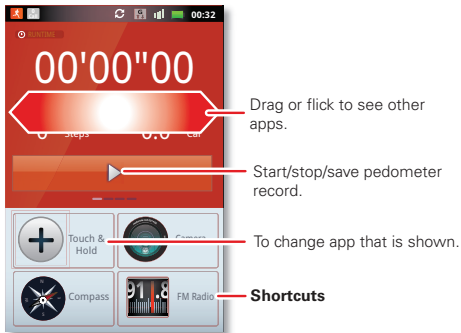

Your dashboard shows apps like **Camera**, **Compass** and **FM Radio**. You can also see a pedometer that reports your runtime, steps and calories burned—it's the ideal fitness companion.


**Note:** To set the pedometer, touch Menu  > **Settings** > **Height and weight**, then enter your details.

To view or share your records, touch Menu  > **My record** or **Share**.

# MOTOSWITCH

Jump right to your favourite apps from the home screen!

To set up your favourite apps, touch  then choose to add your apps automatically (your phone adds the apps you use the most) or manually:

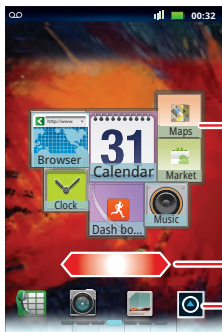

Your favourites,  
touch to open.

Drag or flick to open panels.

Open the app menu.

**Tip:** The biggest app icon shows the app you use the most.

To **delete** a favourite app icon, touch and hold, then drag the app icon to the bin .

To **go to a favourite app** from the home screen, just touch it.