

APPLICANT: MOTOROLA, INC.



FCC ID: IHDT56FP1

INSTRUCTION MANUAL

A preliminary draft copy of the Users Manual follows:

HELLOMOTO

Introducing your new Motorola SLVR V8 GSM wireless phone. Here's a quick anatomy lesson.

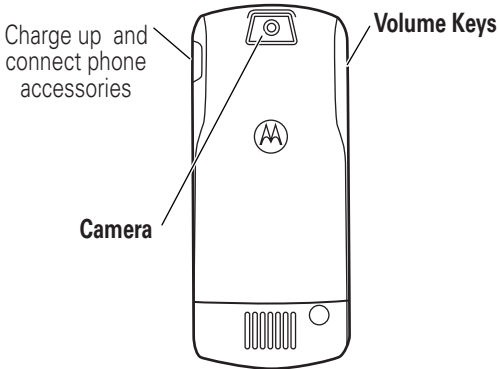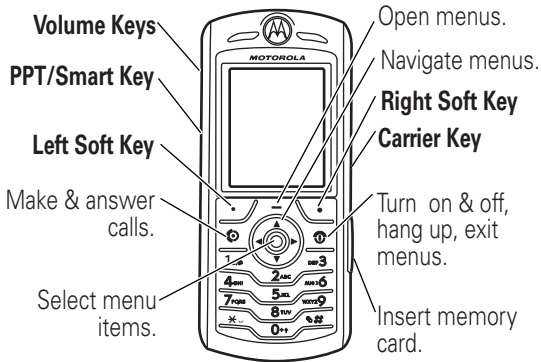

For Push to Talk (PTT) details, see page 60.

Motorola, Inc.
Consumer Advocacy Office
1307 East Algonquin Road
Schaumburg, IL 60196

www.hellomoto.com

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized - Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Java and all other Java-based marks are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2005.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or

reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68XXXXX105-0

contents

feature locator	6	codes & passwords	49
Safety Information	8	lock & unlock phone	49
EU Conformance	15	customize	51
Recycling Information	16	ring style	51
essentials	17	time & date	52
about this guide	17	wallpaper	52
SIM card	17	screen saver	53
battery	18	display appearance	53
turn it on & off	21	answer options	54
make a call	21	calls	55
answer a call	21	turn off a call alert	55
your phone number	21	recent calls	55
main attractions	23	redial	56
take & send a photo	23	return a call	57
record video	25	notepad	57
audio player	26	hold or mute a call	57
digital audio player	28	call waiting	58
cable connections	30	caller ID	58
memory card	30	emergency calls	58
Bluetooth® wireless	33	international calls	59
basics	38	1-touch dial	59
display	38	voicemail	60
menus	41	push to talk (PTT)	60
create SMS	43	other features	66
volume	48	advanced calling	66
navigation key	48	phonebook	68
handsfree speaker	49	messages	72

personalizing	75
call times & costs	77
handsfree	78
data & fax calls	79
network.	80
personal organizer. . . .	80
security	82
fun & games	82
service and repairs	85
SAR Data	86
Warranty	88
index	94

feature locator

main menu



Phonebook



Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Call Times *
- Call Cost *
- Data Times *
- Data Volumes *



Messages

- Create Message
- Message Inbox
- Outbox
- Drafts
- MMS Templates
- Quick Notes
- Browser Msgs
- Info Services
- Voicemail
- Email Msgs



Tools

- SIM Tool Kit Apps *
- Calculator
- Datebook
- Shortcuts
- Alarm Clock
- Dialing Services
 - Fixed Dial
 - Service Dial *
 - Quick Dial
 - Voice Dial



Games & Apps



Web Access

- Browser
- Web Shortcuts
- Stored Pages
- History
- Go To URL
- Browser Setup
- Web Sessions *



Multimedia

- Pictures
- Sounds
- Camera
- Videos
- Video Camera



Bluetooth Link

- Handsfree
- Device History
- Setup



Settings

- (see next page)

* optional features

This is the standard main menu layout. Your phone's menu may be a little different.

settings menu



Personalize

- Home Screen
- Main Menu
- Skin
- Greeting
- Wallpaper
- Screen Saver



Ring Styles

- Style
- Style Detail



Connection

- Bluetooth Link
- Sync
- USB Settings



Call Forward *

- Voice Calls
- Fax Calls
- Data Calls
- Cancel All
- Forward Status



In-Call Setup

- In-Call Timer
- Call Cost Set-up
- My Caller ID
- Talk and Fax
- Answer Options
- Call Waiting



Initial Setup

- Time and Date
- 1-Touch Dial
- Display Timeout
- Backlight
- TTY Setup *
- Scroll
- Language
- Brightness
- DTMF
- Master Reset
- Master Clear



Phone Status

- My Tel. Numbers
- Active Line *
- Battery Meter
- Storage Devices
- Software Update
- Other Information



Headset

- Auto Answer
- Voice Dial



Car Settings

- Auto Answer
- Auto Handsfree
- Power-Off Delay
- Charger Time



Network

- New Network
- Network Setup
- Available Networks
- My Network List *
- Service Tone
- Network Jingle *
- Call Drop Tone



Security

- Phone Lock
- Lock Keypad *
- Lock Application
- Fixed Dial
- Restrict Calls
- Call Barring *
- SIM PIN
- New Passwords
- Certificate Mgmt *



PTT Settings

- PTT Service



Java Settings

- Java Application Loader
- Java System
- Delete All Apps
- App Vibration
- App Volume
- App Backlight

* optional features

Safety and General Information

IMPORTANT INFORMATION ON SAFE AND EFFICIENT OPERATION. READ THIS INFORMATION BEFORE USING YOUR PHONE.¹

Exposure To Radio Frequency (RF) Energy

Your phone contains a transmitter and a receiver. When it is ON, it receives and transmits RF energy. When you communicate with your phone, the system handling your call controls the power level at which your phone transmits.

Your Motorola phone is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

Operational Precautions

To assure optimal phone performance and make sure human exposure to RF energy is within the guidelines set forth in the relevant standards, always adhere to the following instructions.

External Antenna Care

If your phone has an external antenna, use only the supplied or Motorola-approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and/or may result in non-compliance with local regulatory requirements in your country.

Do NOT hold the external antenna when the phone is IN USE. Holding the external antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Phone Operation

When placing or receiving a phone call, hold your phone as you would a wireline phone.

Body-Worn Operation: Voice Communication

To maintain compliance with RF energy exposure guidelines, if you wear a phone on your body when transmitting voice communications, always place the phone in a Motorola-supplied or approved clip, holder, holster, case, or body harness for this phone, if available. Use of accessories not approved by Motorola may exceed RF energy exposure guidelines.

If you do not use one of the body-worn accessories approved or supplied by Motorola, and are not using the phone held in the normal use position, ensure the phone and its antenna are at least 2.5 centimeters (1 inch) from your body when transmitting.

Data Operation

When using any data feature of the phone, with or without an accessory cable, position the phone and its antenna at least 2.5 centimeters (1 inch) from your body.

Approved Accessories

Use of accessories not approved by Motorola, including but not limited to batteries, antennas, and convertible covers, may cause your phone to exceed RF energy exposure guidelines. For a list of approved Motorola accessories, visit our website at www.motorola.com.

RF Energy Interference/Compatibility

Note: Nearly every electronic device is susceptible to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your phone may cause interference.

Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Facilities

Turn off your phone in any facility where posted notices instruct you to do so. These facilities may include hospitals or health care facilities that may be using equipment that is sensitive to external RF energy.

Aircraft

Turn off your wireless device whenever instructed to do so by airline staff. If your device offers a flight mode or similar feature, consult airline staff about use in flight. If your device offers a feature that automatically turns on the phone, then turn off this feature before boarding an airplane or entering an area where the use of wireless devices is restricted.

Medical Devices

Pacemakers

Pacemaker manufacturers recommend that a minimum separation of 15 centimeters (6 inches) be maintained between a handheld wireless phone and a pacemaker.

Persons with pacemakers should:

- ALWAYS keep the phone more than 15 centimeters (6 inches) from your pacemaker when the phone is turned ON.
- NOT carry the phone in the breast pocket.
- Use the ear opposite the pacemaker to minimize the potential for interference.
- Turn OFF the phone immediately if you have any reason to suspect that interference is taking place.

Hearing Aids

Some digital wireless phones may interfere with some hearing aids. In the event of such interference, you may want to consult your hearing aid manufacturer to discuss alternatives.

Other Medical Devices

If you use any other personal medical device, consult the manufacturer of your device to determine if it is adequately shielded from RF energy. Your physician may be able to assist you in obtaining this information.

Use While Driving

Check the laws and regulations on the use of phones in the area where you drive. Always obey them.

When using your phone while driving, please:

- Give full attention to driving and to the road. Using a phone may be distracting in certain circumstances. Discontinue a call if you can't concentrate on driving.
- Use handsfree operation, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.

Responsible driving best practices can be found in the "Wireless Phone Safety Tips" at the end of this guide and/or at the Motorola website: www.motorola.com/callsmart.

Operational Warnings

For Vehicles With an Air Bag

Do not place a phone in the area over an air bag or in the air bag deployment area. Air bags inflate with great force. If a phone is placed in the air bag deployment area and the air bag inflates, the phone may be propelled with great force and cause serious injury to occupants of the vehicle.

Gas or Petrol Stations

Obey all posted signs with respect to the use of radio equipment in gas or petrol stations. Turn off your wireless device if instructed by authorized staff.

Potentially Explosive Atmospheres

Turn off your phone prior to entering any area with a potentially explosive atmosphere. Do not remove, install, or charge batteries in such areas. Sparks in a potentially explosive atmosphere can cause an explosion or fire resulting in bodily injury or even death.

Note: The areas with potentially explosive atmospheres referred to above include fueling areas such as below decks on boats, fuel or chemical transfer or storage facilities, areas where the air contains chemicals or particles, such as grain, dust, or metal powders. Areas with potentially explosive atmospheres are often but not always posted.

Blasting Caps and Areas

To avoid possible interference with blasting operations, turn OFF your phone when you are near electrical blasting caps, in a blasting area, or in areas posted "Turn off electronic devices." Obey all signs and instructions.

Damaged Products






If your phone or battery has been submerged in water, punctured, or subjected to a severe fall, do not use it until you take it to a Motorola Authorized Service Center to determine if it has been damaged. Do not attempt to dry it with an external heat source, such as a microwave oven.

Batteries and Chargers

Batteries can cause property damage and/or bodily injury such as burns if a conductive material such as jewelry, keys, or beaded chains touch exposed terminals. The conductive material may complete an electrical circuit (short circuit) and become hot. Take care when handling a charged battery, particularly when placing it inside a pocket, purse, or other container with metal objects. **Use only Motorola Original™ batteries and chargers.**

Caution: To avoid risk of personal injury, do not dispose of your battery in a fire.

Your battery, charger, or phone may contain symbols, defined as follows:

Symbol	Definition
	Important safety information will follow.
	Your battery or phone should not be disposed of in a fire.
	Your battery or phone may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Your battery or phone should not be thrown in the trash.
	Your phone contains an internal lithium ion battery.

Choking Hazards

Your phone or its accessories may include detachable parts, which may present a choking hazard to small children. Keep your phone and its accessories away from small children.

Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when watching television or playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your doctor before playing video games on your phone or enabling a flashing-lights feature on your phone. (The flashing-light feature is not available on all products.)

Parents should monitor their children's use of video game or other features that incorporate flashing lights on the phones. All persons should discontinue use and consult a doctor if any of the following symptoms

occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Do not play or use a flashing-lights feature if you are tired or need sleep.
- Take a minimum of a 15-minute break hourly.
- Play in a room in which all lights are on.
- Play at the farthest distance possible from the screen.

Repetitive Motion Injuries


When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendonitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum 15-minute break every hour of game playing.
 - If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.
 - If you continue to have sore hands, wrists, or arms during or after play, stop playing and see a doctor.
1. The information provided in this document supersedes the general safety information in user's guides published prior to January 28, 2005.

European Union Directives Conformance Statement

CE Hereby, Motorola declares that this product is in compliance with

- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

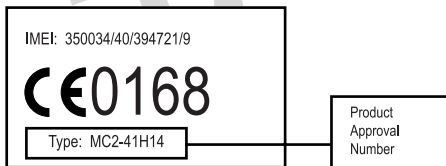

The above gives an example of a typical Product Approval Number.

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at www.motorola.com/rtte. To find your DoC, enter the product Approval Number from your product's label in the "Search" bar on the web site.

Caring for the Environment by Recycling



When you see this symbol on a Motorola product, do not dispose the product with household waste.

Recycling Mobile Phones and Accessories


Do not dispose of mobile phones or electrical accessories, such as chargers or headsets, with your household waste. In some countries or regions, collection systems are set up to handle electrical and electronic waste items. Contact your regional authorities for more details. If collection systems aren't available, return unwanted mobile phones or electrical accessories to any Motorola Approved Service Centre in your region.

essentials



about this guide

This guide shows how to locate a menu feature as follows:

Find it: Press  > **Recent Calls** > **Dialed Calls**

This example shows that, from the home screen, you press  to open the menu, highlight and select  **Recent Calls**, then highlight and select **Dialed Calls**.

Press  to scroll to and highlight a menu feature. Press the *center key*  to select the highlighted menu feature.

symbols	
	This means a feature is network/subscription dependent and may not be available in all areas. Contact your service provider for more information.
	This means a feature requires an optional accessory.


SIM card

Your *Subscriber Identity Module* (SIM) card contains personal information like your phone number and phonebook entries.


To insert and use a memory card, see page 30.

Caution: Don't bend or scratch your SIM card. Keep it away from static electricity, water, and dirt.


1

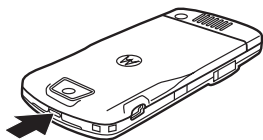


2

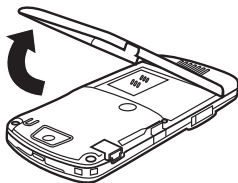


3

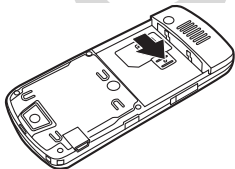

4

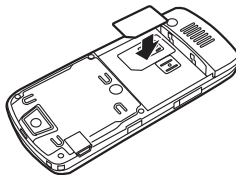


5

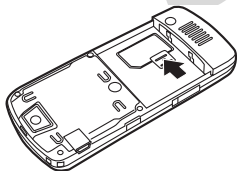


battery

battery installation


1

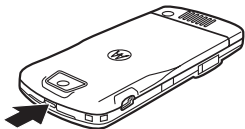


2

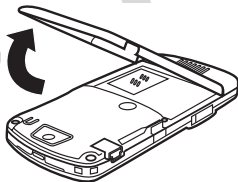

3

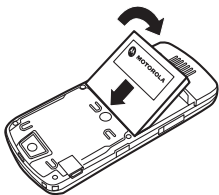

4

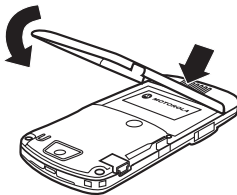

battery charging

New batteries are not fully charged. Plug the travel charger into your phone and an electrical outlet. Your phone display shows **Charge Complete** when finished.



Tip: Relax, you can't overcharge your phone battery. It will perform best after you fully charge and discharge it a few times.

You can charge your phone battery by connecting a cable from your phone's mini-USB port to a USB port on a computer. Both your phone and the computer must be turned on, and your computer must have the correct software drivers installed. Cables and software drivers are available in Motorola Original data kits, sold separately.



If your phone battery is completely drained, a PC USB charger will not charge it. Use the travel charger.

battery tips

Battery life depends on the network, signal strength, temperature, features, and accessories you use.

- Always use Motorola Original batteries and chargers. The warranty does not cover damage caused by non-Motorola batteries and/or chargers.
- New batteries or batteries stored for a long time may take more time to charge.
- When charging your battery, keep it near room temperature.
- When storing your battery, keep it uncharged in a cool, dark, dry place, such as a refrigerator.
- Never expose batteries to temperatures below -10°C (14°F) or above 45°C (113°F). Always take your phone with you when you leave your vehicle.
- It is normal for batteries to gradually wear down and require longer charging times. If you notice a change in your battery life, it is probably time to purchase a new battery.




Contact your local recycling center for proper battery disposal.

Warning: Never dispose batteries in a fire because they may explode.

Before using your phone, read the battery safety information in the "Safety and General Information" section included in this guide.

turn it on & off

To turn on your phone, press and hold  for a few seconds or until the display turns on. If prompted, enter your 4-digit unlock code.




Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows **SIM Blocked**. Contact your service provider.

To turn off your phone, press and hold  for 2 seconds.


make a call

Enter a phone number and press  to make a call.



To “hang up,” press .


answer a call



When your phone rings and/or vibrates, just press  to answer.

To “hang up,” press .

your phone number

From the home screen, press   to see your number.

Tip: Want to see your phone number while you’re on a call? Press  > **My Tel. Numbers**.

You can edit the name and phone number stored on your SIM card. From the home screen, press  ,



select an entry, and press the **Edit** key. If you don't know your phone number, contact your service provider.


DRAFT

main attractions


You can do much more with your phone than make and receive calls!


take & send a photo

Press the  > **Multimedia** > **Camera** to see the camera viewfinder:

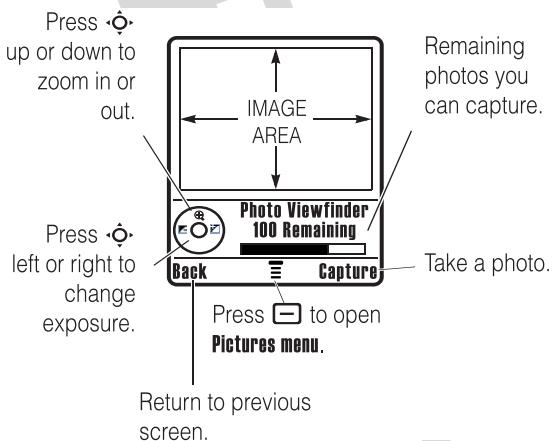


- 1 Point the camera lens at the photo subject.

You can press  to open the **Pictures Menu**. See the table after this procedure.


- 2 Press the center key  or **Capture** key to take a photo.
- To delete the photo and return to the active viewfinder, press the **Discard** key.
 - To store or send the photo, press the **Store** key.

When the viewfinder is active, press  to open the **Pictures Menu**:

options	
Go To Pictures	See stored pictures and photos.
Phone Memory or Memory Card	Choose to store and see pictures on your phone or memory card. 
Auto-Timed Capture	Set a timer for the camera to take a photo.
Pictures Setup	Open the setup menu to adjust photo settings.
View Free Space	See how much memory remains.

record video

Press **[Menu]** > **Multimedia** > **Video Camera** to see the video viewfinder.

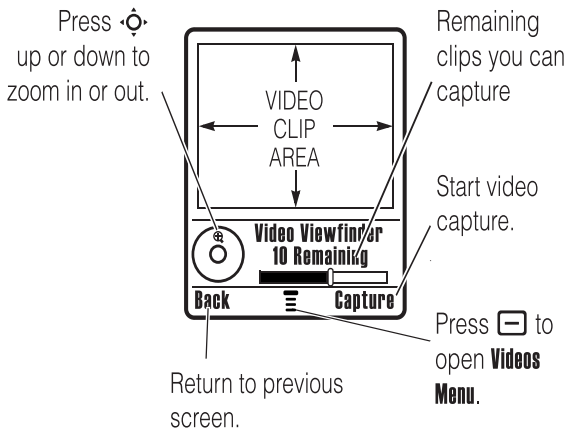

If you want to send your video in an MMS message, the video length must be set to MMS. To set length, press **[Menu]** > **Videos Setup** > **Video Length**.

Point the camera lens at the video subject, then:

- 1 Press the center key **[Center Key]** or **Capture** key to start the video.
- 2 Press the **Stop** key to stop the video.
- 3 Press **Store Only** to store the video.

or

Press **Send In Message** to send the video in a Multimedia Message.

or


Press the **Discard** key to delete the video and return to the active viewfinder.


Press  to open the **Videos Menu** when the viewfinder is active. The menu can include the following options:


options	
Go To Videos	Watch videos stored on your phone.
Videos Setup	Open the setup menu to adjust video settings. Note: Set Video Length to MMS if you want to send your video in an MMS message. Set Video Length to Maximum to record longer clips you can store on your phone.
View Free Space	See how much memory remains. Note: Your phone stores any content that you add, like ring tones or games, in <i>user memory</i> . Your service provider may store some content in user memory before you receive the phone.


audio player

Your phone has an audio player in **Multimedia**

Find it: Press  > **Multimedia** > **Sounds**



Press  up or down to highlight a sound or song then press **Play**.



To continue playing sounds and hide the audio player, press **Hide** > **Back** > **Exit**. In the idle audio player screen, press  left

or right to play the previous or next song. To stop the audio player press  .

create and play a playlist

To create a playlist:



- 1 In the **Sounds** menu, press  > **New** > **Playlist**.
- 2 Highlight Name and press **Change**.
- 3 Use the keypad to enter a name for your playlist and press **OK**.
- 4 Highlight **Audio Files** and press **Change**. The **Audio** screen displays with all the sounds available on your phone.
- 5 Press  up or down to navigate to a song you want to add to the playlist.

To select a song press **Check** or the center select key  . A check mark appears  when a song is selected.

- 6 When all sounds and songs are added to your playlist , press **Done**. The playlist is stored to the sounds list with the name you specified.

Press  up or down to highlight the playlist name and press **Play**.

sound options

In the Sounds menu, Press  to view sound options. Press  up or down to highlight an option:

options	
Apply as Ring Tone	Highlight a sound or song and choose this option to apply it as a ring tone.
New	Create a new playlist or iMelody . for more information about iMelody , see page 83.
Details	Show sound or songs information. Note: All of your phone's sounds appear in the Sounds list. Some sounds and songs do not have any Title or Category information stored, so they don't appear in those lists.
Mark / Mark All	Check or uncheck sounds.
Categories	Create and store sounds in sound categories.
Sounds Setup	Set your phone to play sounds on auto repeat.
View Free Space	View space information for your phone or memory card.

To download songs to your phone, see page 83. To copy files between your phone and a computer, see page 31.

Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of these files, your phone might show you an error or ask you to delete the file.

digital audio player

Your phone has an audio player in its **Games & Apps**:

Find it: Press  > **Games & Apps** > **Digital Audio Player**

Press left or right to highlight a button at the top of the audio player: play , pause , stop , previous , next , repeat , shuffle , and visualizer on/off

Press up or down to highlight an option:

options	
Playlists	Create or play a playlist of songs.
Artists	Select an artist to show or play their songs.
Albums	Select an album to show or play its songs.
Songs	Show and play individual songs. Note: All of your phone's songs appear in the Songs list. Some songs do not have any Artist , Album , or Genre information stored, so they don't appear in those lists.
Genres	Select a type of music to show or play songs.
Help	Show instructions on how to use the audio player
About	Show audio player version information

Tip: If you want music in a hurry, you can create a shortcut to the audio player. Highlight **Digital Audio Player** in the **Games & Apps** list, then press and hold . To use the shortcut from the home screen, press and the shortcut key number.

To download songs to your phone, see page 83. To copy files between your phone and a computer, see page 31.


Note: Your phone cannot play MP3 files that have a bit rate higher than 192 kbps. If you try to download or play one of


these files, your phone might show you an error or ask you to delete the file.

cable connections

Note: Motorola Original USB data cable and supporting software may be sold together with the phone or separately. Check your computer or hand-held device to determine the type of cable you need. To **transfer data** between your phone and computer, you must install the software included with the Motorola Original data kit. See the data kit user's guide for more information. To make **data and fax calls** through a connected computer, see page 79.



 Your phone has a mini-USB port so you can connect it to a computer to transfer data.

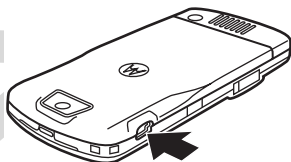

memory card

You can use a removable memory card with your phone to store and retrieve multimedia objects (such as photos and sounds).




Note: If you download a copyrighted file and store it on your memory card, you can use the file only while your memory card is inserted in your phone. You cannot send, copy, or change copyrighted files.

install a memory card

Push the card in until it clicks into place.

Do not remove your memory card while your phone is using it or writing files on it.

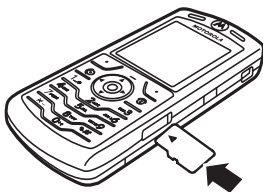

see and change memory card information

Find it: Press [Home] > **Settings** > **Phone Status** > **Storage Devices**

- 1 Press [Back] to highlight the memory card.
- 2 Press the **Details** key to see the memory card information
or

Press [Home] to see the **Storage Device** menu, which lets you **Format** or **Rename** the memory card.

To see memory card files, open a file list (such as **Pictures** or **Sounds**) and press [Home] > **Memory Card**. To see files stored on your phone again, press [Home] > **Phone Memory**.

connect the memory card to a computer

You can access your phone's memory card with a PC.

Note: When your phone is connected to a computer, you can only access the memory card through the computer.

On your phone:

Press [Home] > **Settings** > **Connection** > **USB Settings** > **Memory Card**.

This directs the USB connection to your memory card. Attach the Motorola Original USB cable to the accessory port on your phone and to an available USB port on your computer. Then follow these steps:



On your computer:

- 1 Open your "My Computer" window, where your phone's memory card shows as a "Removable Disk" icon.
- 2 Click on the "Removable Disk" icon to access the files on your phone's memory card.
- 3 To store the desired files onto the memory card, drag and drop them as follows: **MP3 files:** > mobile > audio
screen savers: > mobile > picture
wallpapers: > mobile > picture
video clips: > mobile > video
- 4 When you finish, remove the device by selecting the "Safely Remove Hardware" icon in the system tray at the bottom of your computer screen. Then select "USB Mass Storage Devices" and "Stop".
- 5 Select "USB Mass Storage Device" then "OK".

On your phone:

To return to **Data Fax** as your USB default connection, press

 > **Settings** > **Connection** > **USB Settings** > **Data/Fax Connection**.

Bluetooth® wireless

Your phone supports Bluetooth wireless *pairing* (also called *linking* or *bonding*). You can pair your phone with a Bluetooth headset or car kit, or pair your phone with a computer to exchange and synchronize files.

Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

turn Bluetooth power on or off

Find it: Press  > Bluetooth Link > Setup > Power > On

If Bluetooth **Power** is **On**, your phone can automatically pair with the handsfree device you have used before. Just turn on the device or move it near the phone.

Note: To extend battery life, use the above procedure and set Bluetooth **Power** to **Off** when not in use. Your phone will not pair with devices until you set Bluetooth **Power** back to **On** and pair your phone with the devices again.


pair with a headset or handsfree device

Before you try to pair your phone with a device, make sure your phone's Bluetooth power is **on** and the device is **on** and **ready** in *pairing* or *bonding* mode (see the user's guide for the device). You can pair your phone with only one device at a time.

Find it: Press  > Bluetooth Link > Handsfree > [Look For Devices] 

Your phone lists the devices it finds within range.

- 1 Highlight a device in the list and press the **Select** key.
- 2 If necessary, enter the device passkey (such as 0000) and press the **Ok** key.

When your phone is paired, the Bluetooth indicator  shows in the home screen.



Tip: For information about your headset or handsfree device, refer to the instructions that came with it.

copy objects to another device










You can use Bluetooth pairing to copy a media object, phonebook entry, datebook event, or bookmark from your phone to a computer or other device.






Note: Preloaded multimedia objects cannot be copied.

- 1 Highlight the object on your phone that you want to copy to the other device.
- 2 Press  > **Mark** (or press **0** to mark objects) and then press  > **Copy Marked Files** (for media objects), **Send** (for datebook events), or **Share Phonebook Entry** (for phonebook entries).
- 3 Select a recognized device name, or **[Look For Devices]** to search for the device where you want to copy the object.

advanced Bluetooth features

features		
make phone visible to other device	Allow a Bluetooth device to discover your phone:  > Bluetooth Link > Setup > Find Me	
pair with recognized device	Pair your phone with a recognized handsfree device:  > Bluetooth Link > Handsfree > Look for Devices	
drop pairing with device	Highlight the device name and press the Drop key.	
switch to device during call	Switch to a headset or car kit during a call:  > Use Bluetooth	
move multimedia object to device	Move a multimedia object to another device: Note: Preloaded multimedia objects cannot be moved. Highlight the object, press  > Move , select the device name. Caution: Moving an object deletes the original object from your phone.	


features	
copy media objects, datebook events, and phonebook entries	<p>Highlight the object you want to copy to another location.</p> <p>Press [F2] > Mark (or press 0 to mark objects) and then press [F2] > Copy Marked Files (for media objects), or press Send (for datebook events and phonebook entries).</p>
print media objects, datebook events, and phonebook entries	<p>Highlight the object you want to print to a printer.</p> <p>Press [F2] > Mark (or press 0 to mark objects) and then press [F2] > Print Marked Files (for media objects), or press Print (for datebook events and phonebook entries).</p>
select print templates	<p>You can select desired print templates in the Print Options screen. After you have selected Print Marked Files or Print select Template > Change > View (press navigation key up or down to view different templates) > Select > [Print]</p> <p>Note: For Border Free picture printing, select Copy Marked Files instead of Print Marked Files. Preloaded pictures cannot be printed.</p>

features	
edit device properties	<p>Edit the properties of a recognized device: </p> <p>Highlight the device name, press the Edit key.</p>
set Bluetooth options	<p>Highlight the device name, press  > Bluetooth Link > Setup </p>


basics



See page 1 for a basic phone diagram.


display

The *home screen* shows when you turn on the phone. To dial a number from the home screen, press number keys and .

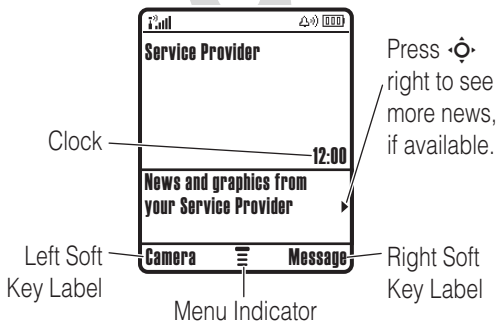Note: Your home screen may look different from the one below, depending on your service provider.




The *Menu Indicator*  shows that you can press  to open the menu. *Soft Key Labels* show the current soft key functions. For soft key locations, see page 1.

Your home screen might show news from your service provider at the bottom. To change this news view, press  > **Settings** > **Personalize** > **Home Screen** > **Headlines** > **Off**.



Status indicators may be shown at the top of the home screen:

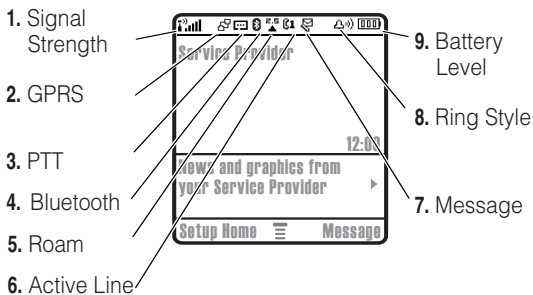


1 Signal Strength Indicator – Vertical bars show the strength of the network connection. You can't make or receive calls when or shows.


2 GPRS Indicator – Shows when your phone is using *General Packet Radio Service* (GPRS) network connection. Indicators can include:


= GPRS PDP context active


= GPRS packet data available


3 PTT Indicator – Shows when you can make and receive PTT calls () or both PTT calls and Instant Messages (). Other indicators can include:

 = secure packet data transfer

 = unsecure packet data transfer

 = secure application connection

 = unsecure application connection

 = secure *Circuit Switch Data* (CSD) call

 = unsecure CSD call

- 4 Bluetooth Indicator** – Shows when a Bluetooth® connection is active (.




- 5 Roam Indicator** – Shows when your phone is seeking or using a network outside your home network. Indicators can include:





 = 2G home

 = 2G roam

 = 2.5G home

 = 2.5G roam

- 6 Active Line Indicator** – Shows  to indicate an active call, or  to indicate when call forwarding is on. Indicators for dual-line-enabled SIM cards can include:



 = line 1 active

 = line 1 active, call forward on

 = line 2 active

 = line 2 active, call forward on

- 7 Message Indicator** – Shows when you receive a new message. Indicators can include:



 = text message

 = voice message

- 8 Ring Style Indicator** – Shows the ring style setting.

📞 = loud ring

📞🔊 = vibrate & ring

📞🔊 = soft ring

🔊📞 = vibrate then ring


🔊 = vibrate

🔊 = silent







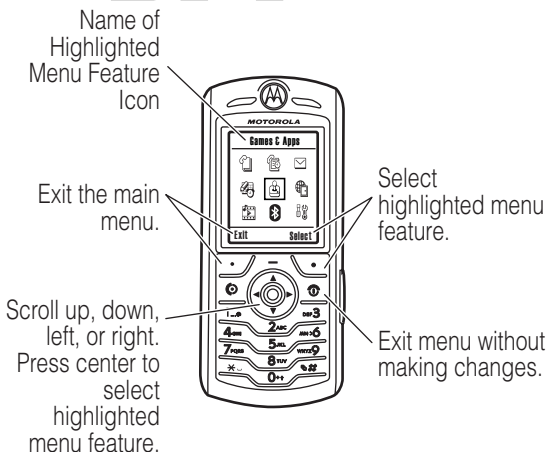


9 Battery Level Indicator – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.

menus


From the home screen, press  to enter the main menu.



The following menu icons may be available, depending on your service provider and service subscription options.

menu features	
 Phonebook	 Web Access
 Recent Calls	 Multimedia
 Messages	 Bluetooth Link
 Tools	 Settings
 Games & Apps	

Some features require you to select an option from a list:

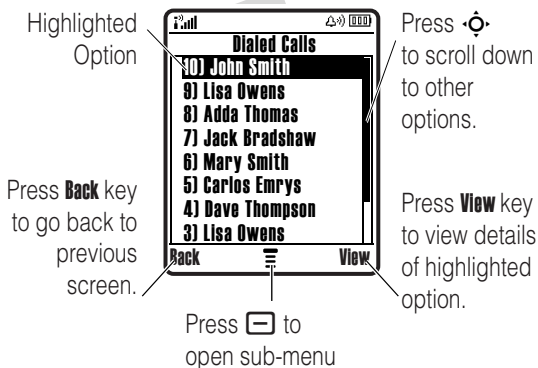


- Scroll up or down to highlight the option you want.
- In a numbered list, press a number key to highlight an option.
- In an alphabetized list, press a key repeatedly to cycle through its letters and highlight the closest matching list option.

- When an option has a list of possible settings, scroll left or right to select the setting.
- When an option has a list of possible numeric values, press a number key to set the value.

create SMS

To create a new message, enter text.

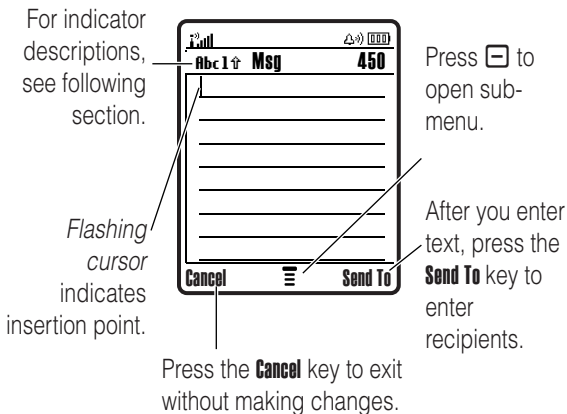



Press **[#]** in a text entry view to select an entry mode:

entry modes

[] or **1** Your **Primary** text entry mode can be set to any iTAP™ **[]** or tap **1** mode.


entry modes

 or **2** Your **Secondary** text entry mode can be set to any iTAP  or tap **2** mode, or set to **None** if you don't want a secondary entry mode.





123 **Numeric** mode enters numbers only.

@ **Symbol** mode enters symbols only.

To set your primary and secondary text entry modes, press  > **Entry Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.


Tip: WANT TO BE LOUD IN YOUR MESSAGE? Press  in a text entry view to change text case to all capital letters (**ABC**), next letter capital (**Abc**), or no capitals (**abc**).

iTAP™ mode

Press  in a text entry view to switch to iTAP mode. If you don't see  or , press  > **Entry Setup** to set iTAP mode as your primary or secondary text entry mode.

iTAP mode lets you enter words using one key press per letter. The iTAP software combines your key presses into common words, and predicts each word as you enter it.

For example, if you press **7 7 6 4**, your display shows:

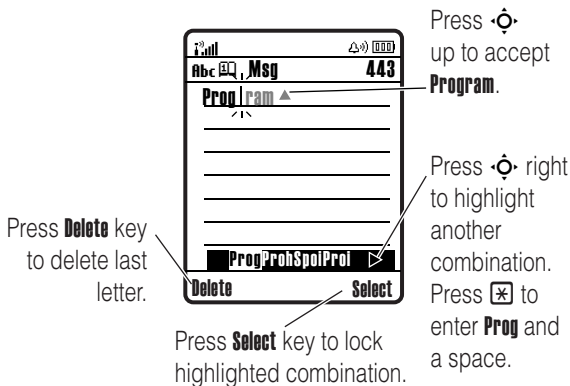


- If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining letters.
- To enter numbers quickly, press and hold a number key to temporarily switch to numeric mode. Press the number keys to enter the numbers you want. Enter a space to change back to iTAP mode.
- Press **1** to enter punctuation or other characters.

tap mode

Press **#** in a text entry view to switch to tap mode. If you don't see **Abc 1** or **Abc 2**, press **=** > **Entry Setup** to set tap mode as your primary or secondary text entry mode.

To enter text in tap mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

For example, if you press **8** one time, your display shows:

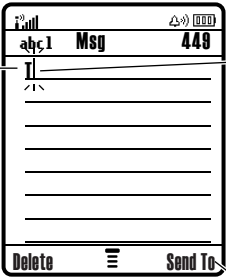

The diagram shows a mobile phone messaging interface. At the top, it displays 'Call', 'Msg', and '449'. Below this is a text input field containing the character '8'. A vertical cursor is positioned to the right of the '8'. The bottom of the screen features three buttons: 'Delete', a menu icon (three horizontal lines), and 'Send To'. A large, faint watermark of the number '4' is visible in the background.


Character displays at insertion point.

After 2 seconds, character is accepted and cursor moves to next position.

Press the **Delete** key to delete character to left of insertion point.

After you enter text, press the **Send To** key to enter recipients.

When you enter three or more characters in a row, your phone may guess the rest of the word. For example, if you enter **prog** your display might show:

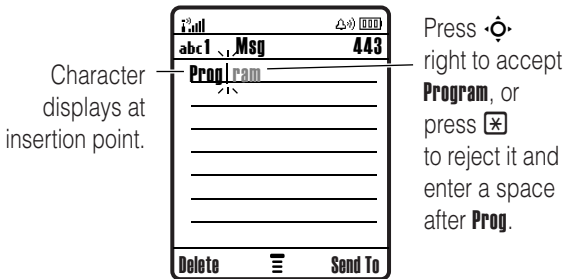

- The first character of every sentence is capitalized. If necessary, press [down arrow] down to change the character to lowercase before the cursor moves to the next position.
- Press [up arrow] to move the flashing cursor to enter or edit message text.
- If you don't want to save your text or text edits, press [X] to exit without saving.
- *Tap extended* mode cycles through additional special characters and symbols as you repeatedly press a keypad key.

numeric mode

Press [#] in a text entry view until you see **123**. Press the number keys to enter the numbers you want.


symbol mode

Press **#** in a text entry view until you see **@**. Press a keypad key to show its symbols at the bottom of the display. Highlight the symbol you want, then press the **Select** key.

volume



Press the volume keys to:

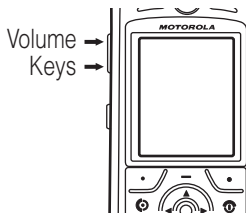- turn off an incoming call alert (press the down volume key)
- change the earpiece volume during calls
- change the ringer volume from the home screen



Tip: Sometimes silence really is golden. That's why you can quickly set your ringer to **Vibrate** or **Silent** by pressing and holding the down volume key or press the **0** key to set the ringer Vibrate.

navigation key

Press the *navigation key*  up, down, left, or right to scroll and highlight items in the display. When you highlight something, press the *center key*  to select it. The center key usually performs the same function as the right soft key.



handsfree speaker

You can use your phone's handsfree speaker to make calls without holding the phone to your ear.


During a call, press the **Speaker** key to turn the handsfree speaker on. Your display shows **Spkrphone On** until you turn it off or end the call.

Note: The handsfree speaker won't work when your phone is connected to a handsfree car kit or headset.

codes & passwords

Your phone's 4-digit **unlock code** is originally set to **1234**. The 6-digit **security code** is originally set to **000000**. If your service provider didn't change these codes, you should change them:


Find it: Press  > **Settings** > **Security** > **New Passwords**

If you forget your unlock code: At the **Enter Unlock Code** prompt, try entering 1234 or the last four digits of your phone number. If that doesn't work, press  and enter your 6-digit security code instead.

If you forget other codes: If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

lock & unlock phone



You can lock your phone to keep others from using it. To lock or unlock your phone, you need the 4-digit unlock code.

To **manually lock** your phone: Press  > **Settings** > **Security** > **Phone Lock** > **Lock Now**.

To **automatically lock** your phone whenever you turn it off: Press  > **Settings** > **Security** > **Phone Lock** > **Automatic Lock** > **On**.

Note: You can make emergency calls on a locked phone (see page 58). A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer**.

lock & unlock keypad

You can lock your keypad to prevent accidental key presses. Press   to lock or unlock the keypad.

customize

ring style

Each ring style profile uses a different set of sounds or vibrations for incoming calls and other events. Here are the profiles you can choose:

 Loud

 Vibrate


 Vibe Then Ring

 Soft

 Vibe & Ring

 Silent

The ring style profile's indicator shows at the top of your home screen. To choose your profile:

Find it: Press  > **Settings** > **Ring Styles** > **Style:** *style name*

change alerts in a ring style

You can change the alerts for incoming calls and other events. Your changes are saved in the current ring style profile.

Find it: Press  > **Settings** > **Ring Styles** > **Style Detail**

Note: *Style* represents the current ring style. You can't set an alert for the **Silent** ring style setting.

- 1 Highlight **Calls** (or **Line 1** or **Line 2** for dual-line phones), then press the **Change** key to change it.
- 2 Highlight the alert you want, then press the **Select** key.
- 3 Press the **Back** key to save the alert setting.

time & date

Your phone needs the time and date for the datebook.


To synchronize the time and date with the network:

Press  > **Settings** > **Initial Setup** > **Time and Date** > **Autoupdate**
> **On**



To set the time and date: Press  > **Settings** > **Initial Setup**
> **Time and Date** > *time* or *date*.

To choose an **analog or digital** clock for your home screen, press  > **Settings** > **Personalize** > **Home Screen** > **Clock** > **Analog** or **Digital**.

Note: If your home screen shows news information from your service provider, you must turn off the news view to see a clock. Press  > **Settings** > **Personalize** > **Home Screen**

> **Headlines** > **Off**.



wallpaper

Set a photo, picture, or animation as a wallpaper (background) image in your home screen.

Find it: Press  > **Settings** > **Personalize** > **Wallpaper**

options	
Picture	Select an image for your wallpaper, or None for no wallpaper.
Layout	Select Center to center the image in the display, Tile to repeat the image across the display, or Fit-to-screen to stretch the image across the display.

screen saver

Set a photo, picture, or animation as a screen saver. The screen saver shows when no activity is detected for a specified time.

Tip: This feature helps save your screen, but not your battery. To extend battery life, turn off the screen saver.

Find it: Press  > **Settings** > **Personalize** > **Screen Saver**


options	
Picture	Select an image for your screen saver, or None for no screen saver.
Delay	Select the length of inactivity before the screen saver shows.

display appearance

To choose a phone **skin** that sets the look and feel of your phone's display: Press  > **Settings** > **Personalize** > **Skin**.

To set your display **brightness**: Press  > **Settings** > **Initial Setup** > **Brightness**.

To save battery life, your **backlight** turns off when you're not using your phone. The backlight turns back on when you press a key. To set how long your phone waits before the backlight turns off:

Press  > **Settings** > **Initial Setup** > **Backlight**.

To save battery life, the **display** can turn off when you're not using your phone. The display turns back on when you press

a key. To set how long your phone waits before the display turns off:

Press  > **Settings** > **Initial Setup** > **Display Timeout**.

answer options

You can use additional, alternative methods to answer an incoming call. To activate or deactivate an answer option:

Find it: Press  > **Settings** > **In-Call Setup** > **Answer Options** > **Multi-key** > **On** or **Off**

calls


To make and answer calls, see page 21.

turn off a call alert



You can press the volume keys to turn off a call alert before answering the call.


recent calls

Your phone keeps lists of incoming and outgoing calls, even for calls that didn't connect. The most recent calls are listed first. The oldest calls are deleted as new calls are added.



Shortcut: Press  from the home screen to see the dialed calls list.


Find it: Press  > **Recent Calls**

- 1 Highlight **Received Calls** or **Dialed Calls**, then press the **Select** key.
- 2 Highlight a call. A ✓ next to a call means the call connected.
 - To call the number, press .
 - To see call details (like time and date), press the **View** key.
 - To see the **Last Calls Menu**, press . This menu can include:

options	
Store	Create a phonebook entry with the number in the No. field. Store does not appear if the number is already stored.
Delete	Delete the entry.
Delete All	Delete all entries in the list.
Hide ID/Show ID	Hide or show your caller ID for the next call.
Send Message	Open a new text message with the number in the To field.
Add Digits	Add digits after the number.
Attach Number	Attach a number from the phonebook or recent calls lists.
Send Tones	Send the number to the network as DTMF tones. This option shows only during a call.
Talk then Fax	Talk and then send a fax in the same call (see page 79). 

redial

- 1 Press  from the home screen to see the dialed calls list.
- 2 Highlight the entry you want to call, then press .


If you hear a **busy signal** and you see **Call Failed, Number Busy**, you can press  or the **Retry** key to redial the number. When the call goes through, your phone



rings or vibrates one time, shows **Redial Successful**, and connects the call.


return a call

Your phone keeps a record of your unanswered calls, and shows **X Missed Calls**, where **X** is the number of missed calls.

- 1 Press the **View** key to see the received calls list.
- 2 Highlight the call you want to return, then press .


notepad


The last set of digits entered on the keypad are stored in *notepad* memory. This can be the last phone number you called, or a number that you “jot down” during a call for later use. To see the number stored in the notepad:

Find it: Press  > **Recent Calls** > **Notepad**

- To call the number, press .
- To create a phonebook entry with the number in the **No.** field, press the **Store** key.
- To open the **Dialing Menu** to attach a number or insert a special character, press .

hold or mute a call

Press  > **Hold** to put all active calls on hold.


Press the **Mute** key (if available) or  > **Mute** to put all active calls on mute.

call waiting

When you're on a call, you'll hear an alert if you receive a second call.



Press  to answer the new call.

- To switch between calls, press the **Switch** key.
- To connect the two calls, press the **Link** key.
- To end the call on hold, press  > **End Call On Hold**.

To turn the call waiting feature on or off:

Find it: Press  > **Settings** > **In-Call Setup** > **Call Waiting**

caller ID

Calling line identification (caller ID) shows the phone number for an incoming call in your display.



Your phone shows the caller's name and picture when they're stored in your phonebook, or **Incoming Call** when caller ID information isn't available.

You can set your phone to play a different ringer ID for an entry stored in your phonebook (see page 69).

To show or hide **your phone number** from the next person you call, enter the phone number and press


 > **Hide ID/Show ID**.

emergency calls


Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under

any circumstances, even when your phone is locked or the SIM card is not inserted.

Note: Emergency numbers vary by country. Your phone's preprogrammed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Press the keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

international calls

If your phone service includes international dialing, press and hold  to insert your local international access code (indicated by +). Then, press the keypad keys to dial the country code and phone number.





1-touch dial


To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second.

You can set 1-touch dial to call the entries in your phone's memory phonebook, your SIM card's phonebook, or your Fixed Dial list:



Find it: Press  > **Settings** > **Initial Setup** > **1 Touch Dial** > **Phone, SIM, or Fixed Dial**

To add a new phonebook entry, see page 68. To edit the **Speed No.** for a phonebook entry, press  > **Phonebook**, highlight the entry, and press  > **Edit**.


voicemail

Your network stores the voicemail messages you receive. To listen to your messages, call your voicemail number. 

Note: Your service provider may include additional information about using this feature.

When you **receive** a voicemail message, your phone shows the voicemail message indicator  and **New Voicemail**. Press the **CALL** key to listen to the message. 

To **check** voicemail messages:

Find it: Press  > **Messages** > **Voicemail**

Your phone may prompt you to store your voicemail phone number. If you don't know your voicemail number, contact your service provider.

Note: You can't store a **p** (pause), **w** (wait), or **n** (number) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then, you can use the entry to call your voicemail.

push to talk (PTT)


Push to Talk (PTT) lets you talk walkie-talkie style with other PTT subscribers. You can talk to one person or a group.



PTT and the other related features indicated are network and subscription dependent features, and are only available in PTT supported network areas. PTT connectivity requires PTT-compatible phones.




Note: To lock your PTT key or turn PTT on or off, see page 64.

make a PTT call

When  shows at the top of your home screen, you can make and receive PTT calls. To make a PTT call:

- 1 Enter a PTT subscriber's phone number in your home screen, or select a contact or group from a list:
 - **PTT Contacts** (press the PTT key to open the list)
Note: If you change your **Open To** setting, your PTT key does not open the contacts list (see page 64).
 - **PTT Quick Group** (press the PTT key and  > **PTT Quick Group**)
This lets you select more than one contact for the call.
 - **PTT Groups** (press the PTT key and  > **Go to Groups**)
- 2 Hold the PTT key and speak after you hear the tone. Release the PTT key to let others speak.

To speak during a PTT call, hold your PTT key and speak after the tone. Only one person can speak at a time.


To end the call, press . If nobody speaks for 20 seconds, the call ends.

To send a PTT alert instead of a standard PTT call, highlight a PTT contact in **PTT Contacts** and press the **Alert** key. The contact's phone rings or vibrates, and the contact can speak

first. If the contact does not respond, the call ends. You can send alerts to groups after getting no response from a contact.

answer a PTT call

When you receive a PTT call, you hear a tone or alert followed by conversation from the caller.

- **To speak** when the caller stops speaking, hold your PTT key and speak after the tone. Only one person can speak at a time.
- **To end the call**, press .


If you change your **My Answer Mode** setting, your phone does not automatically answer as described (see page 64).


When you receive a PTT alert, press the PTT key and speak after the tone. You can also press the **Ignore** key to cancel the call.

Your phone shows **Missed Call** if you miss a PTT alert. It does not show **Missed Call** when you miss a standard PTT call unless you set **My Answer Mode** to **Manual** (see page 64).


PTT contacts and groups



You can store PTT **Contacts** to make one-to-one calls, or you can store PTT **Groups** to make group calls.





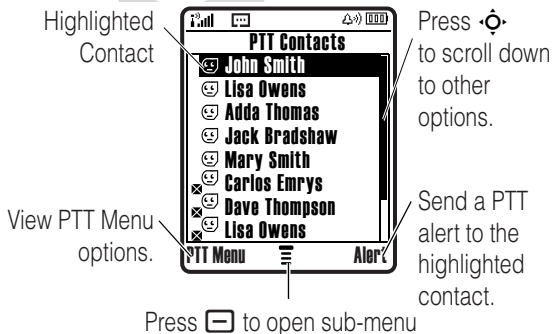

To store a contact, press **PTT key**  > **Add New Contact**. Enter the contact's **Name** and phone number (**No.**), then press the **DONE** key. Your network stores the contact and your phone returns to the **PTT Contacts** list with the new contact shown.


To create a group of contacts that you can call at the same time, press **PTT key** and  > **Go to Groups** > **Add New Group**. Enter the group's **Name** and select the **Members**, then press the **DONE** key. Your network stores the group and your phone returns to the **PTT Groups** list with the new group shown.

To see PTT contacts, press the PTT key. Scroll to a contact and press  to **View**, **Edit**, or **Delete** it.



To see PTT groups, press the **PTT key** and  > **Go to Groups**. Scroll to a group and press  to **View** or **Delete** it. You cannot edit a group, but you can delete it and create a new one with the members you want.

Icons in the PTT contact and group lists indicate if someone is online (, ) or offline (, ). They also tell you if a contact is blocked  (highlight the contact and press  > **Edit** > **Block Mode** > **On or Off**).

To set an **online alert** (🔔) to tell you when a contact comes online, highlight the contact and press  > **Enable Online Alert**. You can turn online alert tones on or off in your **PTT Setup** menu (see page 64).

To refresh the contact or group list from your network, press  > **Refresh List**.

To see only your frequently used contacts or groups, press  > **Frequently Used**.


PTT settings

To **turn PTT on or off** from your home screen, press  > **Settings** > **PTT Settings** > **PTT Service** > **On/Off**.

You can change your PTT menu and call preferences.














Find it: Press **PTT key** > **PTT Menu** > **PTT Set-up** > **Personalize**












options	
Open To	From the home screen, the PTT key can open the PTT menu (PTT Menu), or your contacts list sorted by name (Contacts), or most recent call (Last Contact Called).
Sort by	Sort your contacts and groups by Name , online Status , or call Frequency .
My Answer Mode	Set the mode for incoming PTT calls to Manual (press the PTT key to answer), Auto-Accept (standard mode that accepts all calls), or Do Not Disturb (accepts no calls).

options	
Tone Volume	Set the volume for the tone you hear when it is your turn to speak.
PTT Speaker	Turn the speakerphone On or Off for PTT calls.
Set Online Alert Tone	<p>You can set an online alert to tell you when a contact or group comes online (highlight the entry in your PTT Contacts or PTT Groups and press  > Enable Online Alert).</p> <p>This setting tells your phone whether to play these alert tones (On) or not (Off).</p>

other features

advanced calling

features	
conference call	<p>During a call:</p> <p>Dial next number, press , press the Link key.</p> 
transfer a call	<p>During a call:</p> <p> > Transfer, dial transfer number, press </p> 
attach a phone number	<p>Dial an area code or prefix for a phonebook number, then:</p> <p> > Attach Number</p> 
speed dial	<p>Speed dial a phonebook entry:</p> <p>Enter the speed dial number, press , then press .</p> <p>To add a phonebook entry, see page 68.</p> <p>Tip: If you forget Aunt Mildred's speed dial number, press  > Phonebook, highlight her entry, and press the View key.</p> 
call forwarding	<p>Set up or cancel call forwarding:</p> <p> > Settings > Call Forward</p> 


features	
restrict calls	<p>Restrict outgoing or incoming calls: </p> <p> > Settings > Security > Restrict Calls</p>
call barring	<p>Restrict outgoing or incoming calls: </p> <p> > Settings > Security > Call Barring</p>
TTY calls	<p>Set up your phone for use with an optional TTY device: </p> <p> > Settings > Initial Setup > TTY Setup</p>
change phone line	<p>If you have a dual-line-enabled SIM card, you can change your line to make and receive calls from your other phone number. </p> <p> > Settings > Phone Status > Active Line</p> <p>The active line indicator shows the active phone line (see page 40).</p>
fixed dial	<p>When you turn on fixed dialing, you can call only numbers stored in the fixed dial list. </p> <p>Turn fixed dialing on or off:</p> <p> > Settings > Security > Fixed Dial</p> <p>Use the fixed dial list:</p> <p> > Tools > Dialing Services > Fixed Dial</p>

features

DTMF tones

Activate DTMF tones:

 > **Settings** > **Initial Setup** > **DTMF**

To send DTMF tones during a call, just press number keys or highlight a number in the phonebook or recent calls lists and press  > **Send Tones**.

phonebook

features

add new entry



 > **Phonebook**  > **New** > **Phone Number** or **Email Address**

Shortcut: Enter a phone number in the home screen, then press the **Store** key to create an entry for that number.

Tip: One phone isn't enough for some people. When creating a phonebook entry, select **MORE** to store another number for the same **Name**.

dial number

Call a number stored in the phonebook:





 > **Phonebook**, highlight the phonebook entry, press 

Shortcut: In the phonebook, press keypad keys to enter the first letters of an entry name, then press the **Search** key to jump to the entry.








features	
record a voice name	<p>When creating a phonebook entry, highlight Voice Name and press the Record key. Press and release the voice key and say the entry's name (within 2 seconds). When prompted, press and release the voice key and repeat the name.</p> <p>Note: The Voice Name option isn't available in entries stored on the SIM card.</p>
voice dial number	<p>Voice dial a number stored in the phonebook:</p> <p>☰ > Tools > Dialing Services > Voice Dial</p>
set ringer ID for entry	<p>Assign a ring alert (ringer ID) to an entry:</p> <p>☰ > Phonebook > <i>entry</i> ☰ > Edit > Ringer ID > <i>ringer name</i></p> <p>Note: The Ringer ID option isn't available in entries stored on the SIM card.</p> <p>Activate ringer IDs:</p> <p>☰ > Settings > Ring Styles > <i>style Detail</i> > Ringer IDs</p>
set picture ID for entry	<p>Assign a photo or picture to show when you receive a call from an entry:</p> <p>☰ > Phonebook > <i>entry</i> ☰ > Edit > Picture</p> <p>Note: The Picture option isn't available in entries stored on the SIM card.</p>












features	
set picture ID view	<p>Show entries as a text list, or with picture caller ID photos:</p> <p>☐ > Phonebook</p> <p>☐ > Setup > View by > <i>Picture</i></p>
set category for entry	<p>☐ > Phonebook > <i>entry</i> ☐ > Edit > Category > <i>category name</i></p> <p>Note: The Category option isn't available in entries stored on the SIM card.</p>
set category view	<p>☐ > Phonebook</p> <p>☐ > Categories > <i>category view</i></p> <p>You can show All entries, entries in a predefined category (Business, Personal, General, VIPs), or entries in a category you create.</p>
set primary number or address	<p>Set the primary number for an entry with multiple numbers:</p> <p>☐ > Phonebook, highlight the entry, press ☐ > Set Primary > <i>number or address</i></p> <p>Note: The Set Primary option isn't available in entries stored on the SIM card.</p> <p>Tip: In Primary number view mode, you can still peek at other numbers stored for the same name. Highlight the name and press ⬅️ or ➡️ left or right to see the other numbers.</p>














features	
create group mailing list	<p>You can put several phonebook entries in a group mailing list, then send a multimedia message to the list. To create a list:</p> <p>☐ > Phonebook ☐ > New > Mailing List</p> <p>You can select the list name as an address for multimedia messages.</p> <p>Note: A Mailing List cannot include entries stored on the SIM card.</p>
sort phonebook list	<p>Set the order in which entries are listed:</p> <p>☐ > Phonebook</p> <p>☐ > Setup > Sort by > <i>sort order</i></p> <p>You can sort the phonebook list by Name, Speed No., Voice Name, or Email. When sorting by name, you can see All numbers or just the Primary number for each name.</p>
copy phonebook entry	<p>Copy an entry from the phone to the SIM card, or from the SIM card to the phone:</p> <p>☐ > Phonebook, highlight the entry, press</p> <p>☐ > Copy > Entries > To</p>
send phonebook entry in a text message	<p>Send a phonebook entry in a text or email message:</p> <p>☐ > Insert > Contact Info > Phonebook (highlight phonebook entries), press Add > Done</p>

features	
send phonebook entry in a multimedia message	<p>Send a phonebook entry in a multimedia message:</p> <ul style="list-style-type: none">  > Phonebook, highlight the entry, press  > Share Phonebook Entry > Multimedia Msg
send phonebook entry over Bluetooth® connection	<p>Send a phonebook entry to another phone, computer, or device:</p> <ul style="list-style-type: none">  > Phonebook, highlight the entry, press  > Share Phonebook Entry > Look for Devices








messages







features	
send text message	<p> > Messages > Create Message > New Short Message > enter text > Send To > press center key  to select recipient > Send </p>
send multimedia message	<p> > Messages > Create Message > New Multimedia Msg </p>
send email	<p> > Messages > Create Message > New Email </p>

features	
send voice message	<p>☰ > Messages > Create Message > New Voice Msg </p> <p>To record the voice message, press the Record key, speak, then press the Stop key. Your phone inserts the voice recording into a message and lets you enter email addresses or phone numbers to send the message.</p>
use a multimedia template	<p>Open a multimedia message with preloaded animations: </p> <p>☰ > Messages > Create Message > MMS Templates</p>
read messages	<p>☰ > Messages > Message Inbox </p> <p>Icons next to each message indicate if it is read  or unread . Icons can also indicate if the message is locked , urgent , low priority , or has an attachment .</p> <p>To see message options like Lock or Delete, highlight a message and press ☰.</p>
read old email	<p>☰ > Messages > Email Msgs </p> <p>Press ☰ to perform various operations on a message.</p>
store message objects	<p>Go to a multimedia message press: </p> <p>☰ > Store</p>

features	
store text messages on your SIM card	<p>To store incoming text messages on your SIM card, press: </p> <p> > Messages >  > Message Setup > Text Msg Setup > Store To: > SIM</p>
browser messages	<p>Read messages received by your micro-browser: </p> <p> > Messages > Browser Msgs</p>
info services	<p>Read subscription-based information services messages: </p> <p> > Messages > Info Services</p>
set up more email accounts	<p>You can set up, edit, and use more than one email account on your phone. Each account stores protocol, host, port, and other information. </p> <p> > Messages > Email Msgs > Setup > Account Settings > [New Entry]</p> <p>To create a new account, select Create New.</p> <p>Note: Your display shows a folder for each email account under  > Messages > Email Msgs</p>
change message service center number	<p>You can change the message service center number. </p> <p> > Messages >  > Message Setup > Text Msg Setup > [Srvce Center No.]</p>

personalizing

features	
language	Set menu language:  > Settings > Initial Setup > Language
scroll	Set the highlight bar to stop or wrap around in menu lists:  > Settings > Initial Setup > Scroll
activate ringer IDs	Activate ringer IDs assigned to phonebook entries and categories:  > Settings > Ring Styles > <i>style</i> Detail > Ringer IDs
ring volume	 > Settings > Ring Styles > <i>style</i> Detail > Ring Volume
keypad volume	 > Settings > Ring Styles > <i>style</i> Detail > Key Volume
reminders	Set reminder alerts for messages that you receive:  > Settings > Ring Styles > <i>style</i> Detail > Reminders
news view	If your service provider broadcasts news information that always appears in your home screen, you can turn the news view on or off:  > Settings > Personalize > Home Screen > Headlines > On or Off

features	
menu view	<p>Show the main menu as graphic icons or as a text-based list:</p> <p> > Settings > Personalize > Main Menu > View</p>
main menu	<p>Reorder your phone's main menu:</p> <p> > Settings > Personalize > Main Menu > Reorder</p>
show/hide menu icons	<p>Show or hide menu feature icons in the home screen:</p> <p> > Settings > Personalize > Home Screen > Home Keys > Icons</p>
shortcuts	<p>Create a shortcut to a menu item:</p> <p>Highlight the menu item, then press and hold .</p> <p>Use a shortcut:</p> <p>Press , then press the shortcut number.</p>
master reset	<p>Reset the phone to the default settings:</p> <p> > Settings > Initial Setup > Master Reset</p> <p>This phone will be reset to default settings.</p>

features


master clear

Erase all downloaded files and clear all settings and entries you made **except** SIM card information, unlock code, security code, and lifetime timer:

 > Settings > Initial Setup > Master Clear

Caution: Master clear **erases all information you have entered** (including phonebook and datebook entries) **and content you have downloaded** (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.

call times & costs

Network connection time is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.

features

call times

Show call timers:

 > Recent Calls > Call Times





features		
in-call timer	Show time or cost information during a call: ☰ > Settings > In-Call Setup > In-Call Timer	
call cost	Show call cost trackers: ☰ > Recent Calls > Call Cost	

handsfree



Note: The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

features		
speakerphone	Activate the speakerphone during a call: Press the Speaker key (if available, or ☰ > Spkrphone On).	
auto answer (car kit or headset)	Automatically answer calls when connected to a car kit or headset: ☰ > Settings > Car Settings or Headset > Auto Answer	
voice dial (headset)	Enable voice dial with headset send/end key: ☰ > Settings > Headset > Voice Dial	
auto handsfree (car kit)	Automatically route calls to a car kit when connected: ☰ > Settings > Car Settings > Auto Handsfree	

features	
power-off delay (car kit)	<p>Set the phone to stay on for a specified time after the ignition is switched off:</p> <p> > Settings > Car Settings > Power-Off Delay</p>
charger time (car kit)	<p>Charge the phone for a specified time after the ignition is switched off:</p> <p> > Settings > Car Settings > Charger Time</p>

data & fax calls

To connect your phone with a USB cable, see page 30.


features	
send data or fax	<p>Connect your phone to the device, then place the call through the device application.</p>
receive data or fax	<p>Connect your phone to the device, then answer the call through the device application.</p>
talk then fax	<p>Connect your phone to the device, enter fax number, press  > Talk then Fax, then press  to make the call.</p>


features

using sync

You can call an Internet server and synchronize your phonebook and datebook entries with the server.



To **set up** an Internet sync partner, press  > **Settings** > **Connection** > **Sync** > **[New Entry]**. Enter the server details, including **Server URL** (you can omit **http://**) and **Data Path** (the folder below the URL where your data is stored).

To **synchronize files** with a partner you set up, select the partner from the list in  > **Settings** > **Connection** > **Sync**.

network

features

network settings

See network information and adjust network settings:

















 > **Settings** > **Network**

personal organizer





features

set alarm

 > **Tools** > **Alarm Clock**




features	
turn off alarm	When an alarm happens: To turn off the alarm, press the Disable key or  . To set an 8 minute delay, press the Snooze key.
add new datebook event	 > Tools > Datebook , highlight the day, press  , press  > New
see datebook event	See or edit event details:  > Tools > Datebook , highlight the day, press  , press the View key
event reminder	When an event reminder happens: To see reminder details, press the View key. To close the reminder, press the Exit key.
send datebook event to another device	Send a datebook event to another phone, computer, or device:  > Tools > Datebook , highlight the day, press  , highlight the event, press  > Send
calculator	 > Tools > Calculator
currency converter	 > Tools > Calculator  > Exchange Rate Enter exchange rate, press the Ok key, enter amount, and press  > Convert Currency .











security

features	
SIM PIN	Lock or unlock the SIM card:  > Settings > Security > SIM PIN Caution: If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your display shows SIM Blocked .
lock feature	 > Settings > Security > Lock Application
manage certificates	Enable or disable Internet access certificates stored on your phone:   > Settings > Security > Certificate Mgmt Certificates are used to verify the identity and security of Web sites when you download files or share information.

fun & games

For basic information on the camera, see page 23.

features	
manage pictures	Manage photos, pictures, and animations:   > Multimedia > Pictures
manage video clips	 > Multimedia > Videos


features		
manage sounds	<p>Manage ring tones and music that you have downloaded or composed:</p> <p> > Multimedia > Sounds</p>	
create ring tones	<p>Create ring tones that you can use with your phone:</p> <p> > Multimedia > Sounds > [New iMelody]</p> <p>Note: If a memory card is installed in the phone, change to Phone Memory to create ring tones with New iMelody. Press  > Multimedia > Sounds >  > Phone Memory > [New iMelody].</p>	
start micro-browser	<p> > Web Access > Browser</p>	
download objects from Web page	<p>Download a picture, sound, or other object from a Web page:</p> <p> > Web Access > Browser, go to the page that links to the file, highlight the link, and select it.</p> <p>Note: Normal airtime and/or carrier usage charges apply.</p>	
Web sessions	<p>Select or create a Web session:</p> <p> > Web Access > Web Sessions</p>	

features

download game or application

You can download a Java™ game or application the same way you download pictures or other objects:




 > **Web Access** > **Browser**, go to the page that links to the file, highlight the link, and select it.

Note: Normal airtime and/or carrier usage charges apply.

start game or application

Start a Java™ game or application:



 > **Games & Apps**, highlight the game or application, press the **Select** key

Note: To install and run games stored on your memory card, press  > **Games & Apps** > **[Install New]**.

service and repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/consumer/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Specific Absorption Rate Data

This model meets international guidelines for exposure to radio waves.

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The ICNIRP SAR limit for mobile devices used by the general public is 2 W/kg and the highest SAR value for this device when tested at the ear was ___ W/kg.¹ As mobile devices offer a range of functions, they can be used in other positions, such as on the body as described in this user guide.² In this case, the highest tested SAR value is ___ W/kg.¹

As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum level required to reach the network.

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

The World Health Organization has stated that present scientific information does not indicate the need for any special precautions for the use of mobile devices. They note that if you want to reduce your exposure

Specific Absorption Rate Data

The model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg^1 . Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.34 W/kg , and when worn on the body, as

described in this user guide, is 0.68 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

Motorola Limited Warranty for the United States and Canada

What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

Products and Accessories

Products Covered	Length of Coverage
Products and Accessories as defined above, unless otherwise provided for below.	One (1) year from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
Decorative Accessories and Cases. Decorative covers, bezels, PhoneWrap™ covers and cases.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
Monaural Headsets. Ear buds and boom headsets that transmit mono sound through a wired connection.	Limited lifetime warranty for the lifetime of ownership by the first consumer purchaser of the product.
Consumer and Professional Two-Way Radio Accessories.	Ninety (90) days from the date of purchase by the first consumer purchaser of the product.
Products and Accessories that are Repaired or Replaced.	The balance of the original warranty or for ninety (90) days from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

Use of Non-Motorola Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

Software

Products Covered	Length of Coverage
Software. Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	Ninety (90) days from the date of purchase.

Exclusions

Software Embodied in Physical Media. No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

Software NOT Embodied in Physical Media. Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

How to Obtain Warranty Service or Other Information

USA	Phones 1-800-331-6456 Pagers 1-800-548-9954 Two-Way Radios and Messaging Devices 1-800-353-2729
Canada	All Products 1-800-461-4575
TTY	1-888-390-6456
For Accessories and Software , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the

exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

DRAFT

index

A

accessories 17, 78
accessory connector port 1
active line indicator 40
active line, changing 67
alarm clock 80, 81
alert
 set 48, 51
 turn off 48, 55
animation 82
answer a call 21, 54
attach a number 56, 66
audio player 26, 28
auto repeat 28

B

backlight 53
battery 18, 19
battery indicator 41
battery life, extending 20,
33, 53
bluetooth
 indicator 40
Bluetooth connection 33,
35, 72, 81
brightness 53
browser messages 74

browser. See micro-browser

C

cables 30
calculator 81
call
 answer 21, 54
 end 21
 make 21, 68
call barring 67
call forward indicator 40
call forwarding 66
call timers 77, 78
call waiting 58
caller ID 56, 58, 69
camera 23
car kit 78
center key 1, 48
certificate management 82
clock 52
codes 49
conference call 66
copy files 34
costs, tracking 78

D

data call 79

data indicator 39
date, setting 52
datebook 81
dial a phone number 21, 67, 68
dialed calls 55
digital audio 26, 28
display 38, 53, 75
download media objects 73, 83
DTMF tones 56, 68

E

earpiece volume 48
email 72, 73, 74
email address 68
emergency number 58
end a call 21
end key 1, 21
Enter Unlock Code message 49

F

fax call 56, 79
fixed dial 67
forward calls 66

G

games 84
GPRS indicator 39
group mailing list 71

H

handsfree speaker 49
headset 78
headset jack 1
hold a call 57
home screen 38, 75, 76

I

in-call indicator 40
Incoming Call message 58
information services 74
international access code 59
iTAP text entry mode 44

J

Java applications 84

K

keypad 50, 75

L

language 75
linking. See Bluetooth connection
lock
 application 82
 keypad 50
 phone 49
 SIM card 82
Low Battery message 41

M

make a call 21, 68
master clear 77
master reset 76
memory card 30
menu 41, 75, 76
menu icons 41, 76
menu indicator 38
menu key 1, 17
message 72, 73, 74
message indicator 40
message reminders 75
micro-browser 74, 83, 84
Missed Calls message 57
MP3 sound files 26, 28, 29
multimedia message 72, 73, 74
music 83
mute a call 57

N

navigation key 1, 17, 48
network settings 80
news 38, 75
notepad 57
number. See phone number
numeric entry mode 47

O

object exchange 34

1-touch dial 59
optional accessory 17
optional feature 17

P

pairing. See Bluetooth connection
passwords. See codes
personalize 75
phone number 21, 67, 68
phonebook 56, 59, 66, 68
photo 23, 82
picture 82
picture ID 58, 69
PIN code 21, 82
power key 1, 21
PTT 60
calls, answering 62
calls, making 61
contacts and groups 62
icons 63
indicator 39
Quick Groups 61
settings 64
turning on or off 64
Push to Talk. See PTT

R

received calls 55
recent calls 55
redial 56

reminders 75
restrict calls 67
return a call 57
ring style indicator 40
ring style, setting 48, 51
ring tone 83
ringer ID 58, 69, 75
ringer volume 48, 75
roam indicator 40

S

screen saver 53
security code 49
send key 1, 21
shortcuts 76
signal strength indicator 39
SIM 74
SIM Blocked message 21, 82
SIM card 17, 21, 82
skin 53
soft keys 1, 38
song
 auto repeat 28
sound
 auto repeat 28
speakerphone 78
speed dial 66
store your number 21
symbol entry mode 48
synchronizing 80

T

tap text entry mode 45
telephone number. See
 phone number
text entry 43
text message 72, 73, 74
time, setting 52
timers 77, 78
transfer a call 66
TTY device 67
turn on/off 21

U

unlock
 application 82
 keypad 50
 phone 21, 49
 SIM card 82
unlock code 49
USB cables 30

V

video clip 82
videos 25
voice dial 69, 78
voice message 73
voice name, recording 69
voicemail 60
voicemail message indicator
40, 60

volume 48, 75

W

wallpaper 52

warranty 88

Web pages 83

Web sessions 83

wireless connection. See
Bluetooth connection

Y

your phone number 21

U.S. patent Re. 34,976